


Instruction for Remote Control

Attention: Please ensure that the FOOT SWITCH is ON before use.

Night Mode: The button with MOON PATTERN represents “Night Mode” feature, which is able to reset the brightness and color of the lamp to default.

Timing Mode: Push the timing button, if the lamp flashes two times in a row, it indicates that 60mins timing function has been initiated.

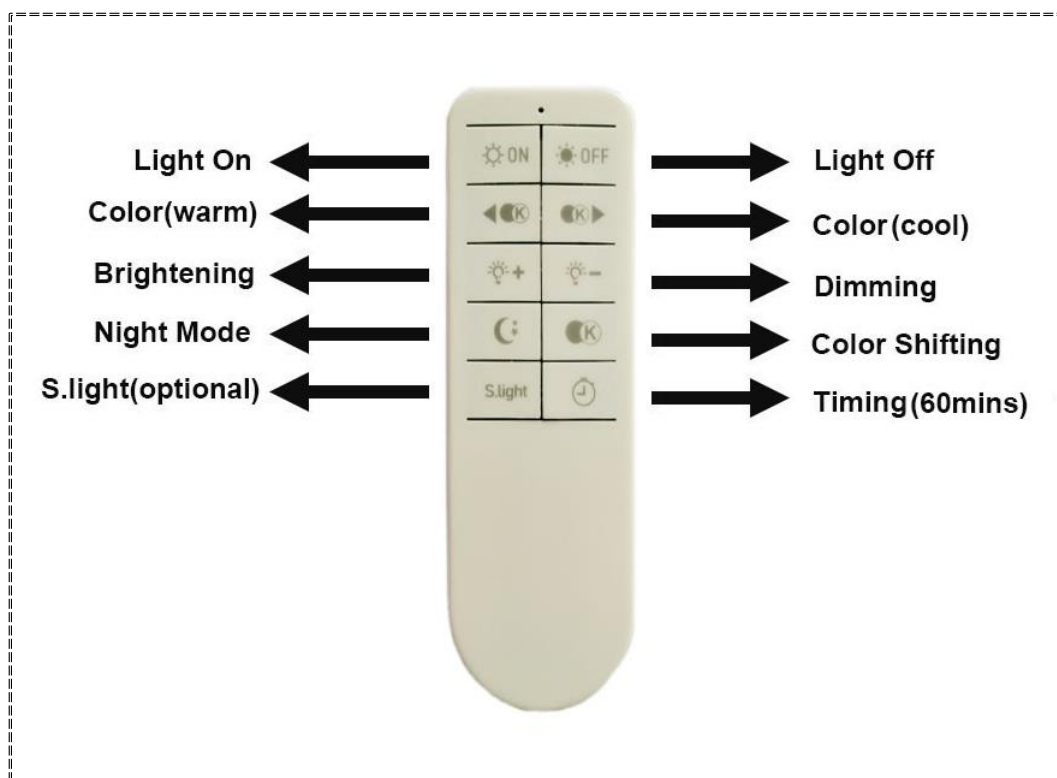

Pairing: Code pairing should be performed before using the remote when it is unable to control the light, please complete the following steps below:

- 1.Power on the lamp and press the “ON” button of the remote(“ON” button should be pressed within 3 seconds after the lamp turned on).
- 2.If the light flashes 3 times after step 1, it indicates that the remote is successfully paired with the lamp.

Operation for unpairing:

1. Cut off the power and turn on the light once again, then press the “ON” button 5 times in a row.
2. If the light flashes 6 times after step 1, it indicates that the remote is successfully unpaired with the lamp.

Assembly Instruction

Note:

1. Please follow the instructions below to correctly assemble the floor lamp.
2. All operations must be performed only after switching off or powering off.
3. It is normal that yellow light spots appear from the light strip after brightness is adjusted to the minimum. The minimum brightness is not equal to 0% brightness.
4. The lampshade may be slightly separated during transportation, which results in light leakage, it can be easily fixed by pushing it gently by hand.



- ① Check whether the accessories and parts of the lamp are complete as picture E shown above.
- ② Tightly screw spiral lamp body clockwise on the lamp holder as picture A shown.
- ③ After completing lamp body assembly (picture B), connect the power cable as picture C shown.
- ④ Finally power on the light as picture F shown and test the use of the remote (for more details please check remote control instruction on page 1).