


ZLINE

ATTAINABLE LUXURY[®]

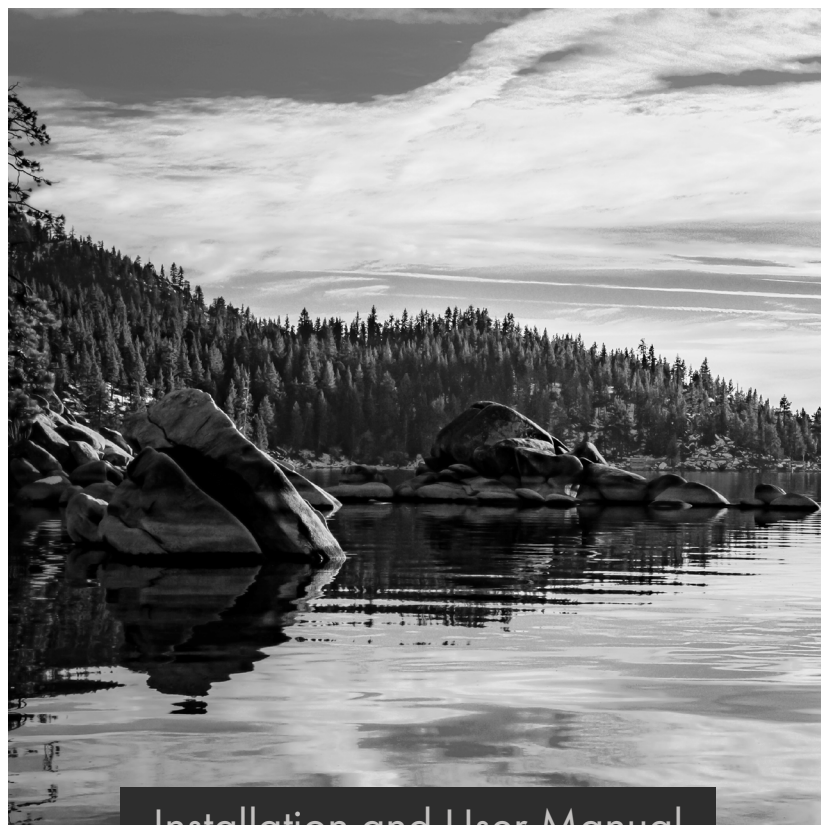

Installation and User Manual

DURAMOUNT[™] INSERT RANGE HOODS 683 MODELS

zlinekitchen.com



ZLINE Kitchen and Bath provides Attainable Luxury, where the kitchen and bath of your dreams is never out of reach. Through our unique designs and unparalleled quality, we're dedicated to providing you an elevated experience in the heart of your home. With an endless selection of features and finishes, our inspiration is your reality.

ZLINE
ATTAINABLE LUXURY®



ZLINE is fueled by a passion for innovation—a relentless pursuit of bringing the highest end luxury designs and professional features into everyone’s homes

Because we continually strive to improve our products, we may change specifications and designs without prior notice.

Scan the QR code to view the most up-to-date version of the Installation Manual and User Manual.

⚠ WARNING: This product can expose you to chemicals including nickel, which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS5

BEFORE INSTALLATION.....8

INSTALLATION18

OPERATION24

CARE AND MAINTENANCE..... 25

 How to Replace the Button Panel25

 How to Replace the Circuit Board27

 How to Replace the Light Bulbs in Your Range Hood28

 How to Replace the Capacitor30

 How to Replace the Transformer31

 How to Replace Professional Series Baffle Channels and Filters34

 How to Clean and Replace the Grease Cup.....35

TROUBLESHOOTING..... 36

WARRANTY..... 39

IMPORTANT SAFETY INSTRUCTIONS



WARNING

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or death.

- Before beginning installation, please read and follow these important instructions for the safety of your home and the people living in it.
- The instructions in this manual are intended for qualified installers and certified service technicians in accordance with applicable codes and standards. Injury could result from installing the unit yourself due to lack of appropriate electrical and technical background.
- The installer should leave these instructions with the consumer who should retain for local inspectors' use and for future reference.
- Due to the size and weight of ZLINE range hoods, two-person installation is highly recommended.
- Use care when handling the range hood, chimney cover, baffle filters, and any parts or accessories, as sharp edges may lead to injury. Use of gloves during installation is highly recommended.
- The manufacturer will not be responsible for any damage to property or to persons caused by incorrect installation, improper use of the appliance, or failure to heed the warnings listed.
- The manufacturer reserves the right to make changes to its products when considered necessary and useful, without affecting the essential safety and operating characteristics.
- This appliance is designed for general ventilating use only. DO NOT use to exhaust hazardous or explosive materials and vapors.
- The combustion air flow needed for safe operation of fuel-burning equipment may be affected by this unit's operation. Follow heating equipment guidelines and safety standards such as those published by the National Fire Protection Association (NFPA), American Society of Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and local code and government authorities.
- Sufficient air is needed for proper combustion and exhausting of gases through the ducting installed with range hoods to prevent back drafting.
- Before servicing or cleaning the unit, fully disconnect the hood from power to avoid risk of electric shock and injury.

IMPORTANT SAFETY INSTRUCTIONS


- Ducted range hoods **MUST ALWAYS** be vented to the outdoors or in some instances converted to recirculate the air. **NOTE:** Vented chimney/crown molding is required for efficient recirculation.
- Please consult an HVAC or installation professional for advice to comply with local regulations and ensure appropriate ventilation.
- When cutting or drilling into a wall or ceiling, be careful not to damage electrical wiring or other hidden utilities.
- All electrical wiring must be properly installed, insulated, and grounded. ZLINE range hoods come with a grounded 3-prong plug that must be plugged into a dedicated 15-amp circuit. Manipulating the plug or cutting the electrical cord will void your warranty.
- Electrical installation must be in accordance with the National Electrical Code ANSI/NPA70-latest edition and/or local codes.
- Old duct work should be cleaned or replaced, if necessary, to avoid the possibility of a grease fire or other hazard. Check all joints on duct work to ensure proper connection; all joints should be properly taped/secured.
- When the range hood ventilates air out of the room, the vented air must be replaced; this is called makeup air. If a makeup air system is needed, but not used, a hood may not function as expected due to negative air pressure.
- ZLINE does not currently provide makeup air units. Always consult applicable building codes regarding minimum and maximum air flow rates. Certain states may require additional items such as makeup air for larger CFM range hoods.
- To reduce the risk of fire and to disperse air properly, make sure to vent air outside. **DO NOT** vent exhaust into spaces between walls, crawl spaces, ceilings, attics, basements, or garages.
- All ZLINE range hoods are ETL-listed, ensuring all parts were tested for safety and meet industry standards and regulations.
- You must purchase appropriate ducting and any additional items to vent the hood in accordance with government codes.
- Please verify with local and state regulations on the proper venting method for your hood. Many agencies have CFM rating specifications for your hood.
- Always turn the range hood on when cooking at high heat or when cooking flaming foods. Use high settings on the cooking range below only when necessary.

IMPORTANT SAFETY INSTRUCTIONS

- Never leave cooking surfaces underneath a range hood unattended at high settings. Boilovers can cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.
- Always use appropriate cookware and utensils; always use cookware appropriate for the size of the surface element on your cooking surface underneath a range hood.
- To reduce the risk of injury in the event of a cooking surface grease fire, smother flames with a close fitting lid, cookie sheet, or metal tray, then turn off the burner. Never pick up a flaming pan — you may be severely burned.
- Keep flammable or combustible material away from flames. If flames do not go out immediately, evacuate and call the fire department. DO NOT use water, including wet dishcloths or towels — a violent steam explosion will result.
- Carefully inspect all items for damages upon delivery. Upon acceptance of the range hood, owner assumes responsibility for its safe arrival.
- Before installing your unit, test the range hood for proper functionality by plugging it into an appropriate outlet and testing the fan and lights. Do not install any appliance if they have missing or broken parts. If units arrive damaged, contact ZLINE Customer Service at 1-614-777-5004 for help.
- Keep the motor, fans, baffle channels, filters, tunnels, grease cups, and grease-laden surfaces clean. Grease should not be allowed to accumulate inside or on the surface of the range hood; clean surfaces frequently.
- Take care when cleaning the range hood in spray form: never direct spray of water or cleaners onto the electrical wiring, motor, button panel, or light bulbs.
- After installation, use a stainless steel cleaning product or wipe to eliminate any residues from protective film after removal.
- When cleaning stainless steel, only use a stainless steel cleaner product with a soft sponge, or use a cloth with a warm soap and water solution. Never use abrasive powders or liquids.

BEFORE INSTALLATION

INSERT HOOD MEASUREMENTS

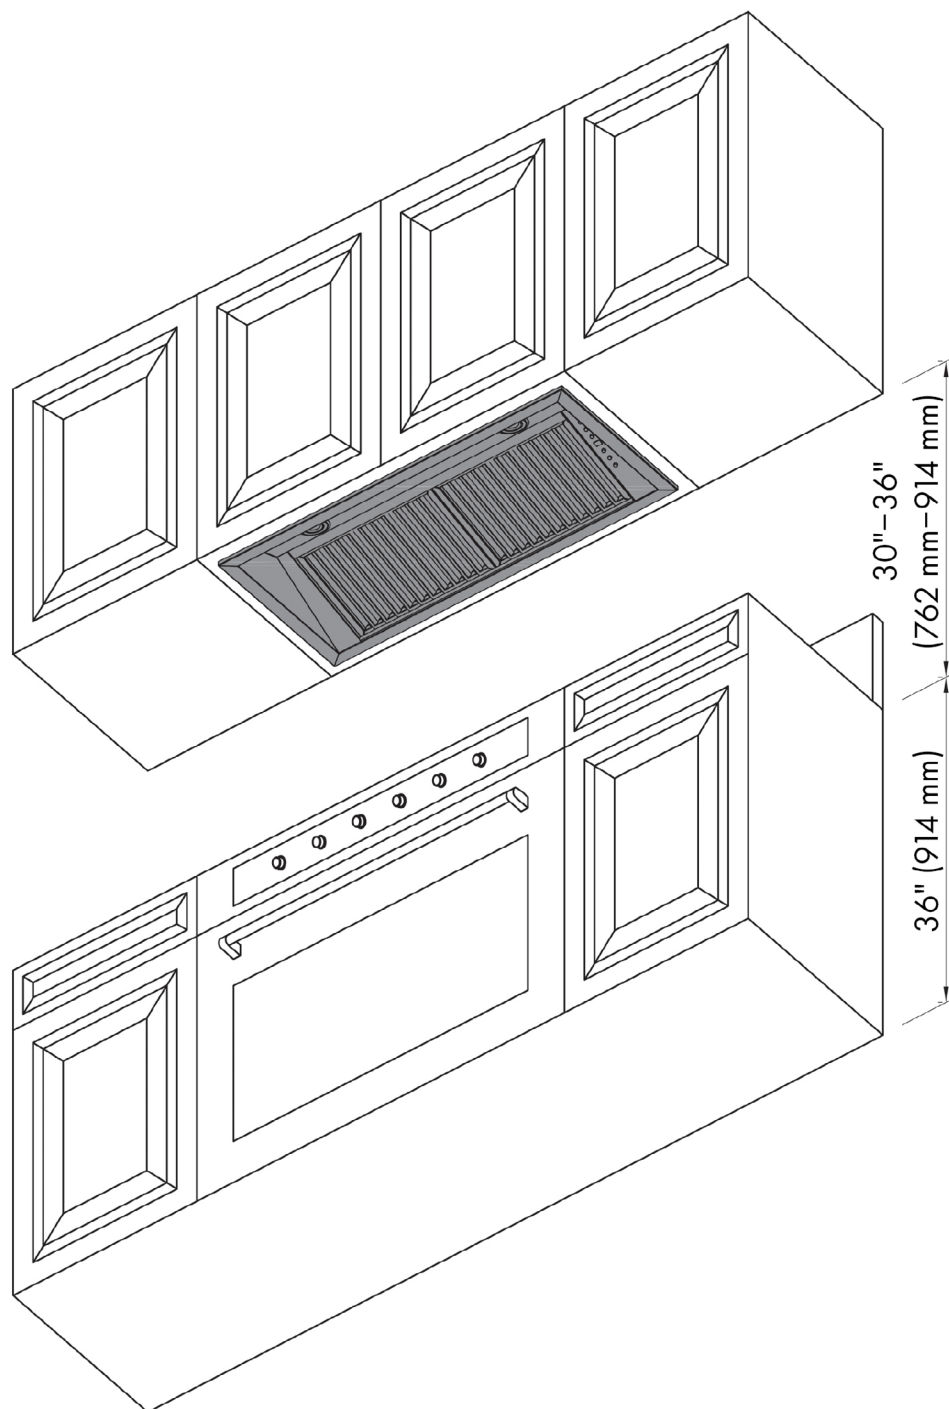



This vent hood must be installed between the 30" (762 mm) required minimum and 36" (914 mm) recommended maximum above the cooking surface. Installation height should be measured from the cooking surface to the bottom edge of the cabinet surface.

NOTE: Any combustible surface must be a minimum of 30" (762 mm) above the cooking surface. Lower combustible surfaces may be covered to meet requirements.

BEFORE INSTALLATION

INSERT HOOD MEASUREMENTS



683-28

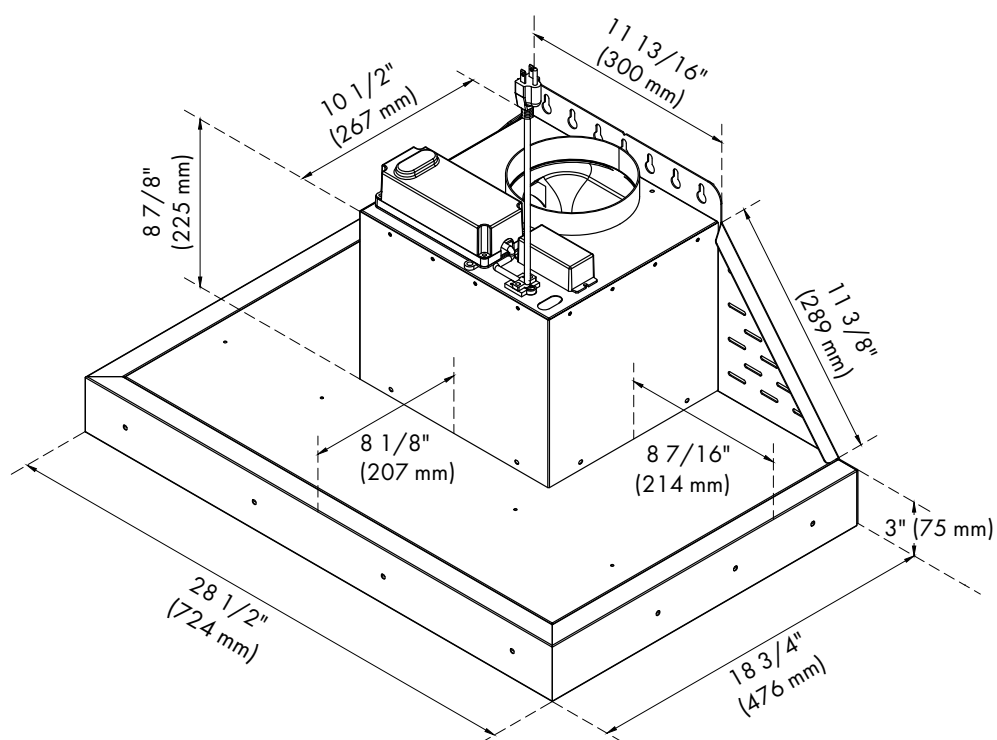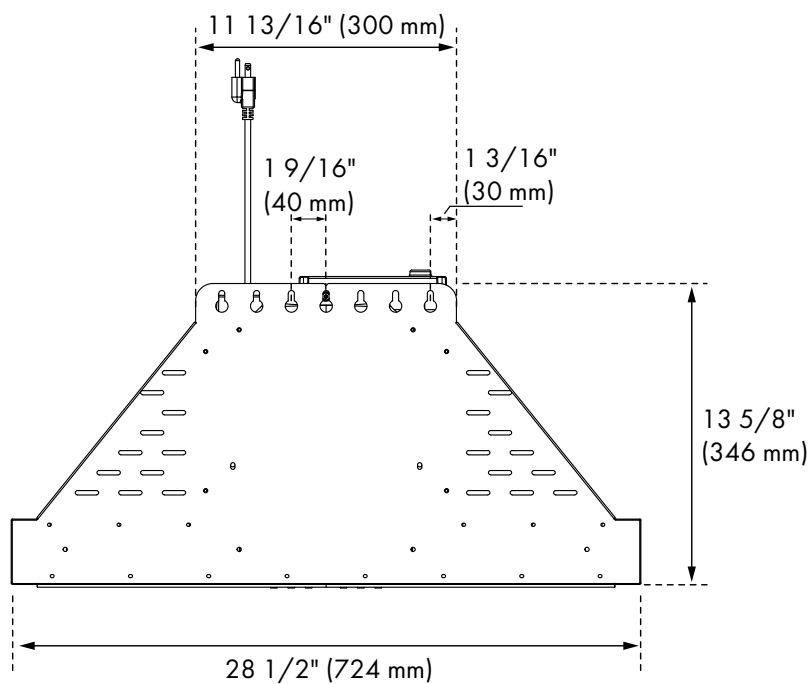

BEFORE INSTALLATION

INSERT HOOD MEASUREMENTS



683-34

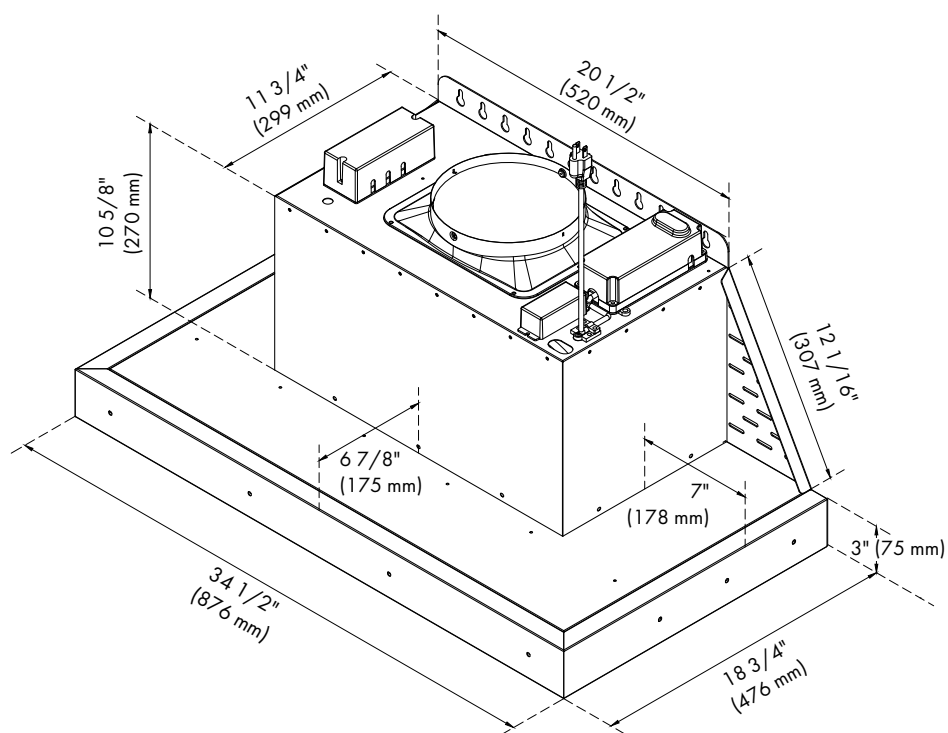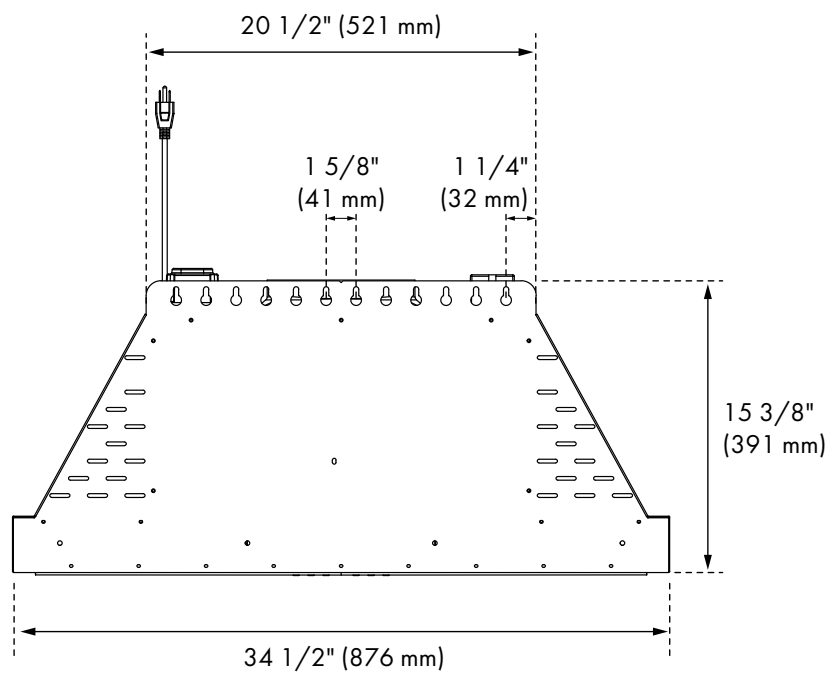

BEFORE INSTALLATION

INSERT HOOD MEASUREMENTS



683-40

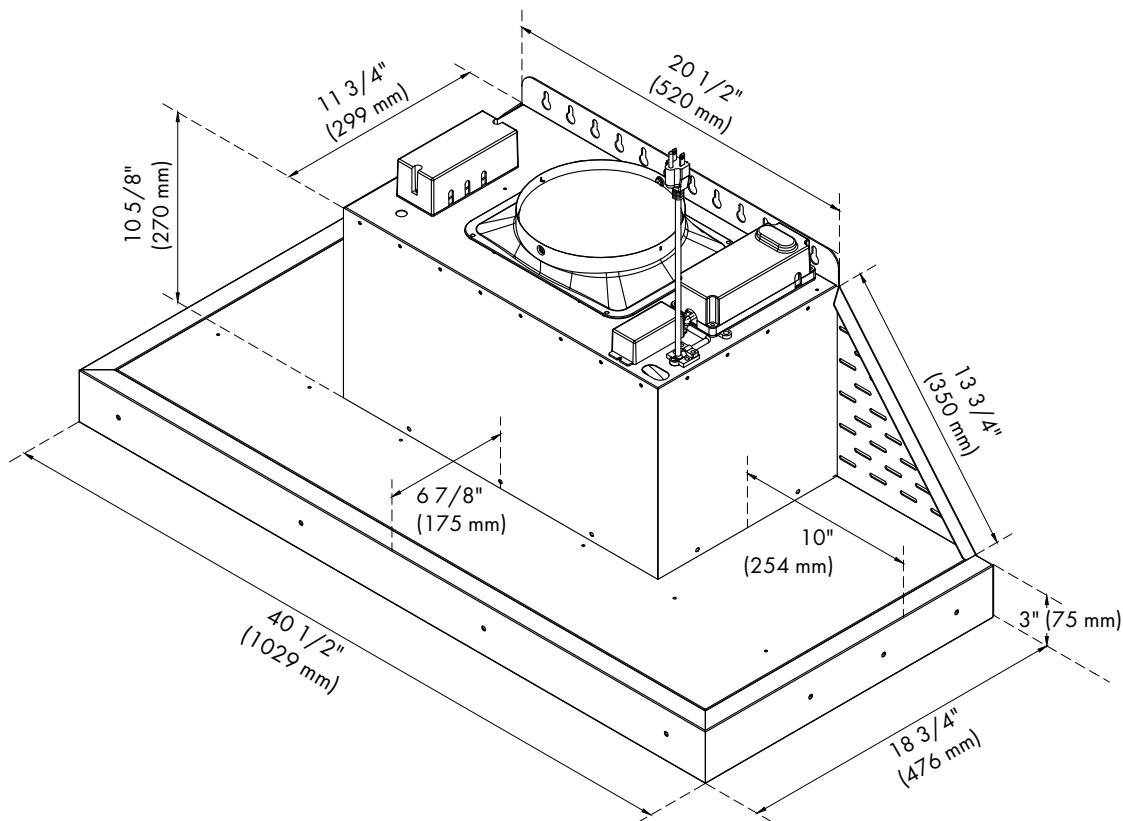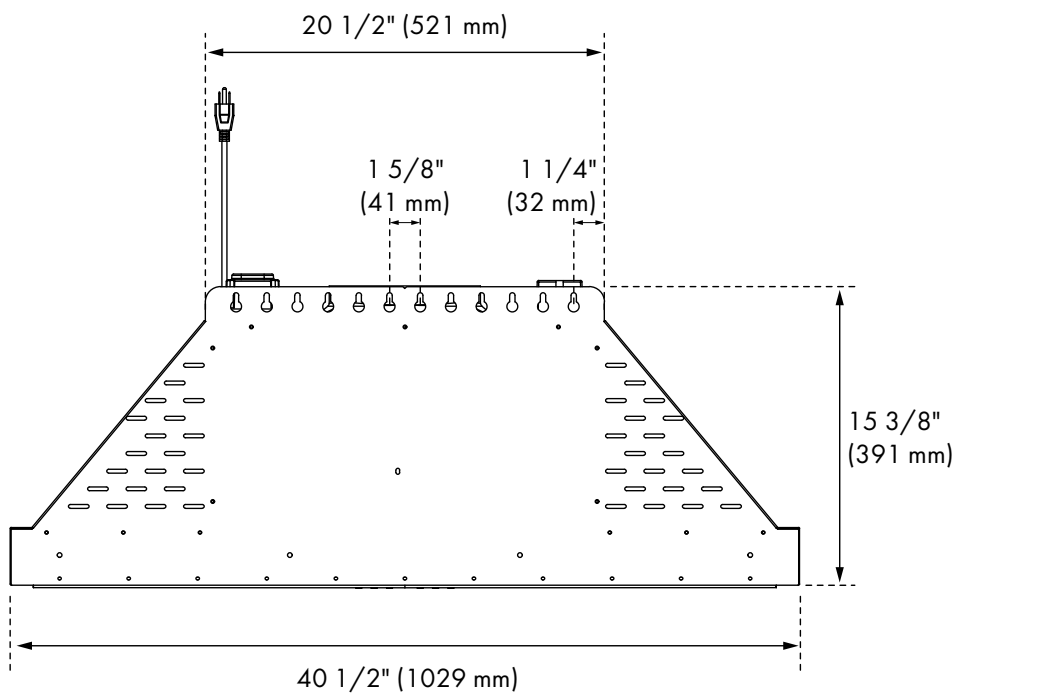

BEFORE INSTALLATION

INSERT HOOD MEASUREMENTS


683-46

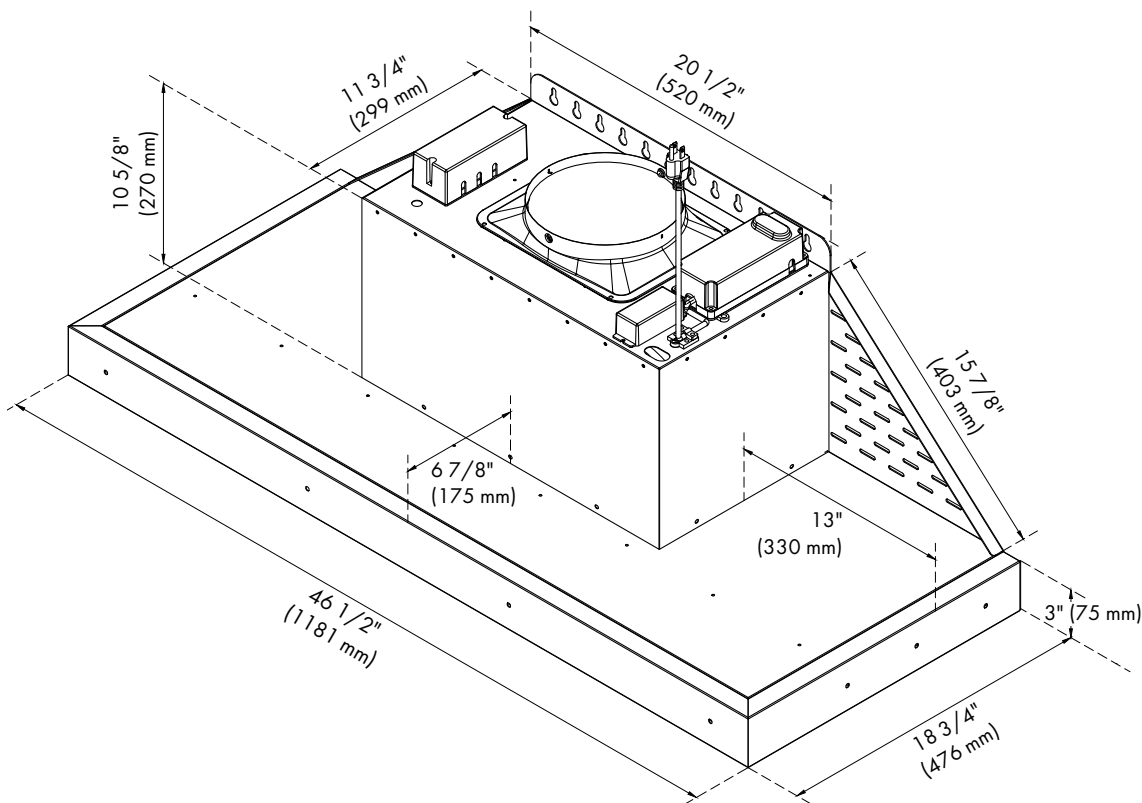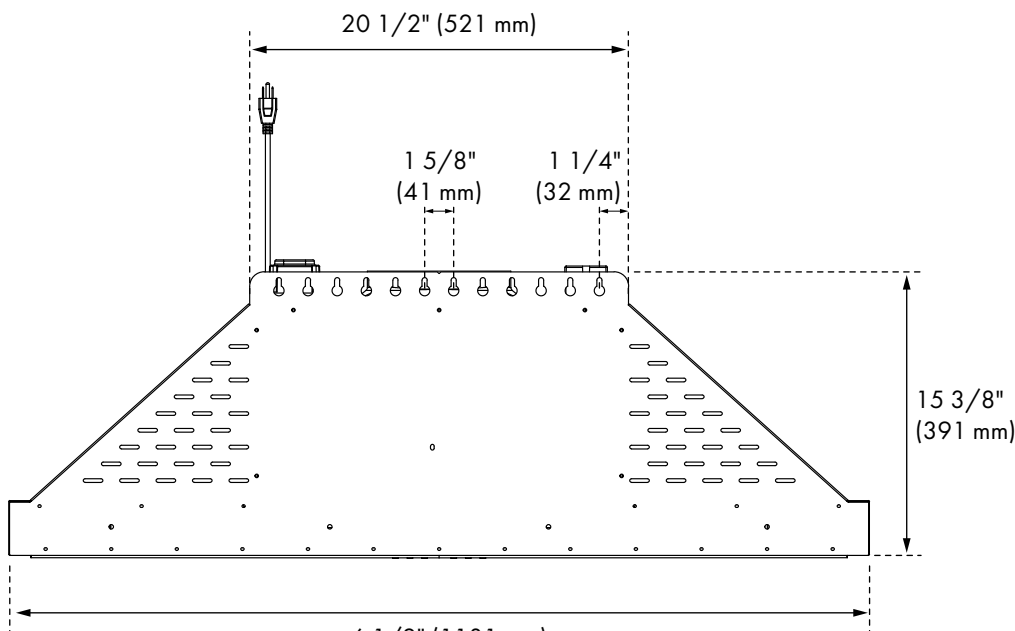

BEFORE INSTALLATION

PARTS			
Unpack your range hood upon delivery and inspect to ensure all parts are included:		IMAGE	QTY
Main hood with lights and button panel pre-installed			1
Transition piece (for 6" or 8") *			1
* NOTE: Single-motor inserts include a fixed round duct transition piece and are designed for 6" (152 mm) ducting. Dual-motor inserts include a removable square-to-round duct transition piece and are designed for 8" (203 mm) ducting.			
Transition piece mounting screws, M4 x 10			6
Washers, Ø12 x 4.2			12
Washers, Ø16 x 5.5			2
Anchors, Ø8			2
Mounting screws, M4 x14 mm			8
Mounting screws, M4 x 40			12
Mounting screws, M5 x 45			2
Baffle filters			Varies by size
Baffle filter spacers			Varies by size
Baffle channel			1
Grease cup			Varies by size

BEFORE INSTALLATION

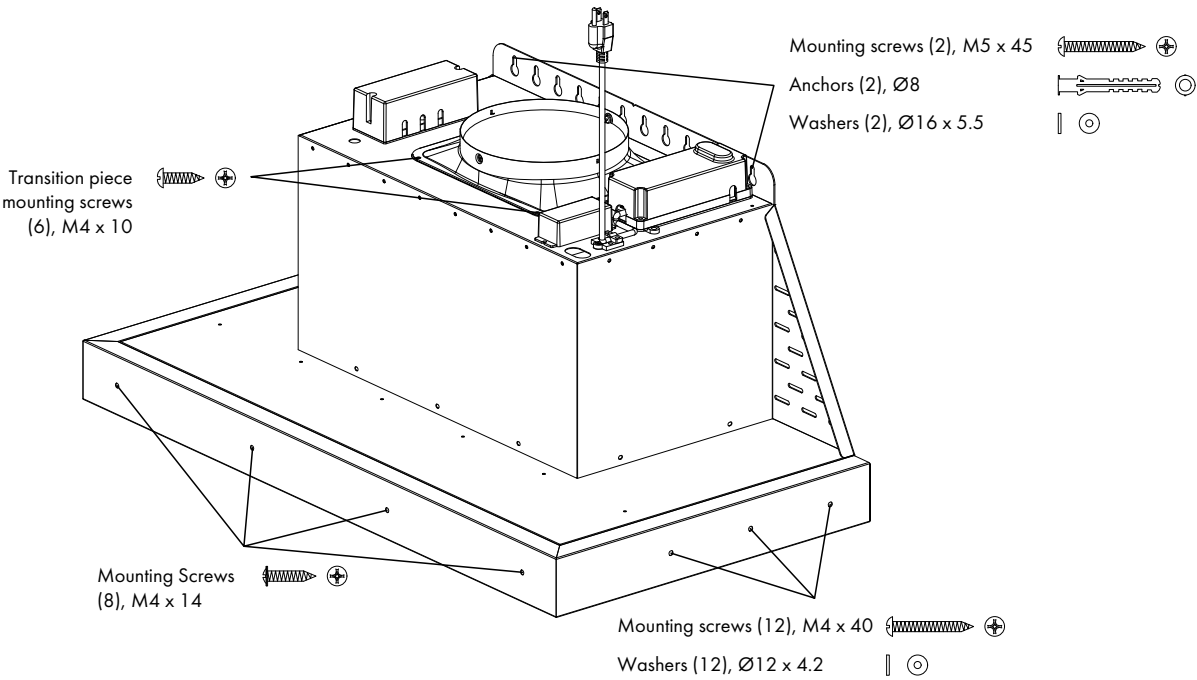


NOTE: A grounded 120 V, 60 Hz, 15-amp dedicated circuit is required.

BEFORE INSTALLATION


NOTES:

- Ducting is not provided with your ZLINE range hood. It's recommended to use solid ducting made of galvanized steel or another appropriate rigid metal ducting whenever possible for the lowest noise and highest flow.
- Use a maximum of 40' (12192 mm) of ductwork. Try to minimize the use of elbows.
- You must establish a minimum of 12" (305 mm) of vertical airflow from the top of the hood before executing any 90° turn. No more than 3 elbows are allowed; each 90° turn you make equates to 5' (1524 mm) lost when accounting for the maximum 40' (12192 mm).
- Do not use any reducers on ducting smaller than the appropriate diameter (6" or 8" — 152 mm or 203 mm).
- ZLINE range hoods do not include dampers. As such, we recommend that a vent cover or external damper be installed at the exit point of the ducting. Dampers should be inspected to ensure proper operation.
- Always consult an HVAC or installation professional to determine the best ducting option for your range hood, as each kitchen and home layout will vary.

EXAMPLES OF PROPER AND IMPROPER DUCTING:

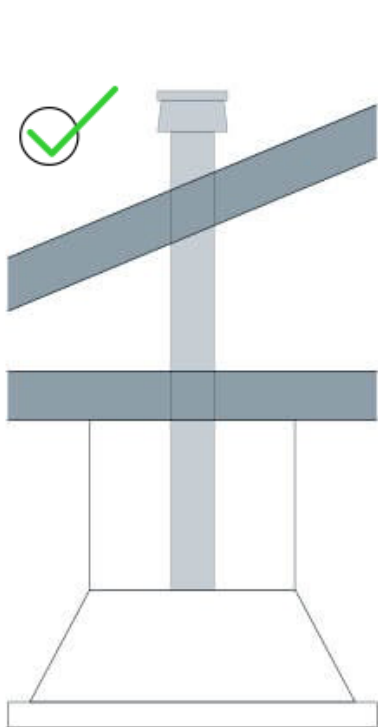

Direct unobstructed path

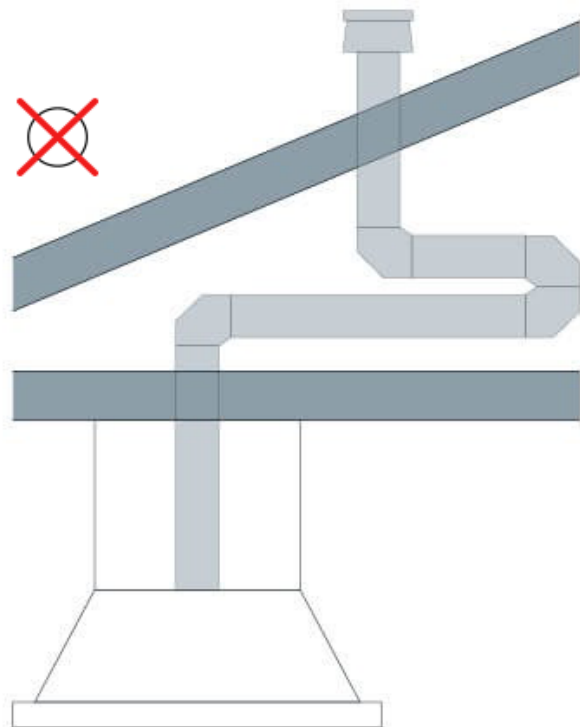

Indirect path with too many elbows

BEFORE INSTALLATION

Ensure the mounting location is structurally sound and capable of supporting the weight of the insert hood and any custom wood enclosure.

- Verify the availability of wall studs behind the mounting surface.
- If the hood will be enclosed in a custom wood setting, review “Installing a Custom Hood Enclosure” on page 20 before mounting the insert to ensure proper assembly order.

INSTALLATION OVERVIEW

This insert range hood is designed to be mounted directly to a wall or cabinet structure using the top keyhole slots and side mounting slots. A custom hood enclosure may be built around the insert. The enclosure may either:

- be flush against the insert’s front face, or
- overlap the insert’s front flange slightly.

NOTE: If the custom hood includes a rear backing panel, it must be installed onto the insert **BEFORE** the insert is mounted to the wall, as it cannot be slid over the insert afterward due to ceiling clearance.


BEFORE INSTALLATION

MOUNTING THE INSERT HOOD

NOTE: The following installation steps only pertain to a decorative hood that does not wrap around the back of the hood.


Locate Studs (Preferred Installation)

1. Use a stud finder to mark stud locations at the mounting area.
2. Position the hood so that at least one keyhole slot aligns with a stud.

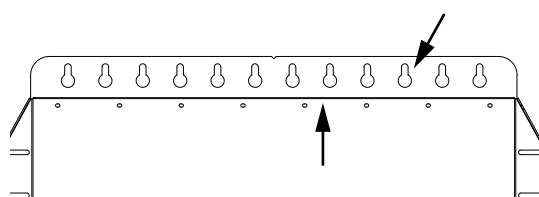

Install Hanging Screws


1. Drill pilot holes into each stud.
2. Install mounting screws into the stud(s), leaving the heads protruding approximately 1/4" (6 mm).
3. Do not tighten fully—screws must protrude so the keyholes can slide over them.

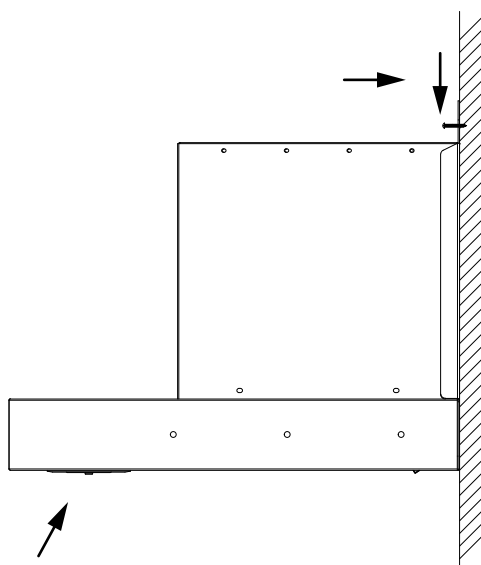

INSTALLATION


Hang the Insert

1. Lift the hood into position.
2. Align the top keyhole slots with the screws.
3. Lower the hood so it hangs securely on the screws.

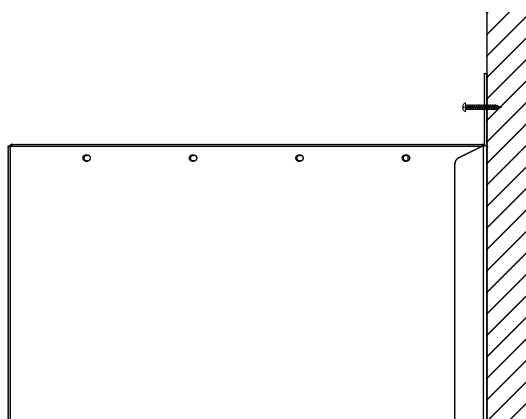

Secure the Insert

1. Tighten the mounting screws fully to lock the hood in place.
2. If desired, use the side flange slots to add additional screws for increased stability.
3. At least one screw into a stud is recommended for mixed-material walls.

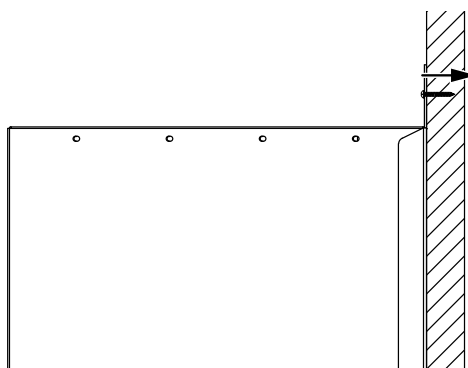

INSTALLATION

Mounting Without Studs


If the keyhole locations do not align with studs:

- **Install Drywall Anchors**

1. Install appropriately rated drywall anchors at the keyhole slot locations.
2. Insert the anchor screws, leaving the screw heads protruding for hanging.
3. Hang the hood using the keyholes as described above.

- **Reinforce Through Side Flanges**

1. Locate the nearest stud.
2. Use the side mounting slots on the left or right flange to drive a screw directly into a stud.
3. This ensures long-term stability when the keyhole points cannot reach framing.

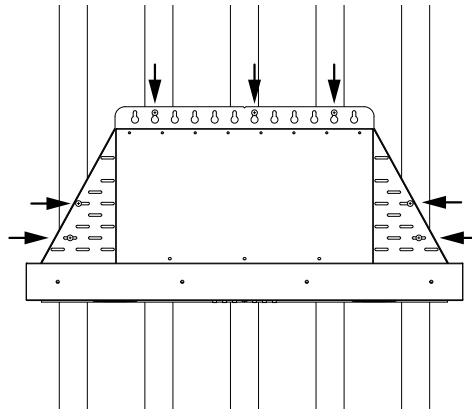

INSTALLATION


Installing a Custom Hood Enclosure

IMPORTANT:

- The custom hood is always built around the insert.
- The insert must be accessible from the front for sliding the enclosure on.
- If the custom hood has a back panel, it must be attached to the insert before wall mounting.


Method A

1. After the insert is secured to the wall, slide the custom hood frame over the front of the insert until it sits flush against the front face.
2. Ensure the hood is centered and level.
3. Proceed to “Attaching a Custom Hood to the Insert” on page 21 to attach the hood using the perimeter holes.

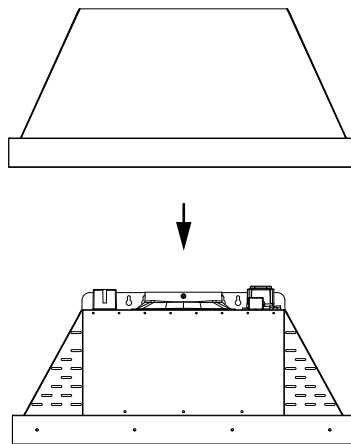

Method B

1. Slide the custom hood over the front stainless flange of the insert.
2. Ensure equal overlap on both sides for an even appearance.
3. Proceed to “Attaching a Custom Hood to the Insert” on page 21 to secure the hood through the perimeter holes.

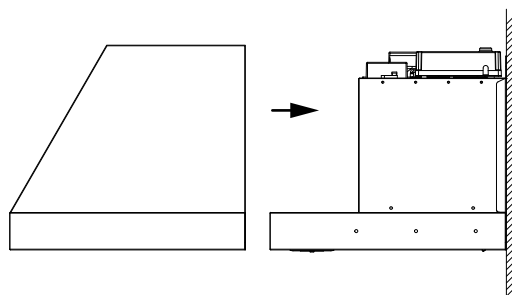

INSTALLATION

Attaching a Custom Hood to the Insert

IMPORTANT: Custom Hood With a Backing Panel (NOT RECOMMENDED)

If the custom hood is built with a rear panel (closed back), it may not be possible to slide the hood over the insert once the insert is already mounted to the wall. The insert includes front-facing flanges designed for a forward slide-on installation only.

If the custom hood includes a full backing board:

1. Attach the custom hood to the insert before mounting the insert to the wall.
2. Then hang the combined assembly using the keyhole hanging method. A third person is recommended for this step.
3. Secure both the insert and hood after confirming alignment.



Fastening Procedure

Perimeter mounting holes are located around the front face of the insert hood.

1. From inside the insert cavity, locate the pre-drilled perimeter holes.
2. Drive screws through these holes and into the wooden structure of the custom hood.
3. Use wood screws appropriate for the hood material (typically #8).
4. Ensure screws are fully seated and do not distort or bend the metal perimeter.

NOTES:

- For most lightweight decorative hood enclosures, securing the insert using the left and right mounting points is typically sufficient (6 total).
- Screws must not penetrate through the visible finished face of the wood hood.
- Ensure all attachment points are secure to avoid vibration or rattling.

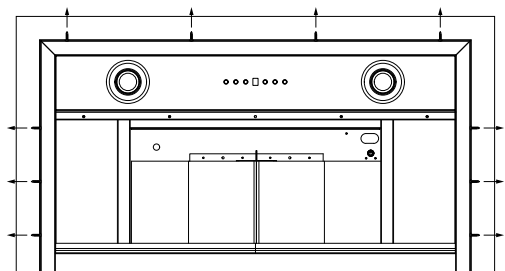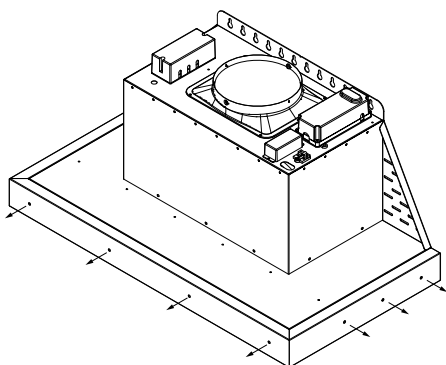


INSTALLATION

For heavier custom wood enclosures, decorative enclosures with added depth, or installations where additional rigidity is required, the front perimeter mounting holes must also be used to ensure proper support and long-term stability. To access and use the front mounting holes, follow these steps:

1. Remove the screws securing the light panel.
2. Carefully lower the light panel.
3. Disconnect the light (see page 28) and control button panel by releasing the push-type connectors.
4. Remove the light panel completely to expose the front mounting screw holes.
5. Drive screws through the front mounting holes and into the decorative hood to further secure the hood in place.

Once the hood is fully secured, reconnect the electrical connectors and reinstall the light panel.

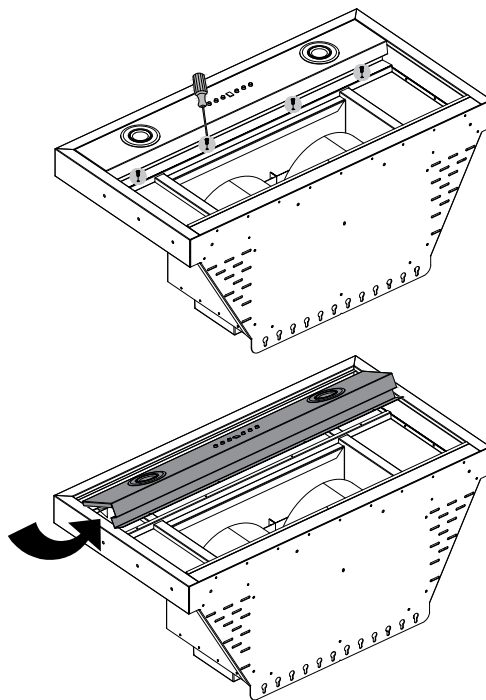


INSTALLATION

Final Checks

1. Verify all screws (keyhole mounts, side flanges, and perimeter screws) are fully tightened.
2. Confirm the hood is level and does not rock.
3. Ensure ducting is properly connected and sealed.
4. Confirm electrical connections comply with local codes.
5. Install baffle filters and test the blower and lighting.

OPERATION

BUTTON FUNCTIONS

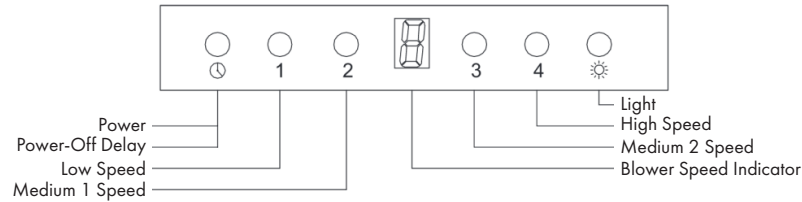


- **Power:** Turn ON/OFF the range hood and activate the power-off delay timer.
- **Light:** Turn ON/OFF; some models have bright, dim, and OFF settings.
- **Blower Speed Indicator:** Shows current blower (motor) speed (1–4).
 - **1 - Low Speed:** Light frying/boiling.
 - **2–3 - Medium Speeds:** Frying/wok cooking/heavy boiling.
 - **4 - High Speed:** Intensive frying/wok cooking.
- **Adjusting the motor speed:**
 - Press the power button once to turn on the system.
 - Press the speed buttons for the desired speed.
 - The motor speed indicator shows the motor speed level.
- **Adjusting the timer function:**
 - Turn the hood on at any speed and press the power-off delay button to enter timer mode; a "3" flashes in the display and the power-off timer will begin to count down.
 - When the motor speed indicator reaches zero, the motor will shut down.


CARE AND MAINTENANCE

HOW TO REPLACE THE BUTTON PANEL


1. Remove screws from the light panel.

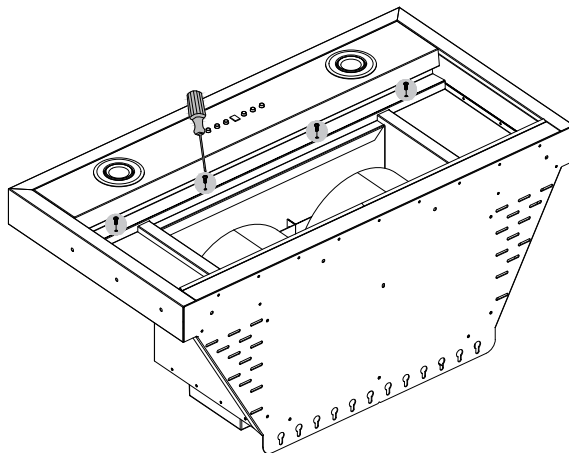

2. Remove the light panel.

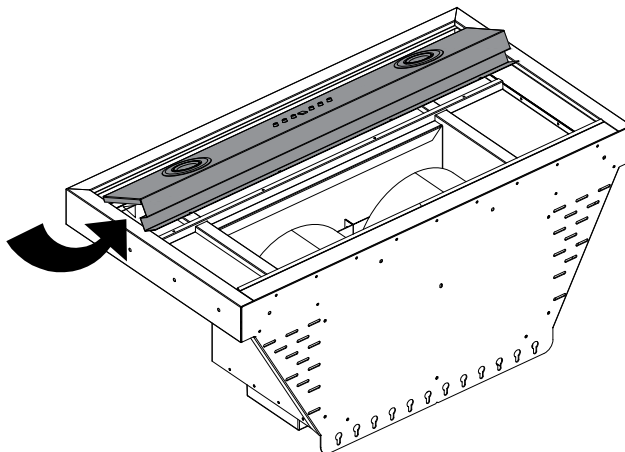

3. Disconnect the lights and button panel. Pinch the connectors and pull away from each other to disconnect.

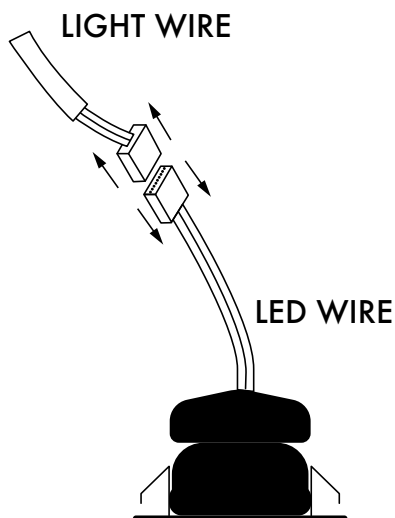


CARE AND MAINTENANCE

4. Remove the 2 screws on either side of the control panel.
5. Pull the control panel out and away from the light panel.
6. Install the new button panel and the 2 screws on either side.
7. Reconnect the lights and button panel.
8. Reinstall the light panel.
9. Reinstall the screws securing the light panel.



WARNING

Never work on or clean the range hood while the power is on. Always unplug the unit or switch the electrical breaker to the off position.

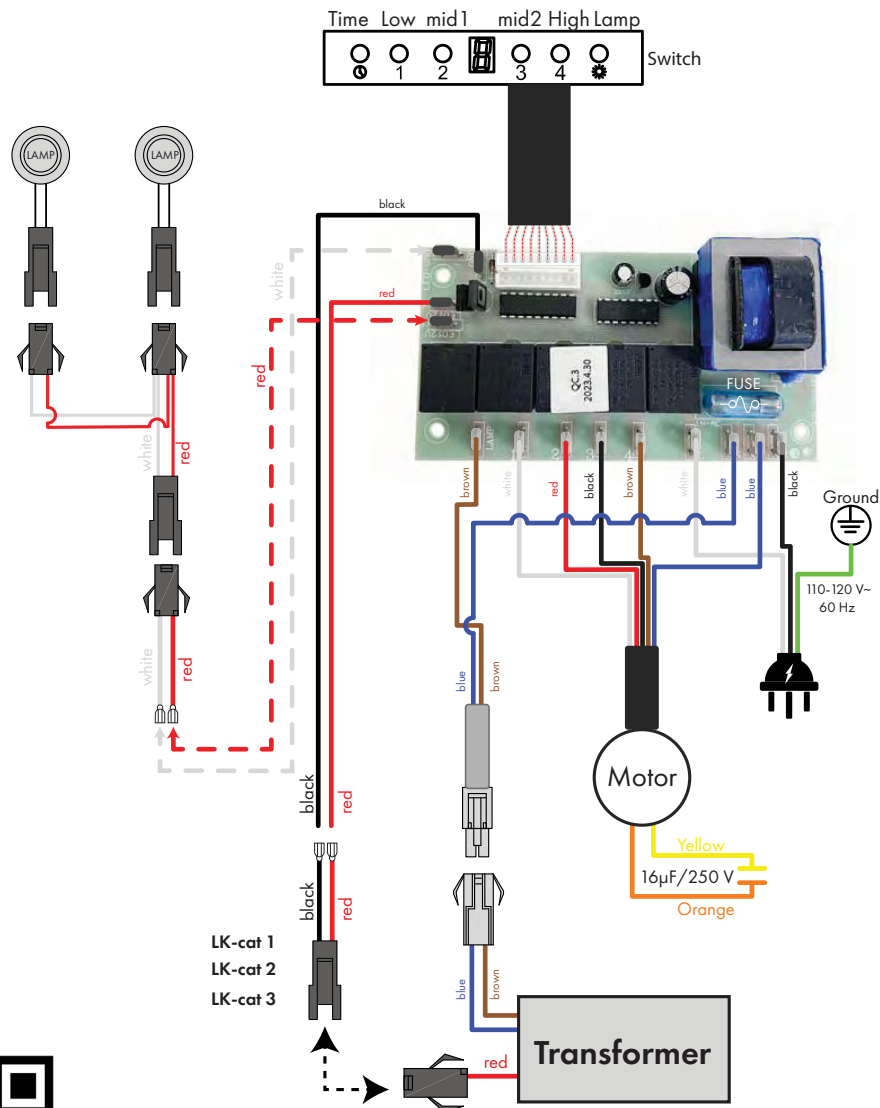

Scan for a button panel installation tutorial video


CARE AND MAINTENANCE

HOW TO REPLACE THE CIRCUIT BOARD

1. Turn the power off at the breaker and unplug the range hood.
2. Remove screws from the top of the circuit board cover (circled in blue below).
3. Take a picture of the wiring layout (this will help you put the circuit board back together properly).
4. Remove the wiring connected to the existing circuit board. The terminals have a locking pin in the middle to prevent them from accidentally coming loose. Removal may necessitate using a needle-nose pliers to unlock the terminals.
5. Remove the screws from the circuit board.
6. Replace the wiring and screws to reassemble the new circuit board per the diagram below (and aligning with the image you took earlier).



Never work on or clean the range hood while power is on. Always unplug the unit or switch the electrical breaker to the off position.

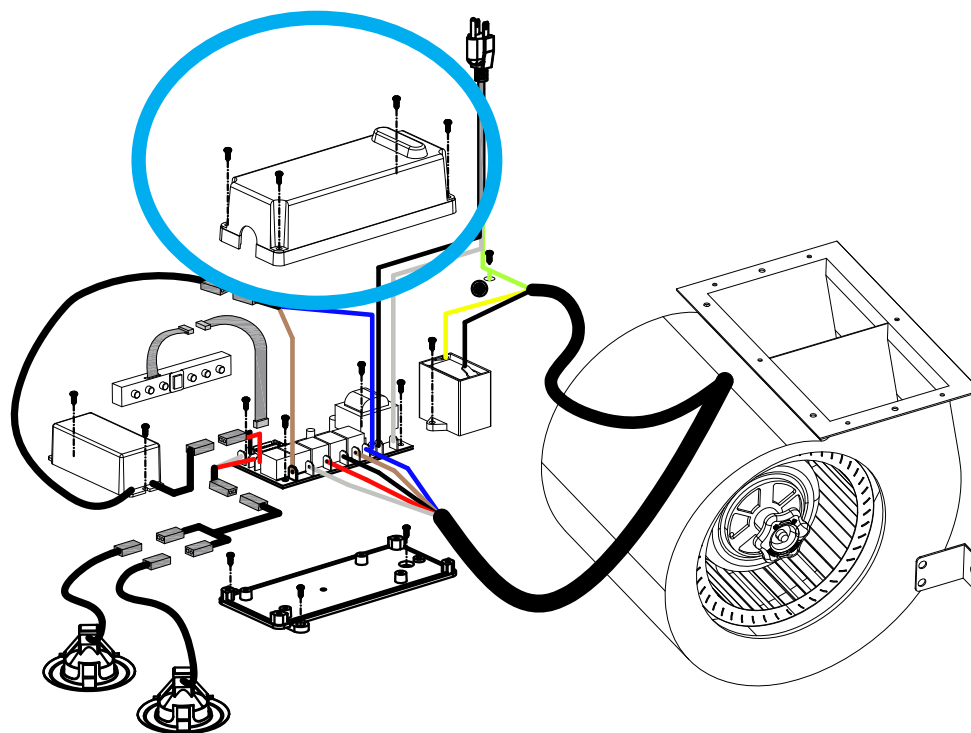


Scan for a circuit board
installation tutorial video


CARE AND MAINTENANCE

HOW TO REPLACE THE LIGHT BULBS IN YOUR RANGE HOOD


1. Remove screws from the light panel.

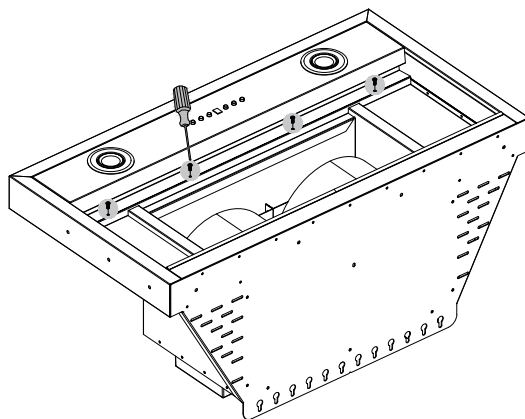

2. Remove the light panel.

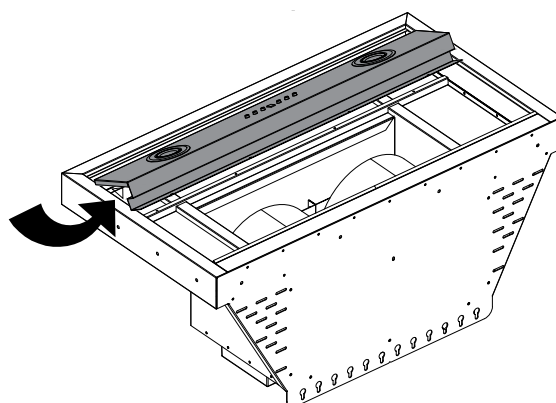

3. Disconnect the lights and button panel. Pinch the connectors and pull away from each other to disconnect. Remove the lights by pinching the metal tabs on the light and pull outward from the light panel.

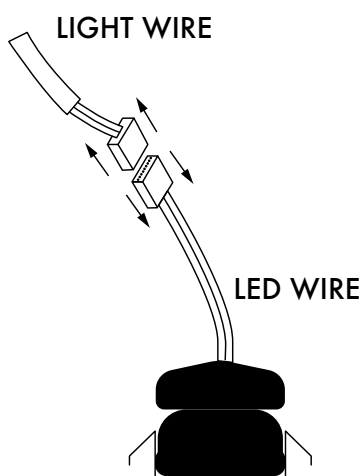

CARE AND MAINTENANCE

4. Insert the new lights into the light panel.
5. Reconnect the lights and button panel.
6. Reinstall the light panel.
7. Reinstall the screws securing the light panel.



WARNING

Never work on or clean the range hood while power is on. Always unplug the unit or switch the electrical breaker to the off position.



Scan for a light bulb
installation tutorial video

CARE AND MAINTENANCE

HOW TO REPLACE THE CAPACITOR

1. Turn the power off at the breaker and unplug the range hood.
2. Remove screws from the circuit board cover in a similar fashion as page 27.
3. Remove the screw securing the capacitor (circled in blue) to the circuit board. *Figure 1*
4. Remove the wiring connected to the existing capacitor. The terminals have a locking pin in the middle to prevent them from accidentally coming loose. Removal may necessitate using needle-nose pliers to unlock the terminals.
5. Connect the new capacitor with the same wire connectors. Reference "How to Replace the Light Bulbs in Your Range Hood" on page 28 for more information.
6. Replace the screw on the capacitor and re-screw in the circuit board cover.

NOTE: Capacitors provide power to the range hood motor. If you have a unit with dual motors, there will be two capacitors (circled in blue). *Figure 2*



Never work on or clean the range hood while power is on. Always unplug the unit or switch the electrical breaker to the off position.

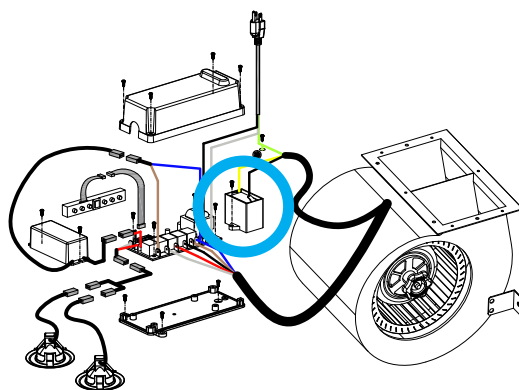


Figure 1

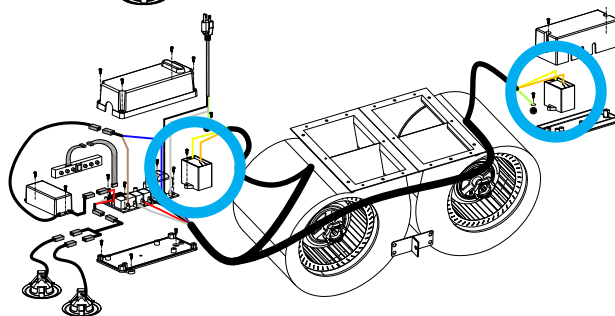


Figure 2



Scan for a capacitor
installation tutorial video

CARE AND MAINTENANCE

HOW TO REPLACE THE TRANSFORMER

1. Turn the power off at the breaker and unplug the range hood.
2. Remove screws from the circuit board (circled in blue) cover in a similar fashion. *Figure 1*
3. Locate the wire coming from the transformer (circled in pink) to the circuit board and remove the two wired connections from the circuit board.
4. Remove the two screws securing the transformer. *Figure 2*
5. Locate where the transformer connects to the light bulbs; disconnect the wires (see page 28).
6. Once disconnected, remove the old transformer and connect the new wiring from your new transformer to the light bulb following the reverse from above.
7. Replace both screws to secure the new transformer.
8. Re-connect the wire from the new transformer to the circuit board.
9. After testing the lights to ensure they work, screw the circuit board cover back on.

NOTE: Transformers provide power to your range hood's lights.



Never work on or clean the range hood while power is on. Always unplug the unit or switch the electrical breaker to the off position.

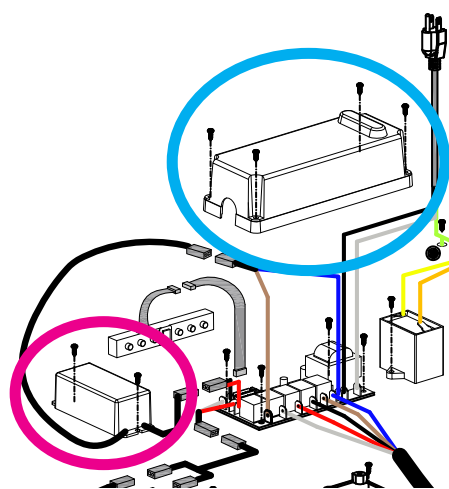


Figure 3

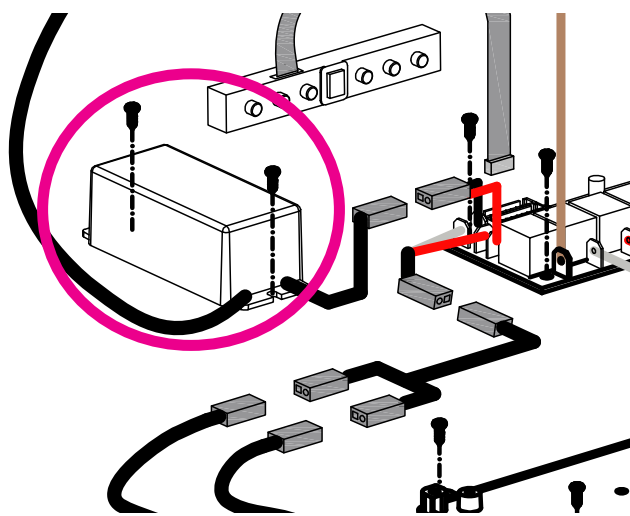



Figure 4



Scan for a transformer
installation tutorial video



CARE AND MAINTENANCE

SINGLE MOTOR ELECTRICAL DIAGRAM—MODEL 683-28

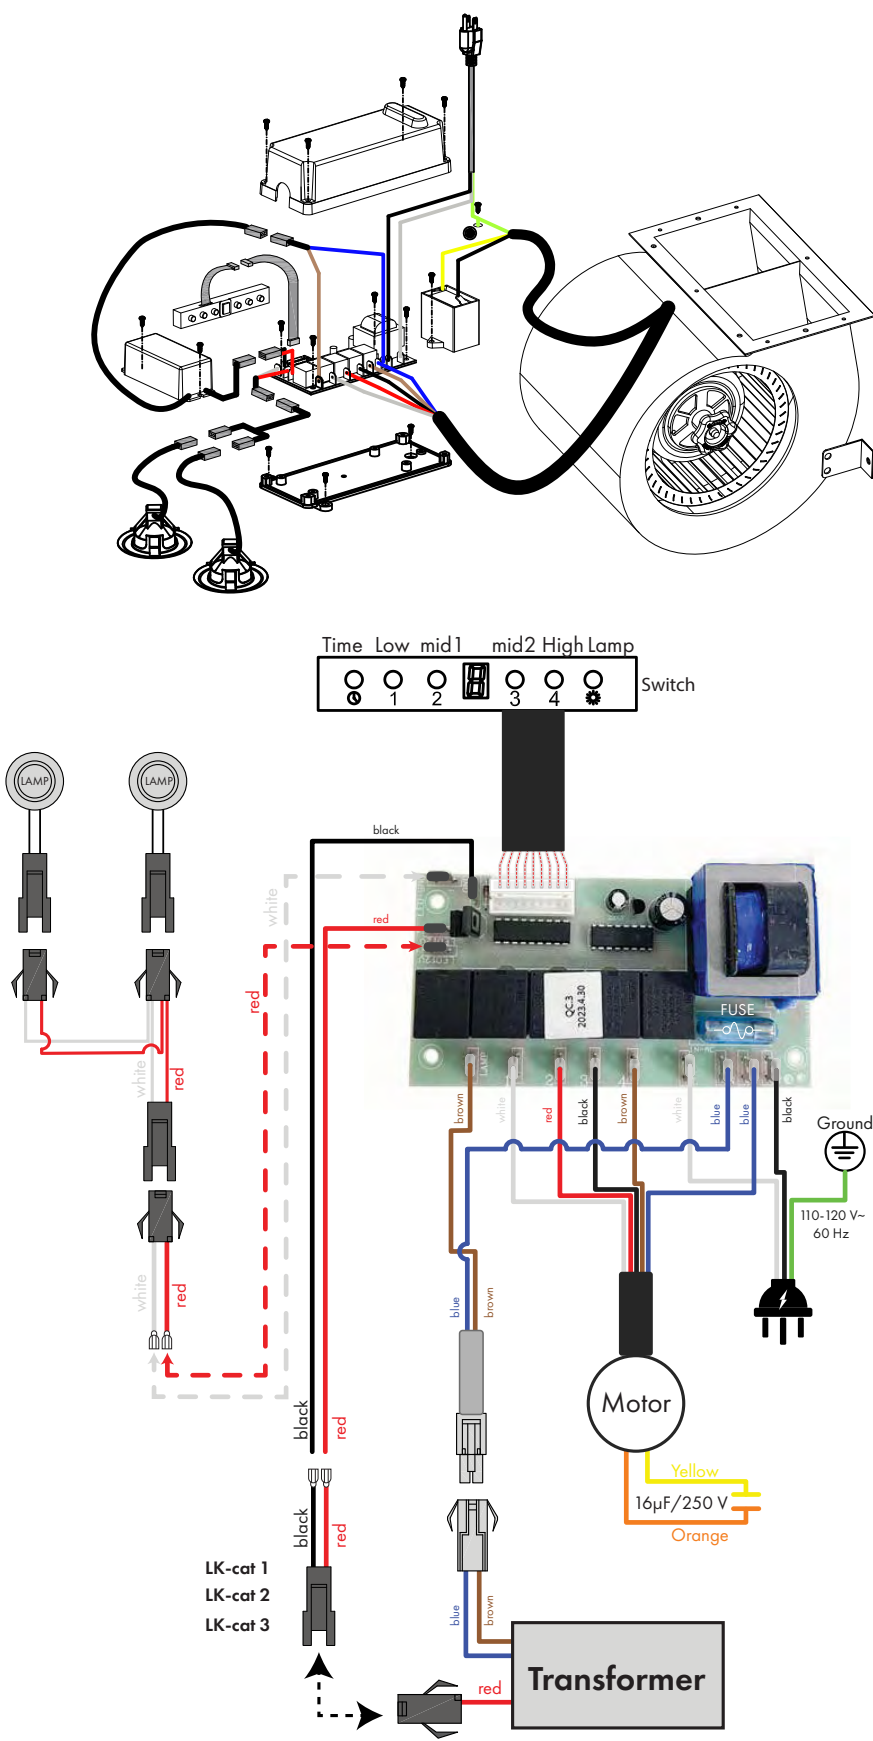

CARE AND MAINTENANCE

DUAL MOTOR ELECTRICAL DIAGRAM—MODELS 683-34, 683-40, 683-46

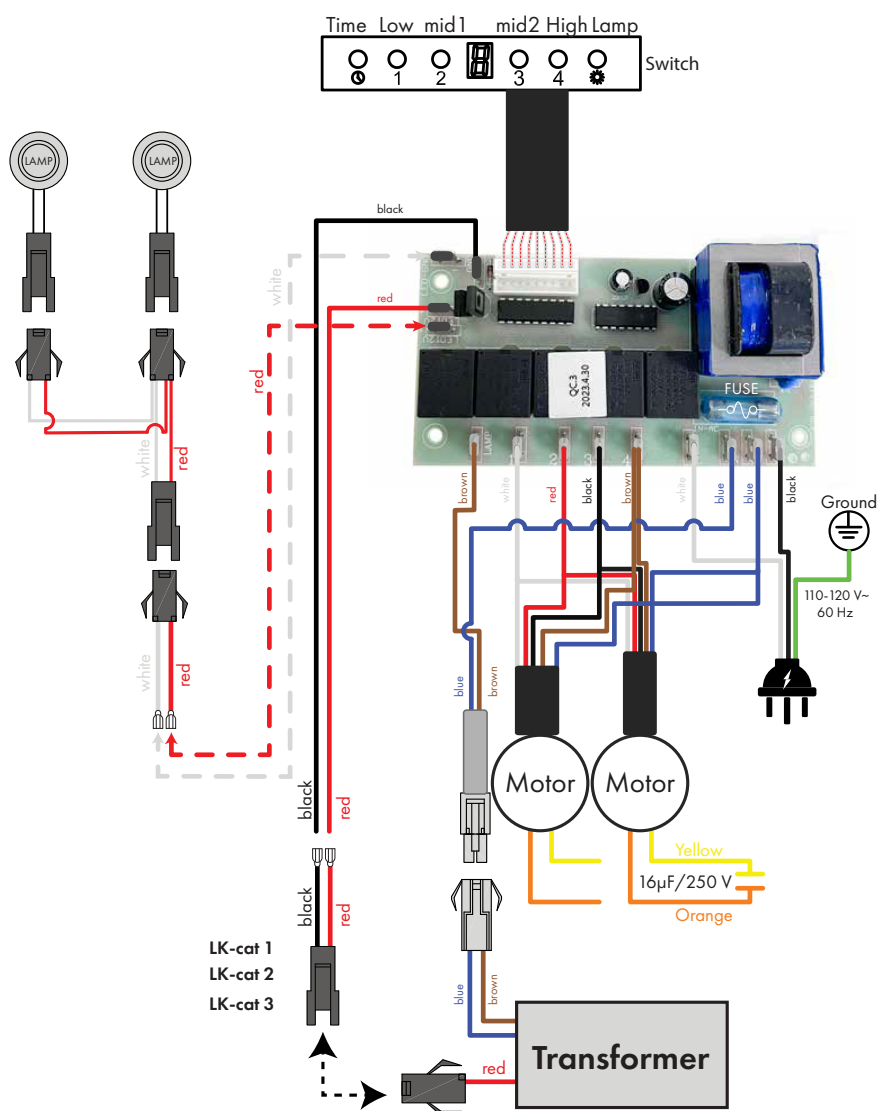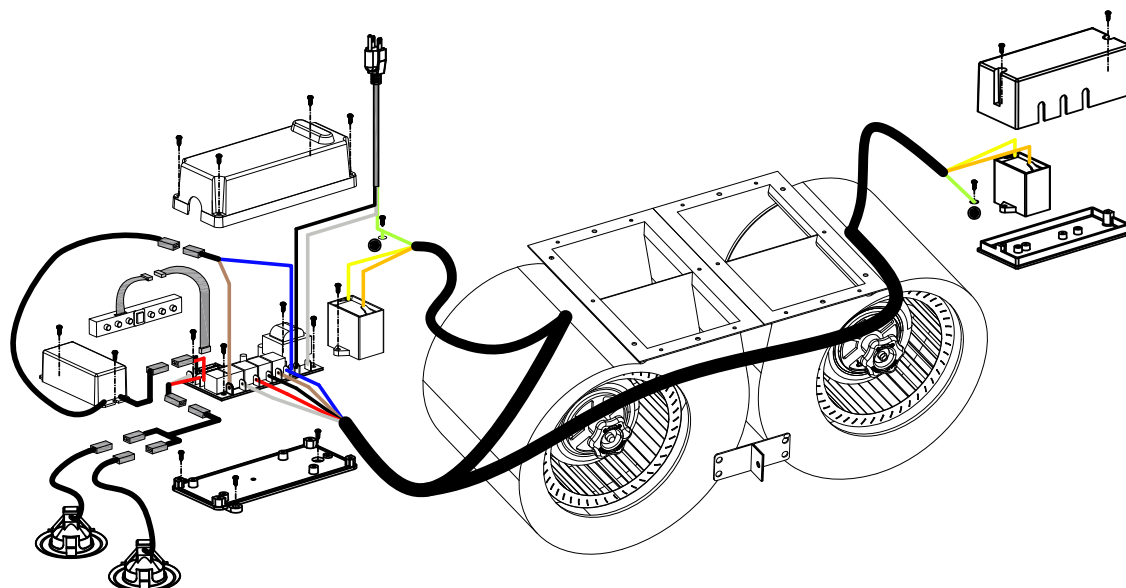

CARE AND MAINTENANCE

HOW TO REPLACE PROFESSIONAL SERIES BAFFLE CHANNELS AND FILTERS

ZLINE professional series range hoods are equipped with removable dishwasher-safe baffle channels in which the filters rest. To install the channel, place it inside the hood under the back edge of the hood. The channel is kept in place by installation pieces on the sides and back of the channel.

To install the baffle filters, first install the removable baffle channel. Next, take the filter and put one end into the baffle channel. Push back into place and pull down, sliding the bottom of the filter in. The edges of the baffle filters should have open slats on the outside edges.



Scan for a
baffle filter
use and care
tutorial video



Scan for a
baffle filter
installation
tutorial video



WARNING

Edges on the baffle filters and baffle channels may be sharp — please use caution when installing and removing. Use of gloves during installation is highly recommended. Do not attempt to disassemble baffle filters, as the process may result in injury.

CARE AND MAINTENANCE


HOW TO CLEAN AND REPLACE THE GREASE CUP

A removable plastic grease cup is designed to catch excess grease at the bottom of the motor. It's recommended to remove it every 2–3 months, wash it, then re-install it.

To remove or install the grease cup, remove the baffle filters on your hood and slide the cup into brackets located at the bottom of the motor. See below.



WARNING Never work on or clean the range hood while power is on. Always unplug the unit or switch the electrical breaker to the off position.

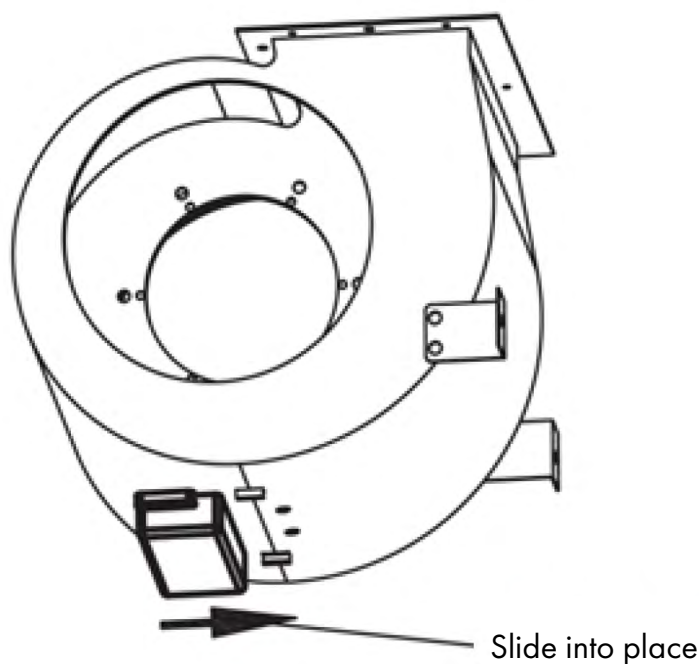

Scan for a grease cup
installation tutorial video

- Please review this list for common troubleshooting tips before contacting customer service, as this may save you time and money.

TROUBLESHOOTING

- This list contains frequently encountered problems that are not results of faulty workmanship or material use.
- Some of these troubleshooting items are specific to certain types of ZLINE range hoods and as such may not be applicable to inserts. Your product may not have some of the features described here.



WARNING

If a problem cannot be resolved after following the instructions in the manuals, please contact ZLINE Customer Service at 1-614-777-5004. Never attempt to repair or disassemble a faulty range hood yourself. Always consult a professional.

ISSUE	POSSIBLE CAUSE	SOLUTION
Why is my range hood white?	This is a protective layer that is placed on all ZLINE range hoods to prevent shipping damage.	This should be easily removable by peeling off.
Why are my range hood baffle filters blue?	This is a protective layer that is placed on ZLINE’s baffle filters to prevent shipping damage.	
My range hood will not operate.	Check that there is power to the range hood.	The most common issue is that the circuit breaker is off or the fuse has blown.
		Make sure the speed has been selected at the range hood controls.
		Turn off the power to the range hood and check that all wires are properly connected.

TROUBLESHOOTING

ISSUE	POSSIBLE CAUSE	SOLUTION
My hood is making a rattling noise.	The motor is loose.	Turn off the power and remove the filter and check that all screws are secure and tight around the motor.
	The duct work connection is loose.	Turn off the power to the unit and check that the ductwork connection to the pipe is tight. Add duct tape if necessary.
What do I do if the hood is working but pulling air slower than normal?	Check your baffle filters for buildup and clean or replace it if needed.	If the problem still persists, check for obstructions in your ductwork. A common obstruction is buildup in the roof or wall cap, such as bird nests, leaves, or other debris.
	Is the range hood width the correct size for the cooking surface?	
	Does the hood move enough CFM in relationship to the BTUs of the cooking surface? Remember — BTU output per burner/100 - for gas, and wattage output per burner/10 - for electric.	
My range hood does not have power.	Check electrical connections.	
	Check that all connections to the circuit board are secure.	
	If problem still exists, please call our customer service line.	

TROUBLESHOOTING

ISSUE	POSSIBLE CAUSE	SOLUTION
Noisy Motor	Were the fan speeds checked fan speeds prior to installation? Is the ducting clear? Check to make sure motor is attached to housing. If there is an external damper installed at the exit point of the ducting, check that it is fully functioning by engaging the hood and checking if it opens and closes properly. If the motor is accessible, the motor knob can be tightened.	
My range hood is not pulling.	Was the unit plugged in and was the fan checked before installation? What distance is the hood mounted above the cooking surface? Make sure the distance is 30"–36" (762 mm–914 mm). Are the baffle filters or mesh filters installed correctly? When were they last cleaned? Is the ducting clear? If there is an external damper installed at the exit point of the ducting, does it open properly once the hood is turned on? Is there air coming out of the upper chimney section? When tissue is placed on the baffle filters under the hood, does it hold the tissue? How many elbows and how long is the ducting run? Should be no more than 2–3 elbows and no more than a 40' (12') run to exit — for every elbow subtract 5' (1524 mm).	

WARRANTY

COVERAGE

ZLINE Kitchen and Bath ("ZLINE") range hood parts will be warrantied for three years from the original date of product delivery for the original purchaser of the product.

ZLINE warranty periods begin from the original date of product delivery and solely cover the original purchaser of the product, delivered new and in its original carton. ZLINE will provide free-of-charge, non-consumable replacement parts for the components that failed due to manufacturing defects.

Additionally, range hoods purchased on or after January 2017 carry a lifetime warranty on the motor. It is the responsibility of the customer to install all replacement parts and motors, as ZLINE does not perform service repairs on its range hood products.

ZLINE's liability is limited to the original purchase price of the product. Additional injuries, losses, damages, or other inconveniences caused by product malfunction or defects in materials are not covered under the terms of this warranty.

TERMS

ZLINE warranties apply only to the original purchaser of a ZLINE product installed for normal residential use. This is defined as a single-family, residential dwelling in a non-commercial setting. Any warranty claim stemming from installation, operation, or any other use within a commercial setting is not covered under this limited warranty. Commercial settings include, but are not limited to: schools, churches, hotels, restaurants, vacation rentals such as Airbnb, daycare centers, private clubs, fire stations, common areas in multi-family dwellings, nursing homes, food service locations, and institutional food service locations such as hospitals or correctional facilities.

This warranty is non-transferable and will not under any circumstance be extended based on the date of installation — the warranty period takes effect from the date of delivery and only covers the original purchaser. The warranty applies only to products installed in the contiguous United States and the District of Columbia.

WARRANTY

Out-of-pocket payments will not be reimbursed for replacement parts unless prior approval is received from ZLINE. Unapproved out-of-pocket payments for parts will not be reimbursed. Out-of-pockets for any type of service will not be reimbursed, as ZLINE does not perform service repairs on its range hood products. All warranty procedures must be followed to maintain warranty coverage.

If ZLINE is unable to replace the defective part after a reasonable number of attempts, ZLINE reserves the right to offer to replace the product or provide the original purchaser a full refund of the purchase price of the product (not including installation, removal, or other charges that were not included in the original purchase price).

The original purchaser of the product must provide the original proof of purchase, including the purchase date, when filing a claim to obtain replacement parts or refunds. Additionally, the original purchaser of the product must provide the serial number of the product when filing a claim to obtain replacement parts or refunds.

This warranty shall not apply to any ZLINE product in which the original factory serial number has been removed, altered, or cannot be readily determined for any reason. Further, ZLINE is not responsible for damage resulting from, but not limited to: shipment, delivery, or improper installation; negligence or improper maintenance, misuse, or abuse of the product; unauthorized alteration, modification, or tampering with the product; accident, fire, floods, pest infestations, pandemics, natural disasters, or any other unpreventable or unexplained acts of nature, commonly referred to as "acts of God"; flare-up fires or damages caused by improper electric supply, electrical line current, voltage, or power surges; and service to correct installation not in accordance with the instructions contained in ZLINE's product manuals and/or with local government codes.

Information contained within ZLINE's installation and user manuals, in addition to product information included on ZLINE's website and all related digital listings, do not cover every possible condition and situation that may occur during the installation or operation of ZLINE products.


ZLINE reserves the right to make changes at any time to its products when considered safe, necessary, and useful. Always check the ZLINE website for the most up-to-date version of its product manuals: www.zlinekitchen.com/pages/manuals.

WARRANTY

Do not install or operate any ZLINE product if it has missing or broken parts or if it arrives damaged due to shipping. If ZLINE products arrive damaged, contact ZLINE Customer Experience at 1-614-777-5004 for help. Failure to report a damaged appliance prior to installation or operation may void the warranty. ZLINE does not perform service repairs on its range hood products.

ZLINE disclaims responsibility for damage or injury caused by improper installation or use of any of its products. ZLINE is under no obligation, by law or otherwise, to provide concessions, including repairs, prorates, rebates, discounts, or replacements, once the warranty has expired.

SERIAL NUMBER LOCATION

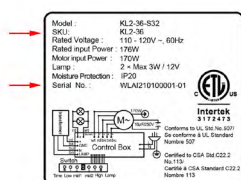

The rating tag shows the model and serial number of your range hood. Please write down the model number and serial number of your appliance. The serial number is located behind the baffle filters near the motor. Both are needed to obtain warranty service. Do not remove permanently affixed labels, warnings, or plates from the product. This will void the warranty. You may also consider attaching your receipt or proof of purchase to this manual.

WARRANTY



CUSTOMER SERVICE AND PARTS INFORMATION

Please contact ZLINE Customer Service for questions and troubleshooting help at 1-614-777-5004 or visit www.zlinekitchen.com/contact to utilize our online Customer Experience Portal.



Scan the QR code to view the most up-to-date version of our Installation Manual and User Manual.



Need to purchase a part or accessory for your ZLINE product? Visit www.zlineparts.com, ZLINE's official parts distribution partner.

1.0.3

zlinekitchen.com

1-614-777-5004

contact@zlinekitchen.com

ZLINE
ATTAINABLE LUXURY®