 
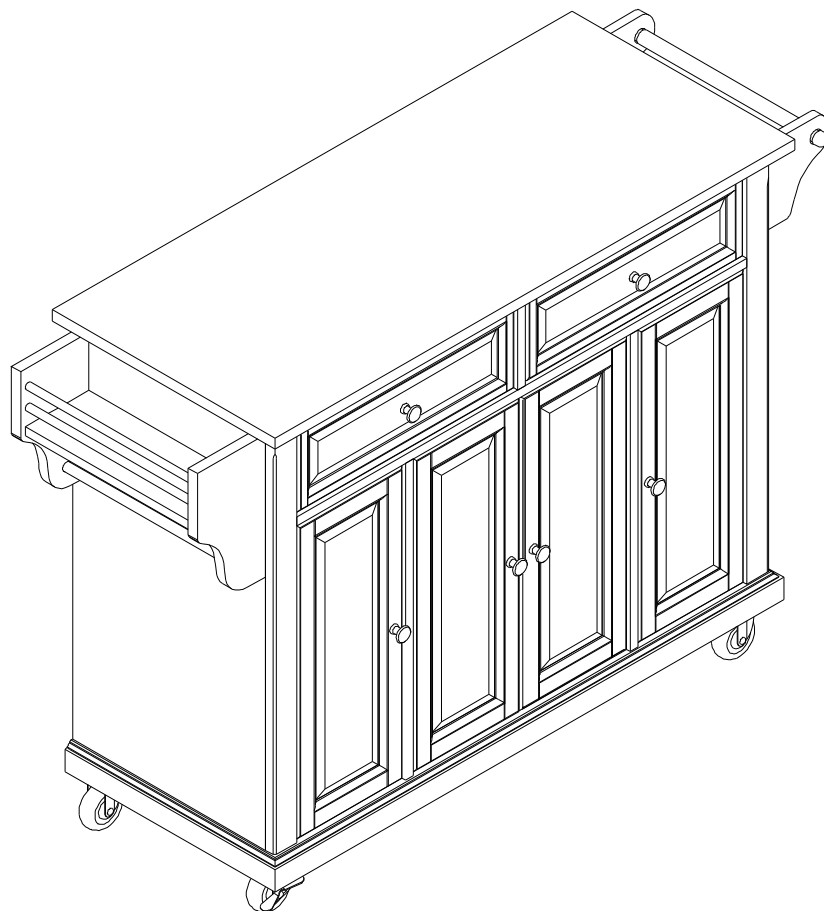 
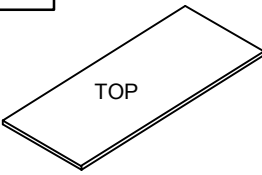 
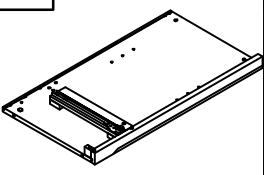 
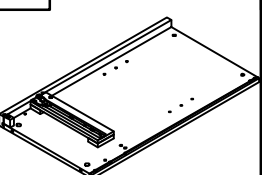 
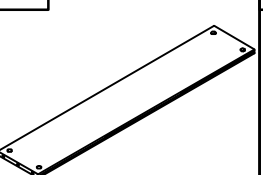 
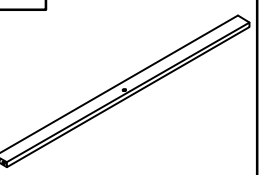 
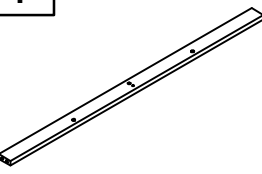 
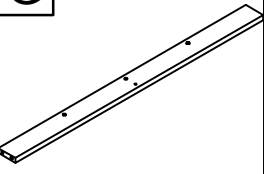 
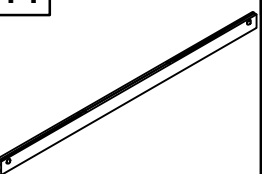 
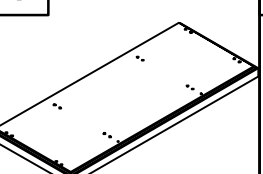 
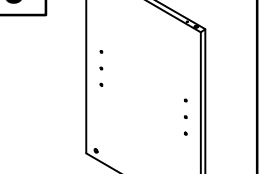 
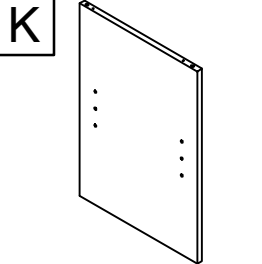 
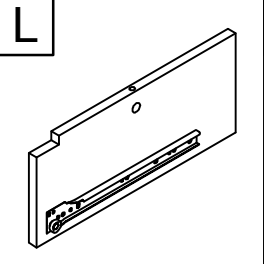 
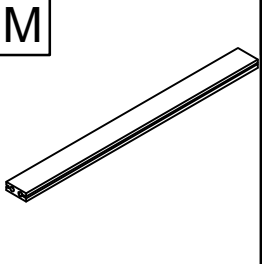 
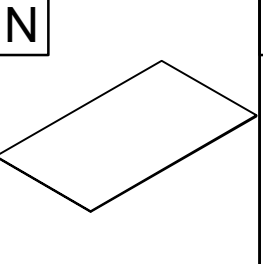 
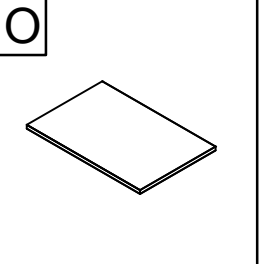 
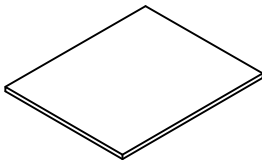 
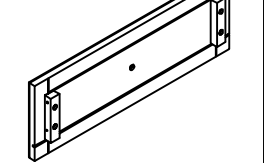 
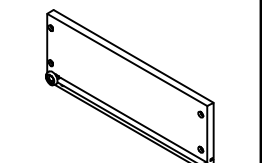 
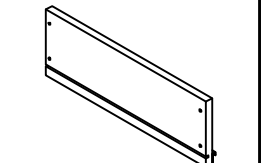 
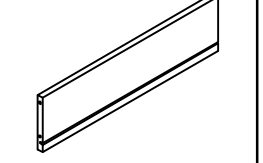 
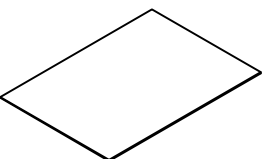 
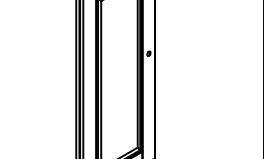 
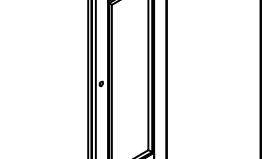 
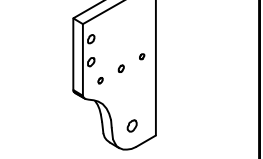 


Kitchen Cart / Island Cabinet







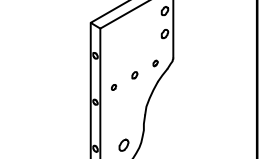


Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.













PART LIST

A  TOP Ships in separate carton	B 	C 	D 	E 
1 PC	1 PC	1 PC	1 PC	1 PC
F 	G 	H 	I 	J 
1 PC	1 PC	1 PC	1 PC	1 PC
K 	L 	M 	N 	O 
1 PC	1 PC	2 PCS	3 PCS	2 PCS
P 	Q 	R 	S 	T 
1 PC	2 PCS	2 PCS	2 PCS	2 PCS
U 	V 	W 	X 	Y 
2 PCS	2 PCS	2 PCS	1 PC	1 PC

       PART LIST

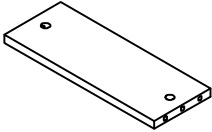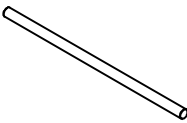
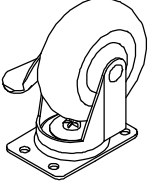
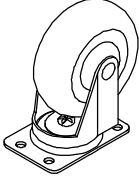
Z		ZA		ZB		ZC		ZD	
2 PCS		1 PC		1 PC		2 PCS		1 PC	
ZE		ZF							
2 PCS		2 PCS							

            HARDWARE LIST

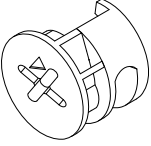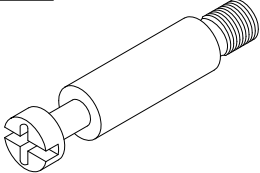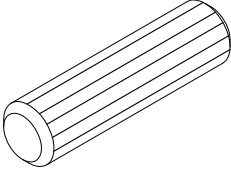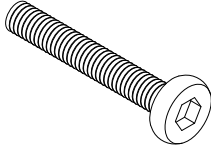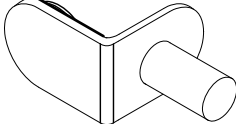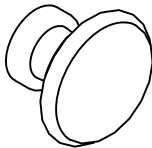1		2		3		4		5	
CAM LOCK 19 PCS		CAM BOLT 19 PCS		WOOD DOWEL 47 PCS		HEX SOCKET HEAD BOLT 14 PCS		SCREW 16 PCS	
6		7		8		9		10	
BARREL NUT 8 PCS		SHELF HOLDER 12 PCS		KNOB 6 PCS		ROUND HEAD BOLT 6 PCS		LARGE ROUND HEAD SCREW 16 PCS	
11		12		13		14		15	
DOUBLE MAGNET 1 PC		MAGNET 2 PCS		ROUND HEAD SCREW 6 PCS		ALLEN KEY 1 PC		LONG SCREW 7 PCS	


Tools needed: Allen key (part#14) (included)
Phillips Head Screw Driver (Not included)

   Step 1. Insert Cam Bolts (part #2) into pre-drilled holes of parts A, B, C, X & Y using a Phillips head screw driver.

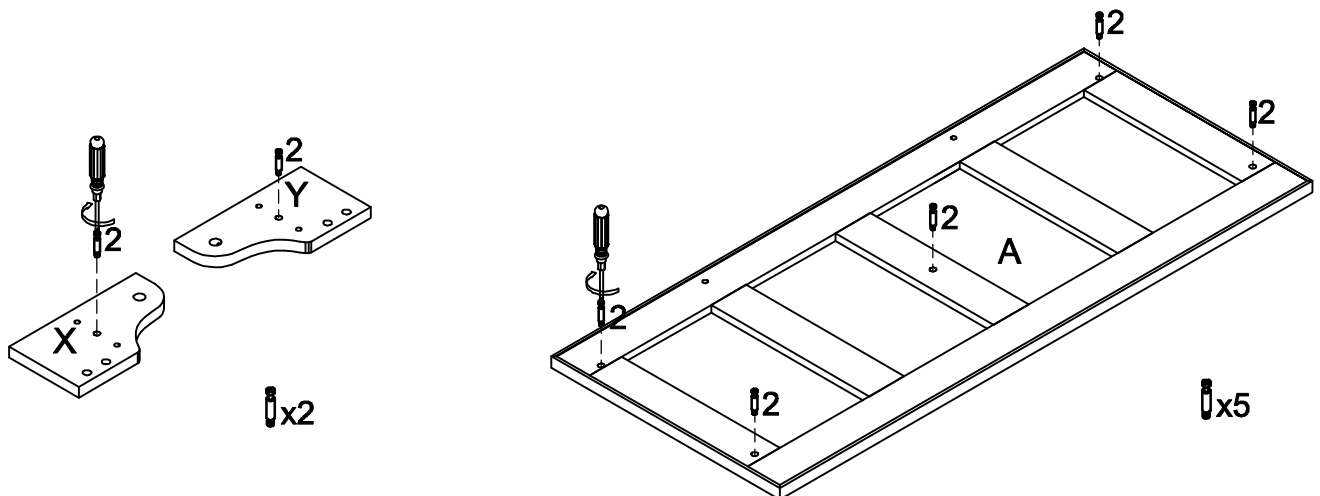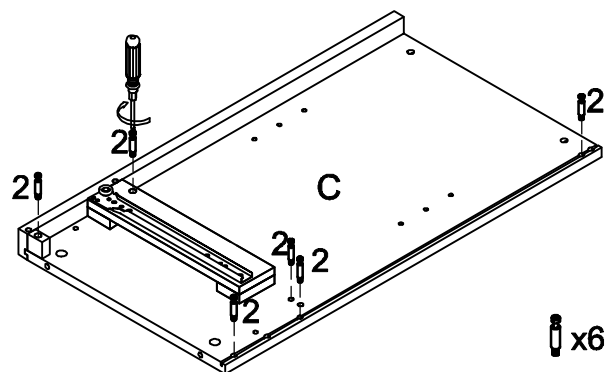
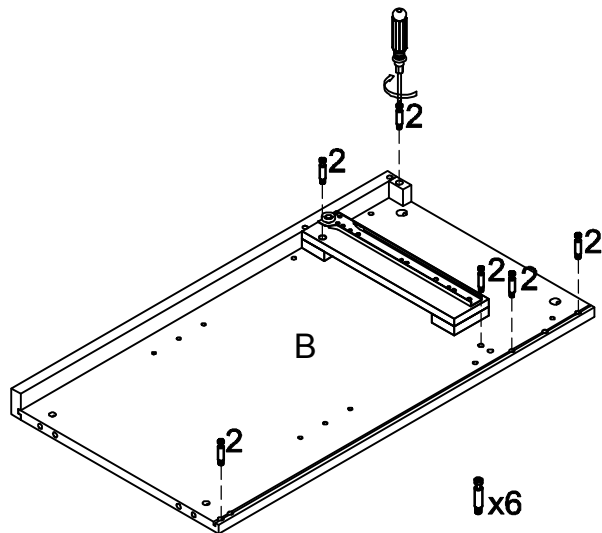


Step 2. Attach Rail E to the notched cutout in Center Panel L with Wood Dowels and Long Screw (Part #15) with Phillips Head screw driver as shown. With Rail E flat on ground, attach Rails G & F to Center Panel L with Wood Dowels and Long Screws (Part #15) with Phillips Head screw driver as shown.

 
NOTE: Please ensure that wood screws are aligned with the pre-drilled holes in Panel L before tightening.

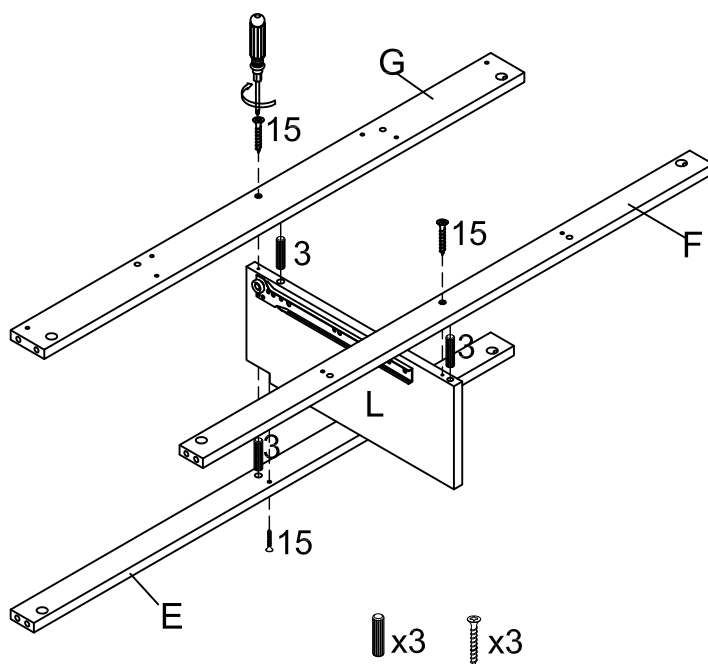

  
Step 3. Attach assembled parts E, F, G & L to Side Panel C with Wood Dowels & Cam Locks as shown. Attach Back Rail D to Side Panel C with Wood Dowels & Cam Locks as shown.

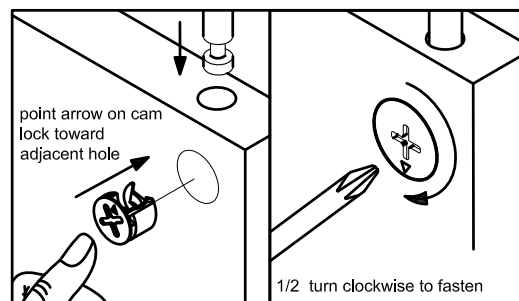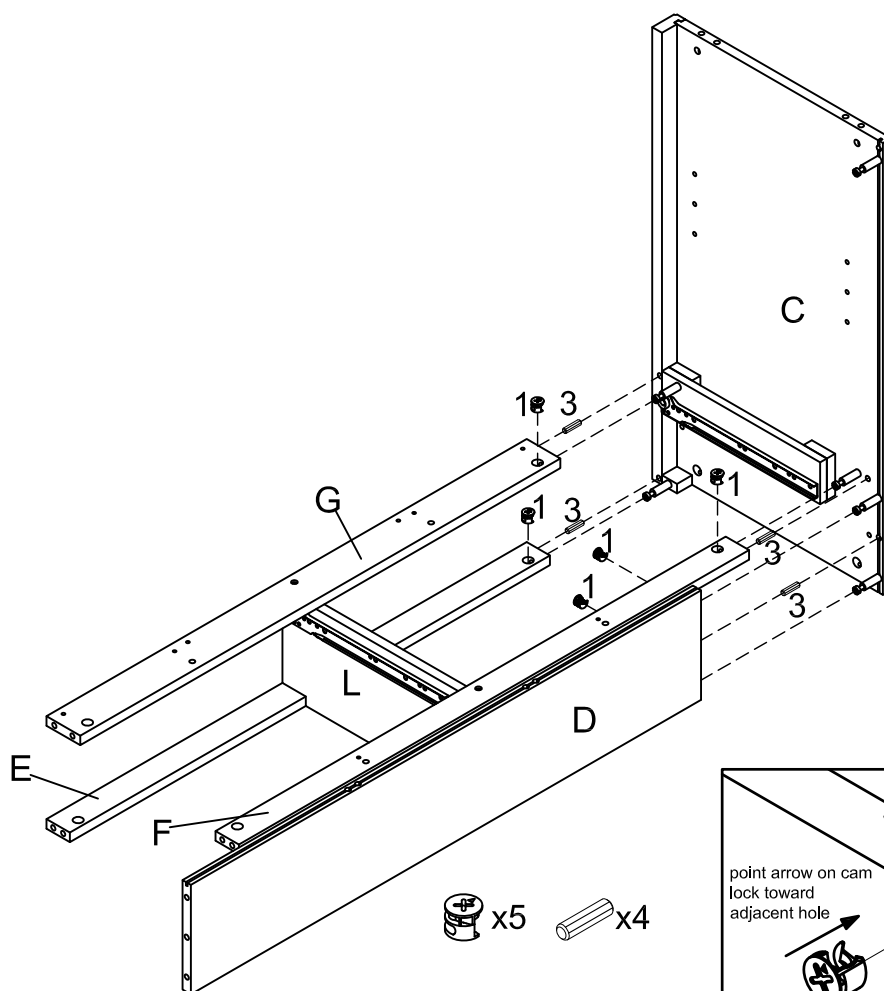


 
Step 4. Set Rails M into place on Back Rail D using Wood Dowels as shown. Slide Back Panels N into grooves of Parts C & M as shown.

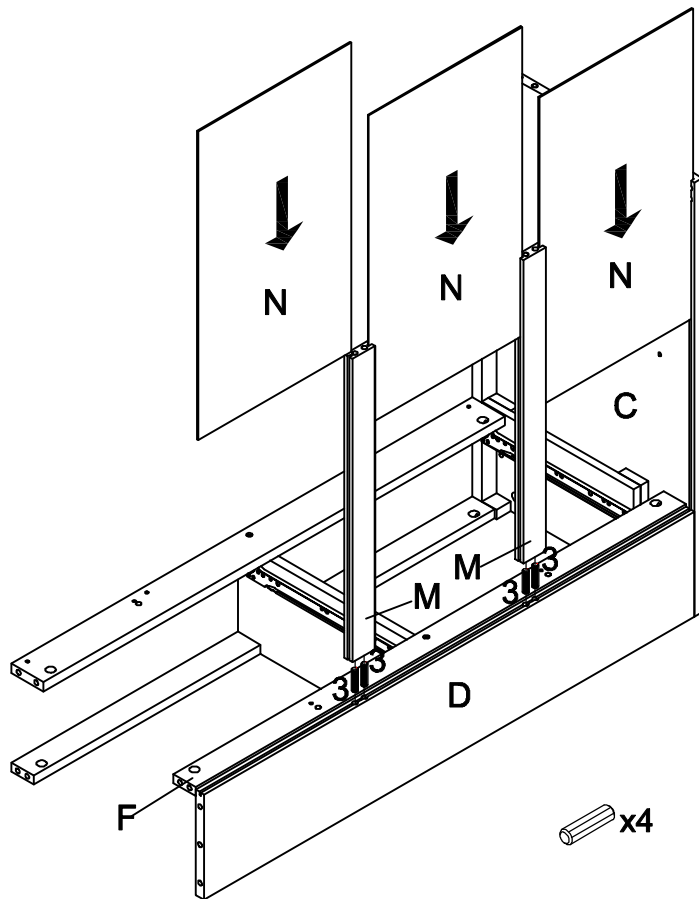

 
Step 5. Attach Rail H to Rails M & Side Panel C using Wood Dowels & Cam Lock as shown.

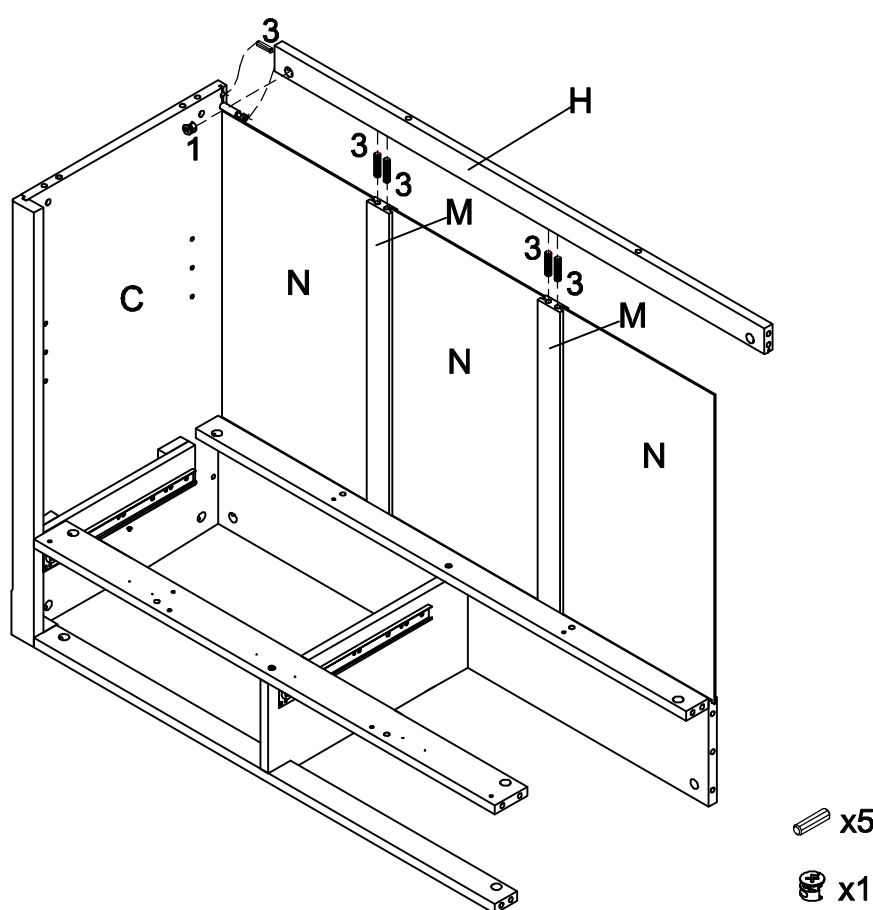

  
Step 6. Attach Side Panel B to Parts D, E, F, G, & H using Wood Dowels & Cam locks as shown.

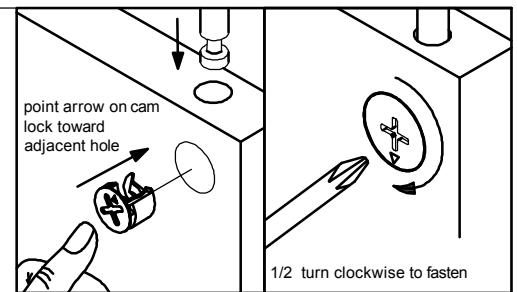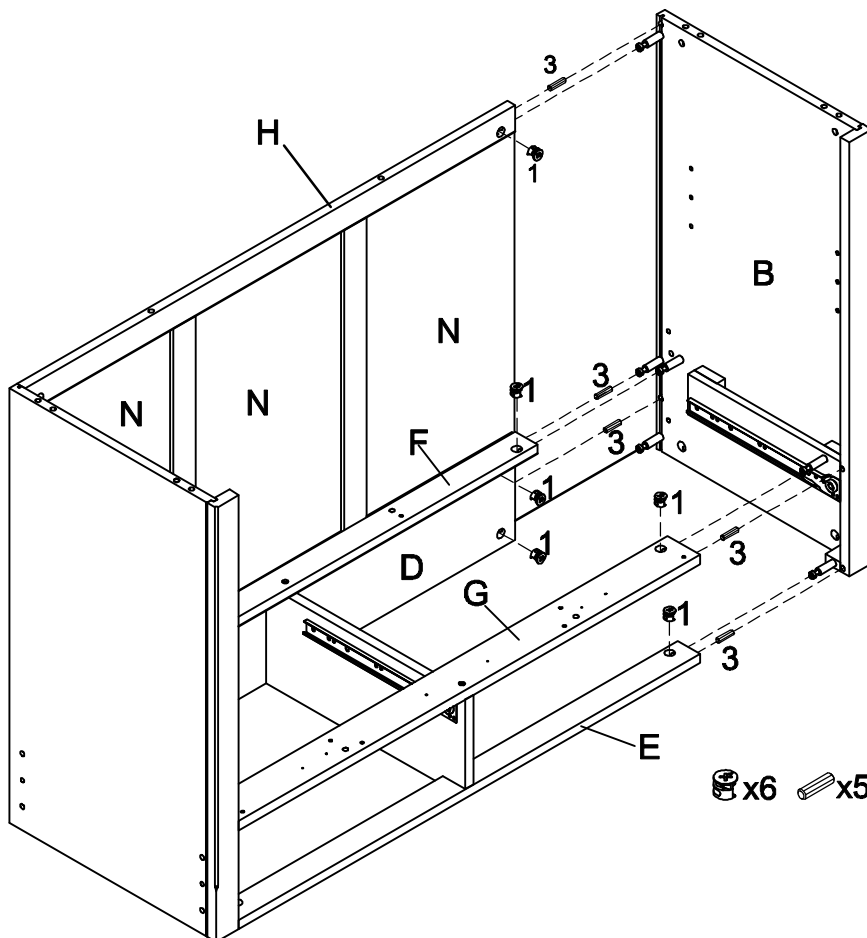

 
Step 7. Attach Double Magnet (Part #11) & Magnets (Part #12) to Rail G using Round Head Screws (Part #13) with Phillips Head screw driver as shown. Set Panels J & K into place on Rails F & G using Wood Dowels as shown.

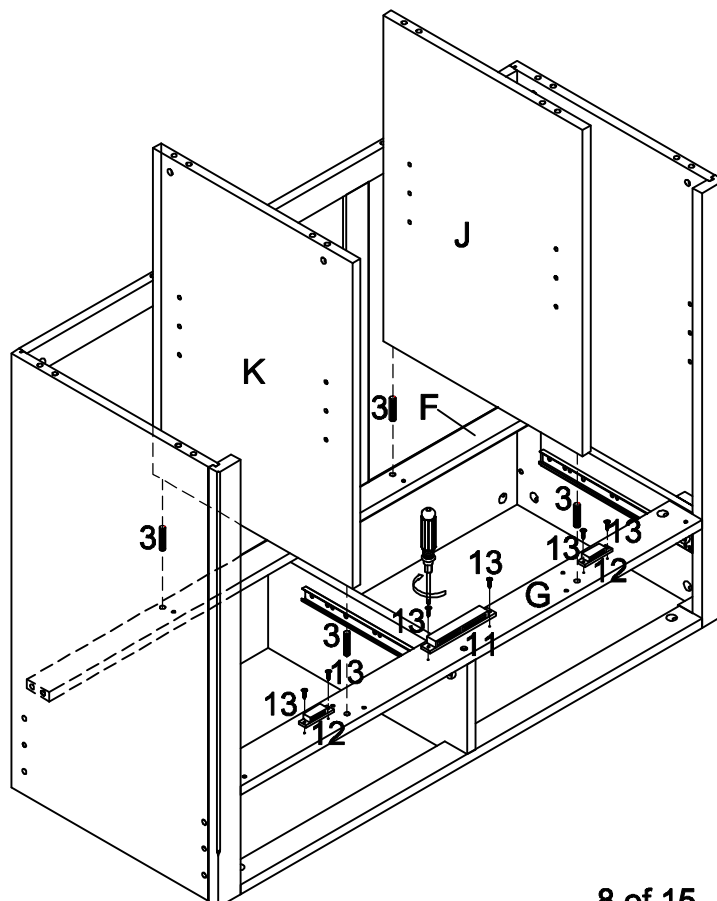

 
Step 8. Attach Base I to cabinet using Wood dowels, Hex Socket Head Bolts (Part #4) & Barrel nuts (Part #6) as shown. Attach Locking Casters (Part ZE) & Casters (Part ZF) to Base I, using Large Round Head Screws (Part #10) & Phillips Head screw driver as shown. **NOTE: IF YOU PURCHASED A KITCHEN ISLAND WITH WOOD LEGS, DO NOT ATTACH THE CASTERS.** Attach the wood legs using Hex Socket Head Bolts, & Wood Dowels (as shown in instruction manual included in carton with the legs). Carefully turn cabinet with legs or casters on the floor.

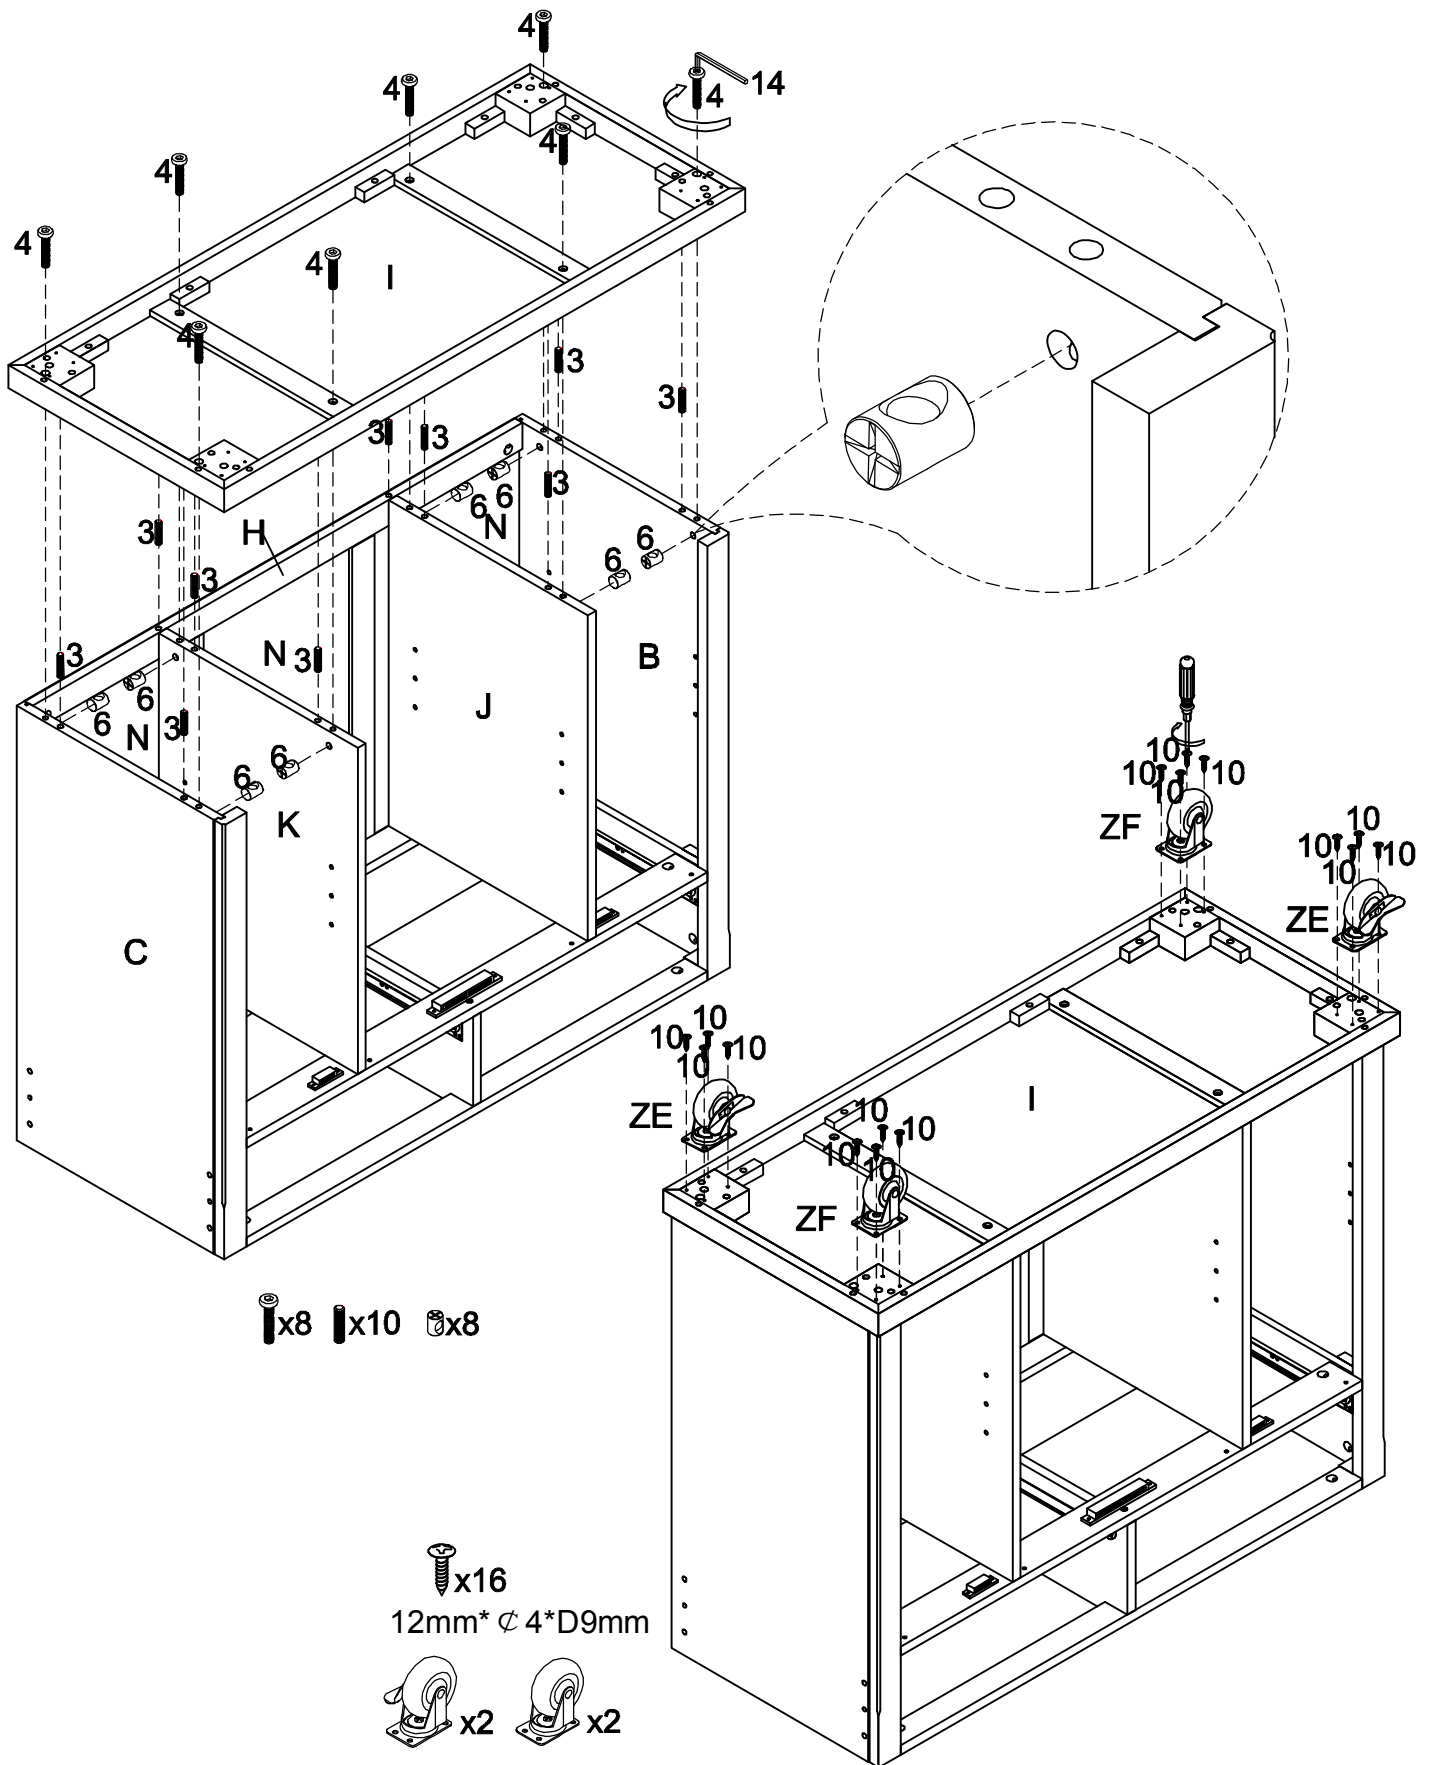

 Step 9. Insert Wood Rods (Part ZB & Parts Z) into the pre-drilled holes in Part X as shown. Attach Part ZA to Part X using Wood Dowels and Cam Lock as shown. Attach Part Y to Parts Z, ZB, & ZA using Wood Dowels and Cam Lock as shown.


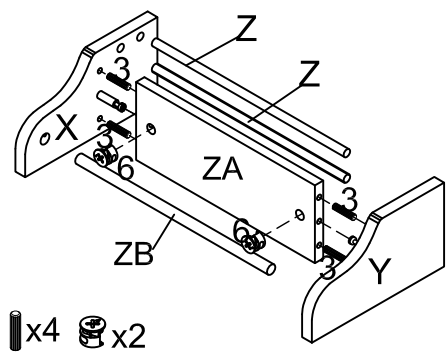


 Step 10. Secure Panels J & K to Rails F & G using Long Screws (Part #15) & Phillips Head screw driver as shown. Attach Spice Rack (Assembled Parts X, Y, Z, & ZB) to Side Panel B using Hex Socket Head Bolts & Wood Dowels as shown. Attach Parts ZC (Towel Bar Sides) to Side Panel C using Hex Socket Head Bolts & Wood Dowels as shown. Insert Towel Bar (Part ZD) through the holes of Parts ZC. Note: Hex Socket Head Bolts will be inserted from the inside of the cabinet.

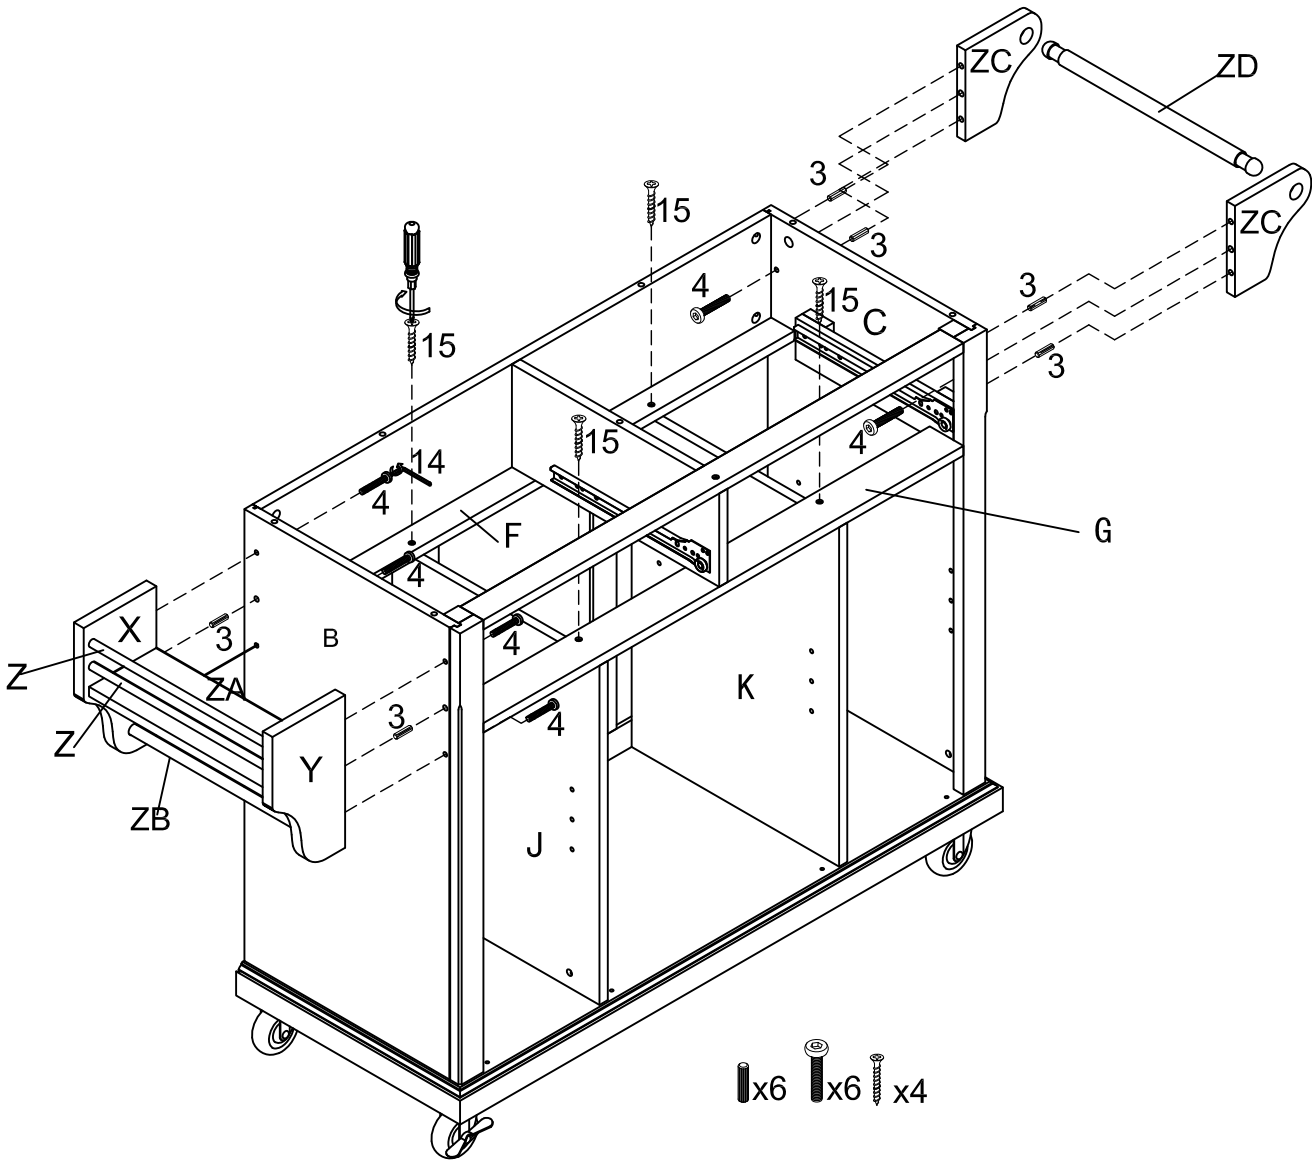


Top A ships separately in a different carton than the cabinet.

  Top A ships separately in a different carton than the cabinet.

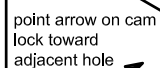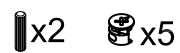

 Step 12. Attach Hardware Knobs to Doors (Parts V & W) using Round Head Bolts (Part #9) & Phillips Head screw driver as shown. Attach doors to cabinet by placing bottom Pin Hinge into pre-drilled holes in Base I & depressing top spring loaded Pin Hinge to fit door into place in Rail G. **Note: Be sure Pin Hinges (top & bottom) have fully extended into the pre-drilled holes in Base I and Rail G to secure doors into place. Insert the Shelf Holders (Part #7) into desired position.**

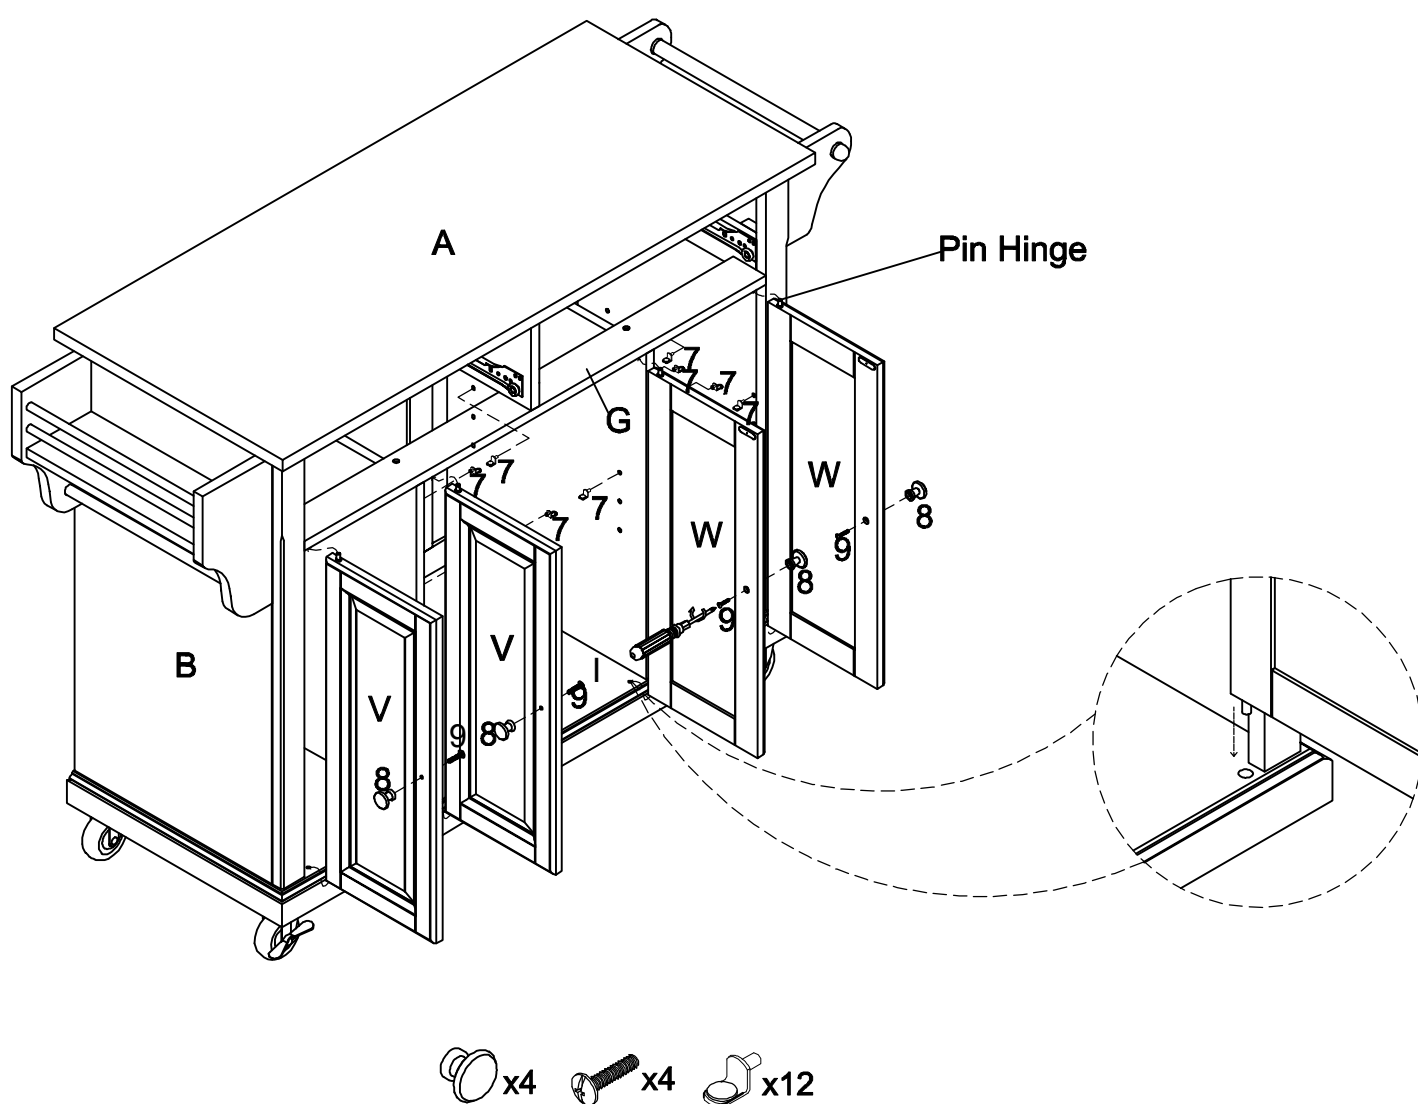

Step 13 Assemble drawers by Attaching Drawer Front Q to Drawer Sides S & R using Screws (Part #5) & Phillips Head screw driver as shown. **NOTE: BE SURE THAT THE WHEELS ON DRAWER GLIDES ARE AT THE OPPOSITE SIDE OF THE DRAWER FRONT.** Insert Bottom Panel U into the grooves of Parts S, R & Q. Attach Back Panel T to Parts S & R using Screws (Part #5) & Phillips Head screw driver as shown. Repeat this step for the other drawer. Insert drawers and shelves into cabinet as shown in diagram on page 14.

