 


OUTDOOR KITCHEN








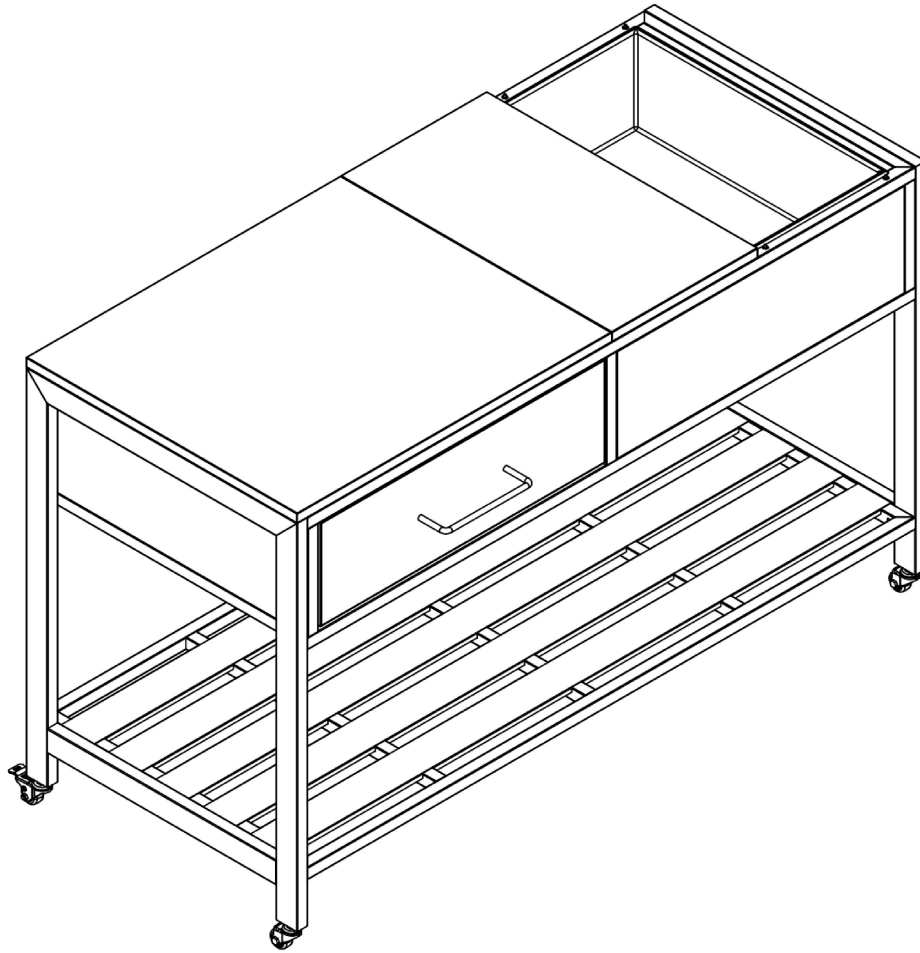 



Before You Start

Please read the instructions carefully to familiarize yourself with every detail and step involved. Keep this manual for future reference. Find a suitable space to assemble.

Important Notes


Small parts are included; we advise you to keep them away from children and pets.

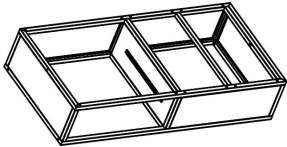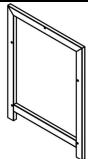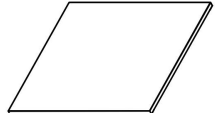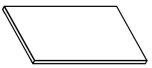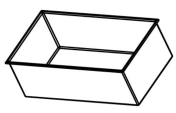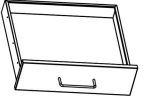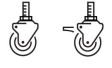NO.	PARTS	DESCRIPTION	QTY
A		Main Frame	1
B		Bottom Shelf	1
C		Side Panel	2
D		Large Top Panel	1
E		Small Top Panel	1
F		Removable Stainless Steel Basin	1
G		Drawer	1
H		Positioning Pin	12
I	 M6x35MM	Installation Screw	10
J		Allen Wrench	1
K		Casters (Includes K1 & K2)	4
L	 M4x30MM	Installation Screw	2


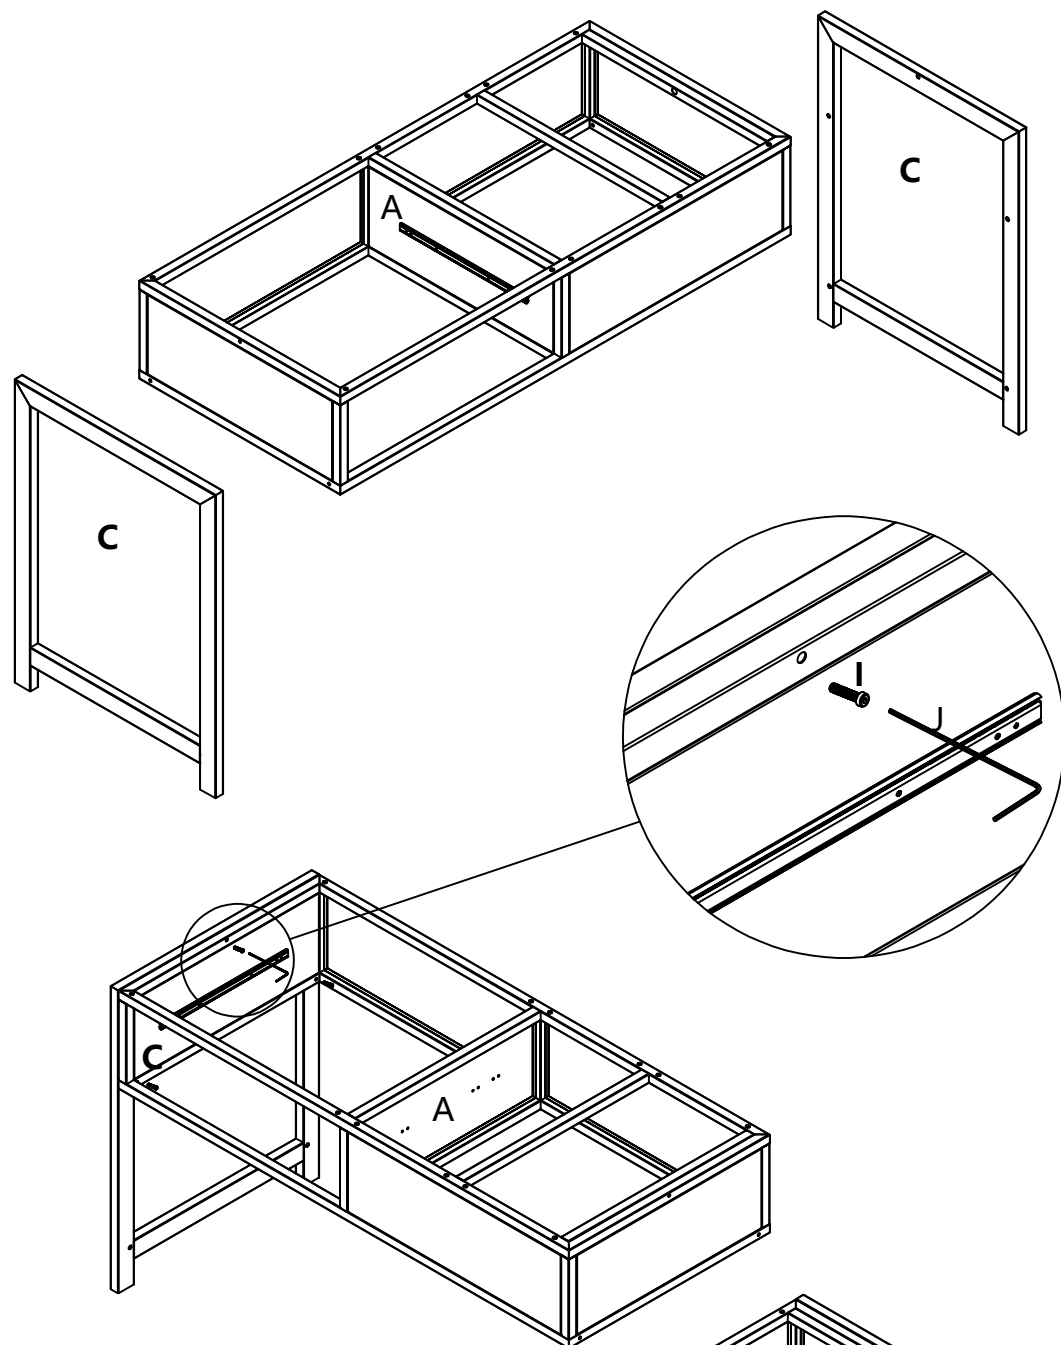


Attach the two Side Panels (C) to the Main Frame(A) using the Installation Screws(I).



Tighten the screws securely with the provided Allen Wrench (J).

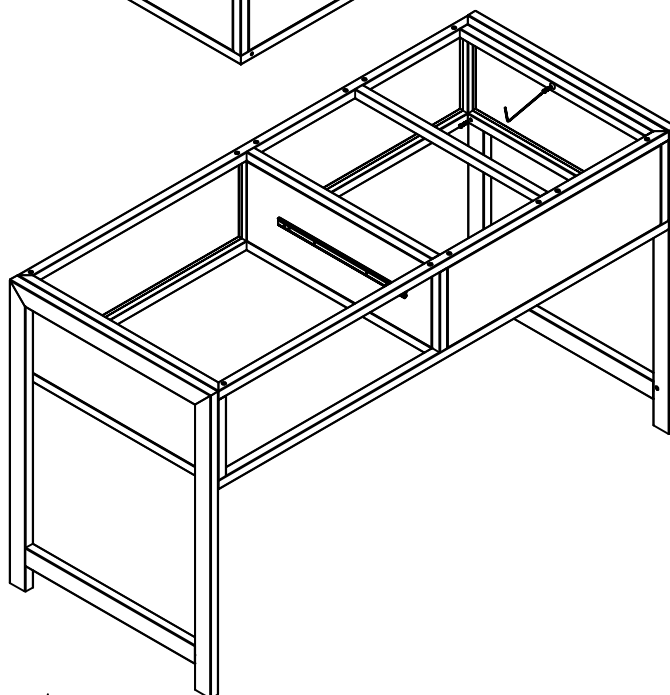

Align the Bottom Shelf (B) with the lower support rails of the Side Panels (C).
Secure it in place using the Installation Screws (I) and the Allen Wrench (J).

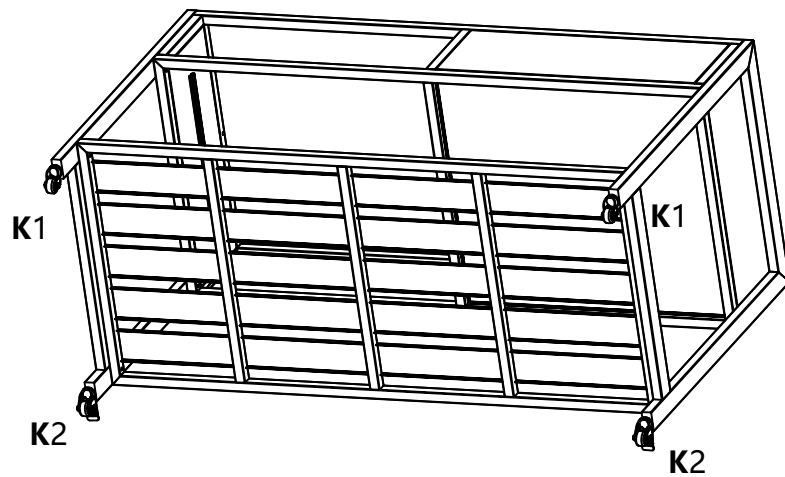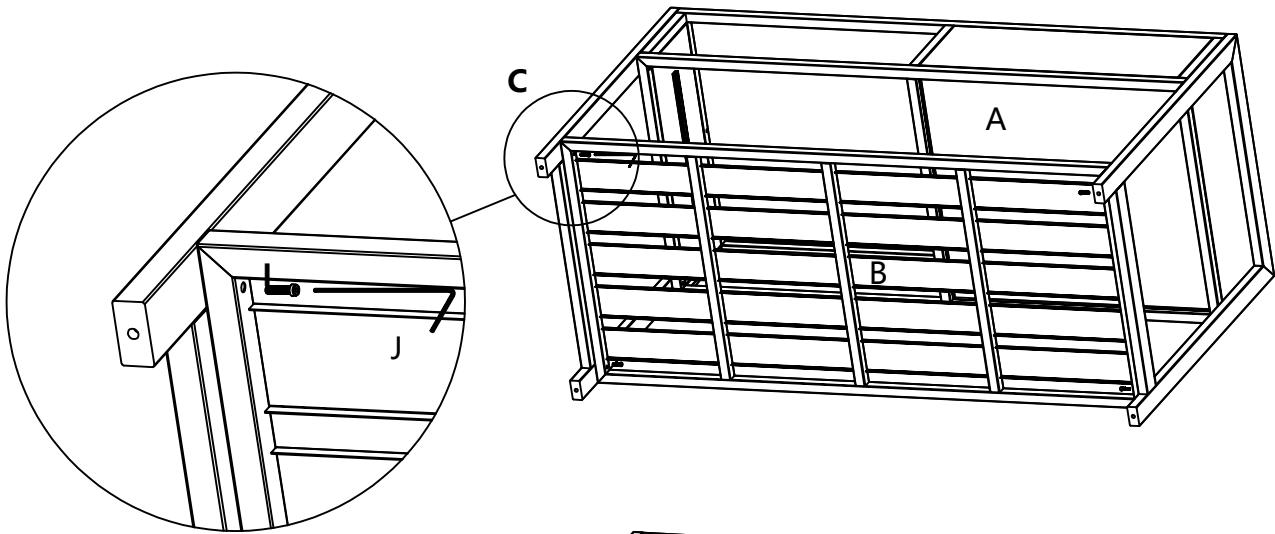





Carefully turn the cart upside down. Insert the Casters (K1 and K2) into the bottom of the Side Panel legs.

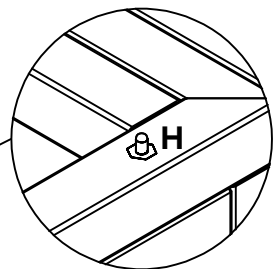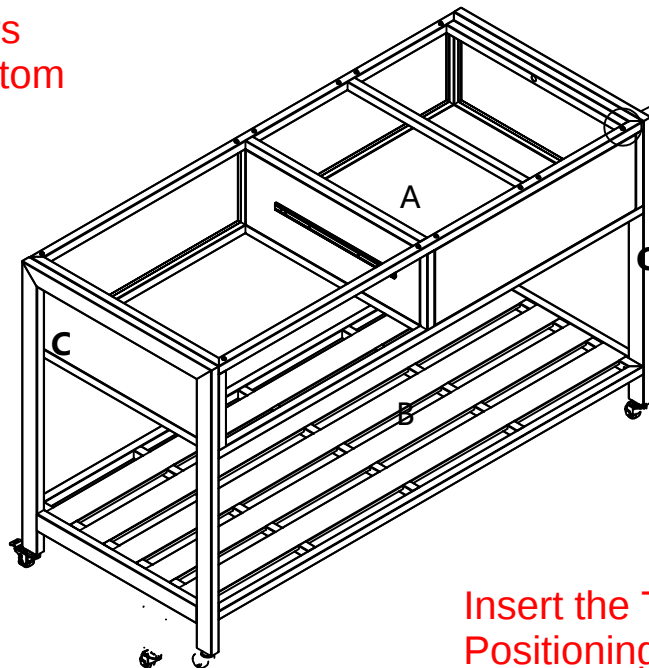


Insert the Top Panel Positioning Pins (H) into the designated top holes of the Main Frame (A).

Using the Installation Screws(L)
Tighten the handle

Then Slide the Drawer (G) smoothly
into the tracks of the Main Frame
(A)

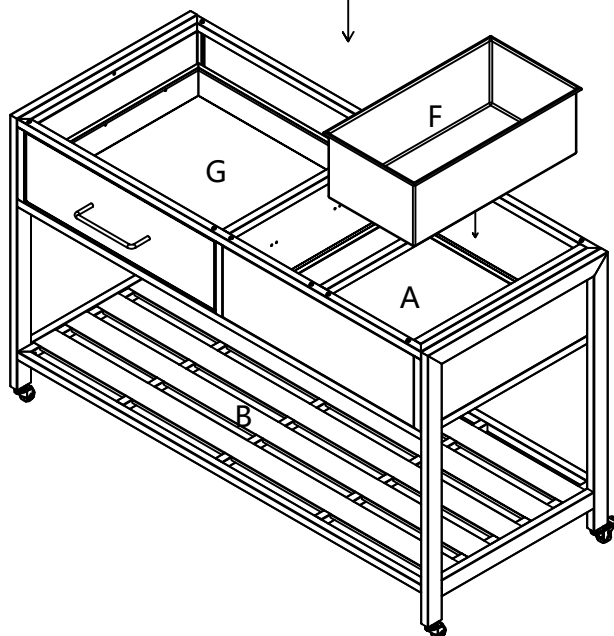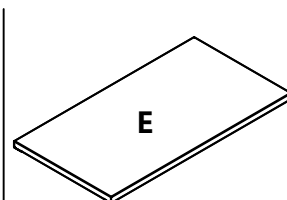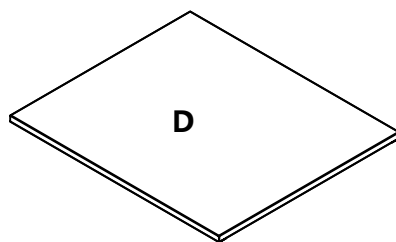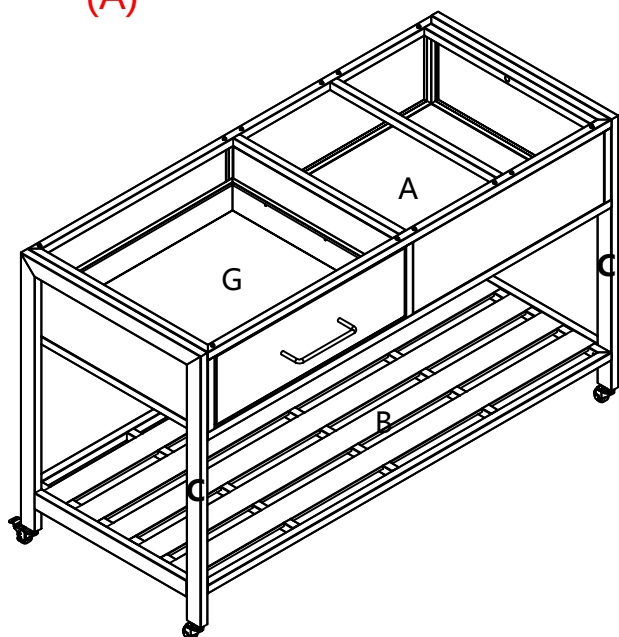

Place the Removable
Stainless Steel Basin
(F) into the right-side
compartment.

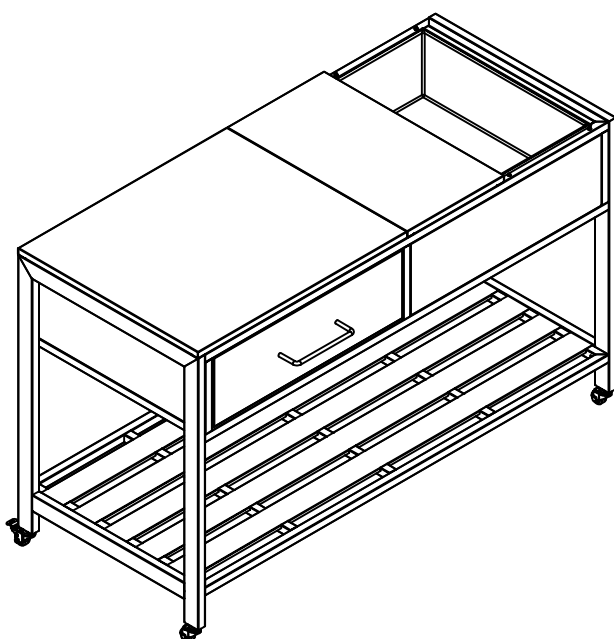

Place the Stainless Steel Top Panel (D & E) onto the cart.