

# Instruction Manual

## General safety instructions

### WARNINGS:


- This appliance will become very hot in use, do not move it during operation.
- Always use heat resistant gloves when adding fuel or when using any safety tool (where supplied).
- **WARNING! Keep children and pets away.**
- This product is **FOR OUTDOOR USE ONLY. DO NOT** use indoors.
- **NEVER** leave a burning fire unattended.
- **DANGER** of carbon monoxide poisoning - **NEVER** light this product or let it smoulder or cool down in confined spaces or indoors.
- **DO NOT** use this product in a tent, caravan, car, cellar, loft or boat.
- **DO NOT** use under any awnings, parasols or gazebos.
- **FIRE HAZARD** - Hot embers may emit while in use.
- **DO NOT** use this appliance as a furnace.
- This product is **ONLY** suitable for use with untreated wood or logs.
- **DO NOT** use coal in this product.
- **WARNING! Do not use petrol, white spirit, lighter fluid, alcohol, instant light charcoal bags or other similar chemicals for lighting or re-lighting! Use only firelighters complying to EN 1860-3.**

### FIRE HAZARD:


- This appliance must be installed on a secure level base before use.
- Do not use this appliance on wooden decking or any other flammable surfaces such as dry grass, wood chips, leaves or decorative bark, etc.
- Do not use this appliance on artificial grass or other surfaces that are not heat resistant.
- Hot embers may be emitted whilst in use.
- Ensure that this appliance is positioned at least 2 meters away from any flammable materials and has a minimum clearance of 2 metres from overhead and adjacent surroundings.

# Assembly

## Parts list

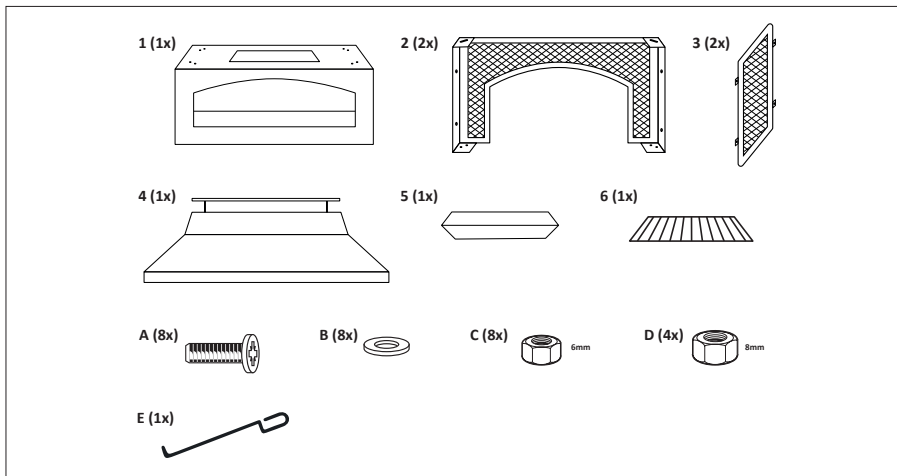

## Assembly diagram

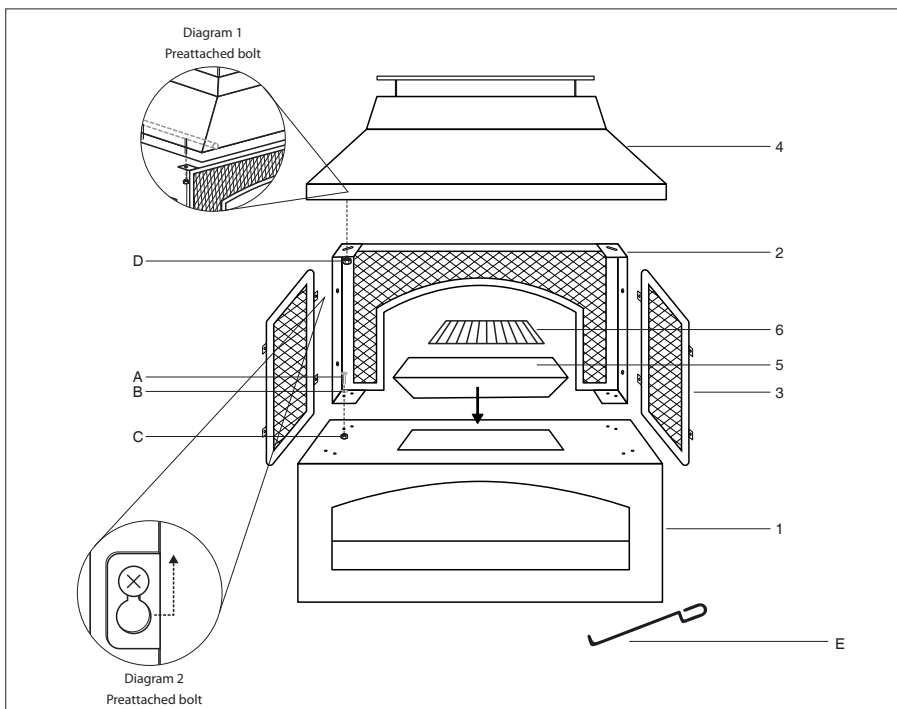

## Assembly

---

### Assembly instructions

Prior to assembly, read the instructions carefully. Check all parts against the parts list. Carry out assembly on a soft surface to avoid scratching the paint. Please retain this information for future reference. For ease of assembly only loosely tighten bolts and then tighten fully when assembly is complete.

**WARNING! - DO NOT** over tighten bolts; only tighten with moderate pressure to avoid damaging the bolts or components.

**IMPORTANT!** - Remove any packaging before use, but retain the safety instructions and store them with this product.

### Assembly

**STEP 1** - Remove all protective packaging.

**STEP 2** - Place the base (1) onto a clean soft surface.

**STEP 3** - Attach the 2 x long mesh panels (2) to the base (1) using 8 x bolts (A), 8 x washers (B) and 8 x nuts (C).

**STEP 4** - Fix 2 x small mesh panels (3) to the 2 x long mesh panels (2) by placing the bracket over the preattached bolt heads and sliding down until secure (see Diagram 2).

**STEP 5** - Slot the 4 x preattached bolts (see Diagram 1) on the lid (4) through the holes in the top of the long mesh panels (2) then secure with 4 x nuts (D).

**STEP 6** - Place log grate (6) into bowl (5) and place in base (1). Use poker (E) to stoke fire if necessary.

Your product is now ready to use, but please ensure that you have read these instructions thoroughly prior to use.

# Use

## Care & Use

- When lifting or moving this appliance, never drag it; seek assistance as necessary.
- As this appliance has components made from steel and/or cast iron, the surface will age and develop surface rust over time once it is exposed to natural weather elements. This is to be expected and does not constitute an appliance fault.
- For safety reasons, it is recommended to inspect this appliance before each use for signs of fatigue and damage. Be sure to replace any appliance that has reached the end of its natural life.
- If this appliance is left outside a suitable cover must be used, once it has cooled completely.
- This appliance could mark or stain a patio; to protect against this place onto a separate patio slab or brick base.

## Solid Fuel Types & Levels

- For outdoor heating, the following fuel types may be used with this appliance: untreated wood, logs and Easylogs.
- Do not burn coal in this appliance.
- Do not overload with fuel: one or two logs is recommended (800g-1.6kg);
- The recommended amount of fuel must not be exceeded by greater than 50%.

## Lighting, Refuelling & Extinguishing

- **WARNING! Do not use petrol, white spirit, lighter fluid, alcohol, instant light charcoal bags or other similar chemicals for lighting or re-lighting! Use only firelighters complying to EN 1860-3.**
- Prepare a stack of loosely crumpled newspaper and place in the fire compartment.
- Pile finely split, dry, firewood on top of the paper.
- Add half of the fuel leaving access to light the paper.
- To light the paper, use long safety matches or a long reach lighter.
- Once the fire is established add the remaining fuel.
- Always use heat resistant gloves when adding fuel.
- Do not drop or throw fuel into the appliance as this can cause cracks/fractures to the appliance.
- To extinguish the fire after use: stop adding fuel and allow the fire to die; alternatively douse it with sand. Do not use water as this may damage the appliance, and will also create excess ash particles.

## Log Storage

- **WARNING! Only untreated logs should be stacked in the log storage compartment. These should be stacked to no higher than 75% of the storage capacity.**
- Logs should always be loosely stacked to allow air flow.
- Do not place any other type of fuel in the log storage compartment.