 


INSTALLATION

 
 
Product Manual

Version: 590008-01-25A-NG

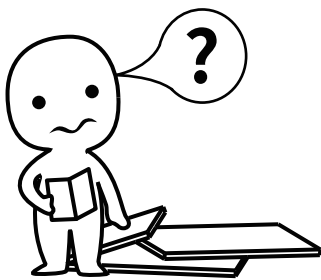


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

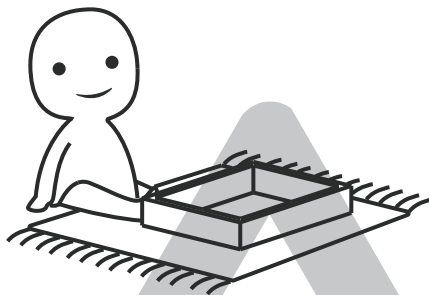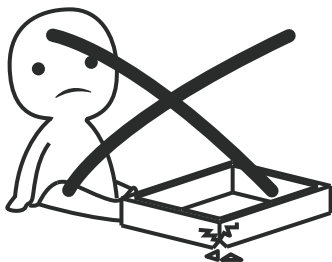



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

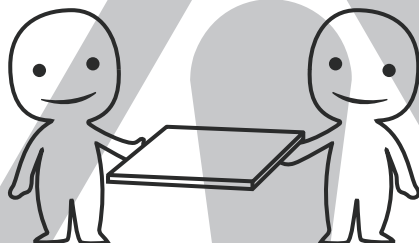

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

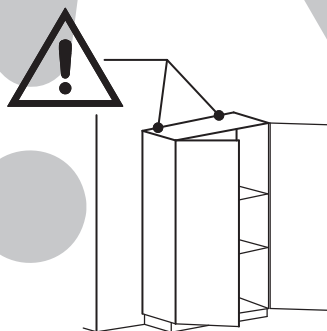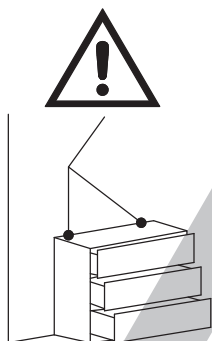

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

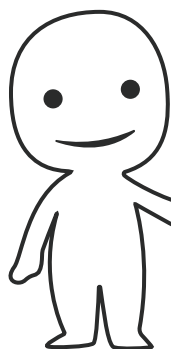


Please prepare the following tools

   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 12




Ø6 x 40 mm

B x 12




Ø15 x 9.5 mm

 C x 24



M5 x 40 mm

 D x 4

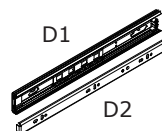


350 mm

E x 56



M4 x 12 mm

 F x 4




Ø8 x 40 mm

G x 8



M6 x 28 mm

 H x 8

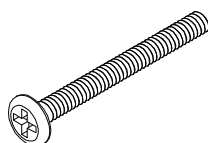

M6 x 70 mm

J x 12



M5 x 60 mm

K x 6



 
M6 x 16 mm

L x 24



M6 x 16 mm

M x 2

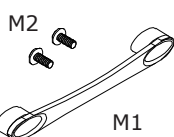


M1


N x 8



 
P x 8



Q x 4

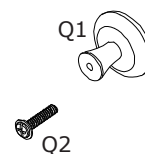 


R x 8

 



S x 12



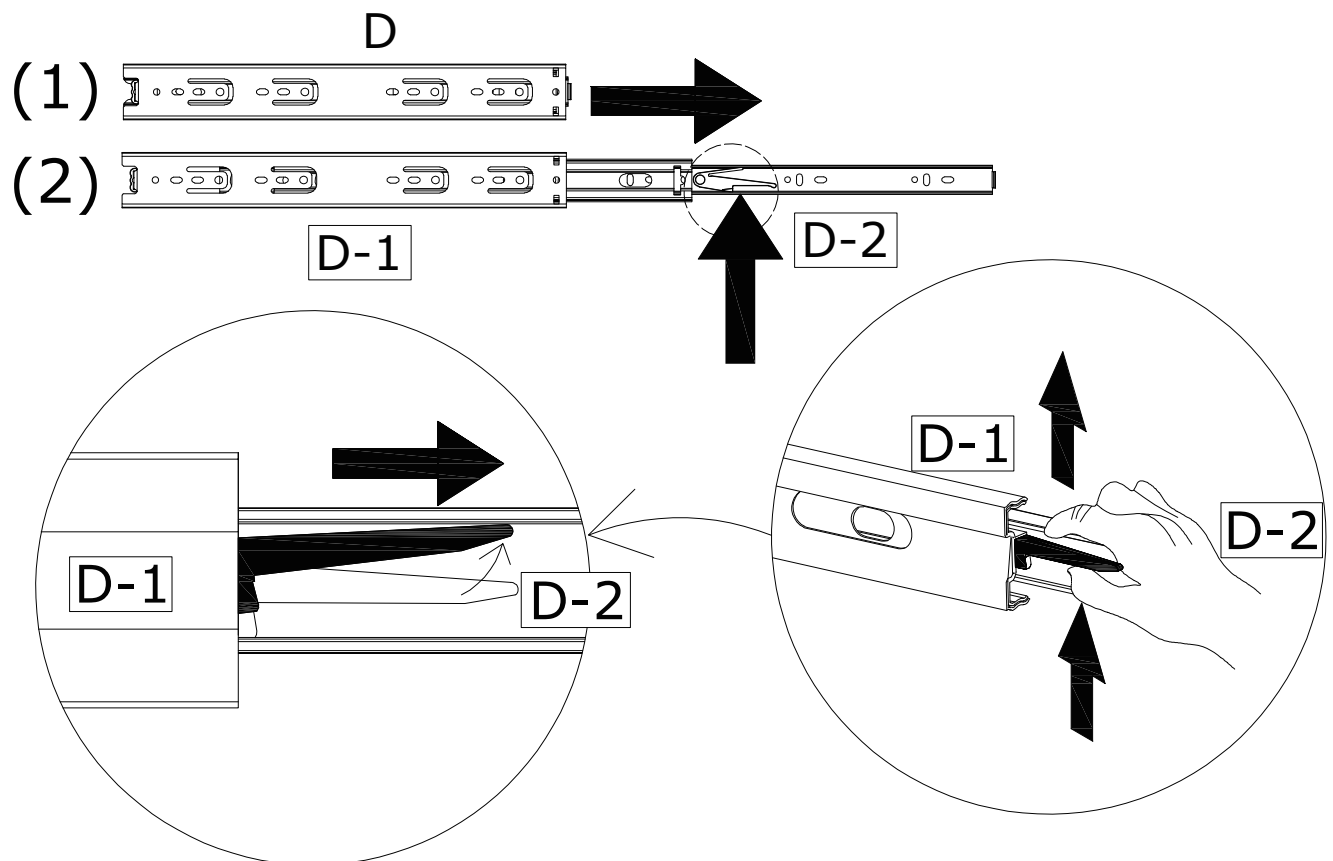 

  Move the black paddle upward
and pull out (P-2) to the right.

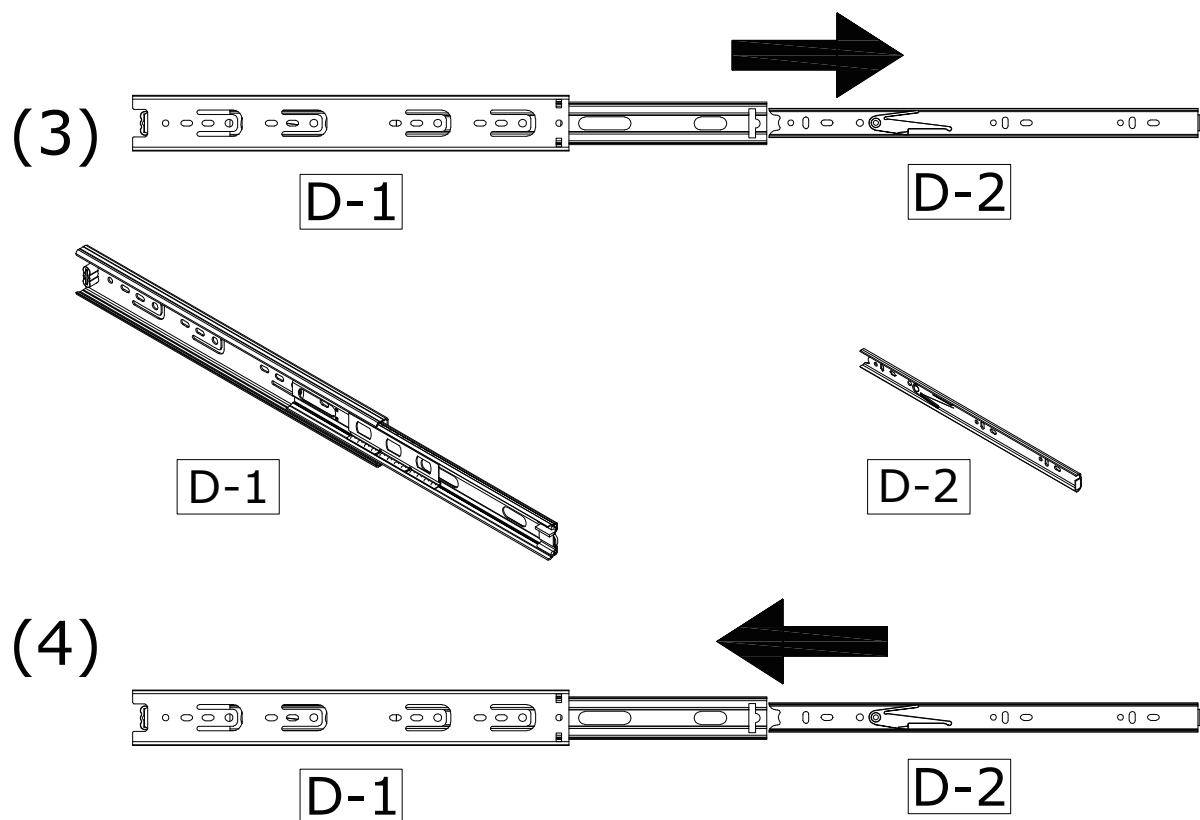

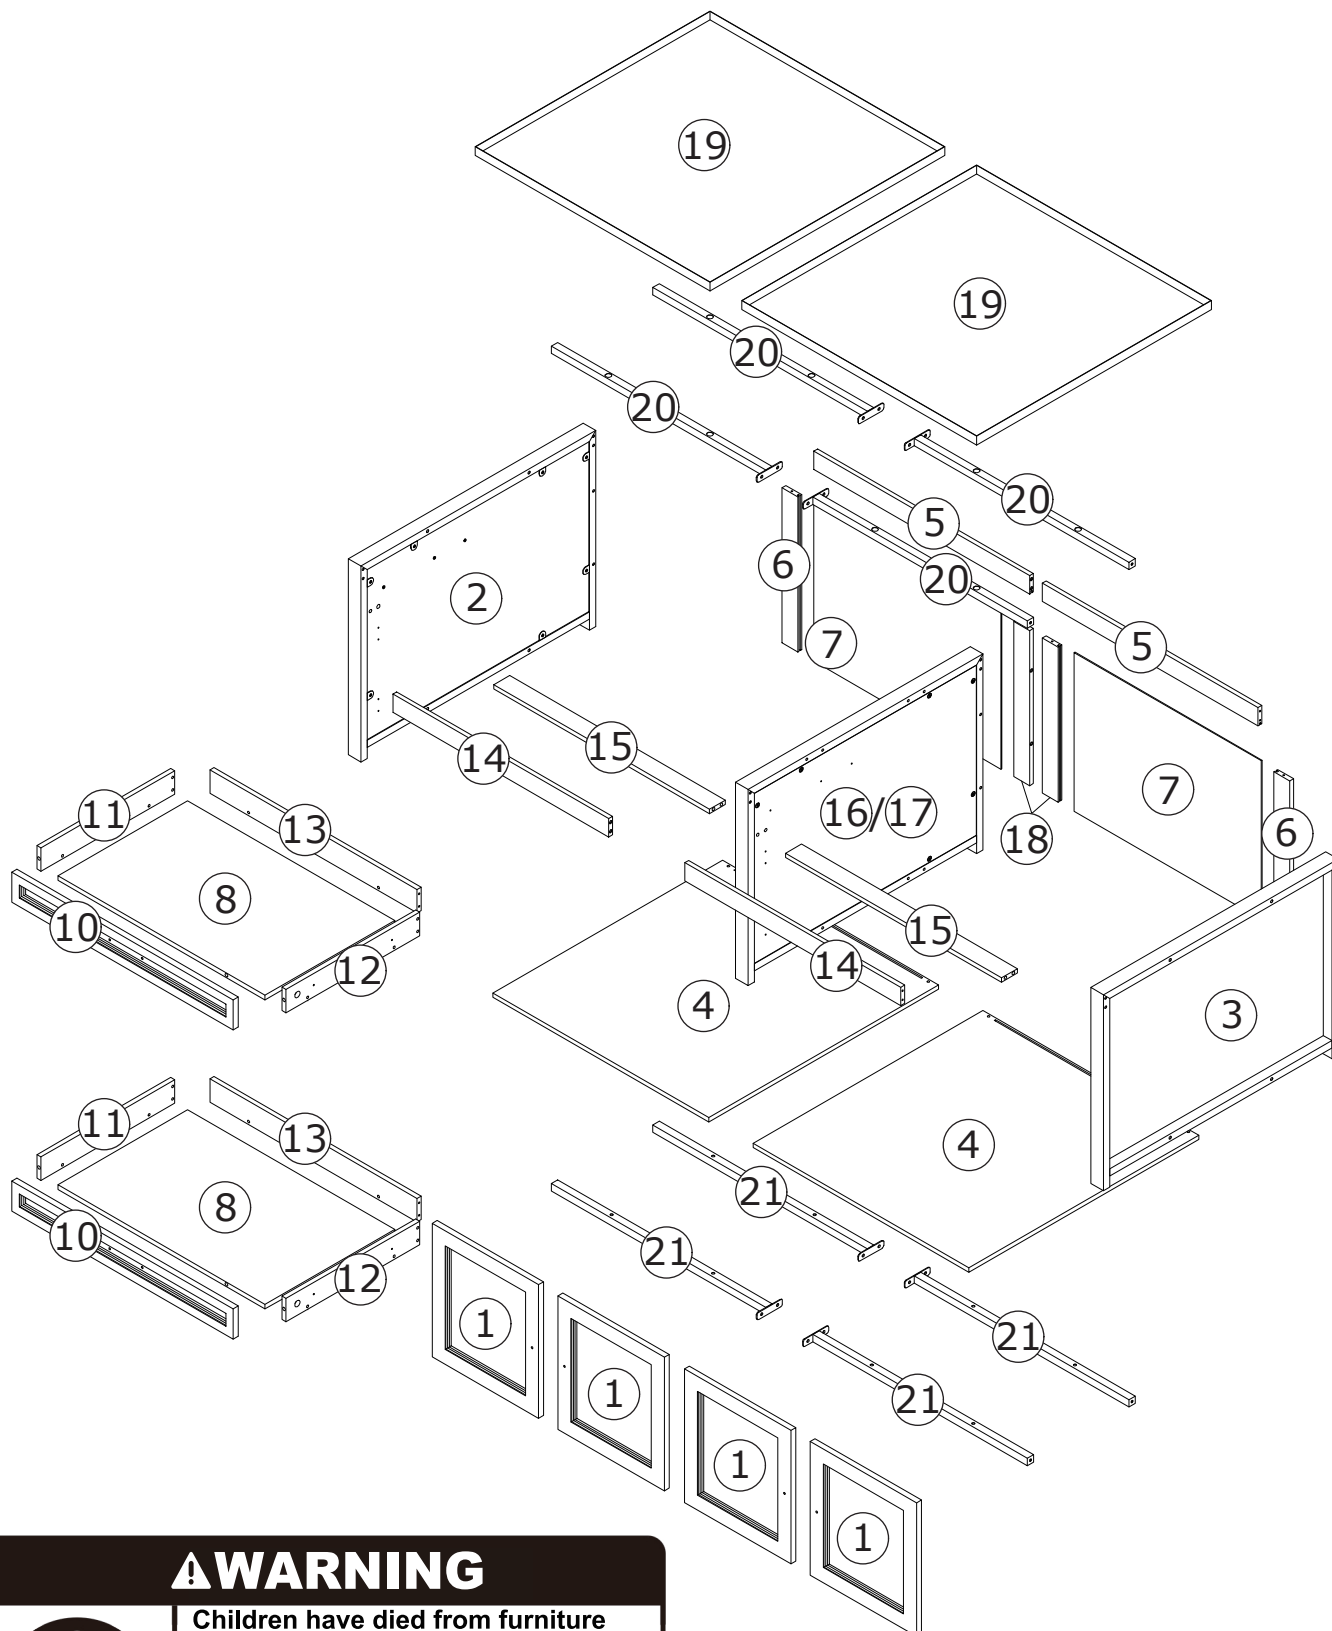


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:




- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

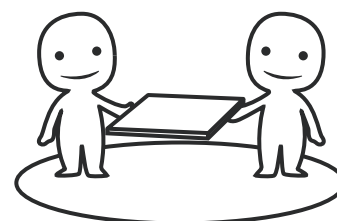


ASSEMBLED BY 2 ADULTS

 
 
 
1

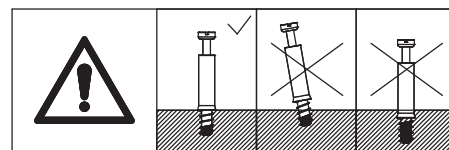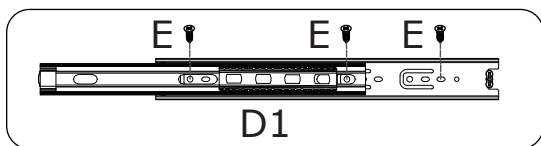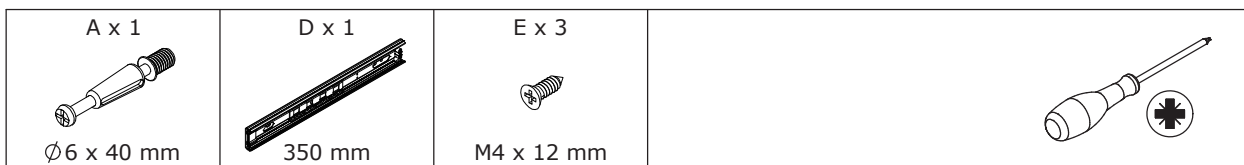

 As shown in the figure, use Screw E to secure Slide Rail D1 to Side Panel 2.
Pay attention to the screw holes, then install Screw A onto Side Panel 2.

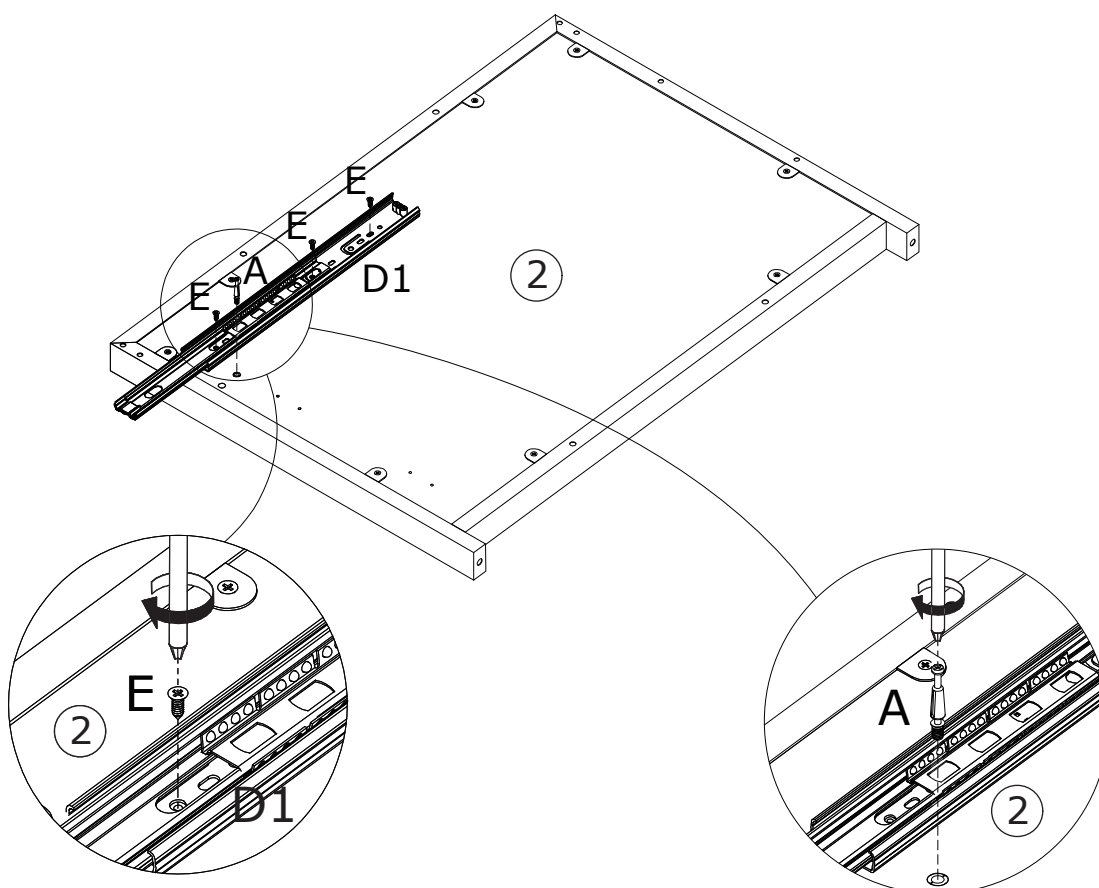


2

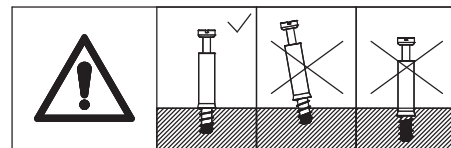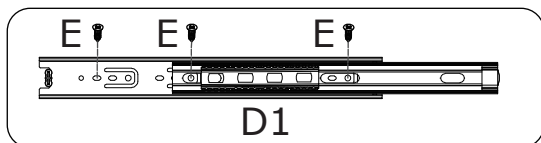  
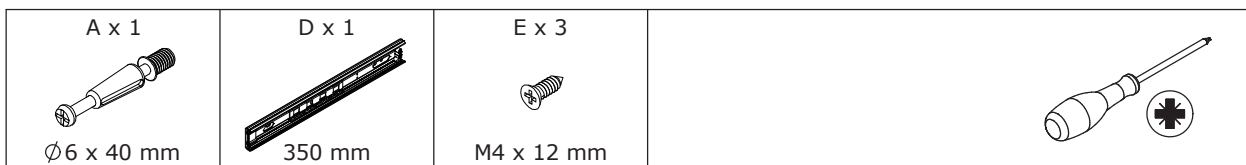 




As shown in the figure, use Screw E to secure Slide Rail D1 to Side Panel 3.

 Pay attention to the screw holes, then install Screw A onto Side Panel 3.

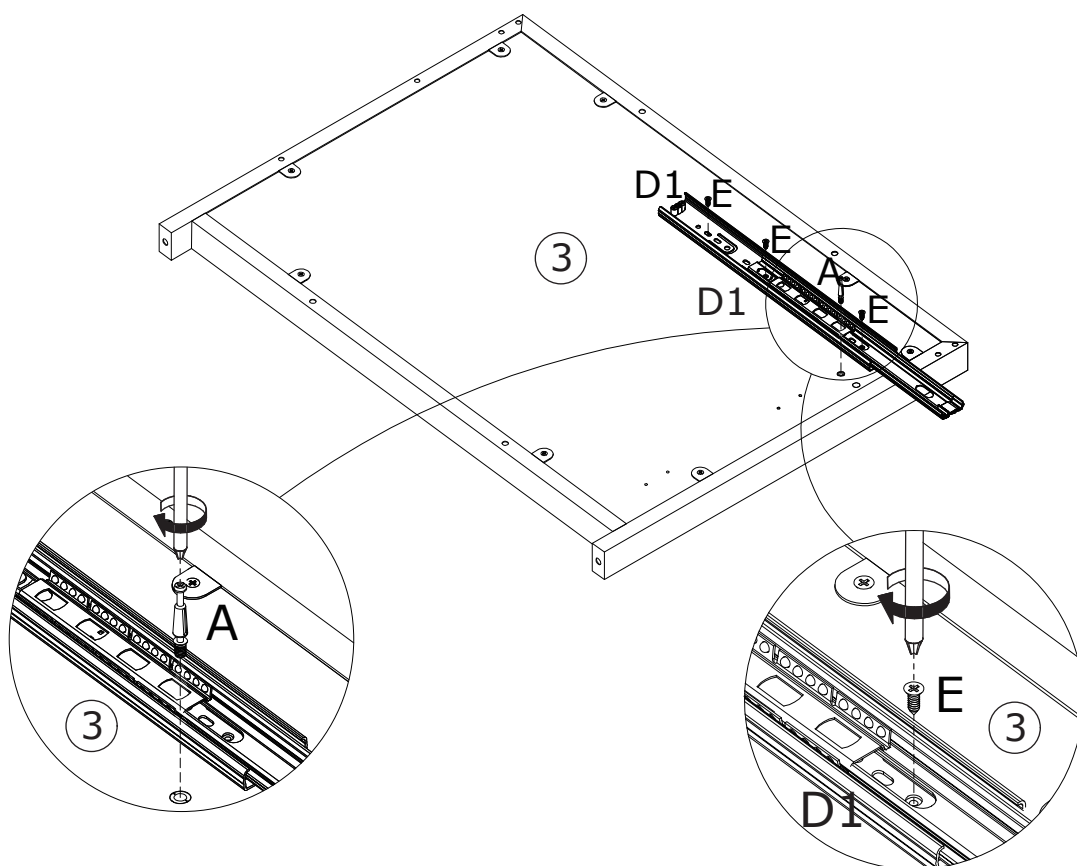


3

  A x 1  Ø6 x 40 mm	D x 1  350 mm	E x 3  M4 x 12 mm	
--	--	--	---


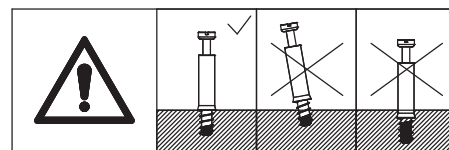 
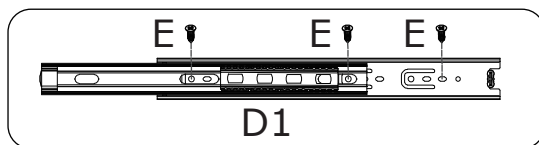 


As shown in the figure, use Screw E to secure Slide Rail D1 to Side Panel 17.

 Pay attention to the screw holes, then install Screw A onto Side Panel 17.

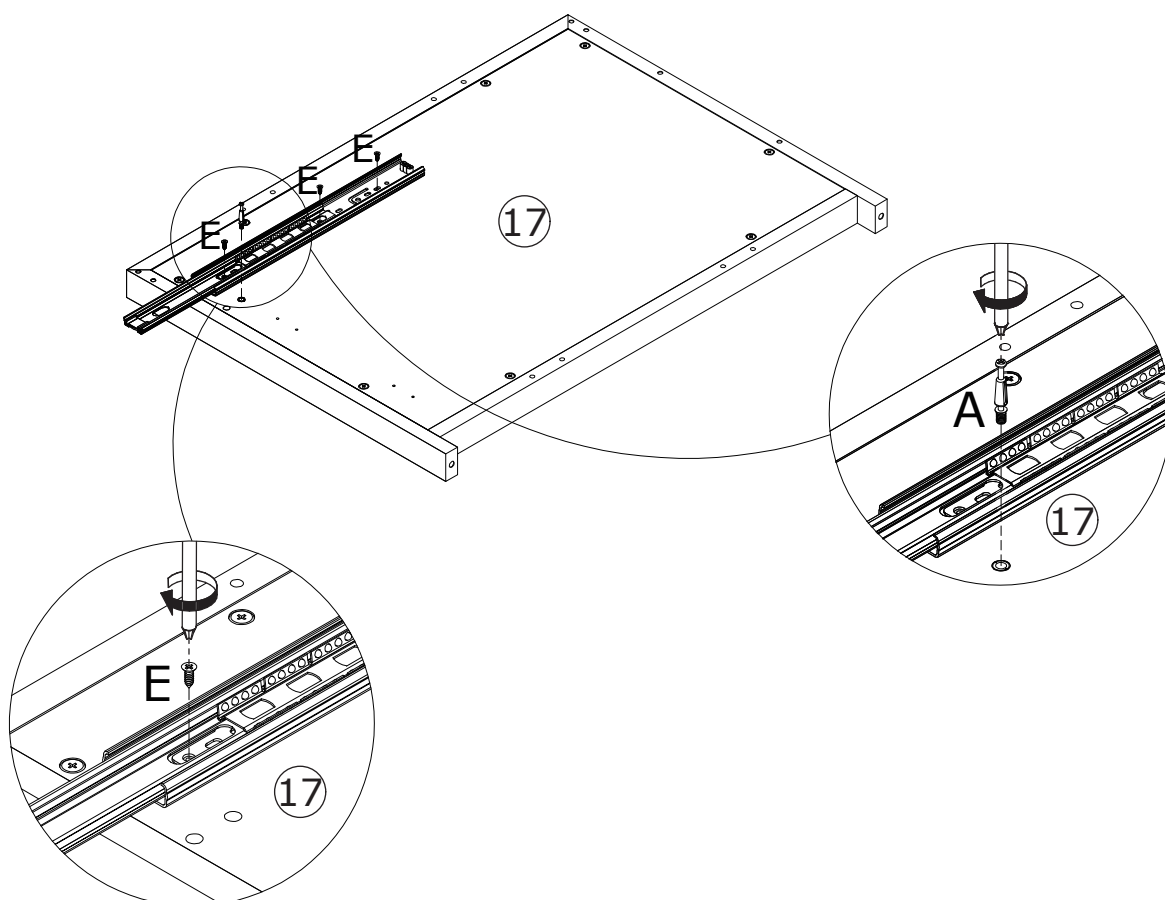


4

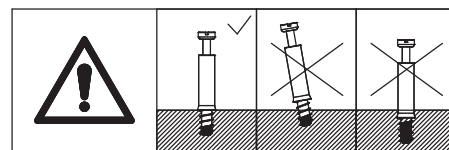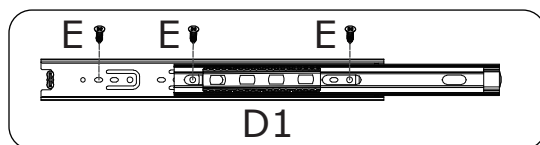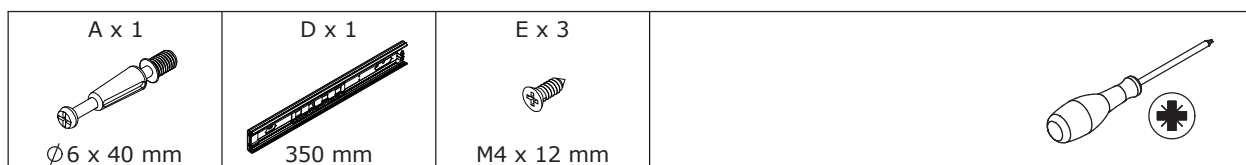   


As shown in the figure, use Screw E to secure Slide Rail D1 to Side Panel 16.


 
Pay attention to the screw holes, then install Screw A onto Side Panel 16.

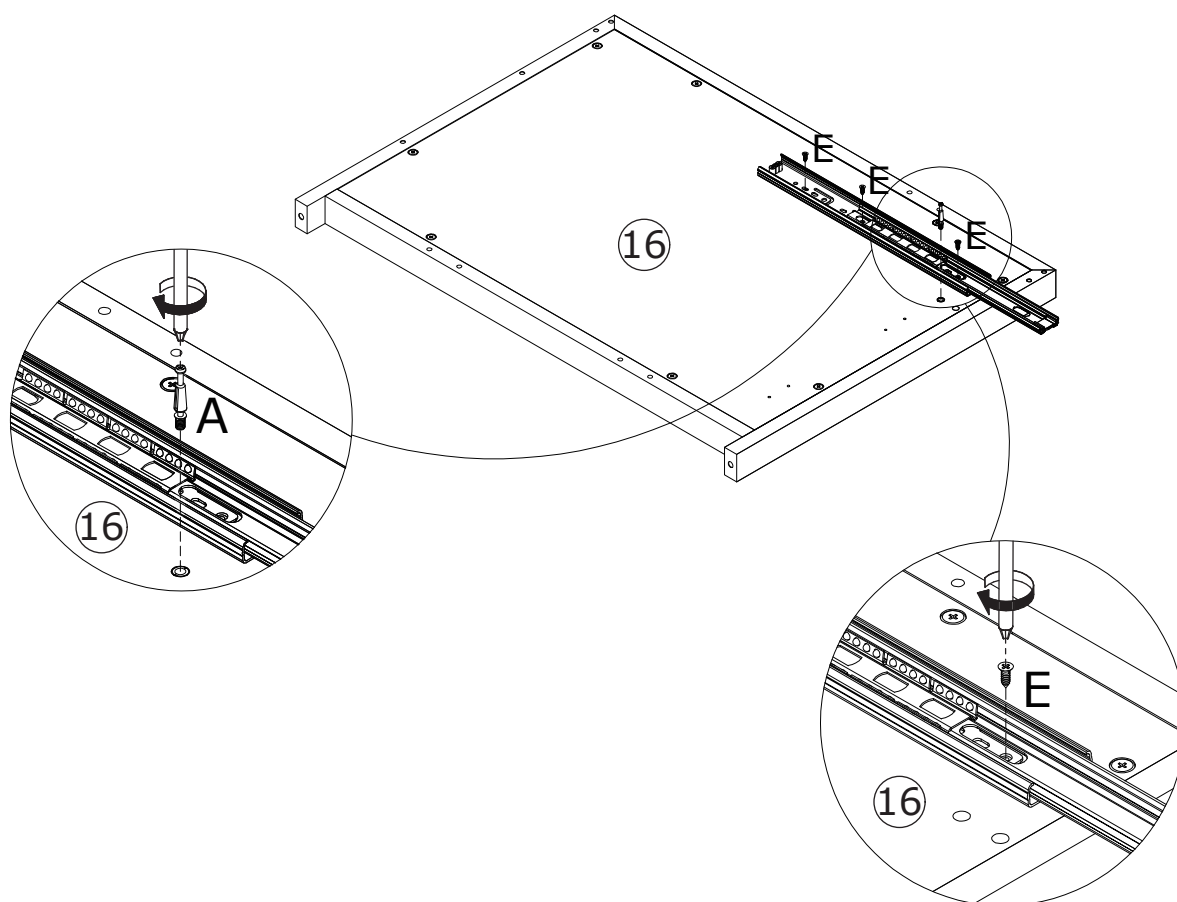


5

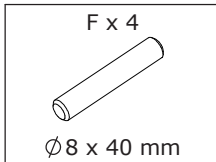 

  
As shown in the figure, insert Wooden Tenon F into the end holes of Wood Board 15.
Ensure correct hole alignment.

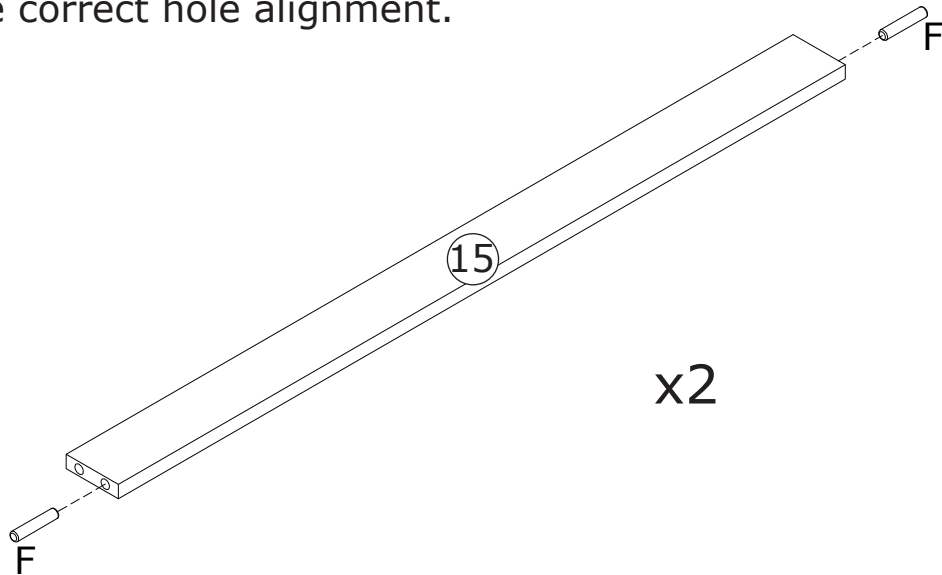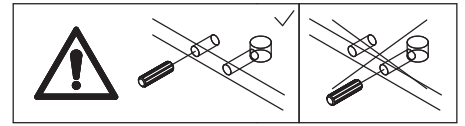

6

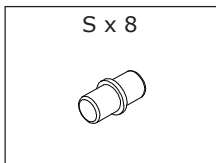 

 As shown in the figure, insert Accessory S into Wood Boards 5 and 14.
Ensure correct hole alignment.


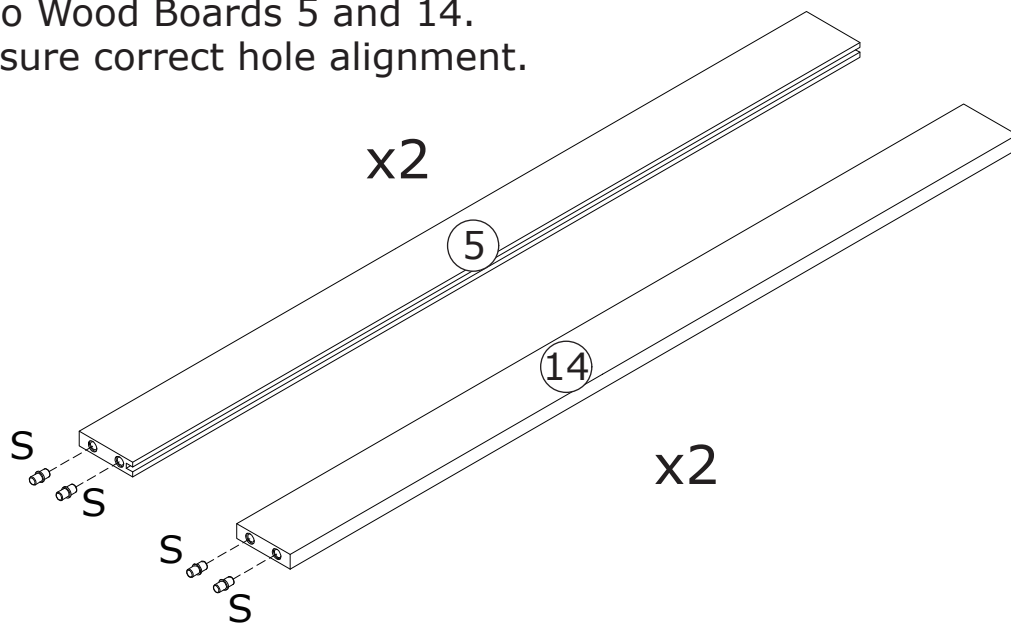


7


B x 2



 
 
Ø 15 x 9.5 mm

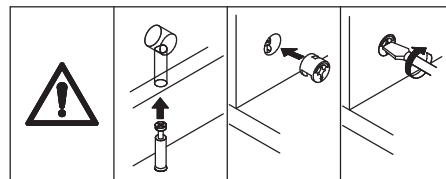

 
As shown in the figure, connect Wood Boards 5, 14, and 15 to Side Panels 2 and 16 as illustrated, then insert and tighten Screw B.

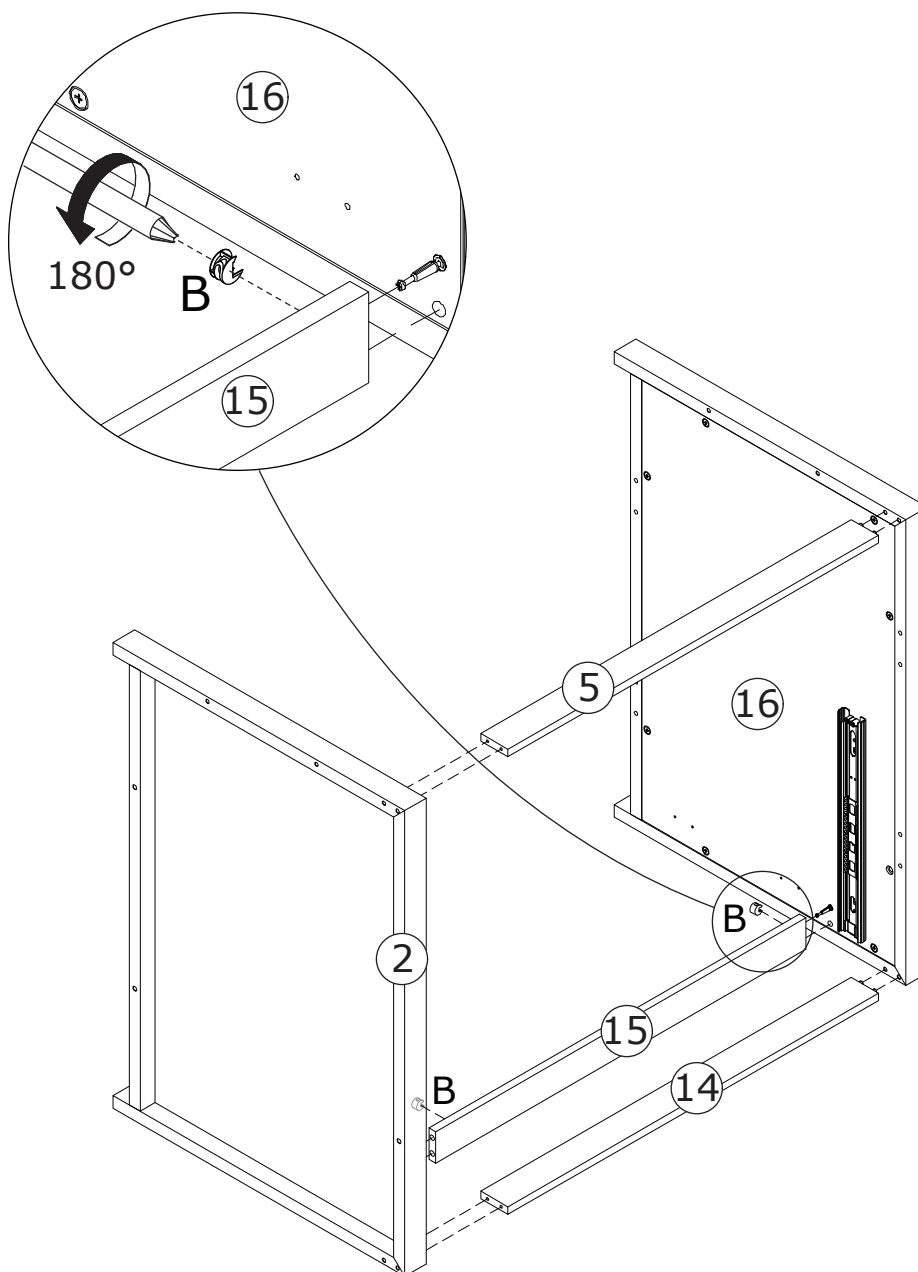

8

 
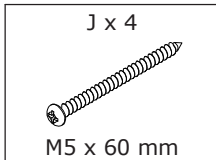 


 As shown in the figure, use Screw J to secure Side Panel 2 with Wood Boards 5 and 14.

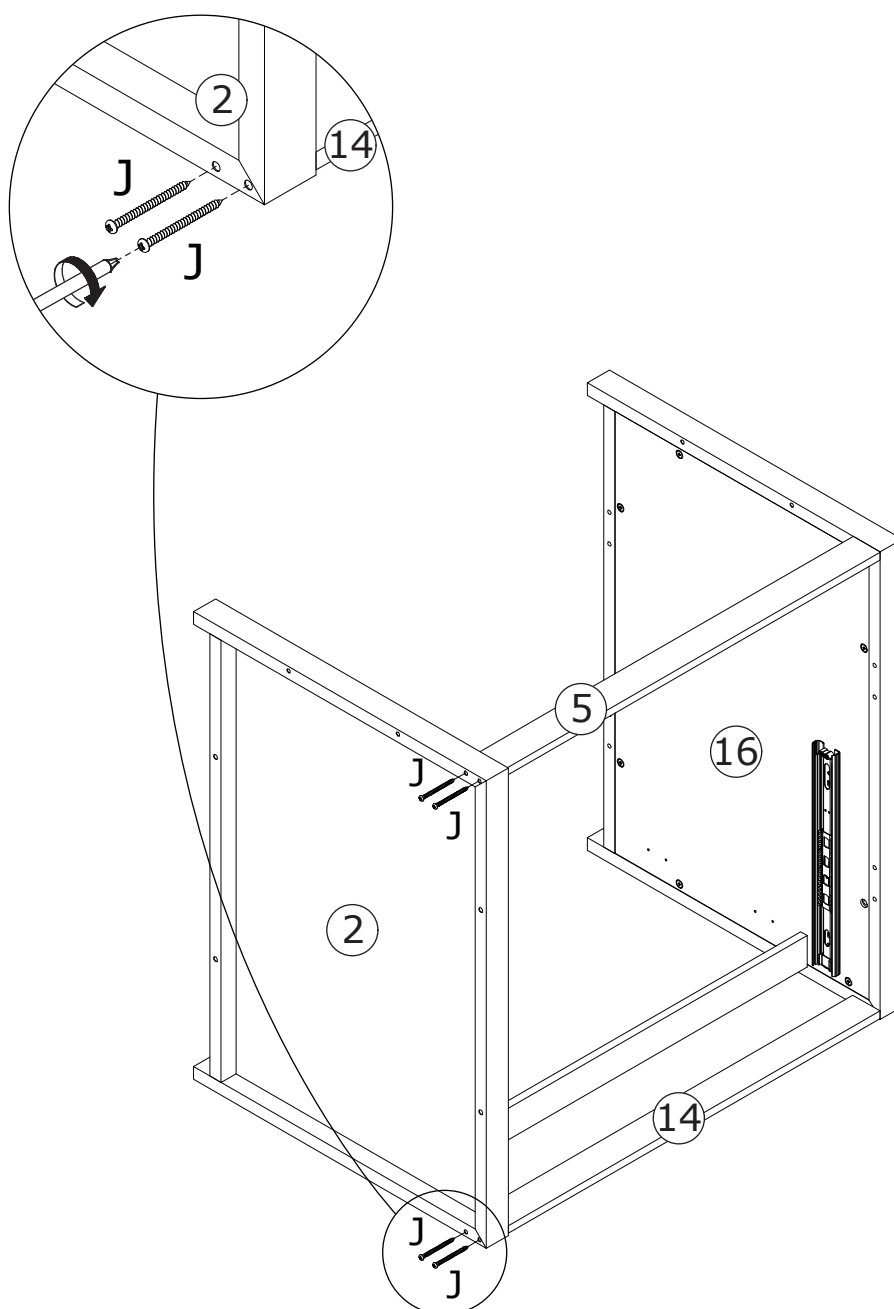


9

  B x 2

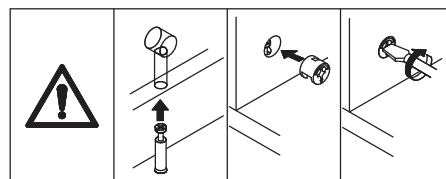 $\varnothing 15 \times 9.5 \text{ mm}$ 

 As shown in the figure, connect Wood Boards 5, 14, and 15 to Side Panels 3 and 17 as illustrated, then insert and tighten Screw B.

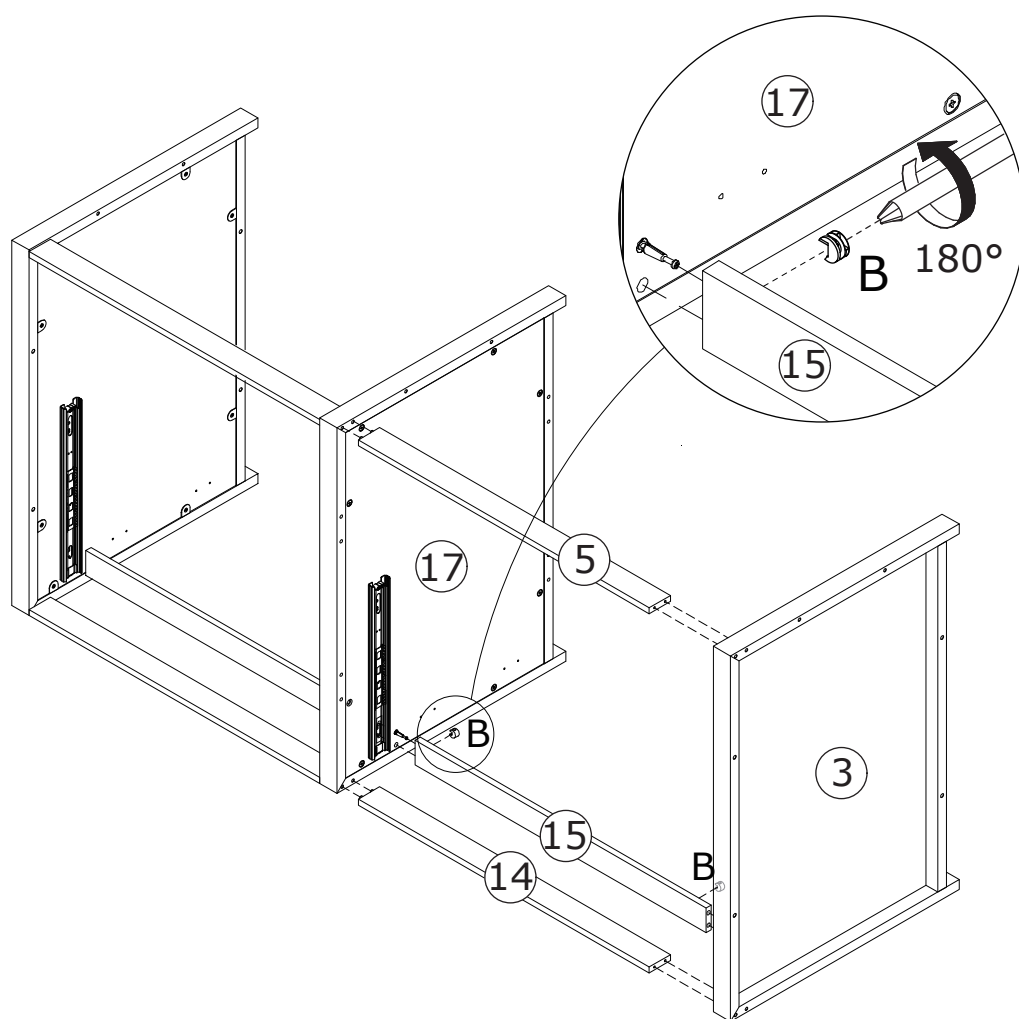


10


J x 4




 
M5 x 60 mm





 
As shown in the figure, use Screw J to secure Side Panel 3 with Wood Boards 5 and 14.

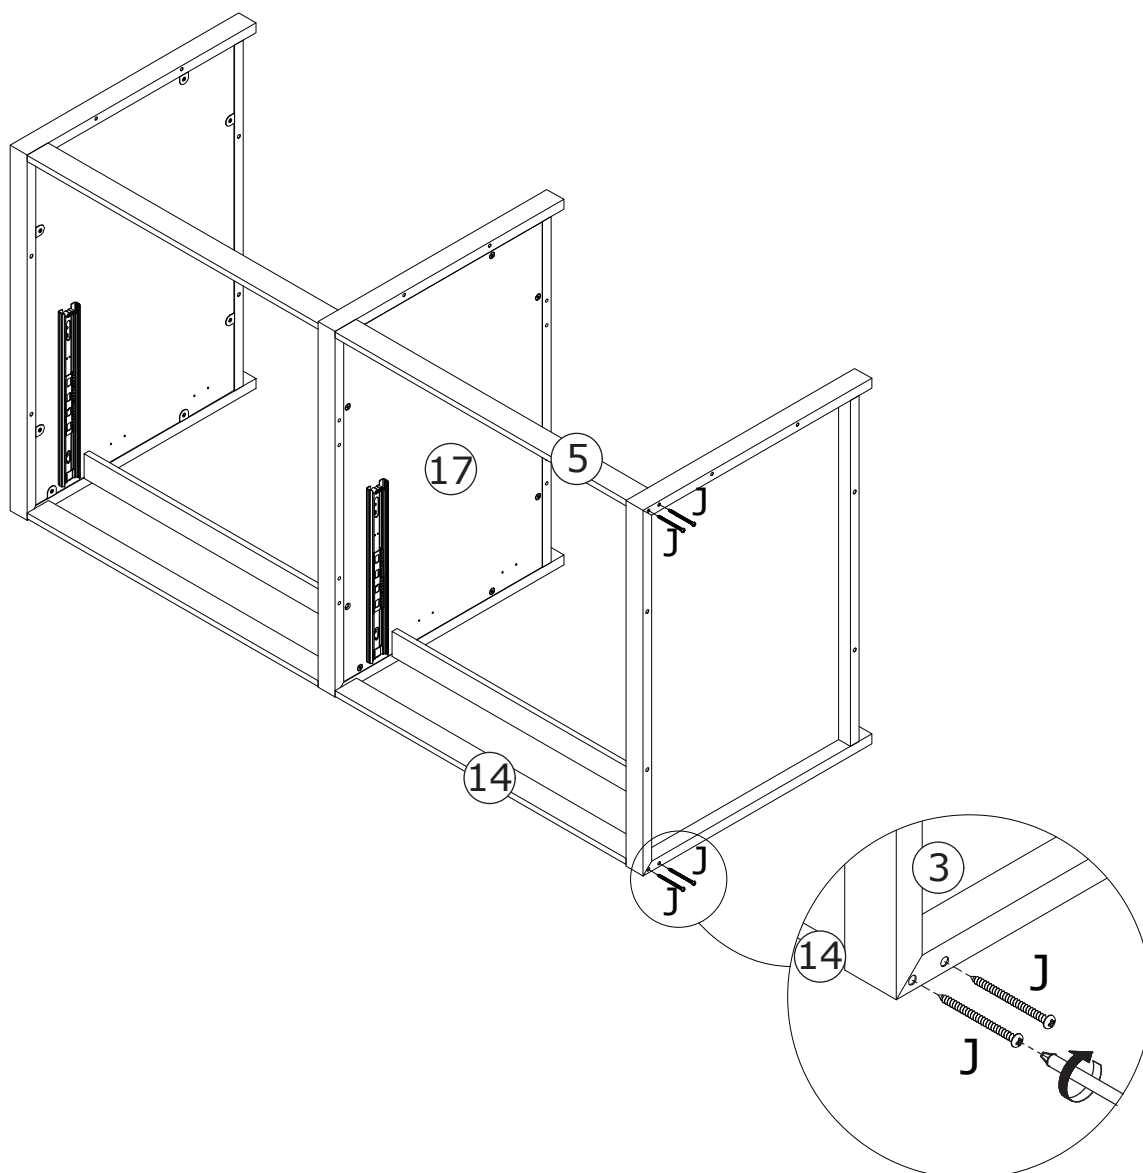



11

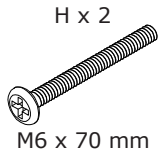  

   
As shown in the figure, use Screw H to fix Iron Pipe 20 to Side Panel 3, then use Screw L to secure Iron Pipe 20 and Side Panel 17.

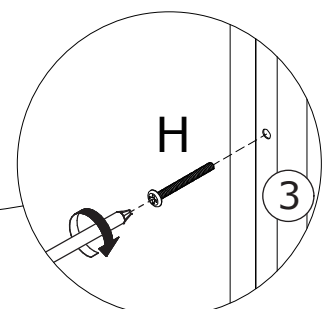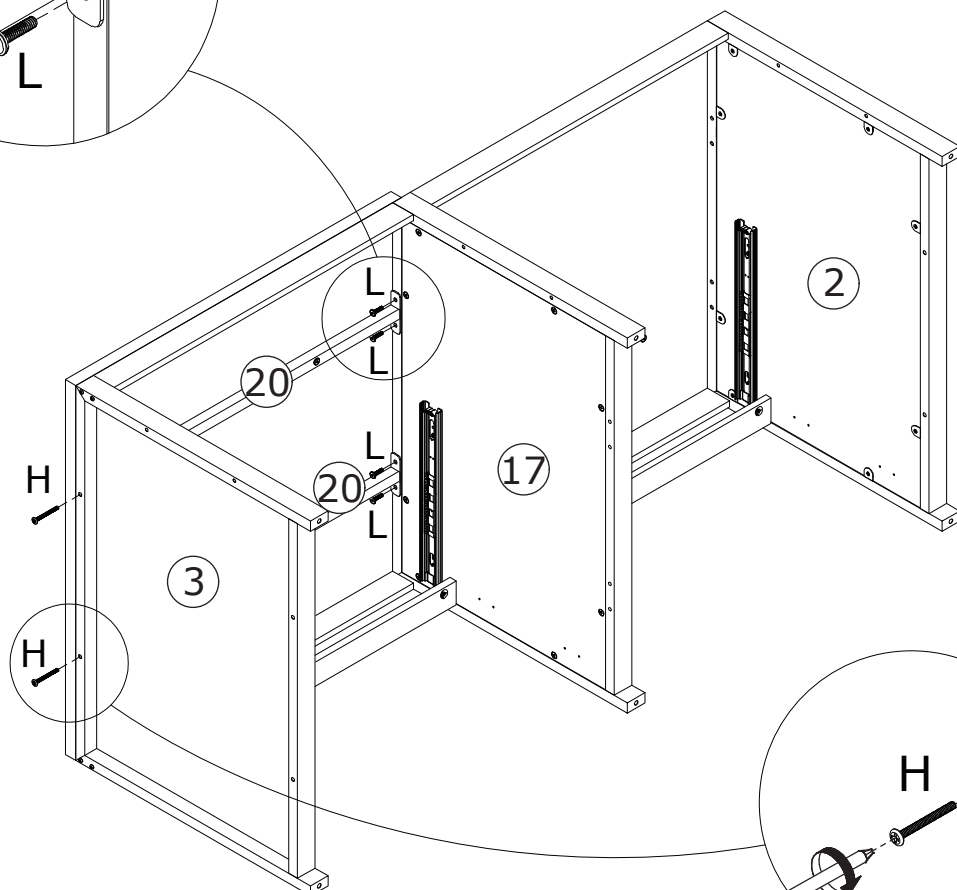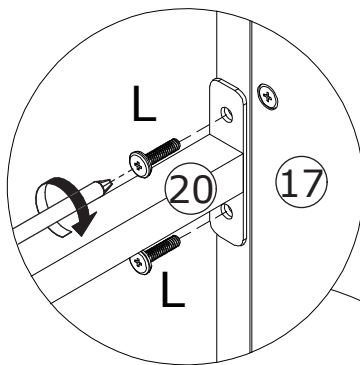

12

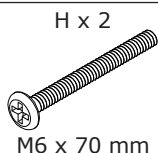  

 As shown in the figure, use Screw H to fix Iron Pipe 20 to Side Panel 2, then use Screw L to secure Iron Pipe 20 and Side Panel 16.

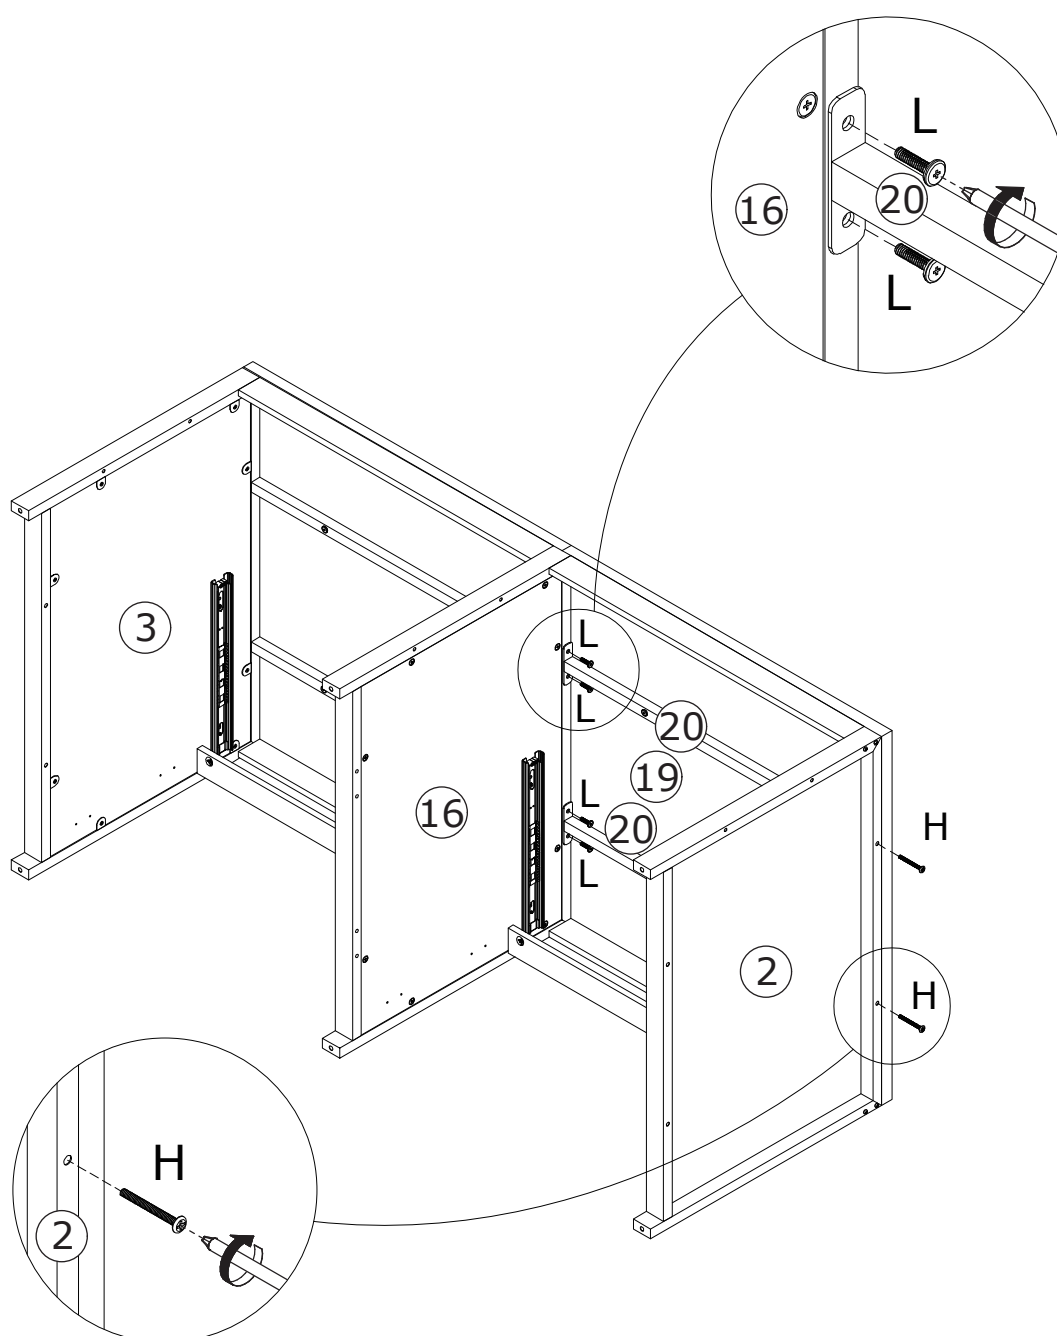


13


J x 4



 M5 x 60 mm



 As shown in the figure, use Screw J to attach Wood Board 6 to Side Panels 2 and 3.

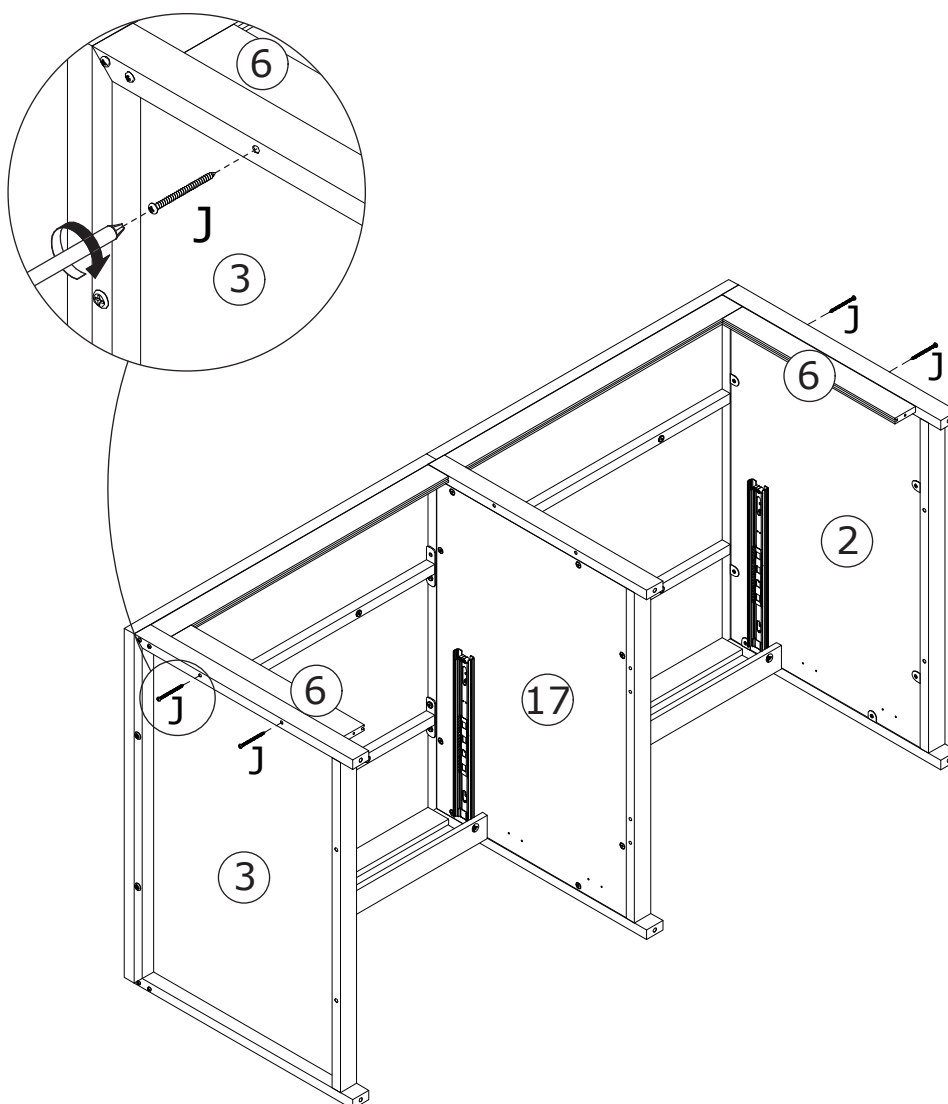


14

S x 4




 As shown in the figure, insert Accessory S into the holes of Wood Board 18.

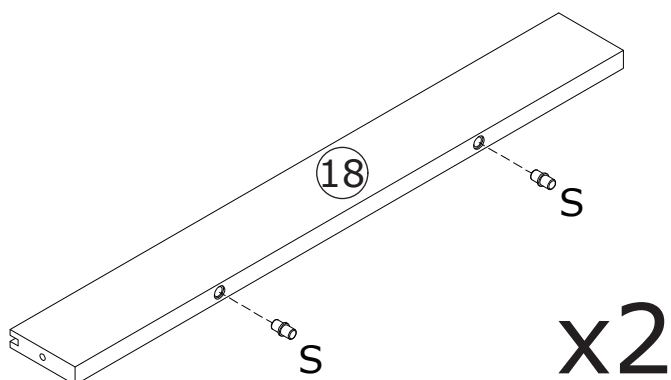


15

 As shown in the figure, connect Wood Board 18 to Side Panels 16/17 via Accessory S.

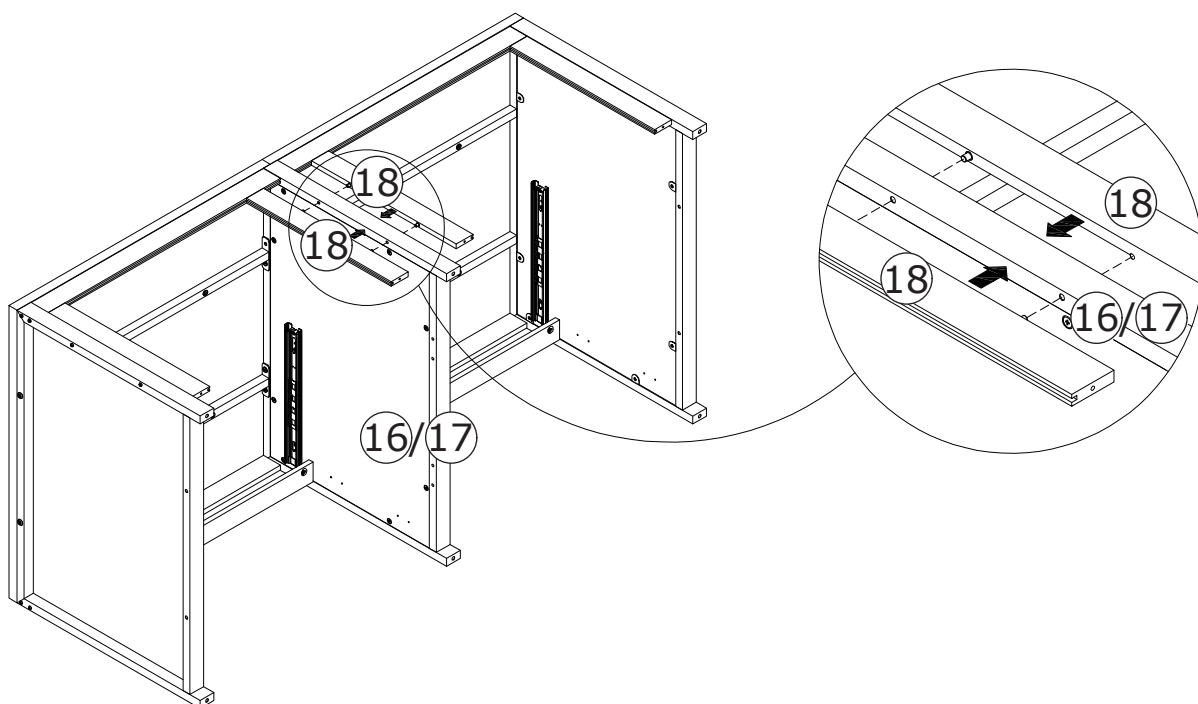

16

 As shown in the figure, insert Wood Board 7 into the grooves of Wood Boards 5, 6, and 18.

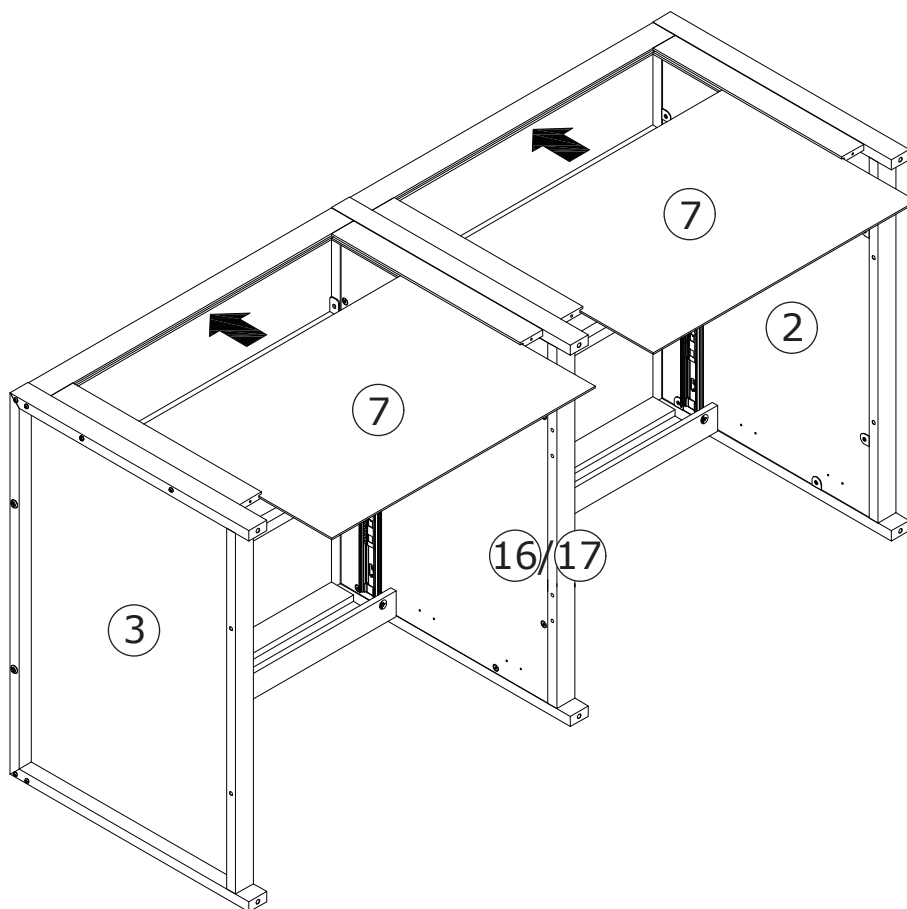


17


G x 8



 M6 x 28 mm



 As shown in the figure, use Screw G to fix Iron Pipe 21 to Wood Board 4. Ensure correct alignment between Iron Pipe 21's orientation and the holes on Wood Board 4.

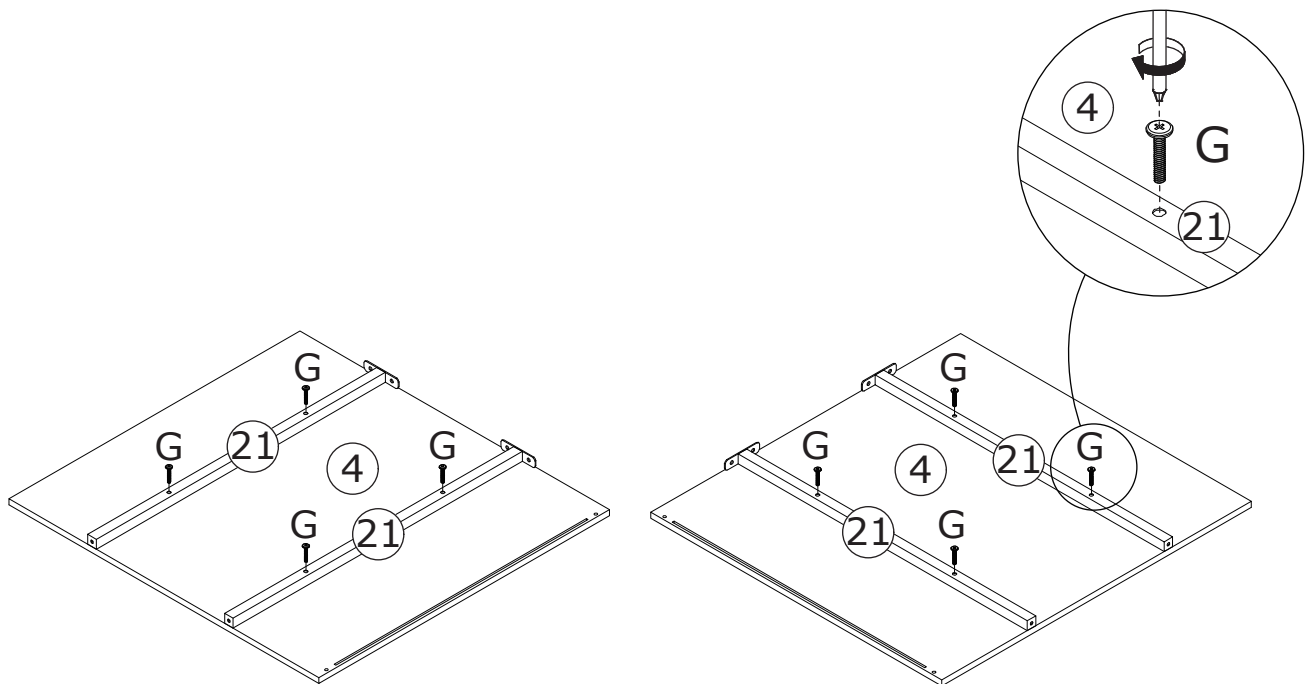


18

C x 4



M5 x 40 mm

 H x 4




M6 x 70 mm


L x 8



 M6 x 16 mm



 As shown in the figure, secure Wood Board 4 to Wood Boards 6 and 18 with Screw C.
Then use Screw H to fix Side Panels 3 and 2 to Iron Pipe 21, and finally use Screw L to secure Iron Pipe 21 to Side Panels 16/17.

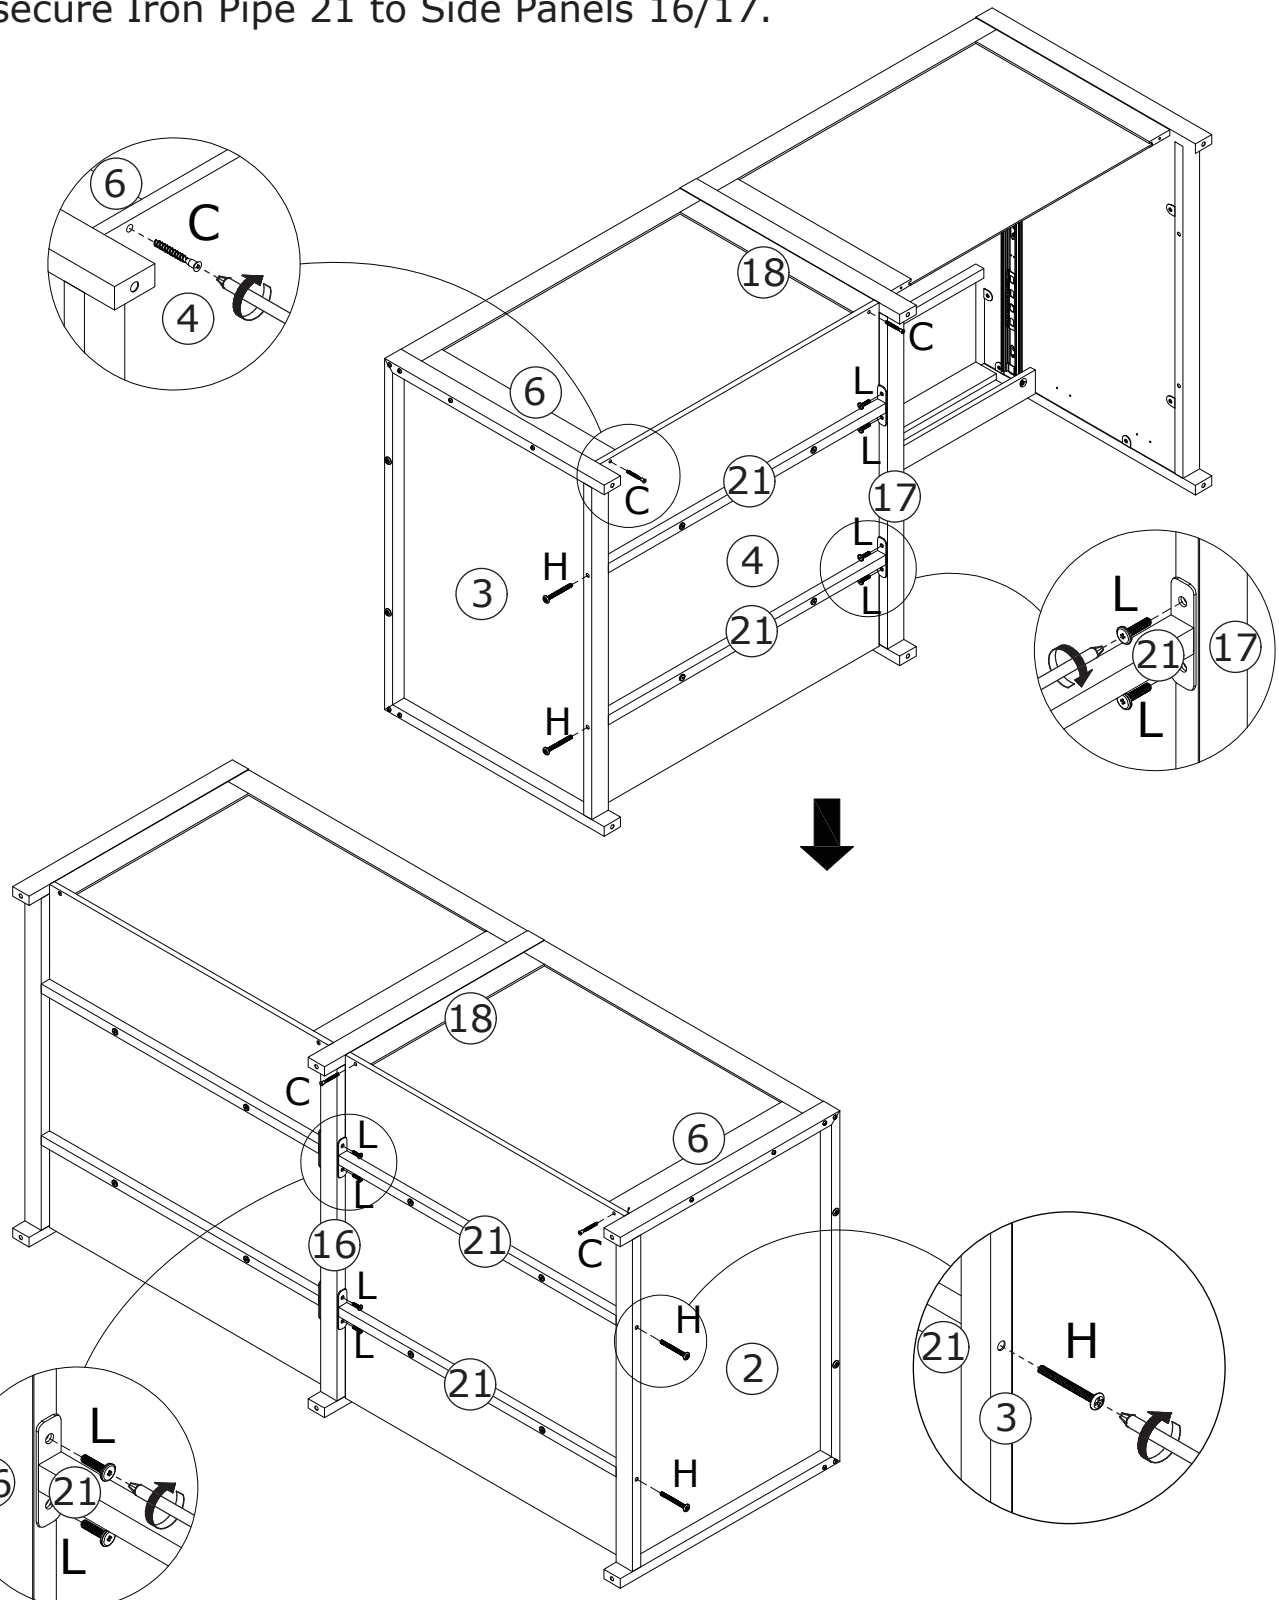


19

K x 6



 As shown in the figure, install Adjustable Foot K onto Side Panels 2, 3, and 16/17.

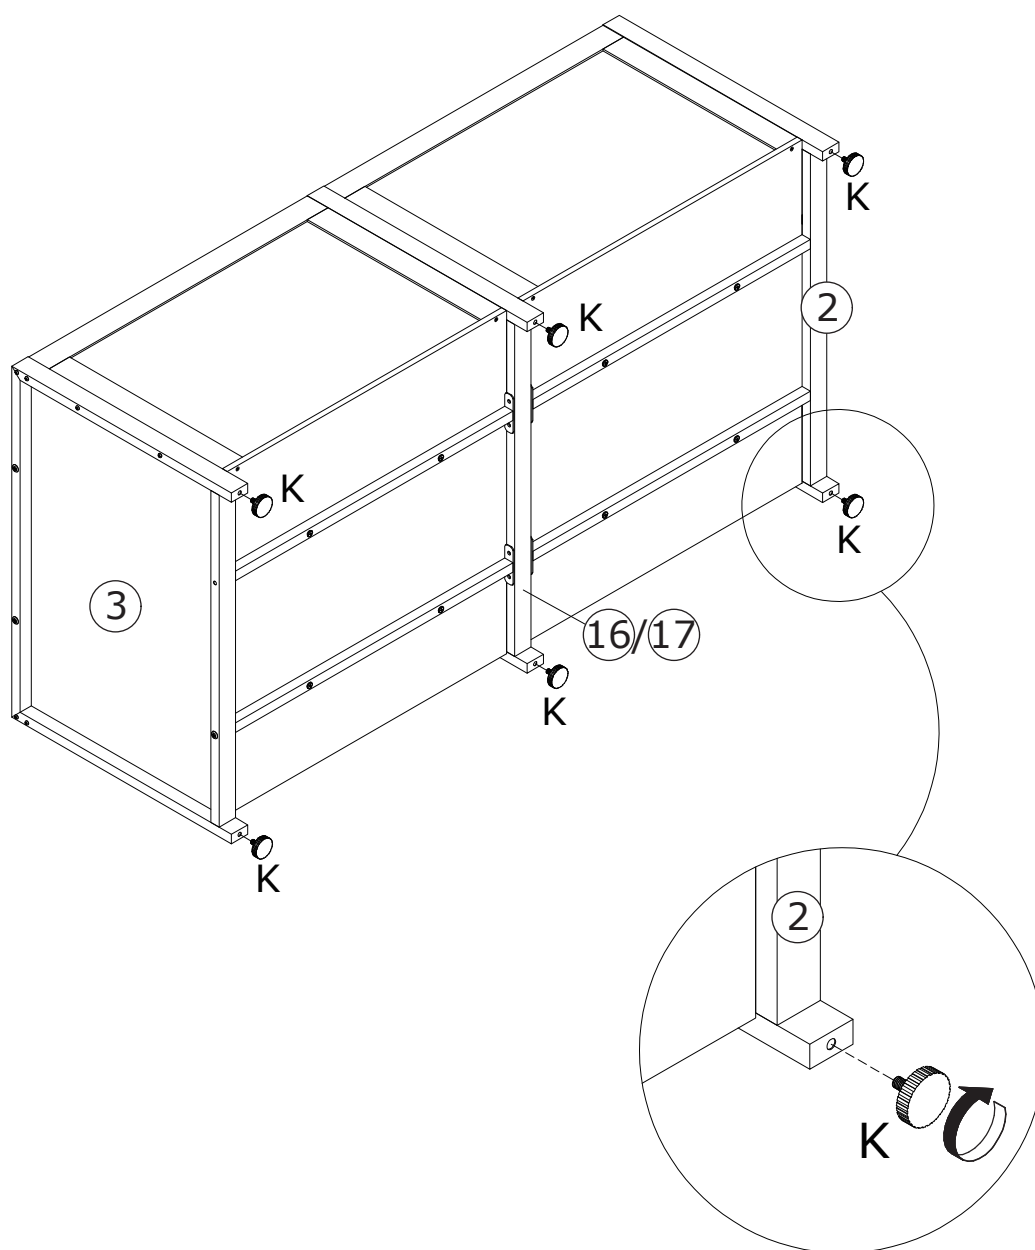


20


L x 8




 
M6 x 16 mm




 
As shown in the figure, insert the protruding posts under Basin 19 into the holes of the iron pipes, then use Screw L to secure Basin 19 and Iron Pipe 20.
For aesthetics, ensure the perforated side of Basin 19 faces backward.

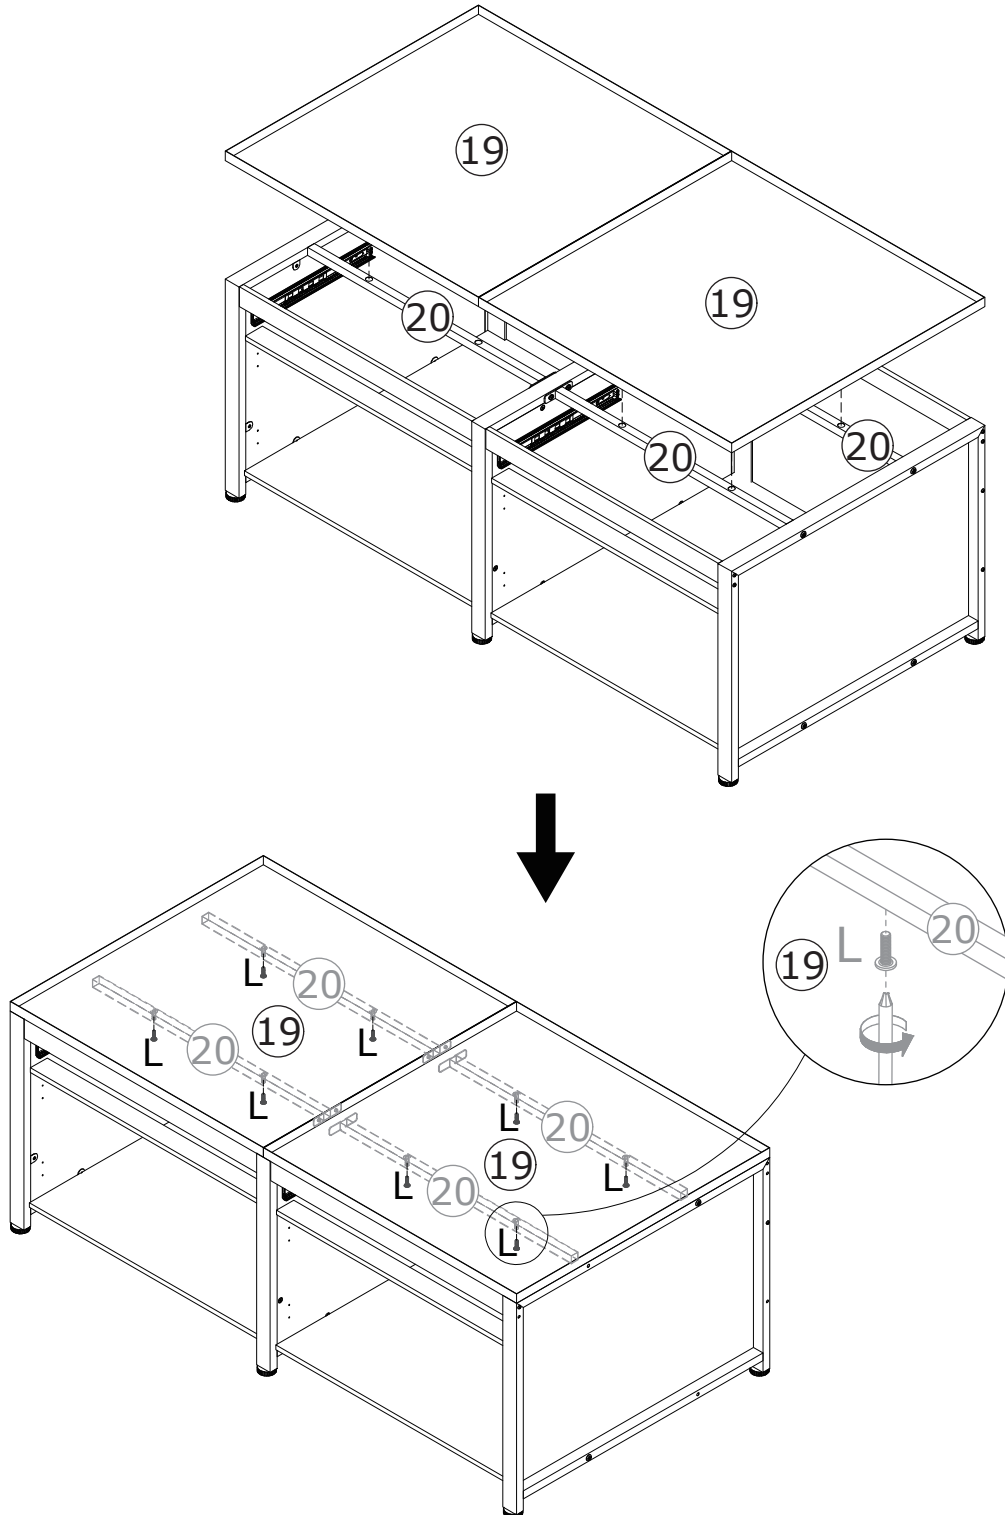



21

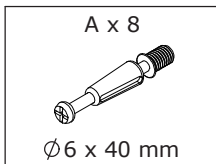  

  
As shown in the figure, install Screw A onto Wood Board 10.

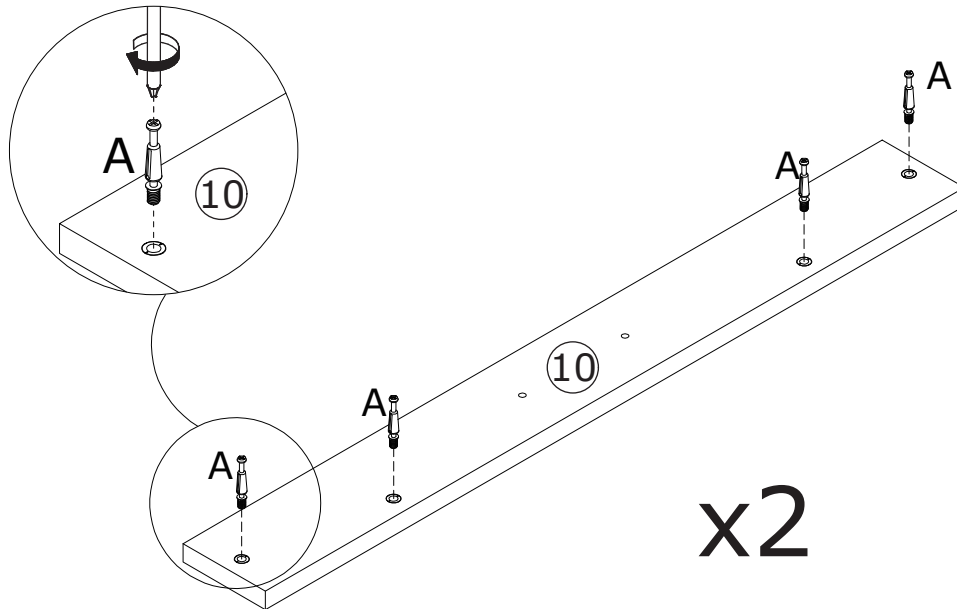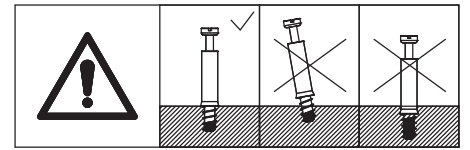

22

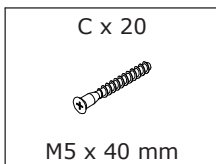  

 As shown in the figure, assemble Wood Boards 8, 11, 12, and 13 with Screw C as illustrated.


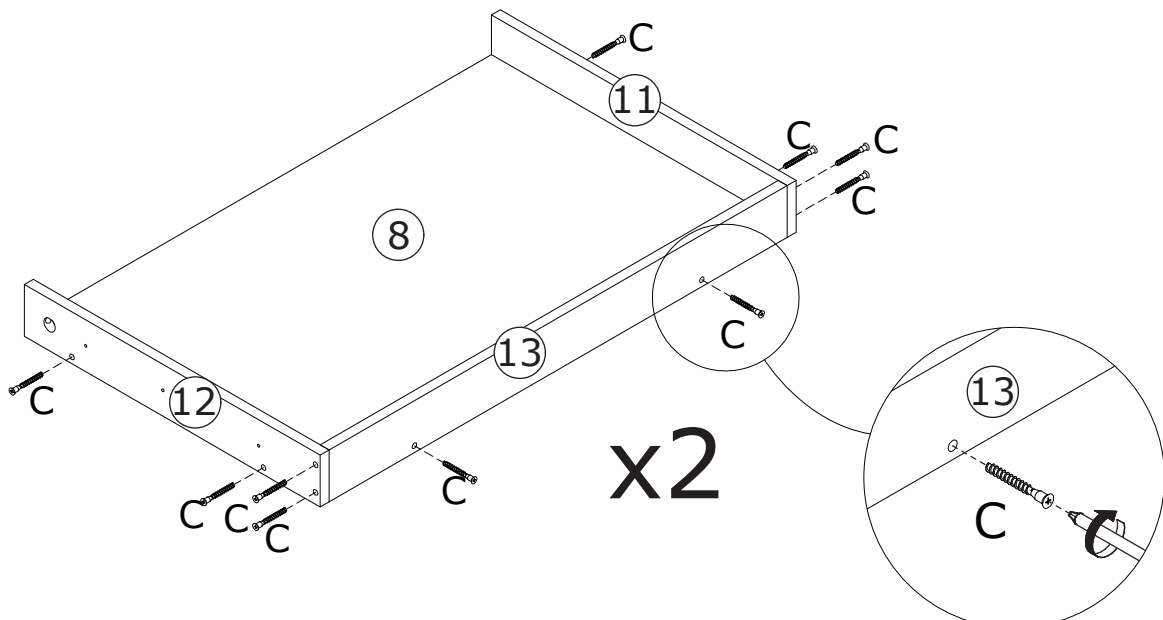


23




Connect Wood Board 10 to the assembled components, insert and tighten Screw B.

  
Finally, flip the drawer and insert/tighten Screw B into the holes of Wood Board 8.

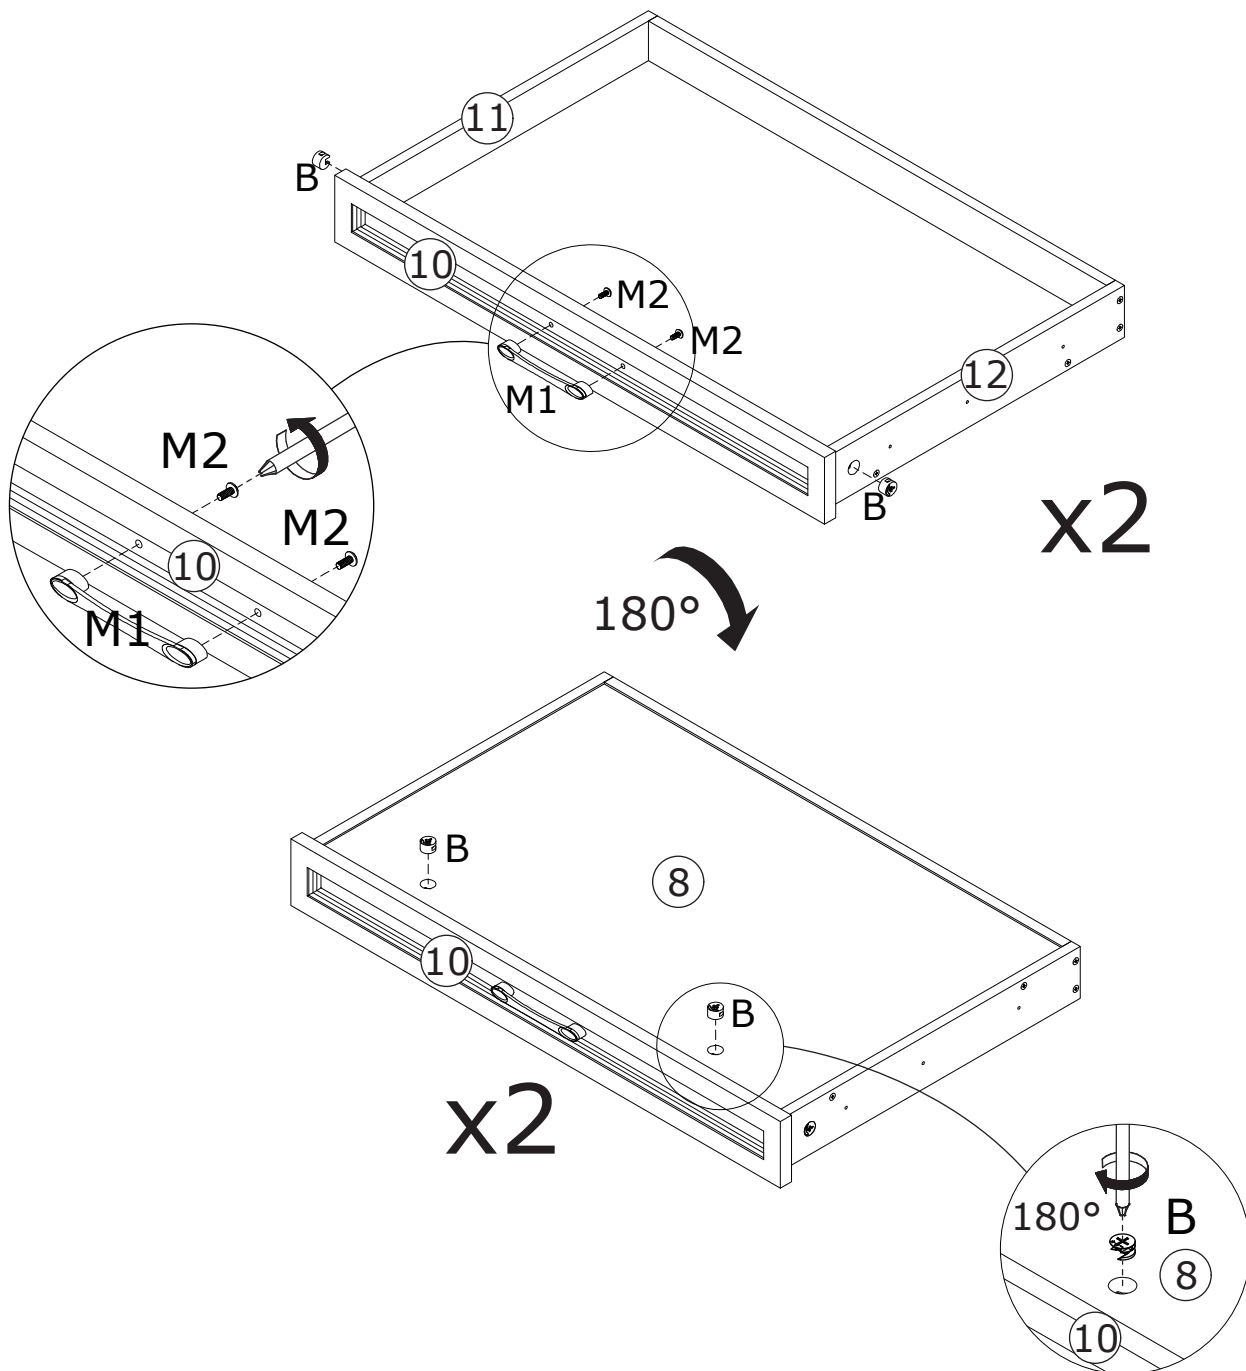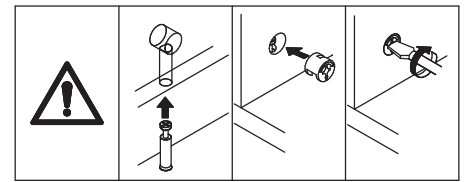


24

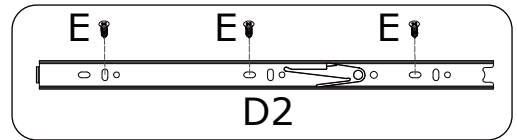 


 
As shown in the figure, use Screw E to secure Slide Rail D2 to Wood Boards 11 and 12. Ensure correct screw hole alignment.

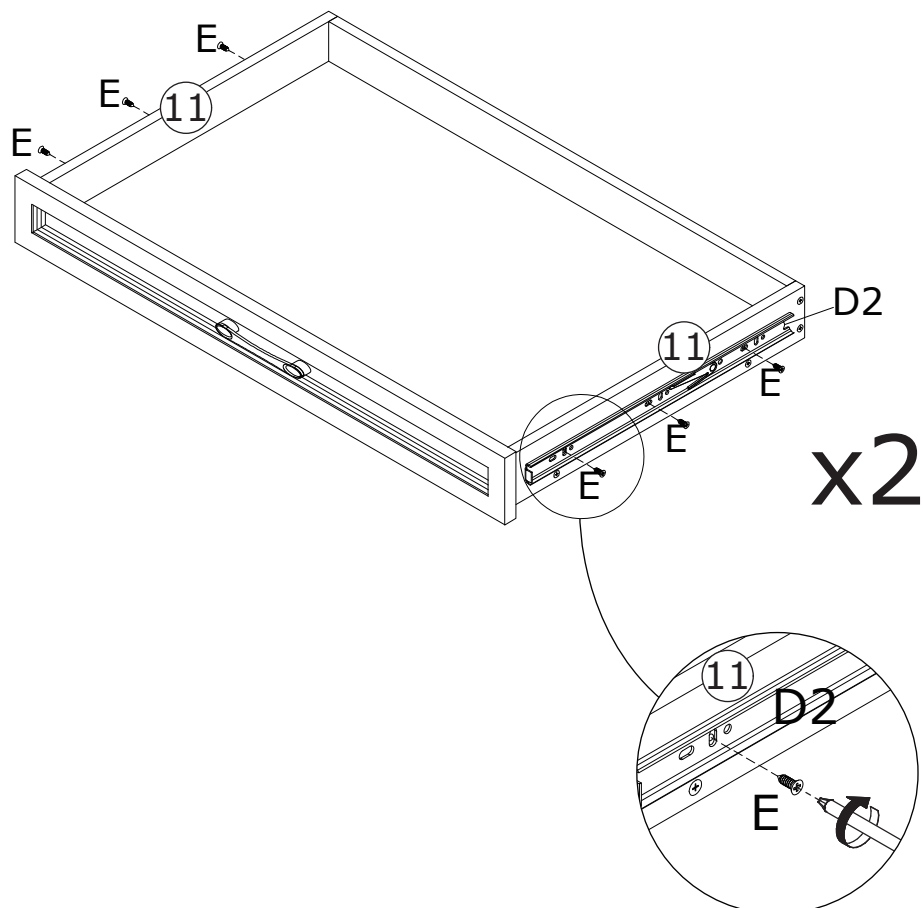

 
As shown in the figure, insert Slide Rail D2 into the pre-installed Slide Rail D1.

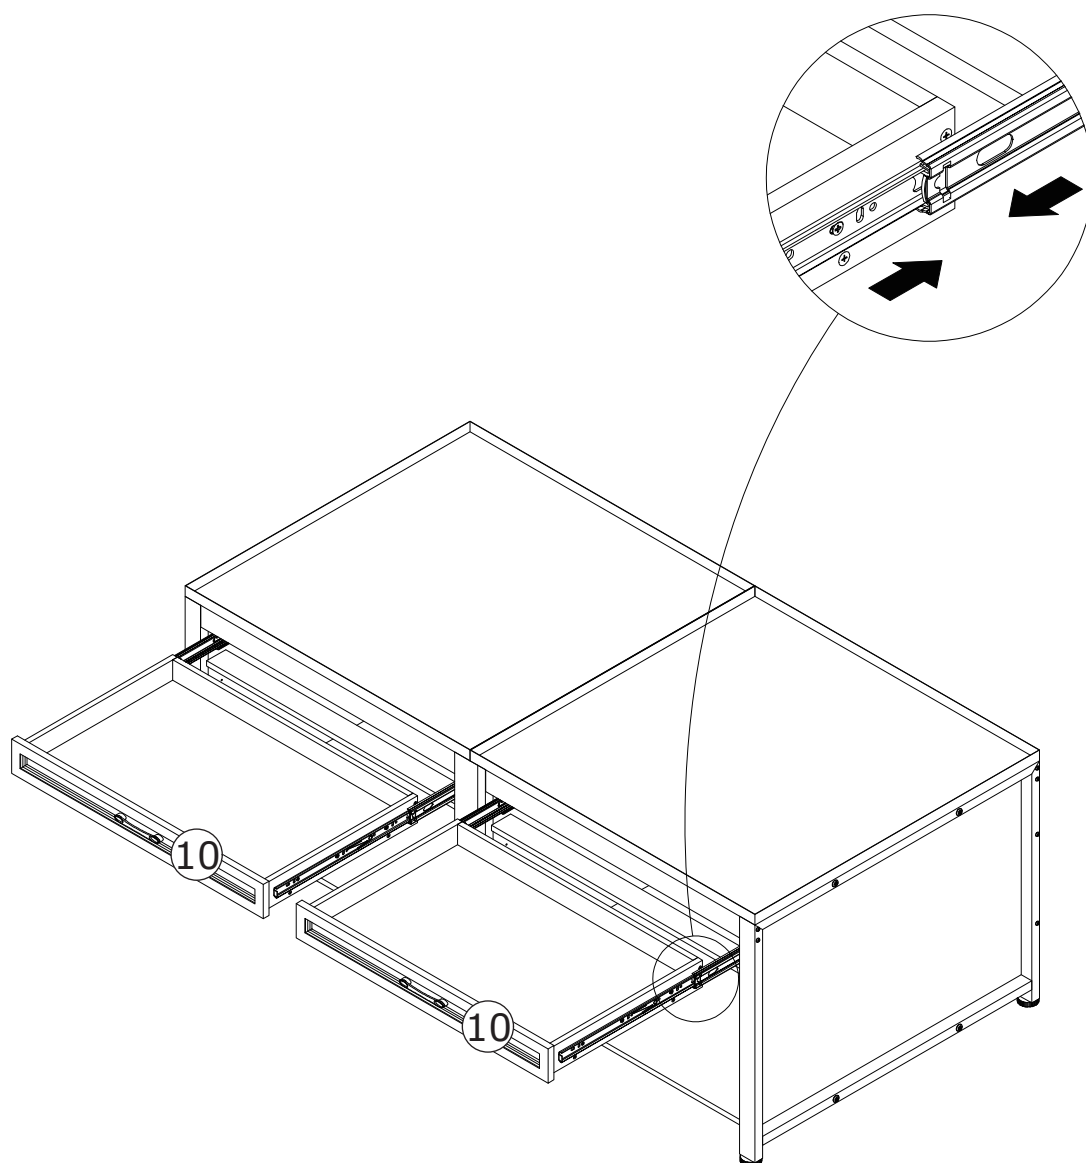

26

  E x 16  M4 x 12 mm	P x 8 	Q x 4  	
---	--	--	---

 As shown in the figure, use Screw E to attach Hinge P to Wood Board 1, then use Screw Q2 to fix Handle Q1 onto Wood Board 1.

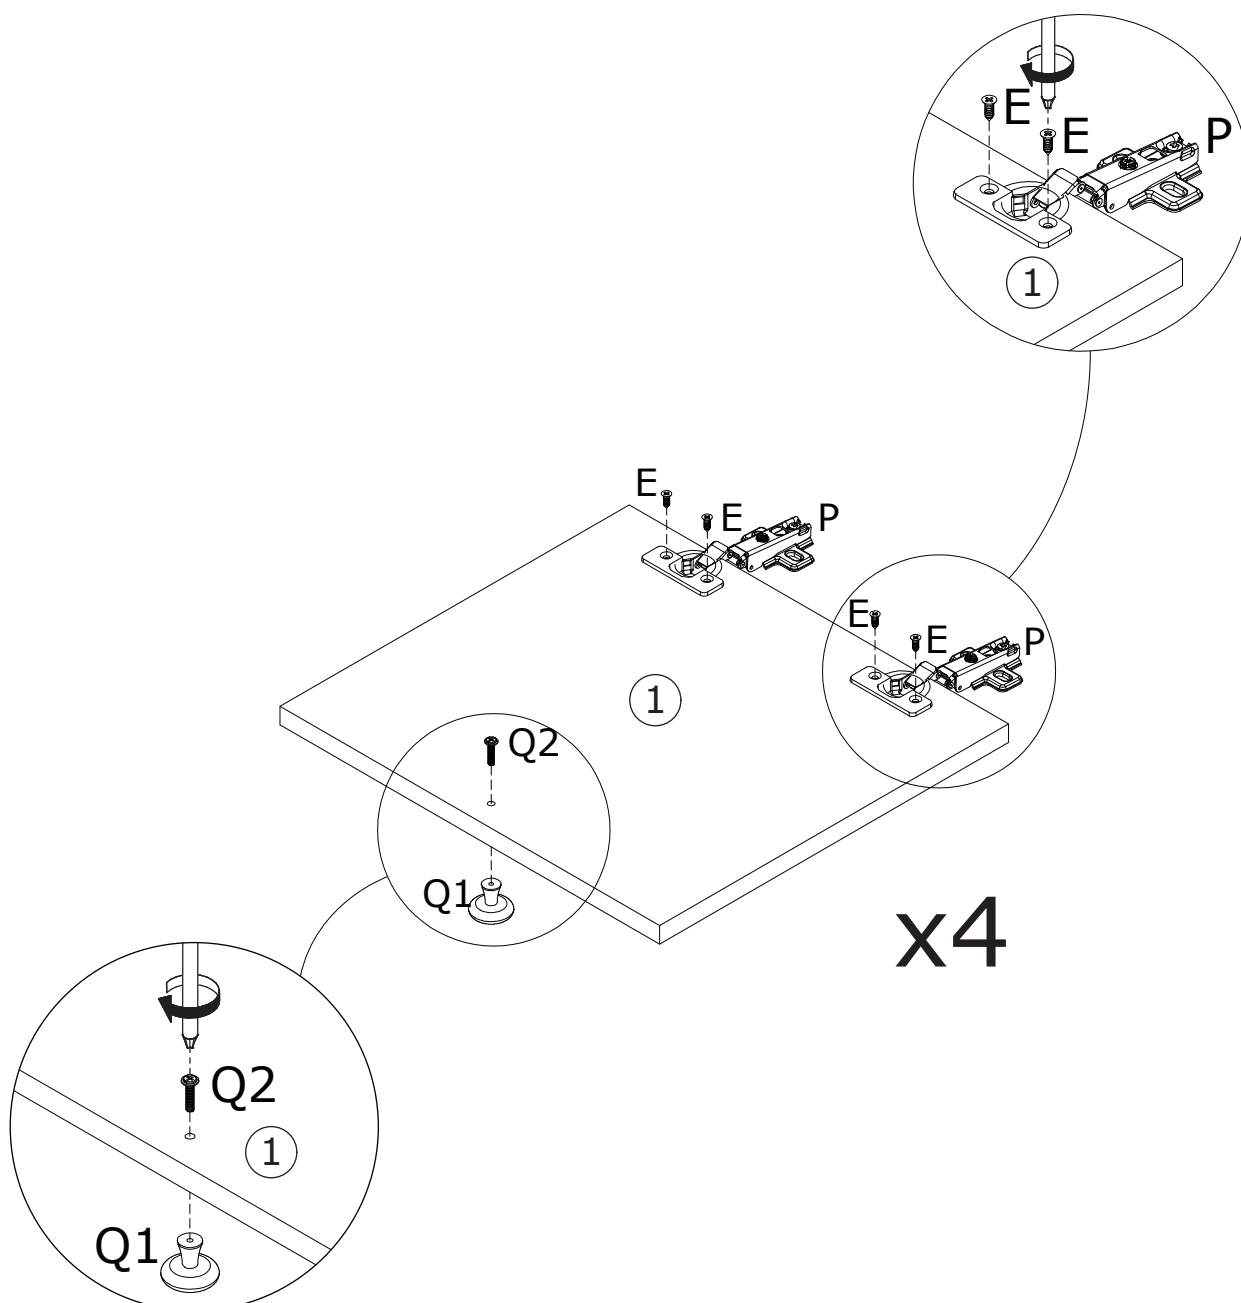


27


E x 8



 M4 x 12 mm



 As shown in the figure, use Screw E to attach Hinge P to Side Panels 3 and 16/17.

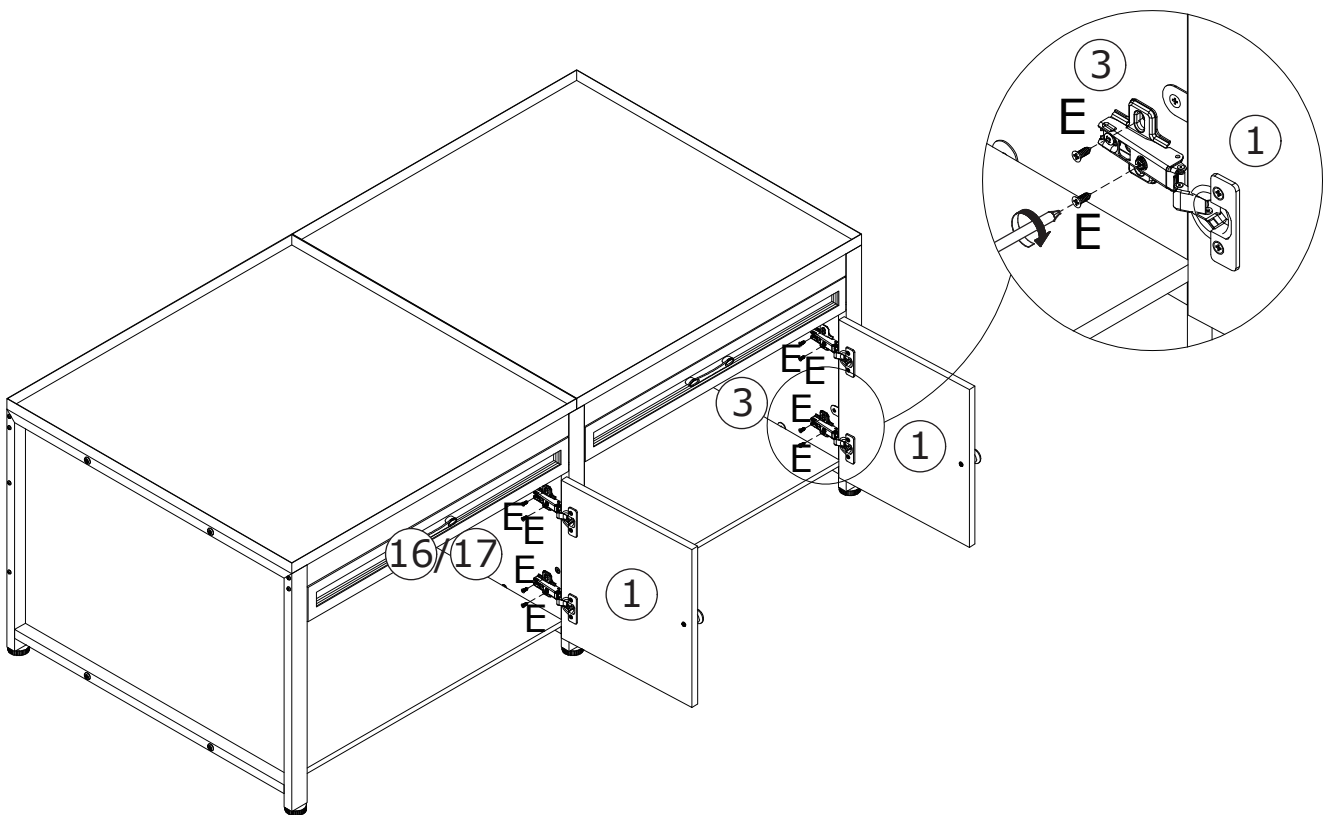


28


E x 8




 M4 x 12 mm





  As shown in the figure, use Screw E to fix Hinge P to Side Panels 2 and 16/17.

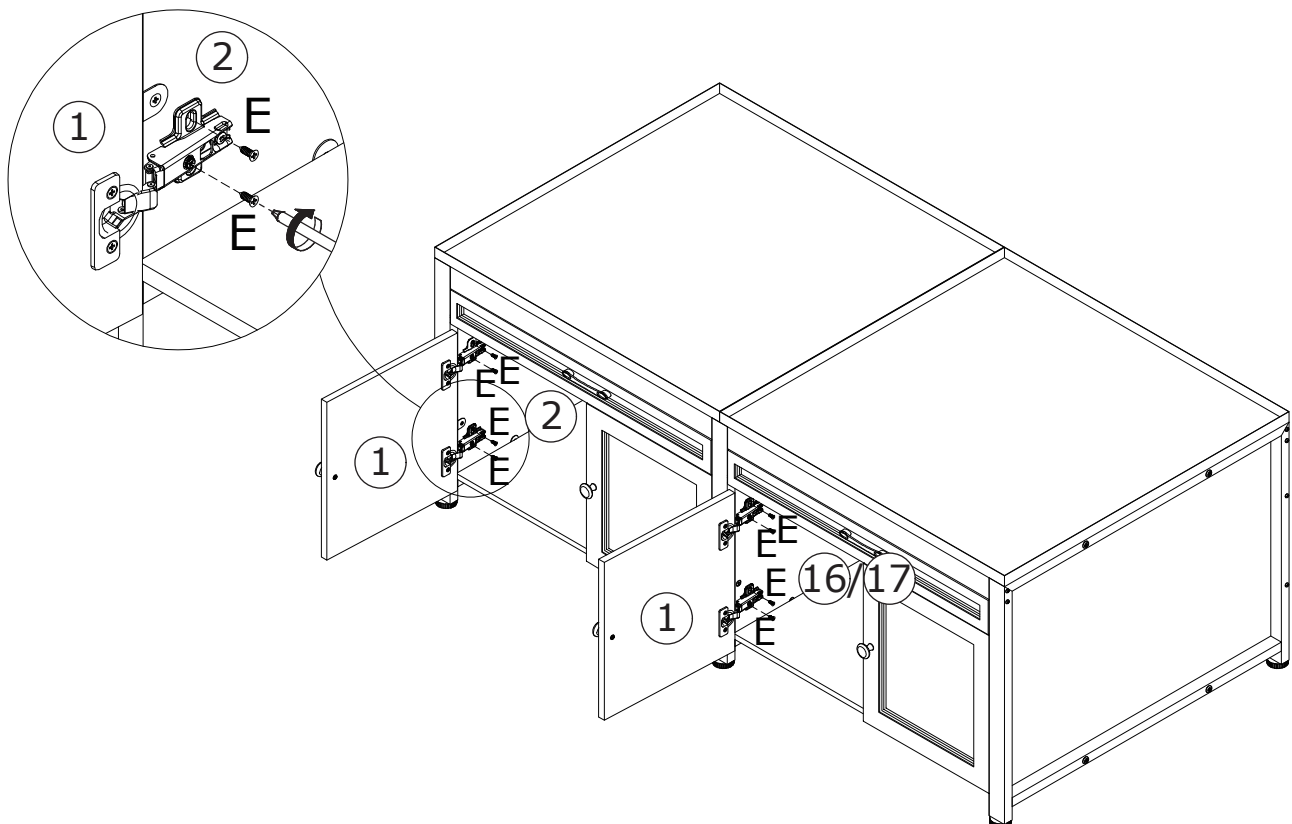




  
If the cabinet door fails to close or appears uneven after installation, you can adjust the position of the cabinet door by adjusting the screws on Hinge P.

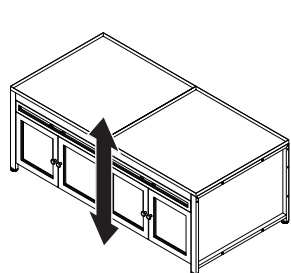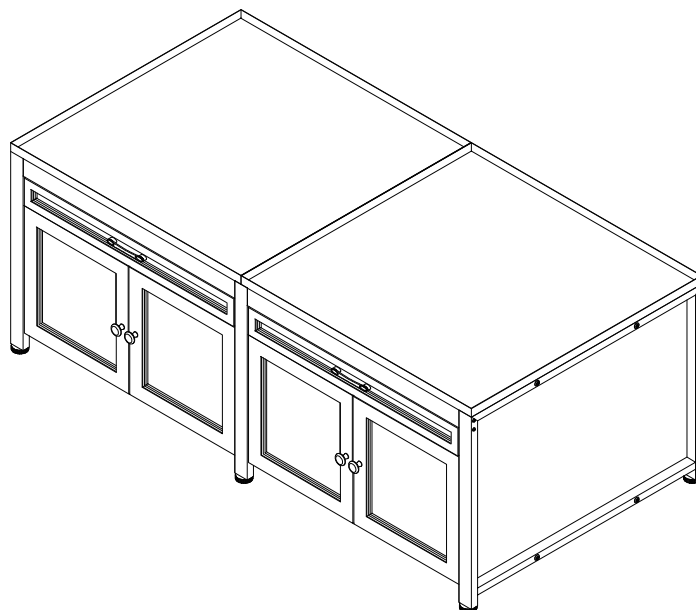



①

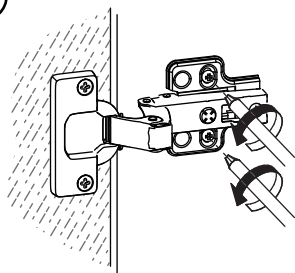 


②

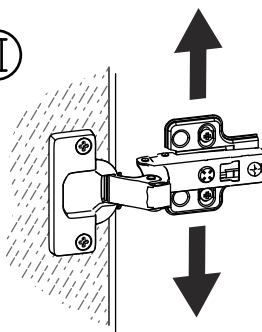 


③

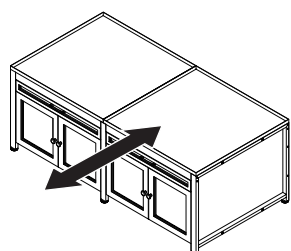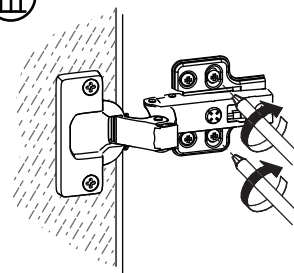  



①

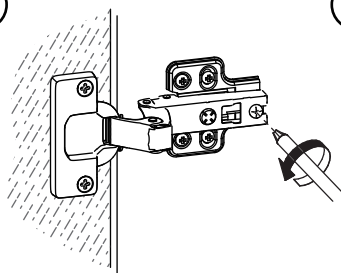 


②

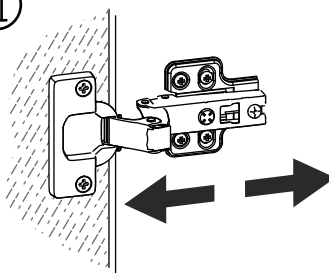 


③

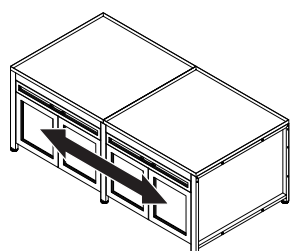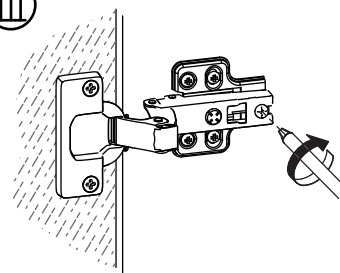  

①

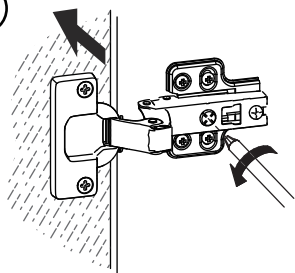 

②

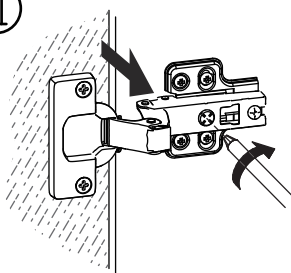 


30

R x 8




 As shown in the figure, remove the protective paper from Accessory R and apply it to the four corners of Basin 19.



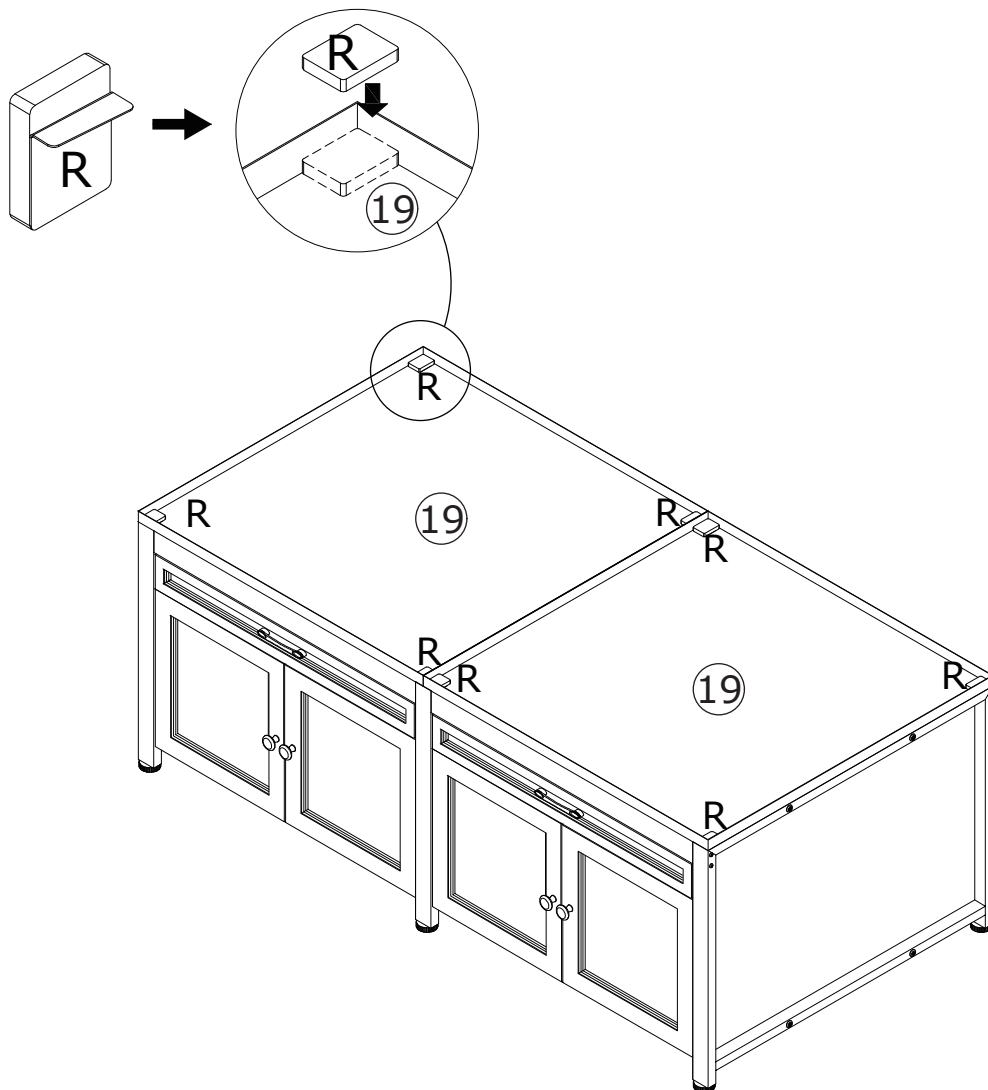


31

 N x 8



   As shown in the figure, install Backboard Clips N at the four corners of Wood Board 7 using the screws that come with Backboard Clips N.

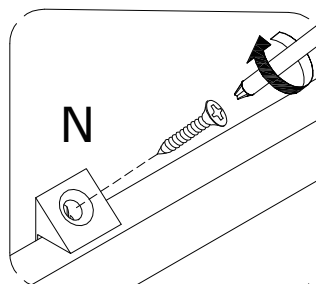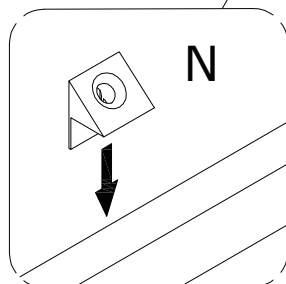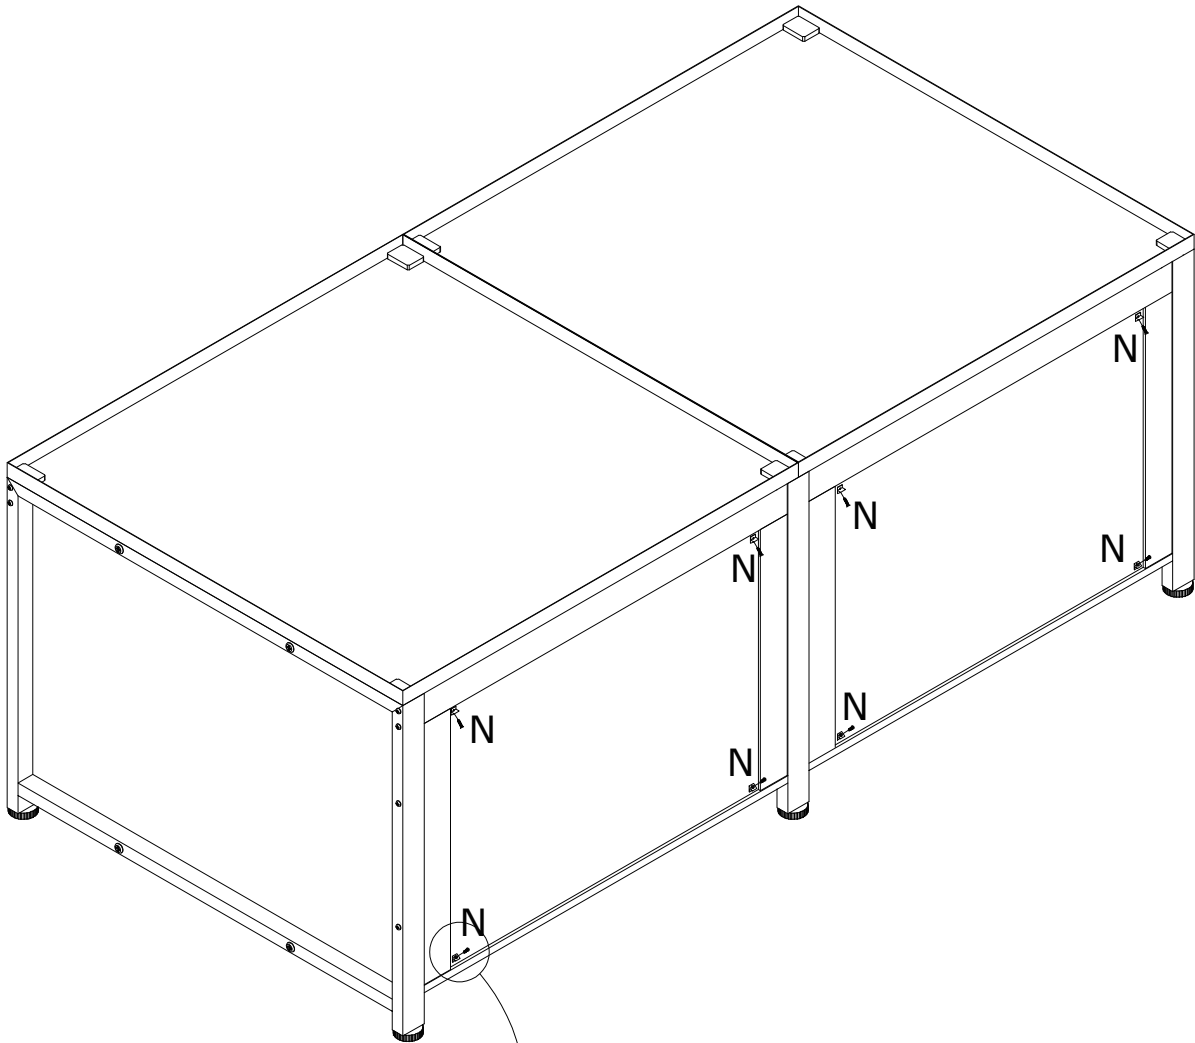

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068