

ELECTRIC STOVE HEATER

OWNERS MANUAL
&
ASSEMBLY INSTRUCTIONS




PRODUCES SAFE EFFICIENT HEAT

PLEASE READ INSTRUCTION MANUAL BEFORE USE

230-240V 1800W

SAVE THESE INSTRUCTIONS FOR FUTURE USE

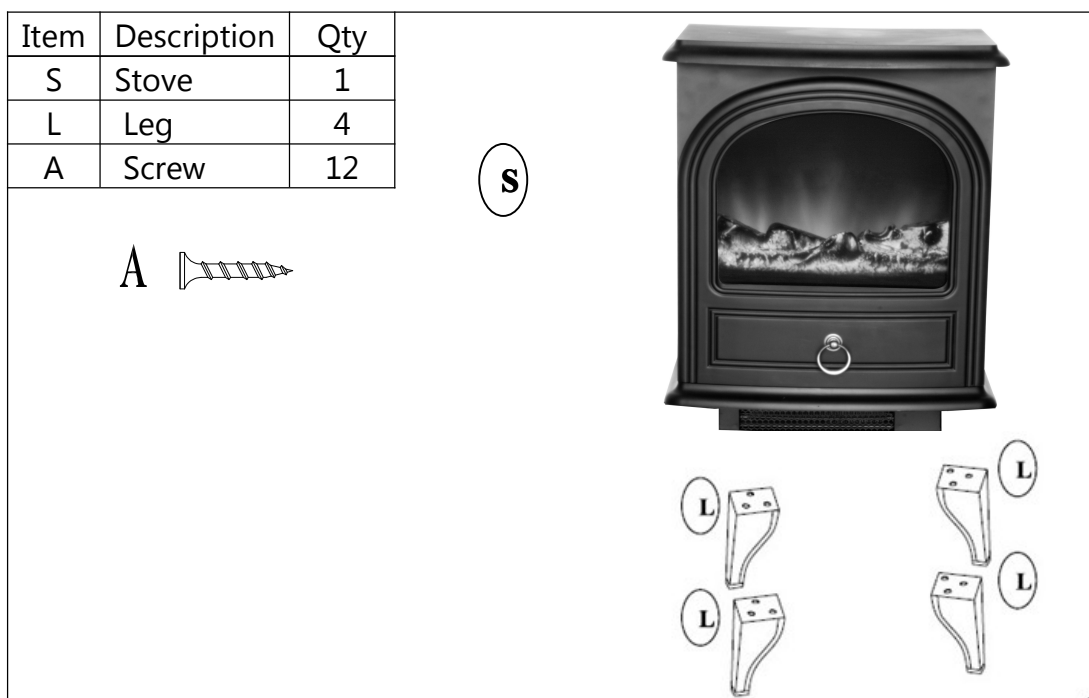

IMPORTANT SAFETY INSTRUCTIONS:

BEFORE USING THIS ELECTRIC STOVE APPLIANCE, THE FOLLOWING INSTRUCTIONS NEED TO BE READ AND UNDERSTOOD, TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK OR PERSONAL INJURY.

1. This appliance is hot when in use. Do not touch or contact the hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 1m away from the appliance.
2. Do not cover or block the air intake or exhaust. Do not stand appliance on soft surfaces, such as beds, where openings may become blocked.
3. Take care when using appliance near children, or when children may be present a fireguard is recommended.
4. Do not leave appliance unattended.
5. Do not attempt to move appliance while on or hot.
6. Always unplug appliance when not in use.
7. Do not use the appliance if the cord or plug has become damaged. Do not use the appliance if the earth pin has been damaged or has been removed. Do not use the appliance if appliance shows signs of malfunctioning, has been dropped, or has been damaged in any manner. The appliance must be returned to an authorised service centre, where it can be serviced or repaired by authorised personnel.

8. Do not use outdoors, the appliance is intended for indoor use only.
9. This appliance is not intended to be used in bathrooms, laundry rooms, or any other location where the appliance may become damp or come in contact with water. Never operate appliance where it may fall into a bathtub, pool or any other water container.
10. Do not run power cord under carpeting, rugs, runners, or any other covering. Keep cord from crossing traffic areas to avoid tripping.
11. Always turn appliance off before unplugging unit from outlet.
12. Do not insert or allow any foreign objects to enter the openings of appliance, this may cause electric shock, fire, or may damage the appliance. Do not cover the appliance under any circumstances.
13. Keep all flammable liquids, such as petrol or paint, away from appliance. This appliance produces arcing sparks that could ignite flammable liquids.
14. Only use this appliance as described in this manual. Any other use would void manufacturer warrantee, abuse may cause fire, electrical shocks, or personal injury.
15. It is not recommended to use appliance with an extension lead, cords may overheat and create a fire. If an extension cord must be used, be certain that the cord being used is rated for at least 2000 watts.
16. Store appliance in a dry location
17. For residential domestic use only, not intended for commercial use.
18. This appliance is designed to be used on a 240 V, 13 AMP, earthed circuit. Do not connect to a outlet controlled by a dimmer switch. The cord supplied with the appliance, has a 3 pin plug, the long upper pin on the plug is for earth purposes. Avoid plugging other appliances into the same circuit as appliance.

ASSEMBLY INSTRUCTIONS

Before commencing assembly, be sure to remove the entire contents of carton and make sure all parts are present. Please recycle packaging appropriately at a household waste site.


Tools needed for assembly: Phillips head screwdriver (not included)

Be certain the stove is unplugged before assembly, maintenance or cleaning is performed

When the heat function is used for the first time, a slight odour may be present. This is normal and should not occur again unless heater is not used for an extended period of time.

Leg Assembly

Lay stove on a flat surface and install 4 legs (L) with (3) screws (A) provided as shown in illustration.

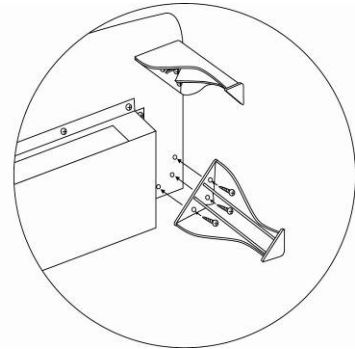

Flame effect / Light sources

The flame effect on this electric stove heater is created by LED surface mounted components that are designed to last the life of the product. Do not remove back cover of heater; no user serviceable parts are contained within.

Controls / Operation

After fully reading this manual and taking care to understand the safety instruction, check that the controls are in the off position. Controls are located on the top of appliance

Your appliance stove is now ready for operation:

Plug unit into a grounded 13 amp. 240 Volt socket.

For flame affect only, switch Power switch to the ON position. Indicator light will come on.

For low heat, Power switch must be ON and Low Heat switch must be on.

Indicator light will come on.

For high heat, Power switch must be ON, Low Heat switch must be on and High heat switch must be on. Indicator light will come on.

Temperature Limiting Control

This appliance is equipped with a Temperature Limiting Control. Should the appliance reach an unsafe temperature, (115 degrees Celsius) the appliance will automatically turn off. To reset: Unplug unit from wall socket, wait 5 minutes, remove any obstruction causing overheating and if safe plug back in and continue use.

Cleaning

Turn appliance OFF and unplug from socket (power supply). Use a vacuum or duster to clean dust and debris from heater and vent areas. The exterior of the stove should be cleaned with a damp cloth or duster. Do not use abrasive cleaners, liquid sprays, or any other cleaner that may scratch the surface.

Warranty

This electric stove appliance has a limited 'return to base' warranty for a period of 1 year from the date of purchase. The original dated sales receipt is required for all warranty claims. This warranty does not include the replacement of glass, legs, handles or light bulbs. The following will void this warranty: Damage caused from misuse, tampering or altering appliance in any manner, damage from being used in the wrong power source, water or liquid damage, damage caused from appliance being used outdoors, damage caused from appliance being used for extended periods of time, or damaged caused if appliance is used in a commercial application. This appliance is intended for residential use only. Not intended for primary heat source.

Thank you for purchasing this Electric Stove Appliance.