



PERSONAL BLENDER

JB-191



Operating and Safety Instructions

-FOR INDOOR HOUSEHOLD USE ONLY -

IMPORTANT SAFEGUARDS

When using this or any other electrical appliance, always follow these basic safety precautions, especially when children are present.



READ ALL INSTRUCTIONS BEFORE USE



WARNING-- To reduce the risk of fire, electric shock, serious personal injury and property damage please note the following:

- This product is not intended for use by children. Keep the product out of the reach of children and pets. Extra caution is necessary when using this appliance near children.
- Always ensure the product is unplugged from the electrical outlet and allowed to cool before assembling, disassembling, relocating, or cleaning it.
- Do not leave the product unattended while it is in use. Always unplug the product from the electrical outlet when not in use.
- Do not immerse the Base, Power Cord, or Plug of this product in or expose the Power Cord or Plug to water or other liquids.
- Do not touch hot surfaces. Use handles or knobs when handling product. Use protective oven mitts or gloves when removing the Lid or handling hot containers to avoid burns or personal injury.
- Take proper precautions to prevent burns, fire, or personal or property damage as this appliance generates heat and steam during use.
- Do not use attachments not recommended or sold by the product manufacturer. Attachments, when furnished, may become hot during use. Allow any attachments to cool before handling them.
- Do not place on or near a hot gas or electric burner, in a heated oven, or other heated surfaces.
- Use extreme caution when moving an appliance containing hot food, water, or other liquids.
- Use the product in a well-ventilated area. Keep at least 4-6 inches of space on all sides of the product to allow adequate air circulation.

- Use appliance on a table or flat surface.
- Keep the product away from curtains, wall coverings, clothing, dishtowels, or other flammable materials.
- Do not plug or unplug the product from the electrical outlet with a wet hand.
- This product is intended solely for non-commercial, non-industrial, household use in cooking of food for human consumption; do not use the product outdoors or for any other purpose.
- Do not operate the product empty.
- Do not let cord hang over edge of table or counter where it may be tripped over or pulled. Do not allow cord to touch hot surfaces.
- Do not operate the product if it has a damaged or cut Power Cord or plug, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if the Motor Housing is dropped in or exposed to water.
- This product has no user-serviceable parts.
- Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing; take the product to the appliance repair shop of your choice for inspection and repair.
- Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break.

SPECIAL INSTRUCTIONS:


- Keep hands and utensils out of container while blending to reduce the risk of severe injury to the blender or a personal injury. A scraper may be used but only when blender is not running.
- Blades are very sharp. Handle Carefully.
- To reduce the risk of injury, never place cutter assembly blades on base without jar properly attached and with cover in place.
- A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. An extension cord is not recommended for use with this product, but if one must be used:
 - The marked electrical rating must be at least as great as that of the product;
 - If the product is of a 3-prong grounding type, the extension cord must be a grounding-type 3-wire cord.
 - Arrange the extension cord so that it will not drape over the countertop or tabletop where it can be tripped over or pulled.

WARNING: This product is equipped with a polarized plug (one blade is wider than the other blade) to reduce the risk of electrical shock. This is a safety feature. The plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug.



SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Parts:

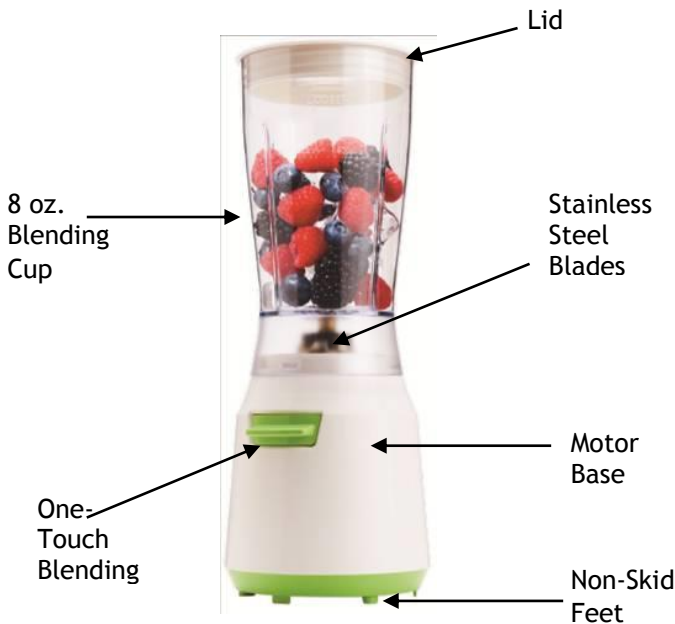

Before First Use

IMPORTANT: Please check all packaging material carefully before discarding as there may be accessory parts contained within the packaging material.

- Carefully wash all the parts and accessories before first use.

- We recommend to pre chop any large pieces of food before blending. Inserting large pieces may cause damage to the blender.

***Attention:** First use may cause a slight odor or small smoking upon heating, it is normal. This is a result of the heating element chemical reaction. It quickly goes away.*

Using Your Personal Blender:

WARNING: Avoid contact with moving parts.

1. Place Blender base on a flat stable surface.

Note: Your Personal Blender has a SAFE MODE which means it will only run if the Blending Cup is properly placed on the motor block.

2. Place the Blender Cup on the motor base properly.
3. Insert the food you wish to blend; Pre-chopping any large items before. Do not exceed the 400 ml capacity.

Note: When blending fruits remember to remove the pit and peel.

4. Lock Blending Cup in place and place lid on the cup.
5. Connect the power plug and blend using the One-Touch Blending. This blender will blend while holding down the green lever.

Note: One Touch Feature is perfect for Milkshakes, Smoothies, Sorbets, Sauces, Cocktails, etc...

6. When blending is complete, release the lever and then unplug the product from the electrical outlet.

WARNING: Always unplug the product from the electrical outlet when it is not in use or will be left unattended.

Cleaning Your Personal Blender:

WARNING: Always unplug the product and allow it to cool before cleaning or storing it.

NOTICE: To avoid damaging the product, do not use abrasive cleaners or scoring pads.

- Remove the Blending cup from the Motor Base.
- Blending Cup, Blades, and Lid can all be washed with warm soapy water and a nonabrasive sponge.
- To clean the Base, wipe the surfaces with a soft, damp cloth. Do not immerse Motor Base in water or any other liquid.
- Dry all parts thoroughly before storing or using again.