

 


STOP!

Before beginning the assembly process, ensure all boxes and parts have been delivered.


FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

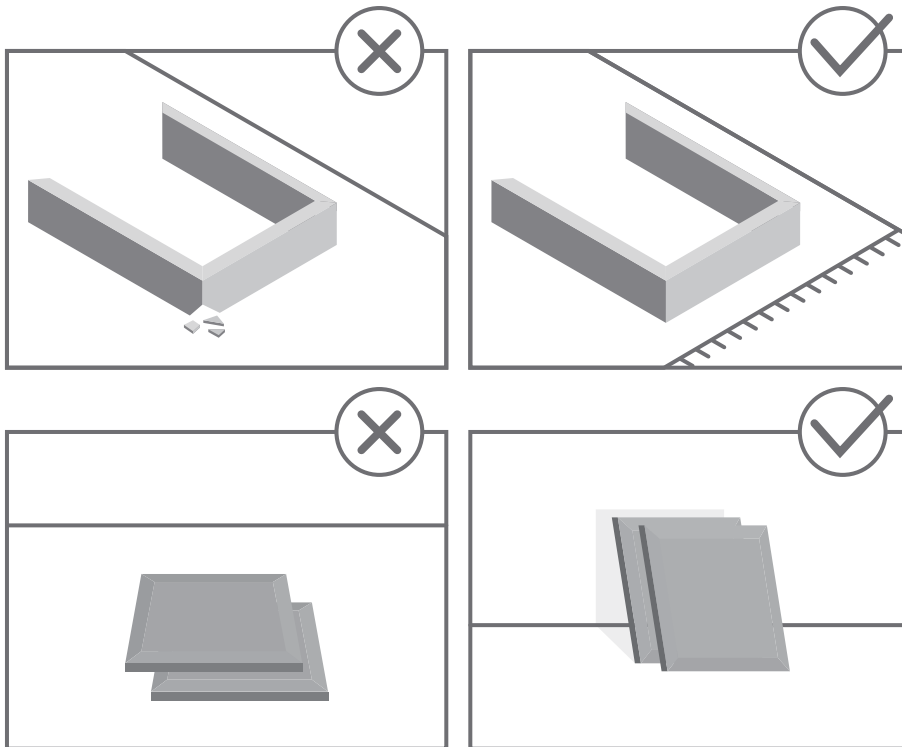





A:Lovesofa Seat 1x

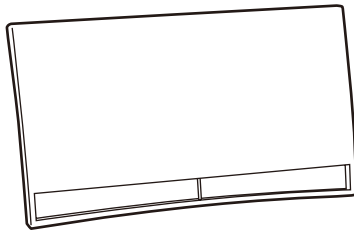 


B:Lovesofa Backrest 1x

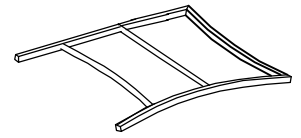 


C/R:Right 3x

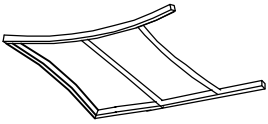 

C/L:Left 3x

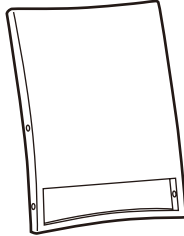 

D:Backrest 2x

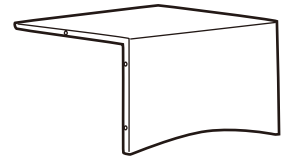 

E:Seat 2x



F:Table Side 2x



G:Table Leg 2x



 
H:Table Glass 1x



I:Cushion 2x



J:Cushion 1x



M6 x 40 Bolt 46x

 


Washer Bolt 46x




Allen Key

1

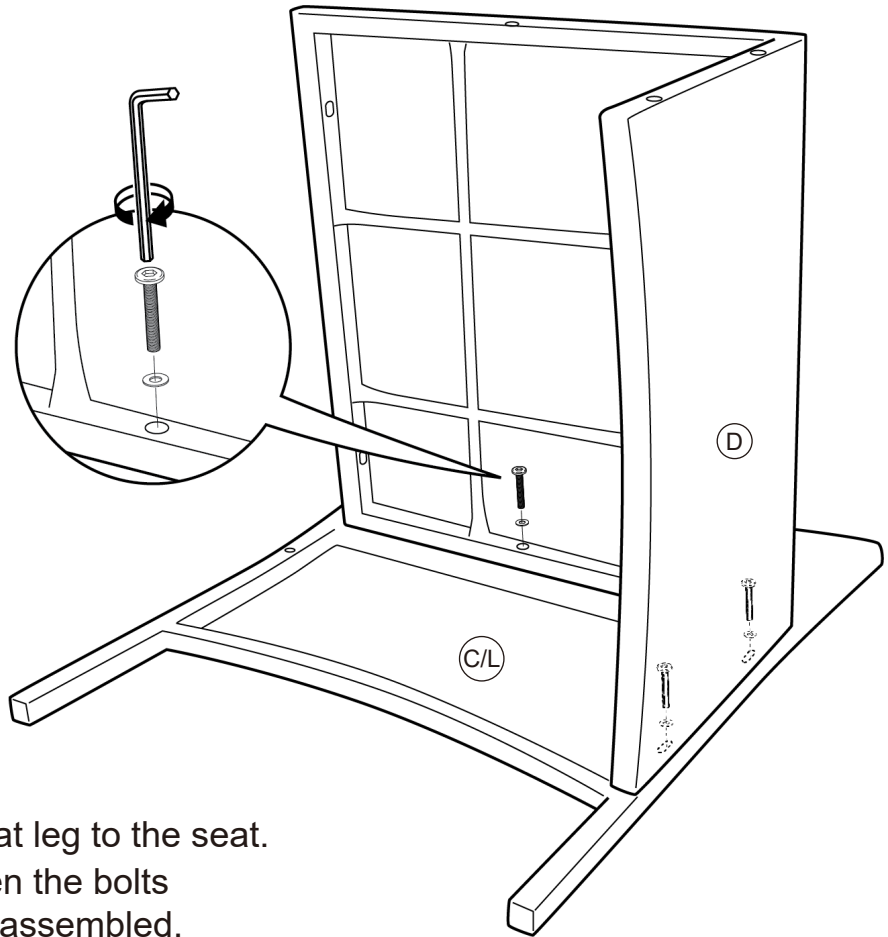


Attach the left seat leg to the seat.
Do not fully tighten the bolts
until all parts are assembled.

 2

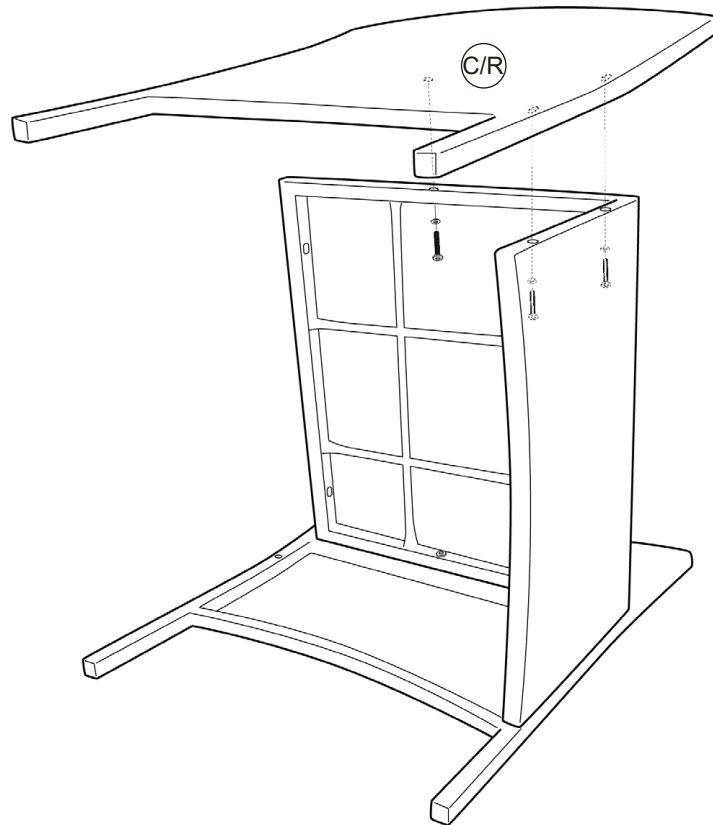


Attach the right seat leg to the opposite
side of the seat.

 3

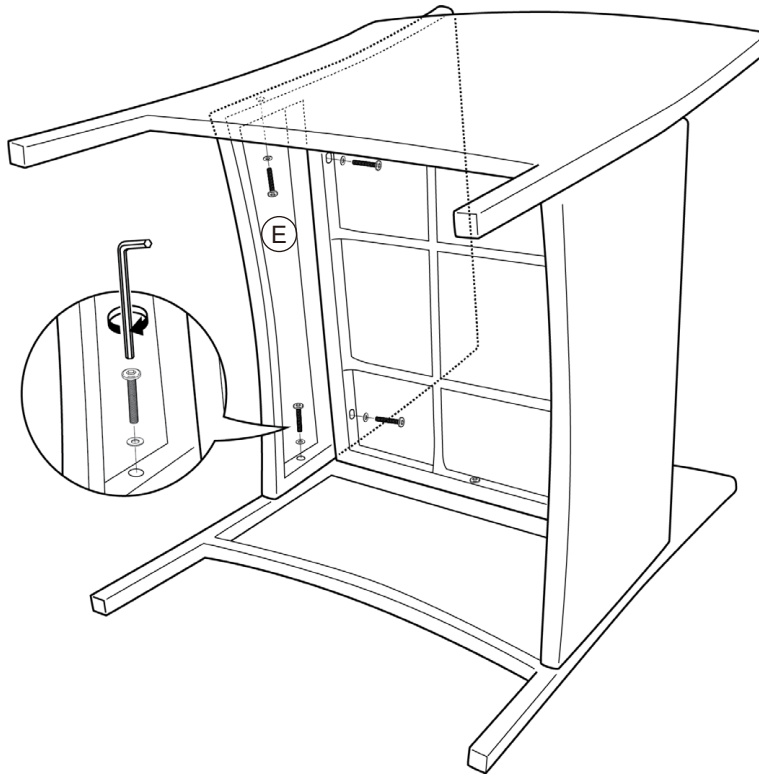


Attach the backrest to the seat.

 4

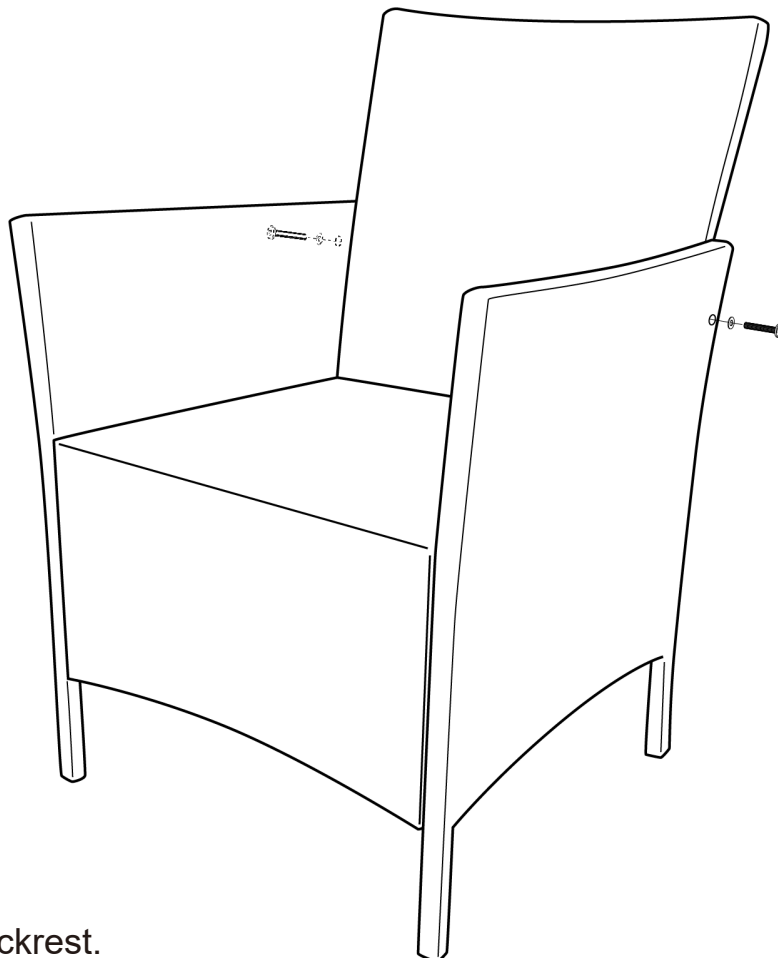


Secure the backrest.

 5

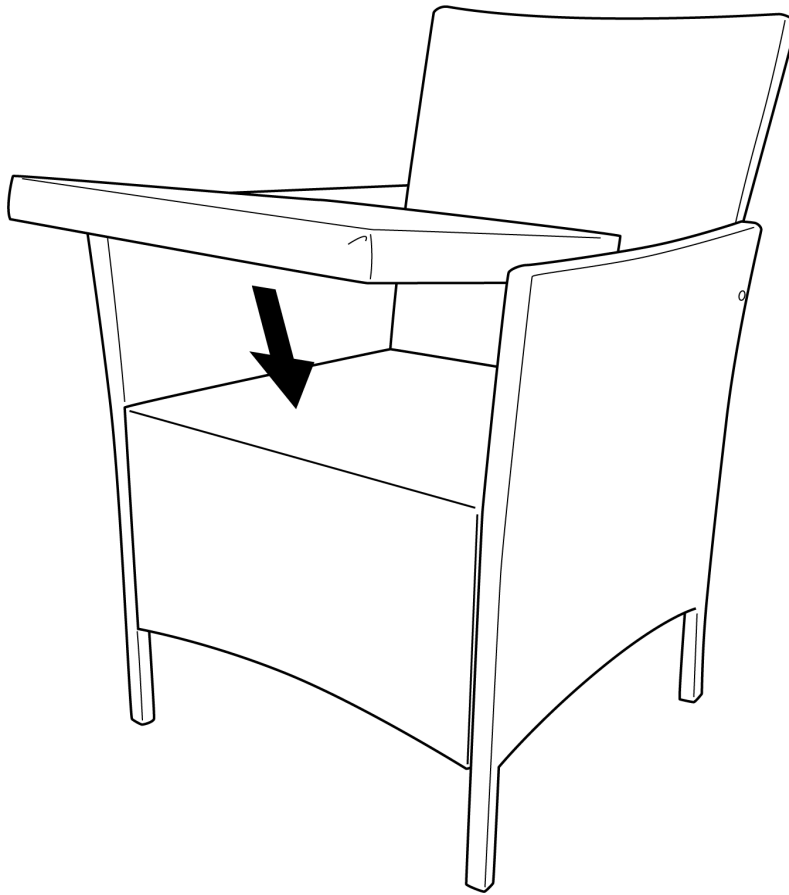


Make sure the unit is leveled on the ground, then tighten all bolt and put on the cushion. Repeat the same step for the other chair.

 6

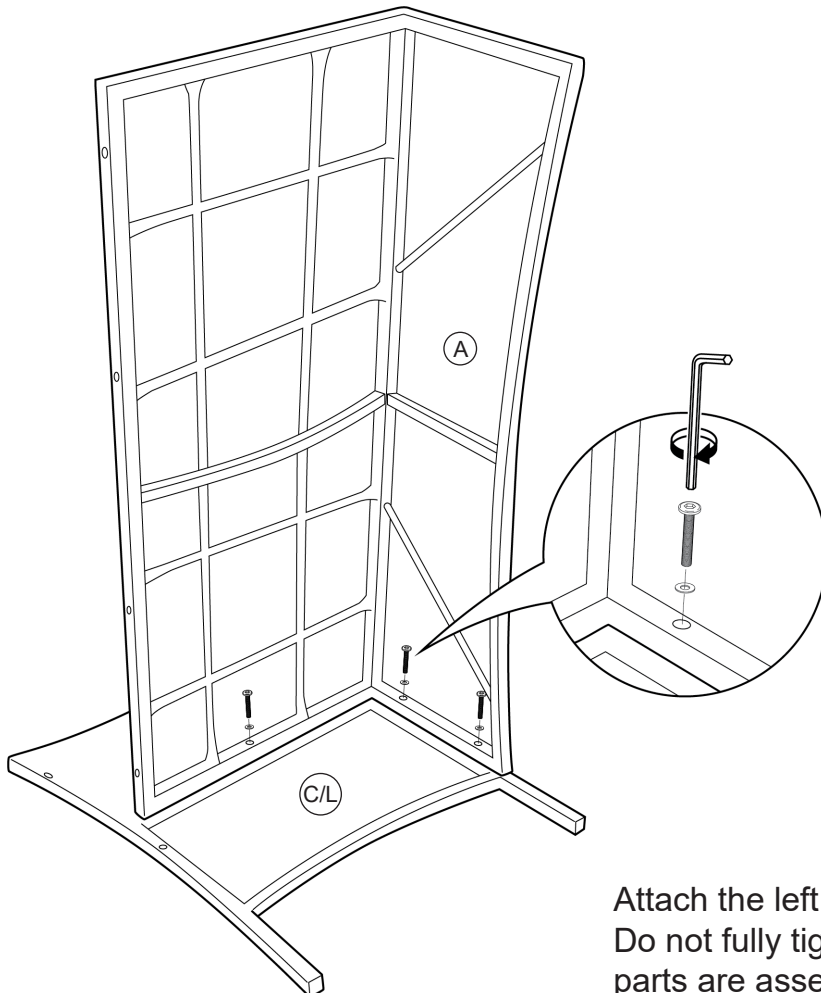


Attach the left seat leg to the seat. Do not fully tighten the bolts until all parts are assembled.

 7

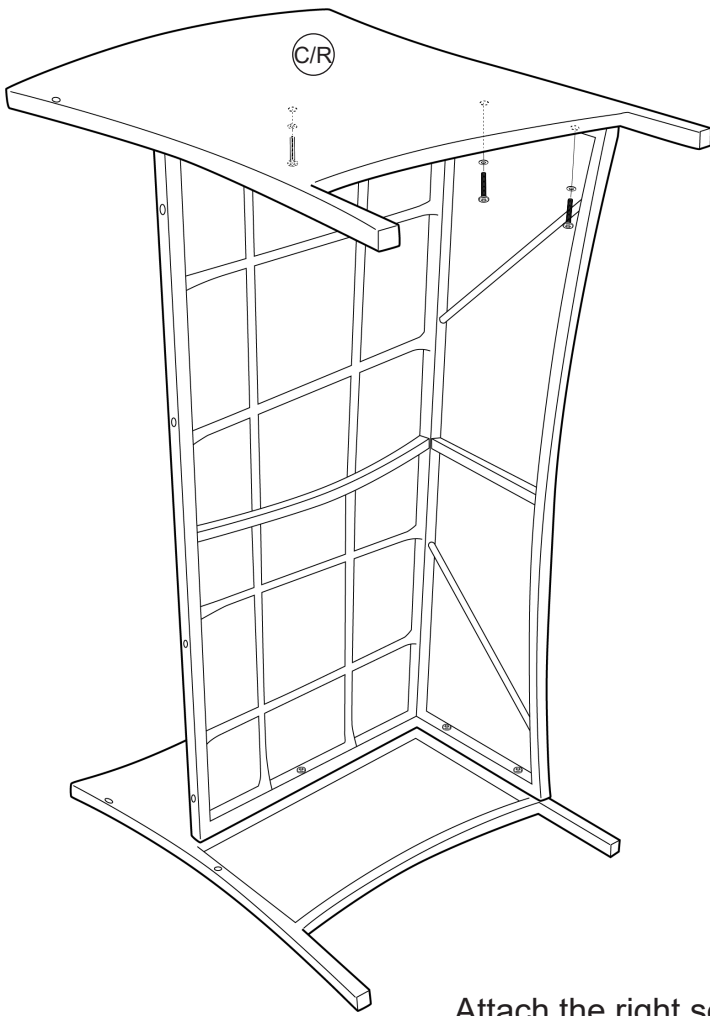


Attach the right seat leg to the opposite side of the seat.

 8

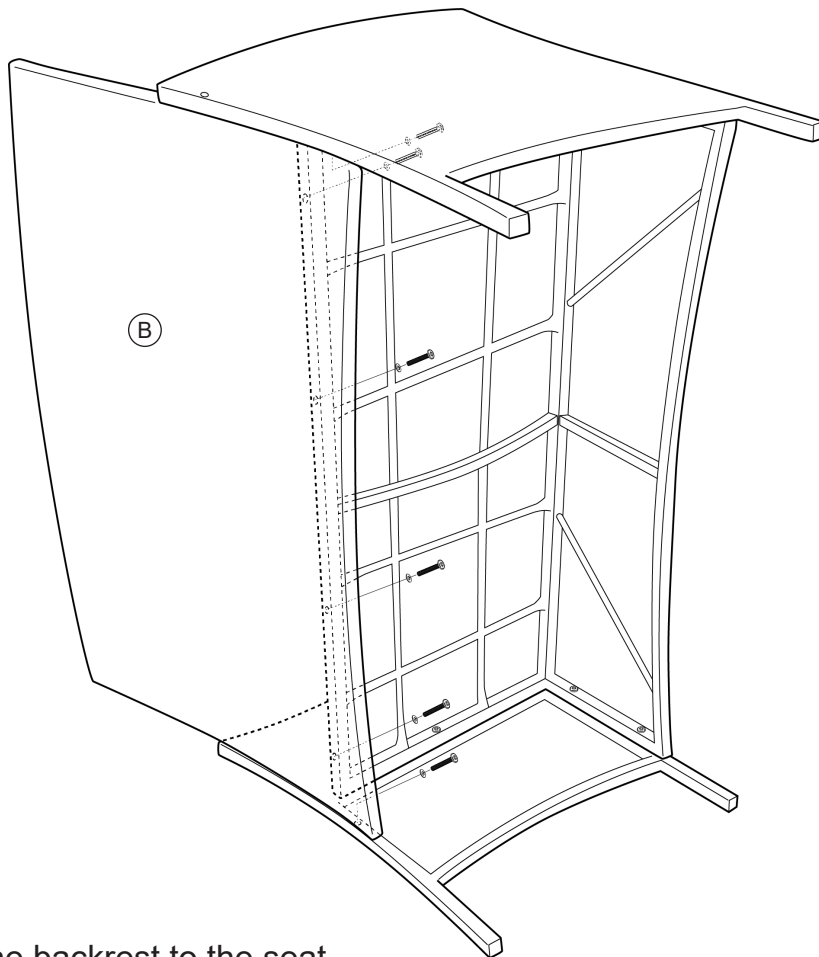

Attach the backrest to the seat.

 
9

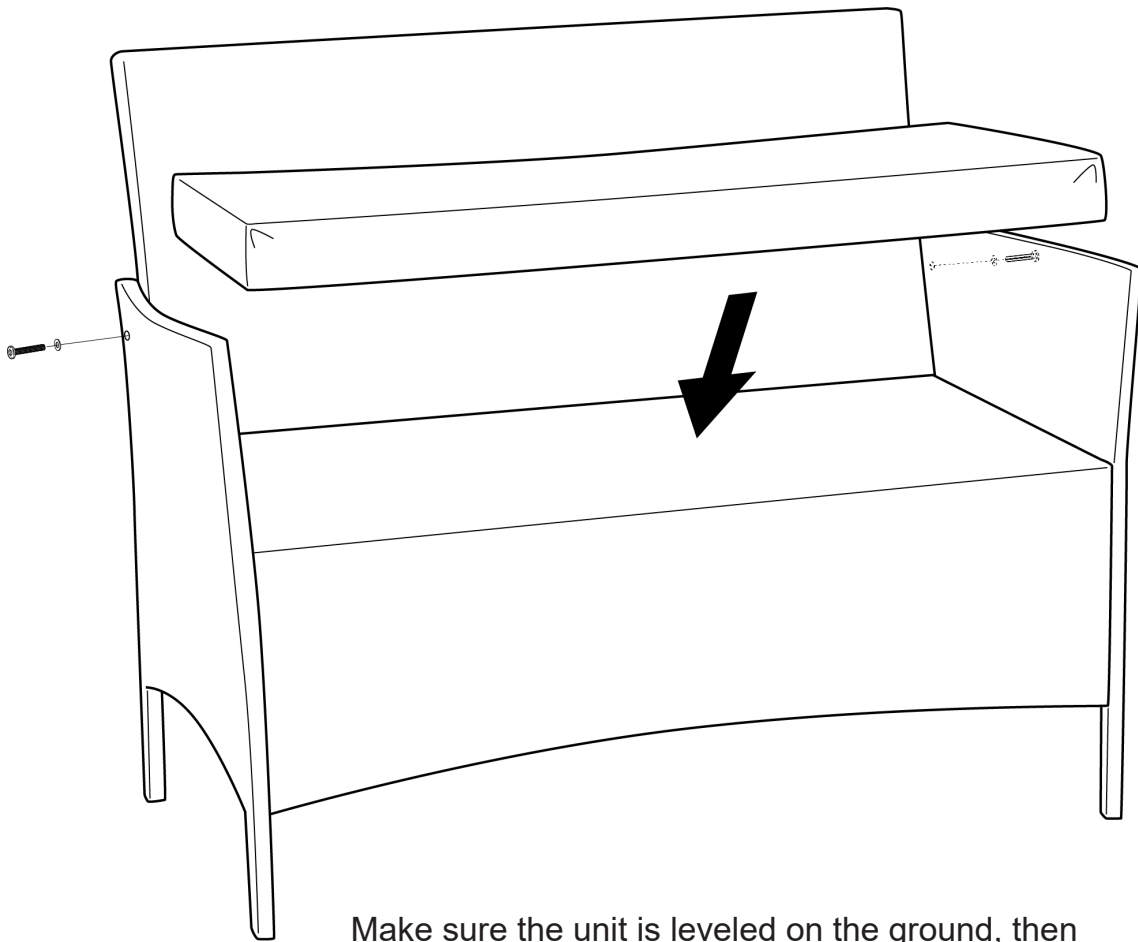

Make sure the unit is leveled on the ground, then tighten all bolt and put on the cushion.


10

 Do not fully tighten the bolts until all parts are assembled.

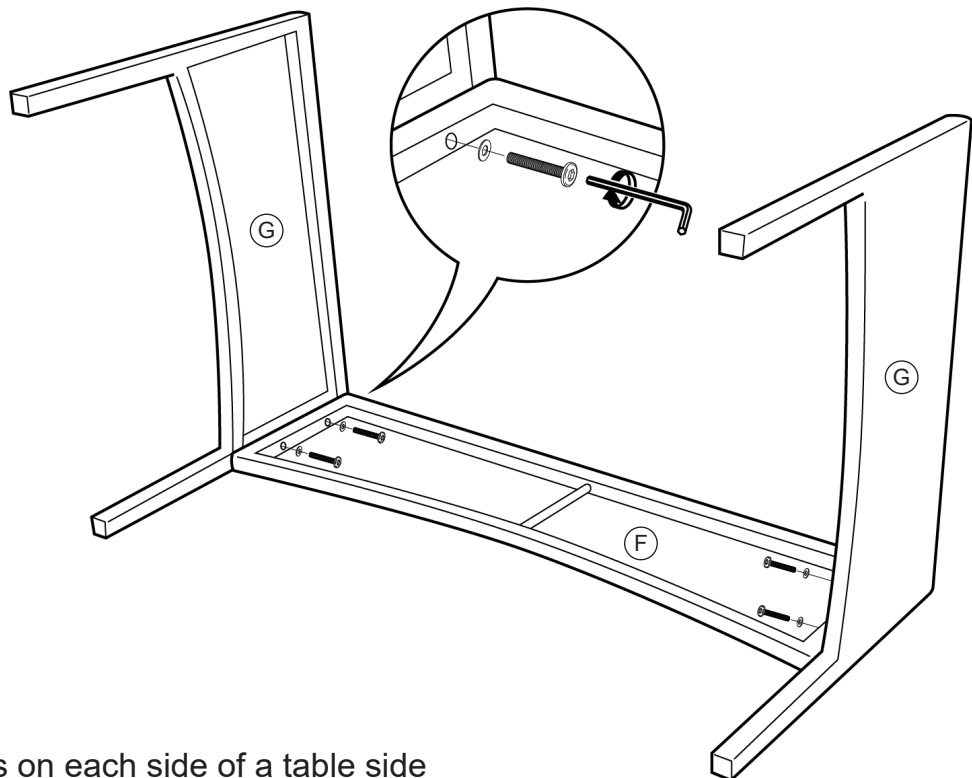


Attach the table legs on each side of a table side

 11

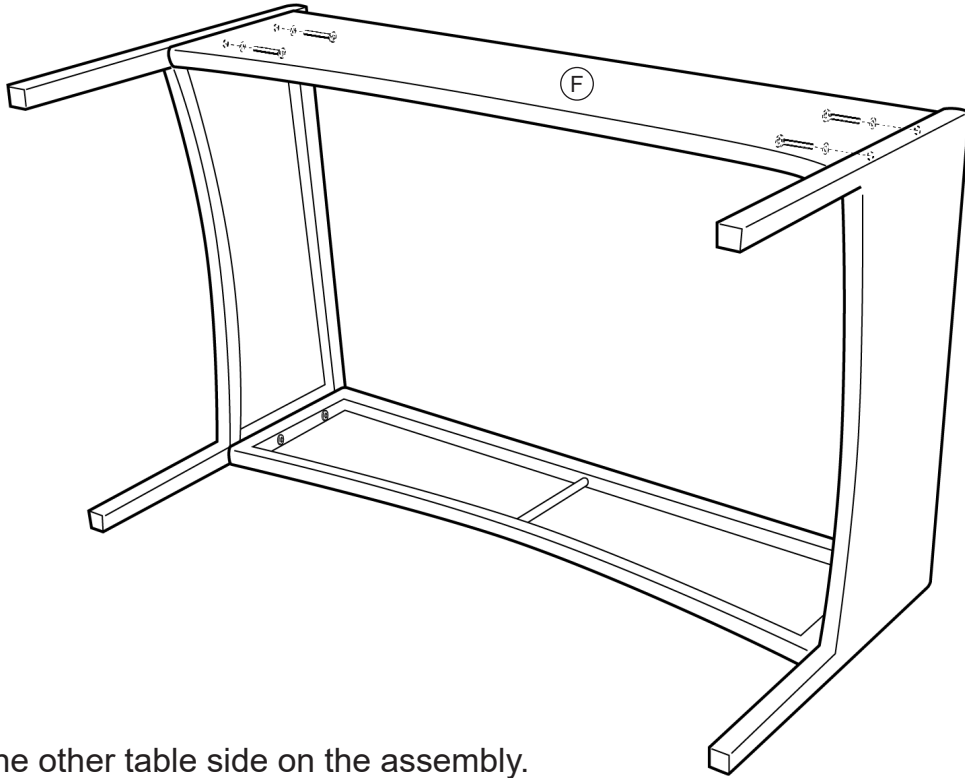

Attach the other table side on the assembly.

 12

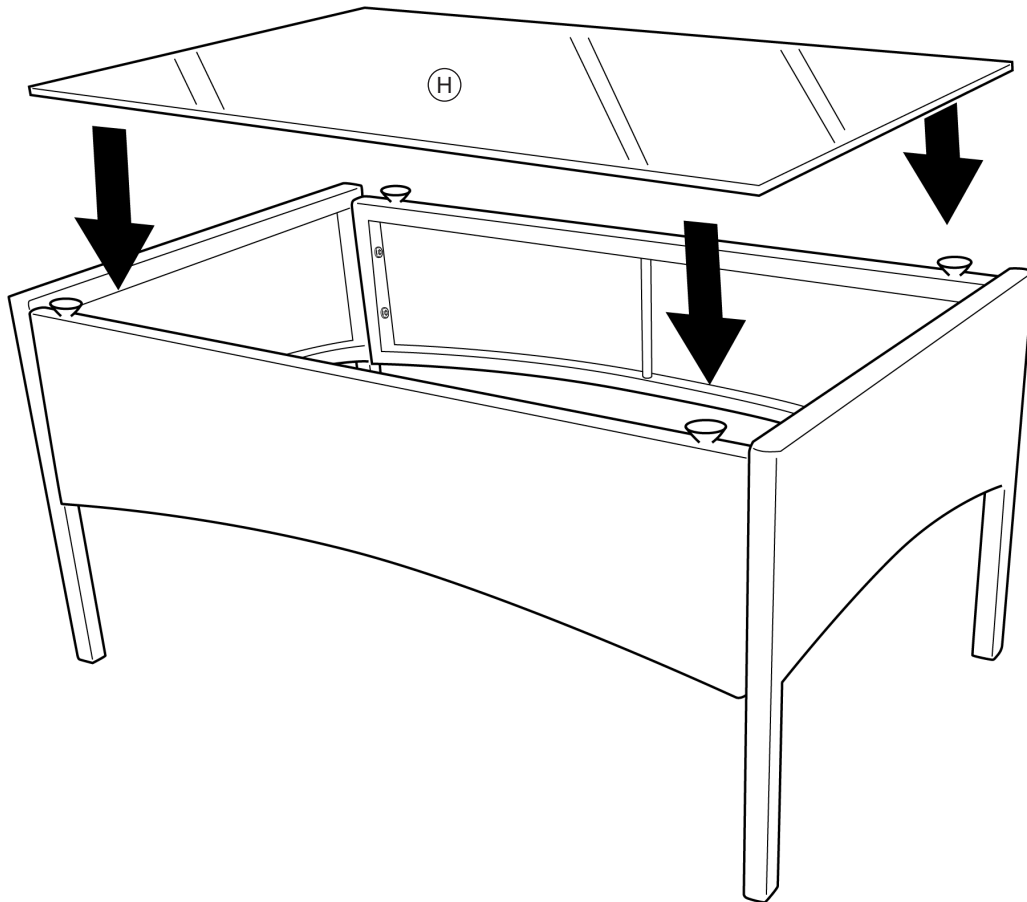

Make sure the unit is leveled on the ground, then tighten all bolt and align the table glass to the suction cups on the table leg, and put on the glass.

FINISH!

WARRANTY POLICY

furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.