 
 


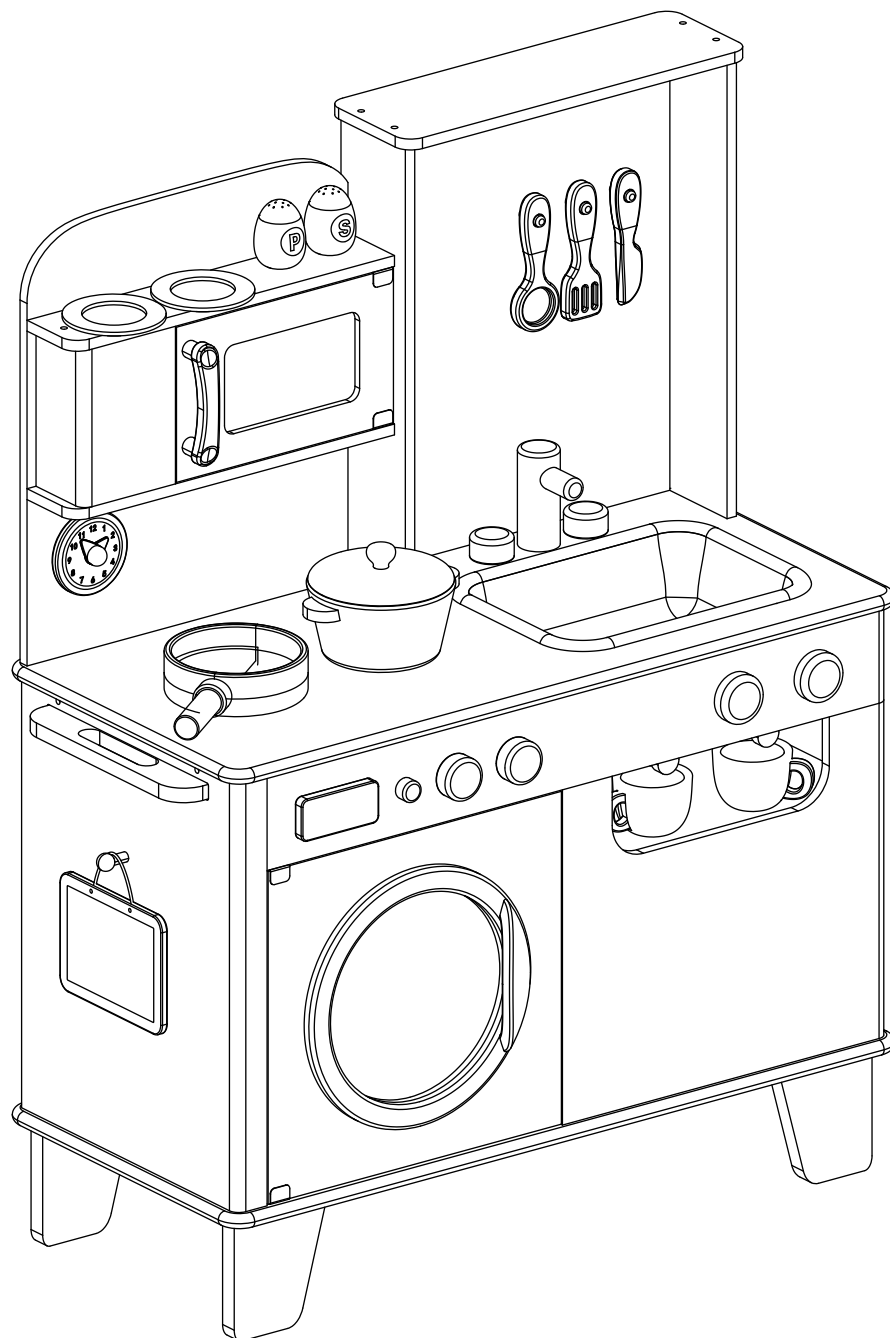

FOREST GARDEN KITCHEN

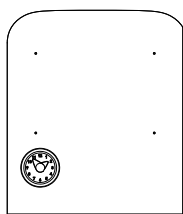

 
1X 1



1X 2



1X 3




1X 4




1X 5



 
1X 6

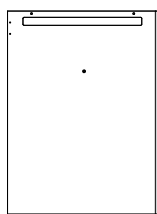


1X 7

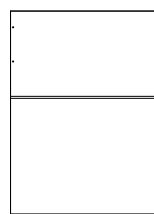 


1X 8

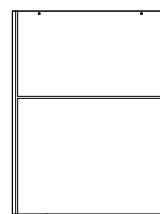 

1X 9

 


1X 10

 


1X 11



 
1X 12

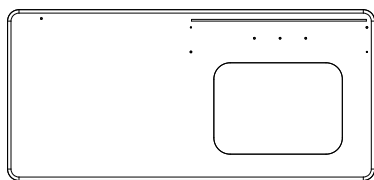


1X 13

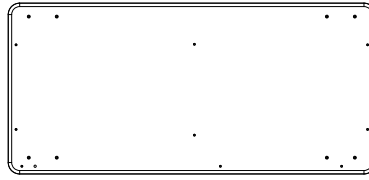 


1X 14

 


1X 15

 

1X 16

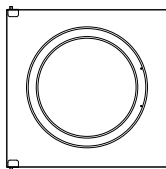 

1X 17

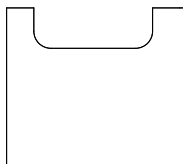 

1X 18



1X 19



 
1X 20



1X 21



1X 22



1X 23



2X 24



 
2X 25-1



2X 25-2



1X 26

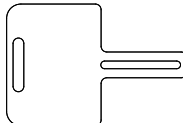

1X 27



1X 28



1X 29



3X 30



1X 31



5X 32



1X 33



1X 34



2X 35



2X 36



2X 37



1X 38



1X 39



1X 40



1X 41



1X 42



1X 43



1X 44



1X 45



 
1X 46



2X 47



1X 48



1X 49



2X 50



1.575 (40)

1.378 (35)

1.181 (30)

0.984 (25)

0.787 (20)

0.591 (15)

0.394 (10)

0.197 (5)

0

in (mm)

1X S1

34X S2

1X S3

2X S4

4X S5


1X S6

32X S7


8X S8

6X S9


1

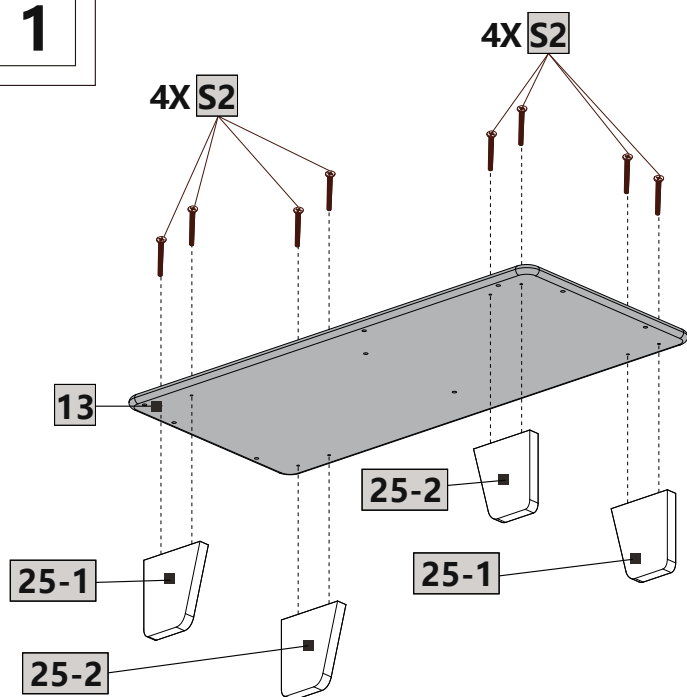


2

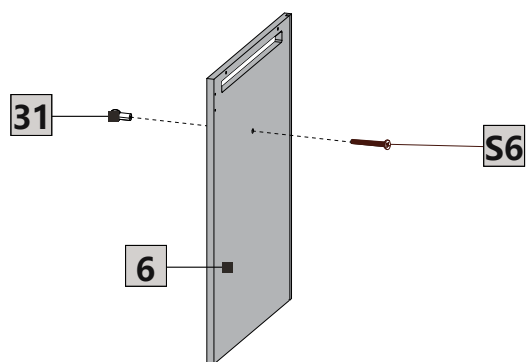


3

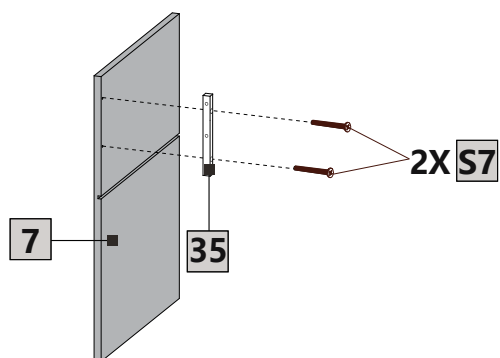 


4

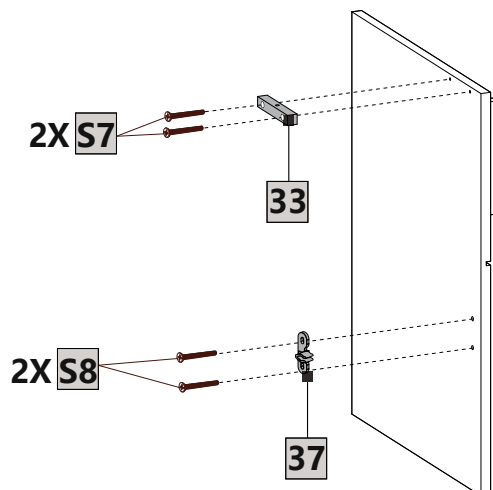 


5

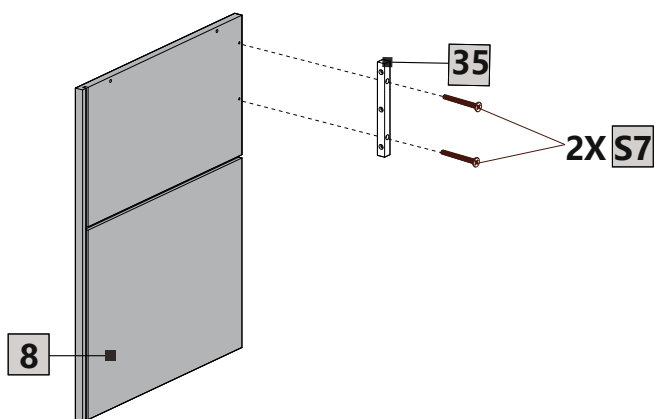 


6

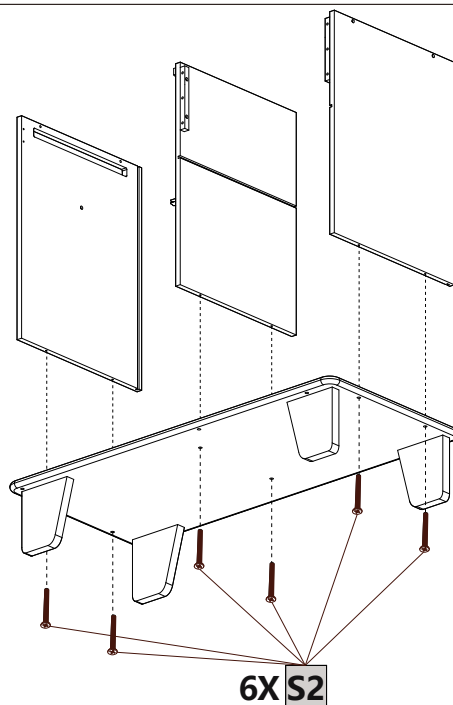 


7

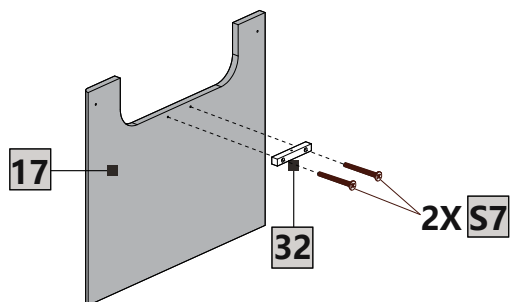 


8

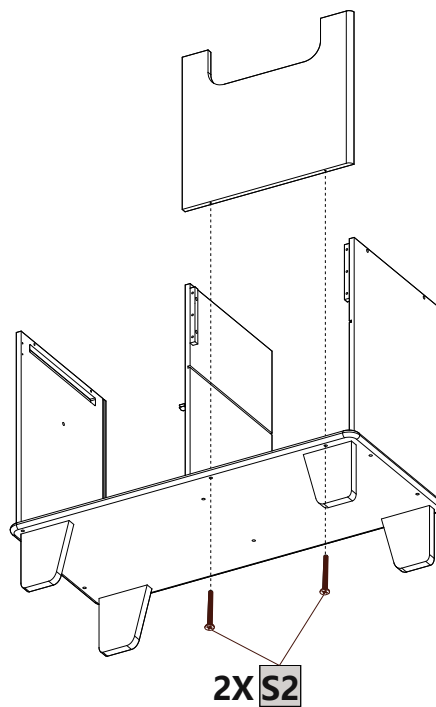 


9

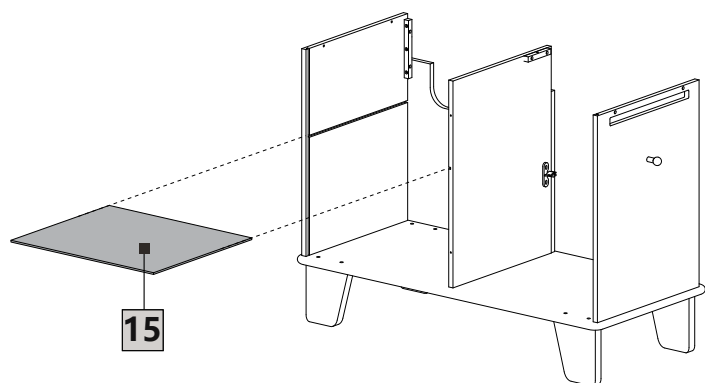 


10

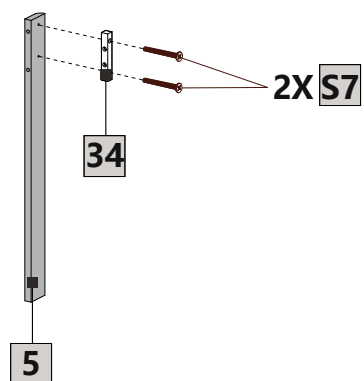 


11

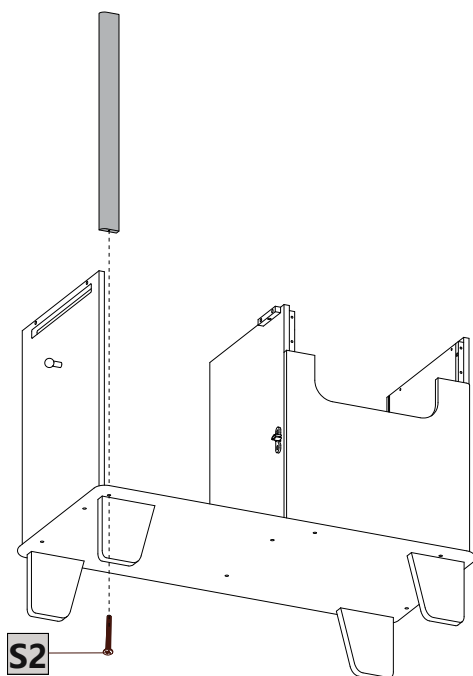 


12

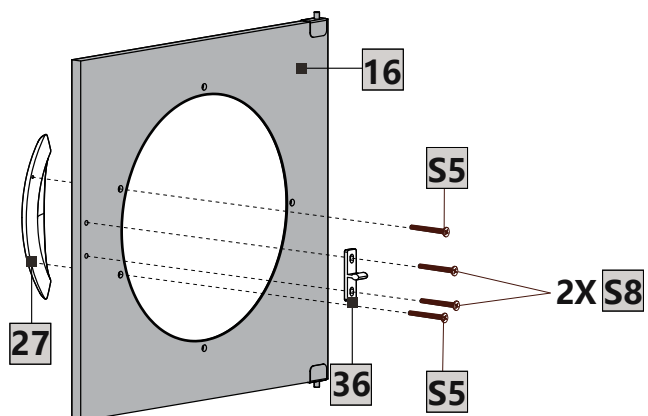 


13

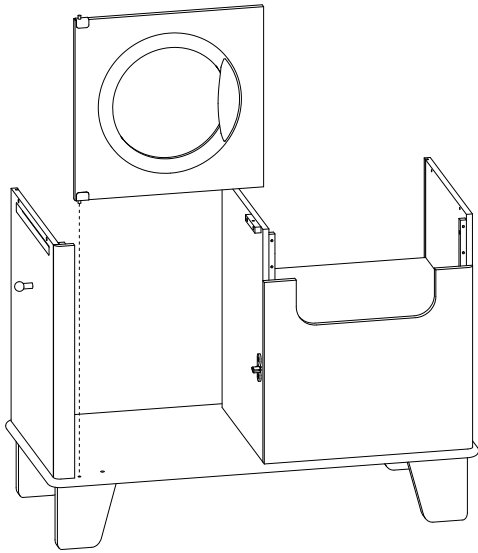 


14

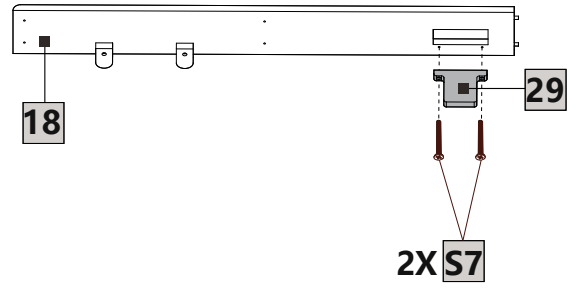 


15

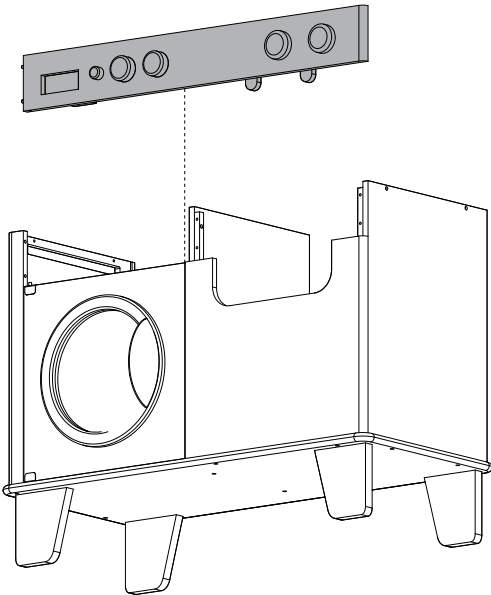 


16

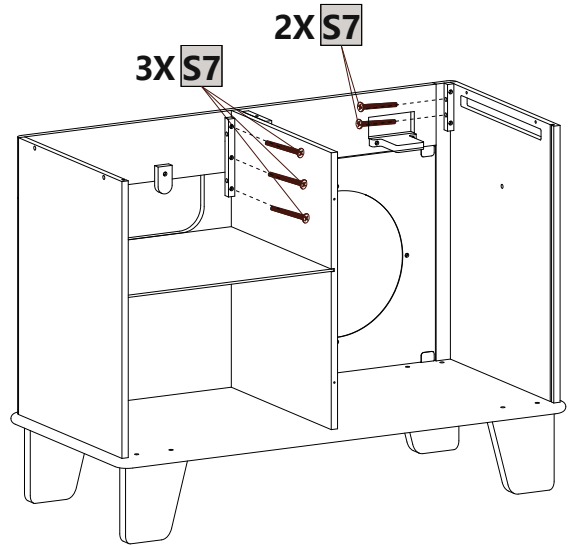 

17

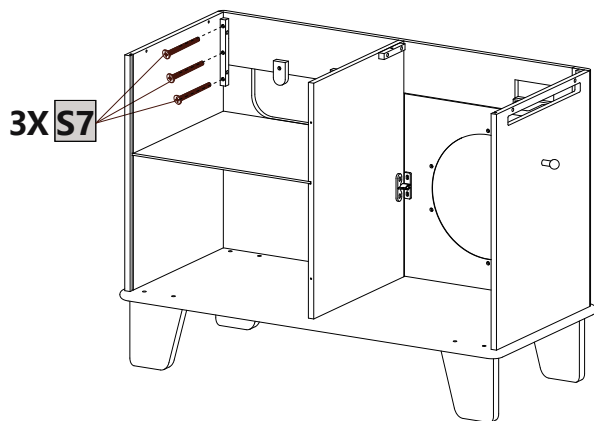 


18

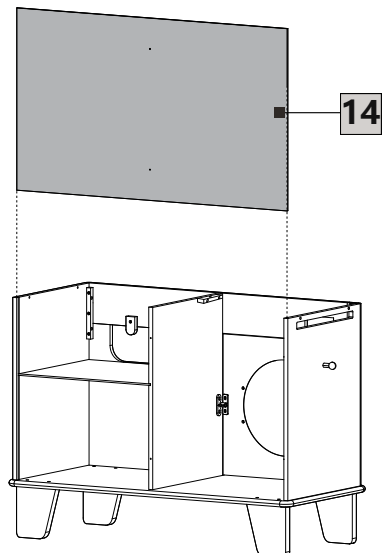 


19

 
2X S4

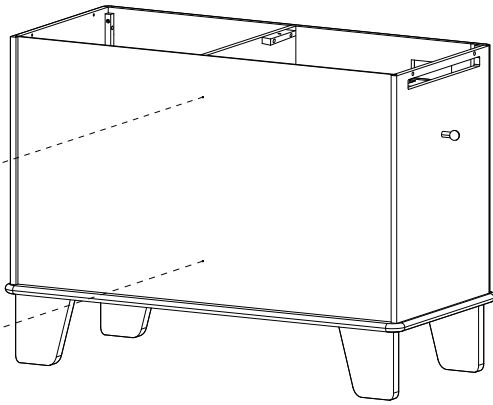


20

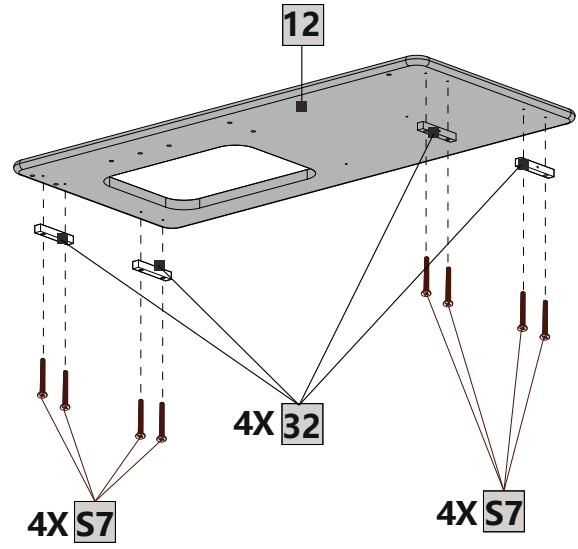 


21

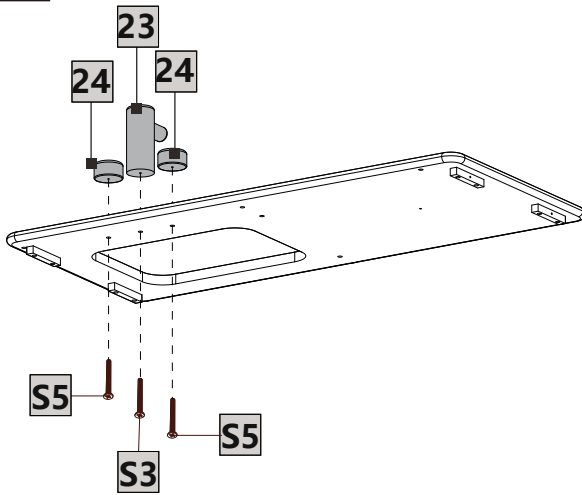 


22

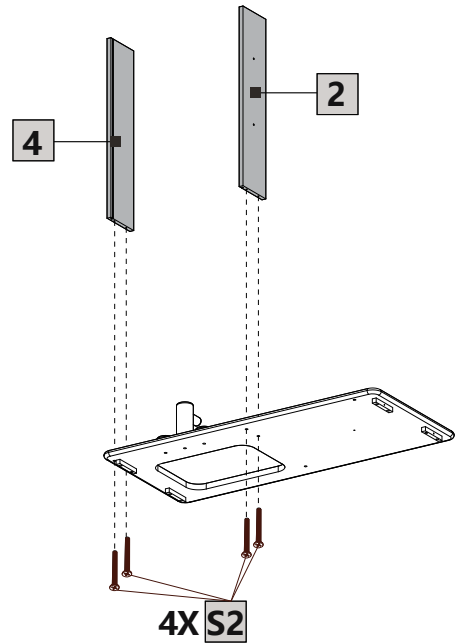 


23

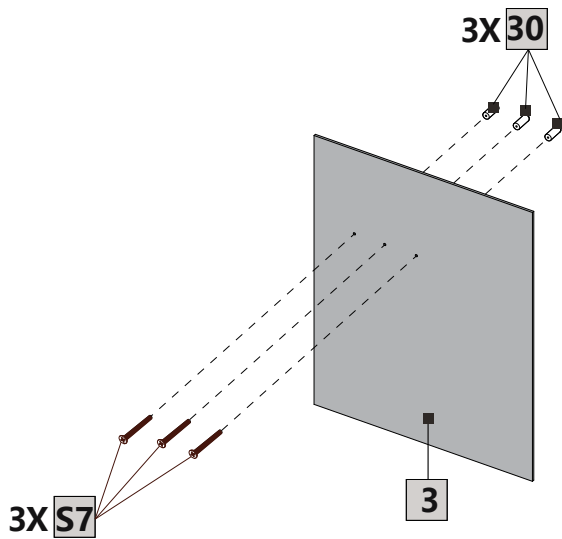 


24

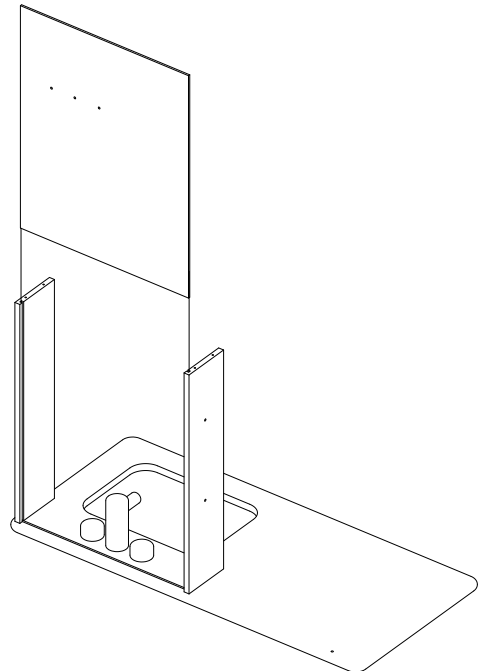 


25

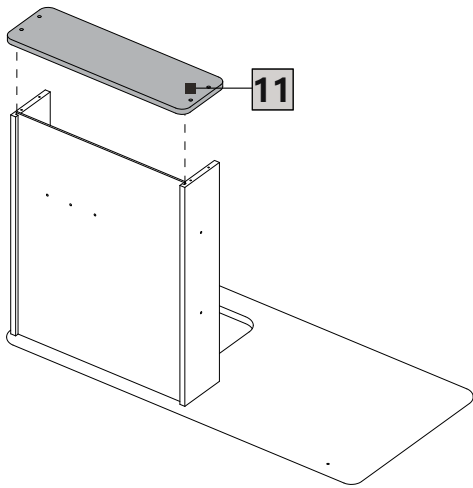 


26

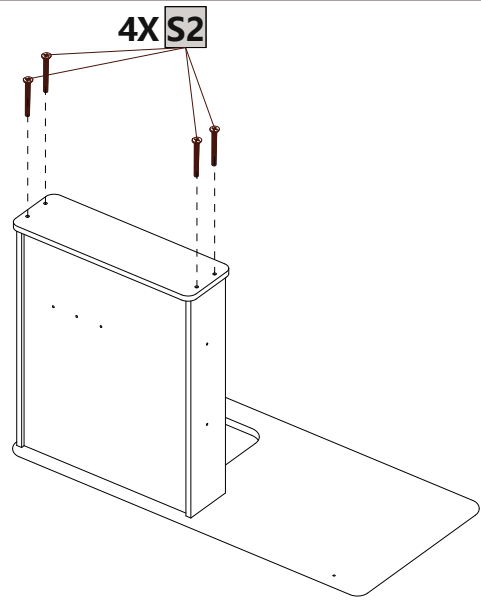 


27

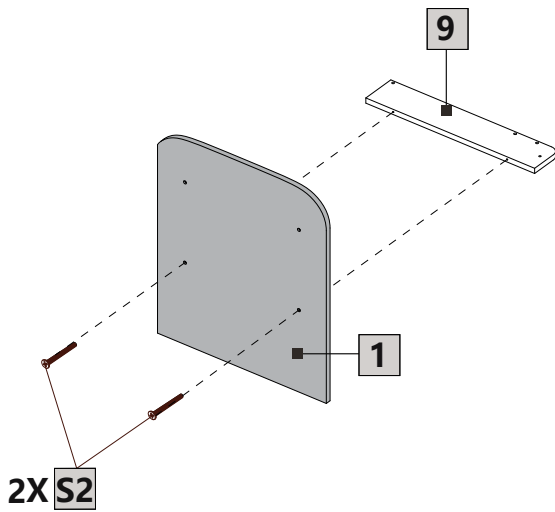 

28

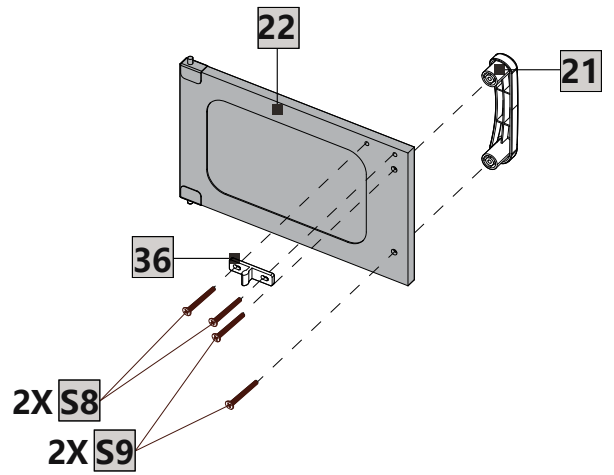 

29

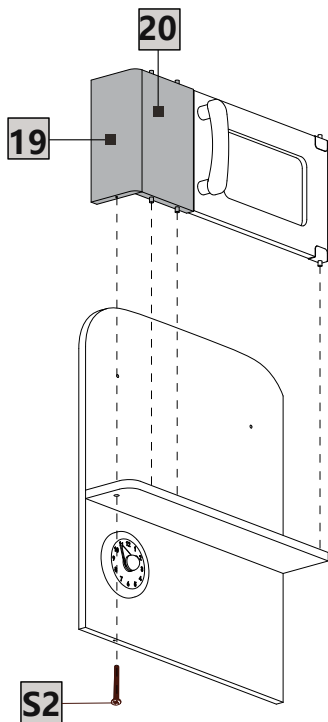 

30


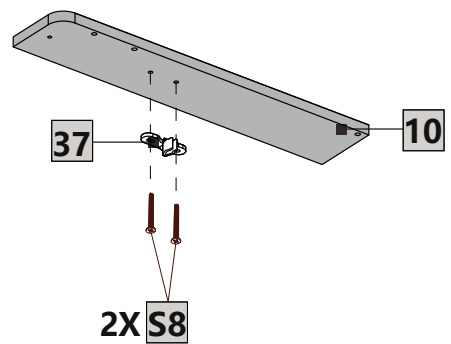


Diagram 1 illustrates the first step of assembly: attaching the back panel to the cabinet. The back panel, which features a handle and a clock face, is shown being aligned with the cabinet's back. A red line points to a screw labeled 'S2' being inserted into the top of the back panel. Another red line points to two screws labeled '2X S2' being inserted into the side of the back panel. The cabinet is shown with its base and a sink area.


Pass the upper cutting board (part 26) through the lower part 6, then secure the upper part firmly to the lower part.

37


Then fasten the upper part securely to the lower part.

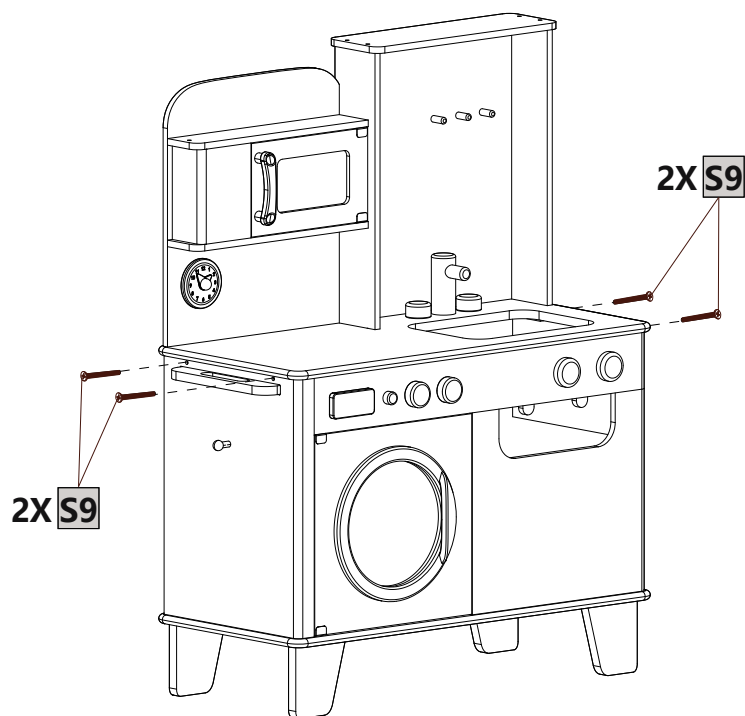

38

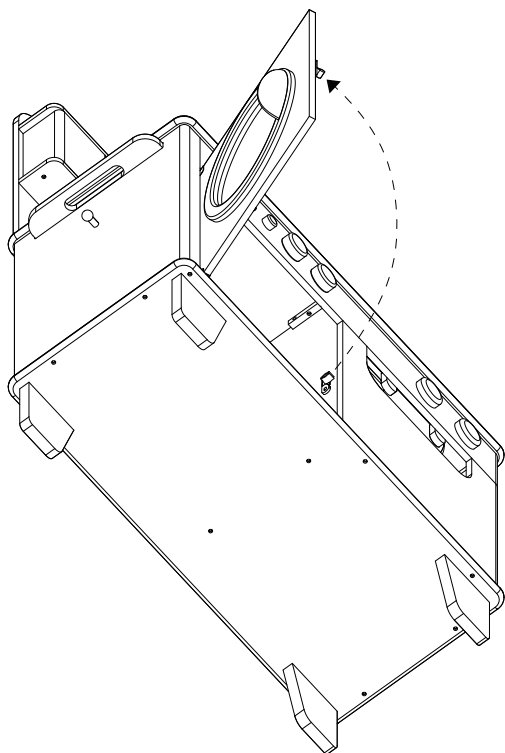


1. Open the assembled part 16 door.

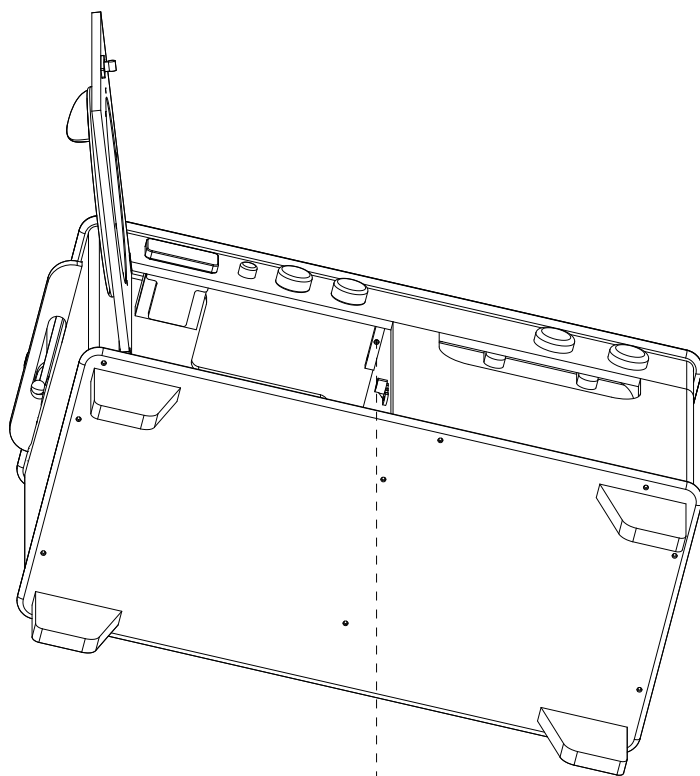


2. Drive screw S7 upward into part 33.

39

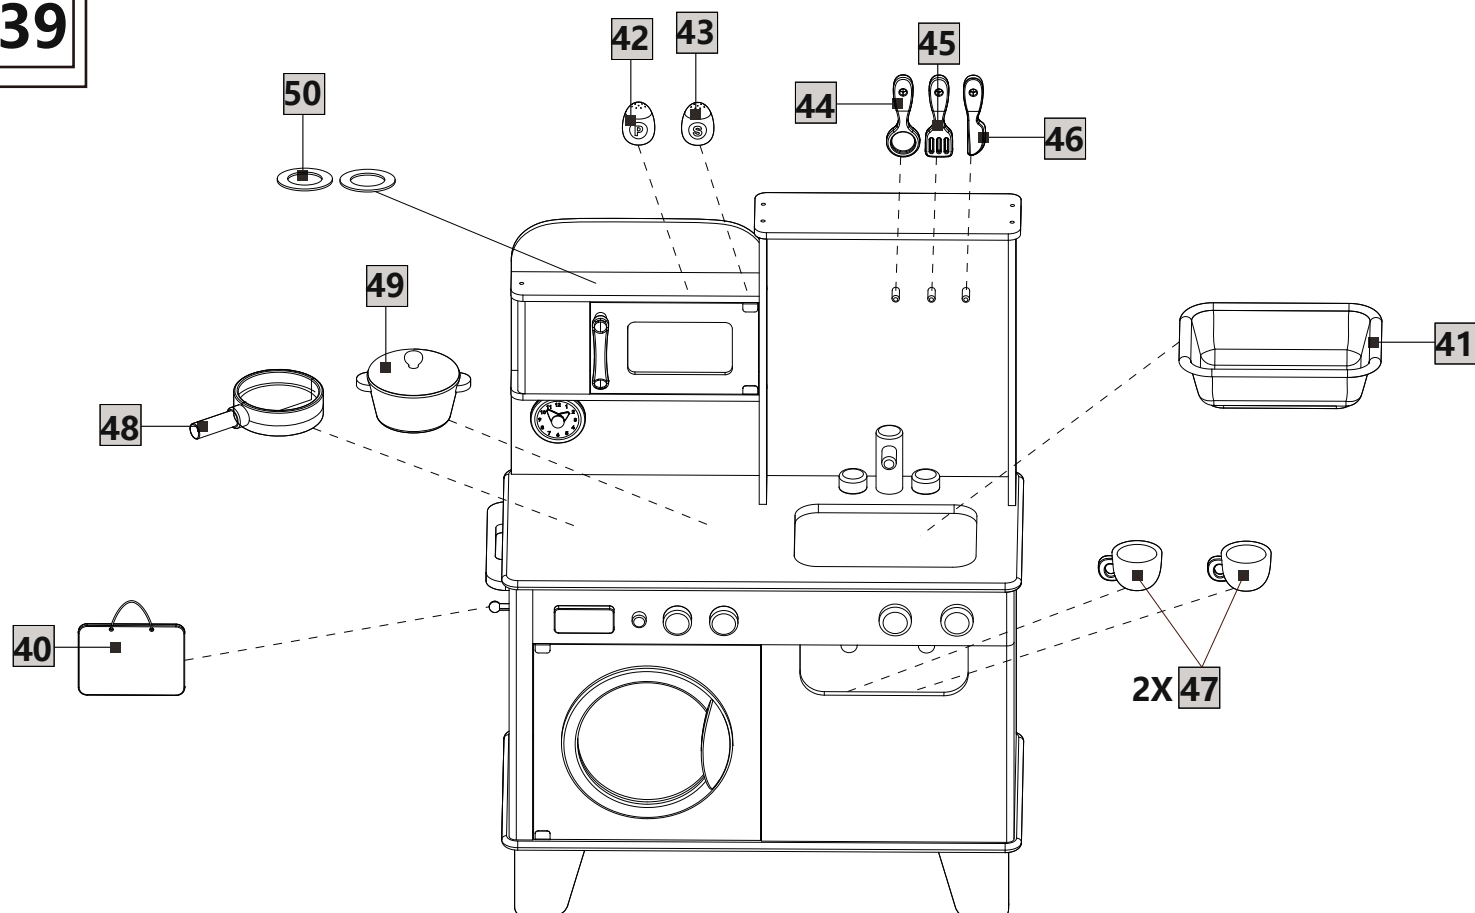

40

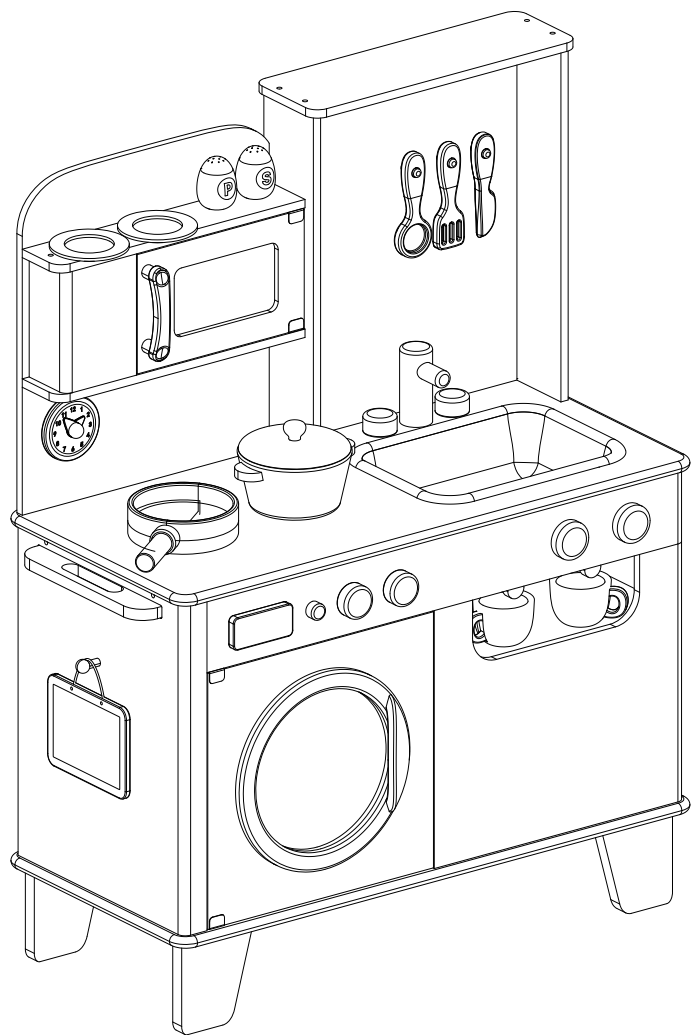

Warning!

Not suitable for children under 3 years old. Contains small parts. This product must be assembled by an adult and used under adult supervision. Keep away from fire! Please store the packaging materials promptly. The packaging contains important information—please keep it for future reference.

