 


72 INCH TV MEDIA STAND

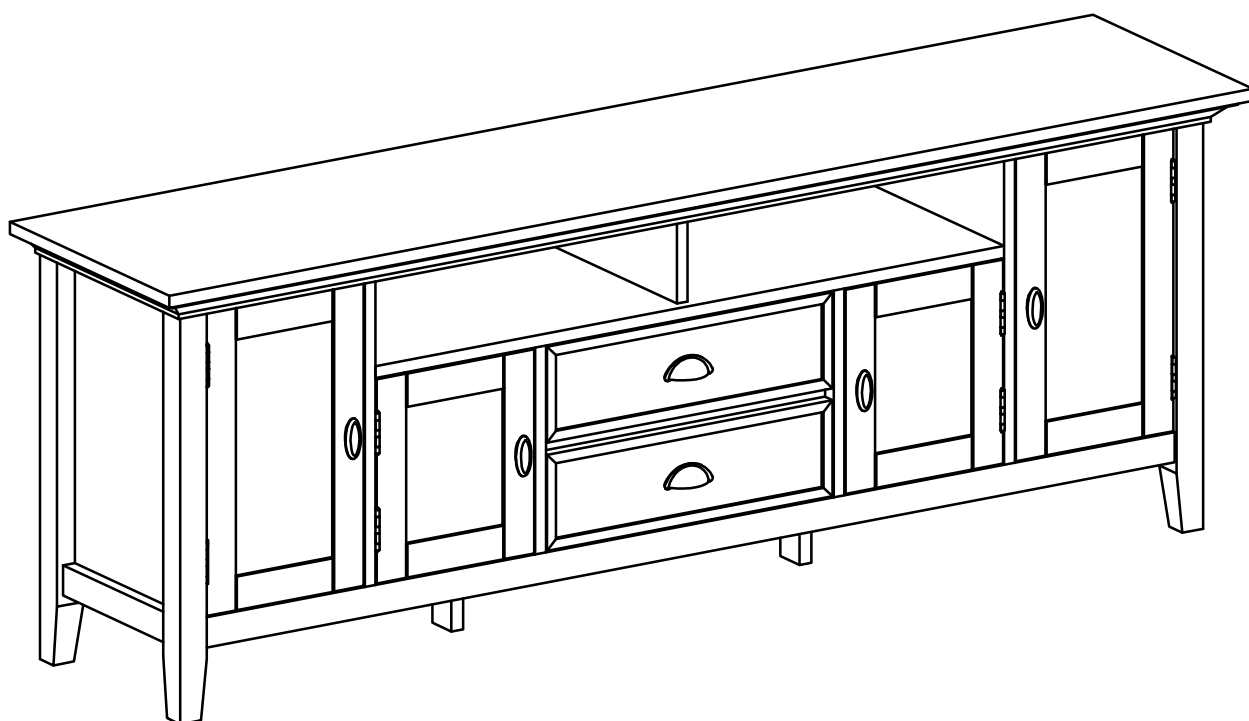



**FOR REPLACEMENT PARTS OR HELP WITH
ASSEMBLY PLEASE CONTACT US.**

**PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR INSTRUCTION BOOKLET**

**TO RETURN THE PRODUCT:
PLEASE CONTACT THE RETAILER
WHERE THE ITEM WAS PURCHASED FROM**

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

CAUTION: Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help. If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

 
CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth. Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture. To avoid dulling of the finish, do not place furniture in direct sunlight. Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

PRE-ASSEMBLY INFORMATION


PART DESCRIPTION

A

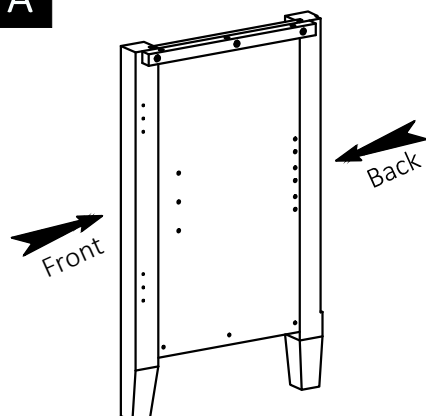


SIDE
QTY 1 PAIR

 B

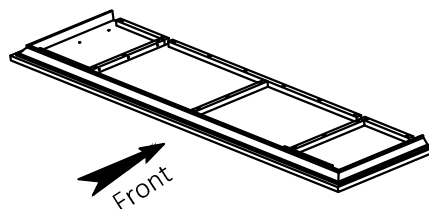


TOP
QTY 1

 C

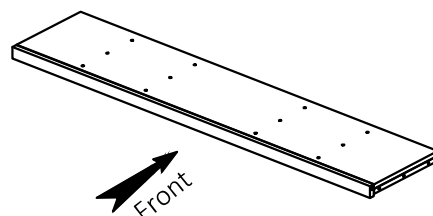


BOTTOM SHELF
QTY 1

 D

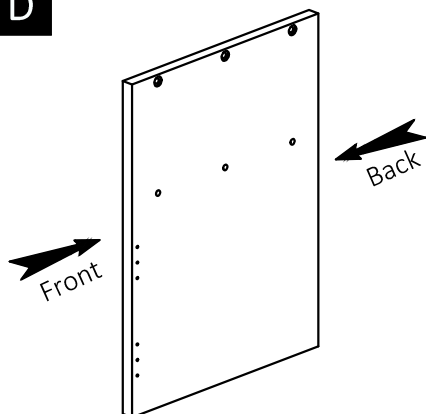


LARGE DIVIDER
QTY 1 PAIR

 E

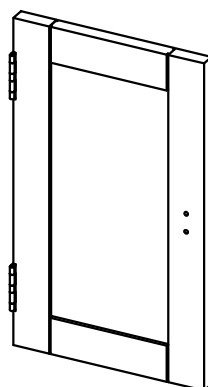


LARGE DOOR
QTY 1 PAIR

 F

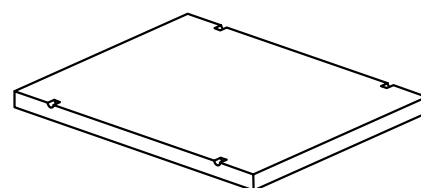


CABINET SHELF
QTY 2

 G

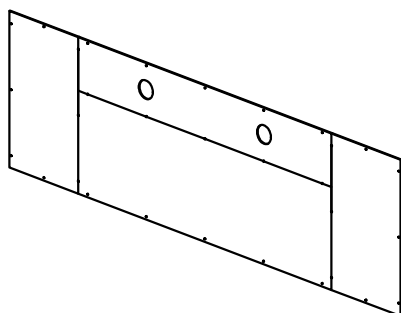


BACK PANEL
QTY 1 SET

 H

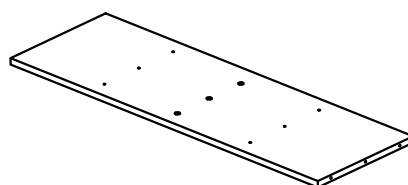

TOP SHELF
QTY 1

 I

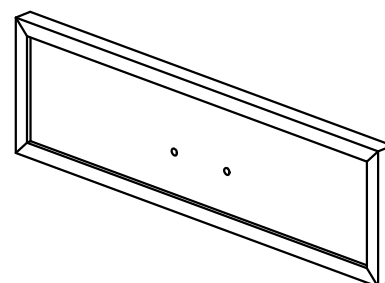


DRAWER FRONT
QTY 1

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service

PRE-ASSEMBLY INFORMATION


PART DESCRIPTION

 J

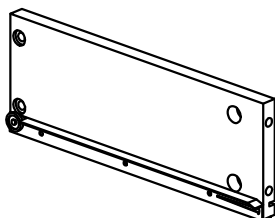


DRAWER SIDE
QTY 1 PAIR

 K

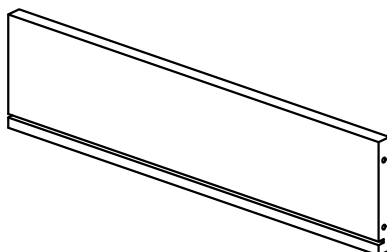


DRAWER BACK
QTY 1

 L

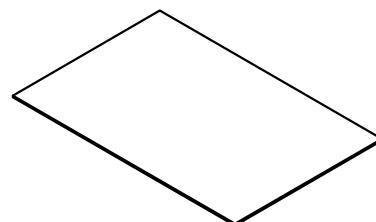


DRAWER BOTTOM
QTY 1

 M

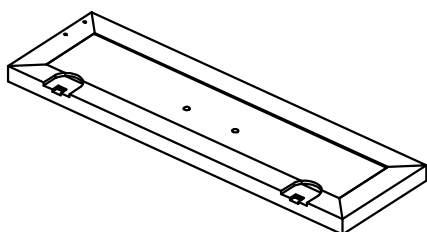


FLIP DOWN DOOR
QTY 1

 N

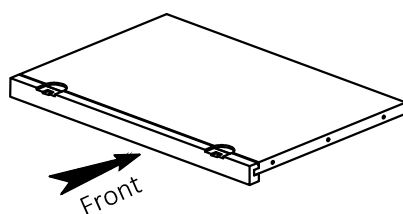


MIDDLE SHELF
QTY 1

 O

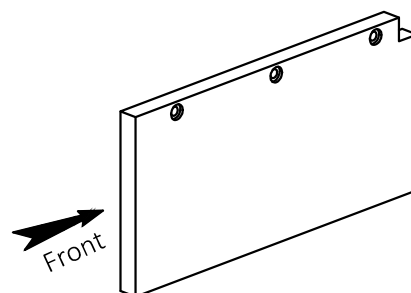


SMALL DIVIDER
QTY 1

 P

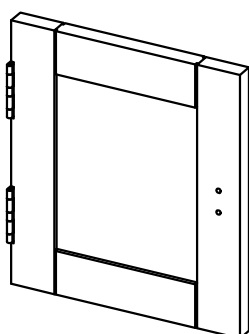


SMALL DOOR
QTY 1 PAIR

 Q

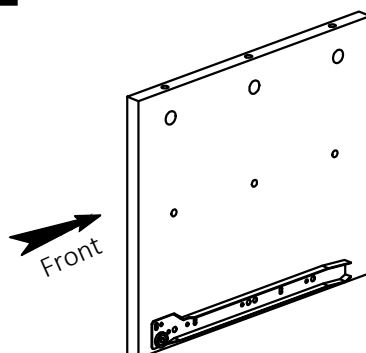

MIDDLE DIVIDER
QTY 1 PAIR

 R

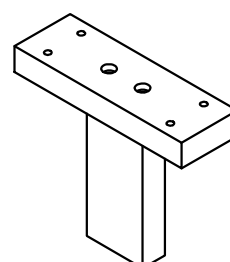


SUPPORT LEG
QTY 2

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service

PRE-ASSEMBLY INFORMATION


HARDWARE DESCRIPTION

 1




ALLEN KEY SCREW
M6 X 30mm
QTY 52

 2



ALLEN KEY
QTY 1

 3



SHELF SUPPORT
QTY 12

4



 
PHILLIPS SCREW
M3 X 12mm
QTY 24

5




PHILLIPS SCREW
M3 X 15mm
QTY 20

6




PHILLIPS SCREW
ROUND HEAD
M4 X 15mm
QTY 31

 7

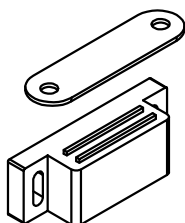

MAGNET AND PLATE
QTY 5 SETS

 8

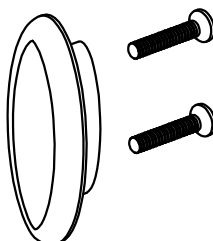

HANDLE
M4 X 22mm
QTY 4 SETS

9



 
CAM LOCK PIN
CAM LOCK
QTY 10 SETS

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service

PRE-ASSEMBLY INFORMATION


HARDWARE DESCRIPTION

10

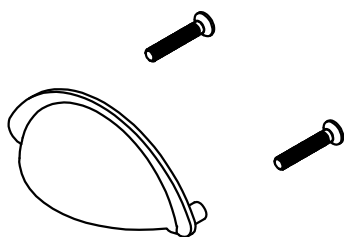

HANDLE
M4 X 10mm
QTY 2 SETS

 11




PHILLIPS SCREW
M4 X 30mm
QTY 8

12




PHILLIPS SCREW
M3.5 X 12mm
QTY 12

 13

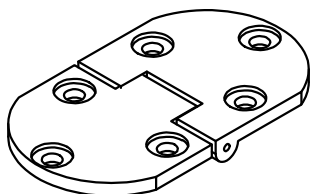


HINGE
QTY 2 SETS

 14

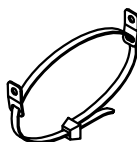

- a.  M4 X 25mm - QTY 1
- b.  M4 X 15mm - QTY 1
- c.  M4 X 25mm - QTY 1

 
FURNITURE ANTI-TIPPING
RESTRAINT
QTY 1 SET

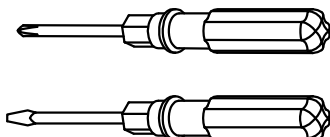

Required -
Flathead screwdriver
Phillips screwdriver
Not Included


NEED HELP? For help with assembly or if you are missing a part,
Please call customer service

 COMPONENTS-KEY DIAGRAM

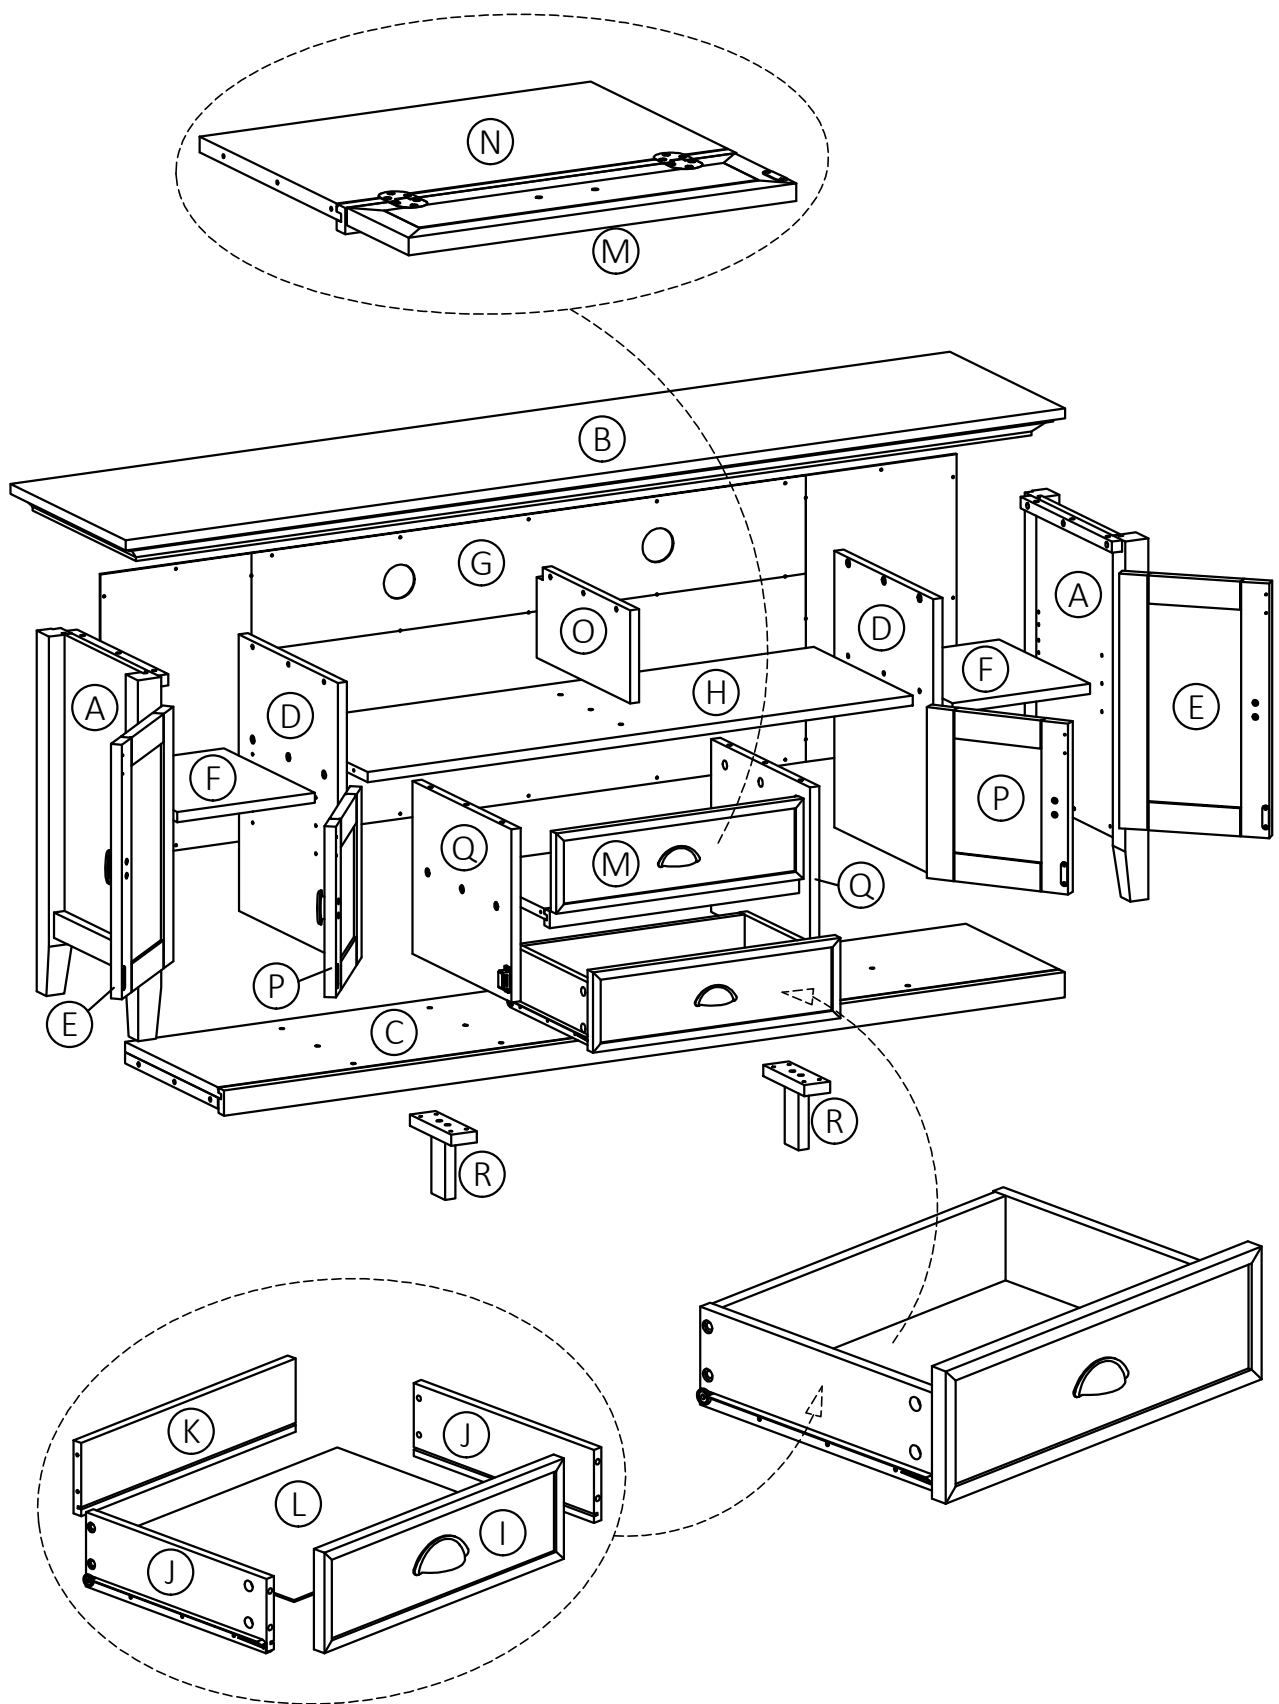


ASSEMBLY

 STEP-1

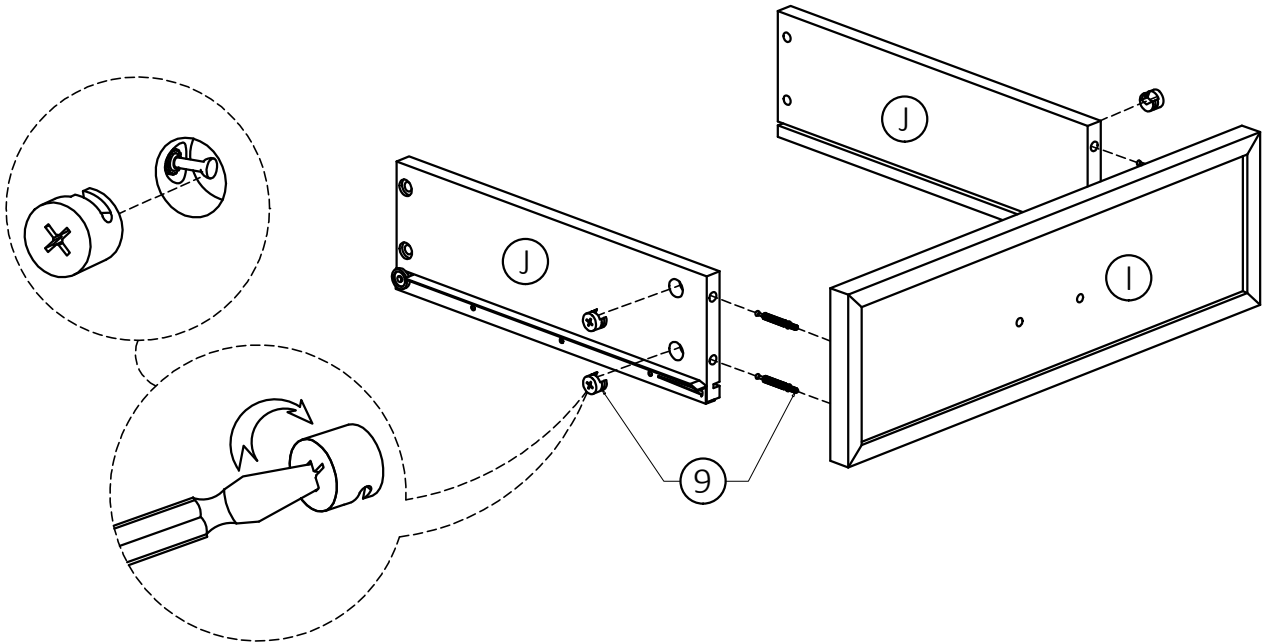

1. Attach four Cam Lock Pins (9) to back of Drawer Front (1).
2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (J).
3. Insert two Cam Locks (9) into pre-drilled holes on each Drawer Side (J).
4. Use flathead screwdriver to secure Cam Locks.

 
STEP-2

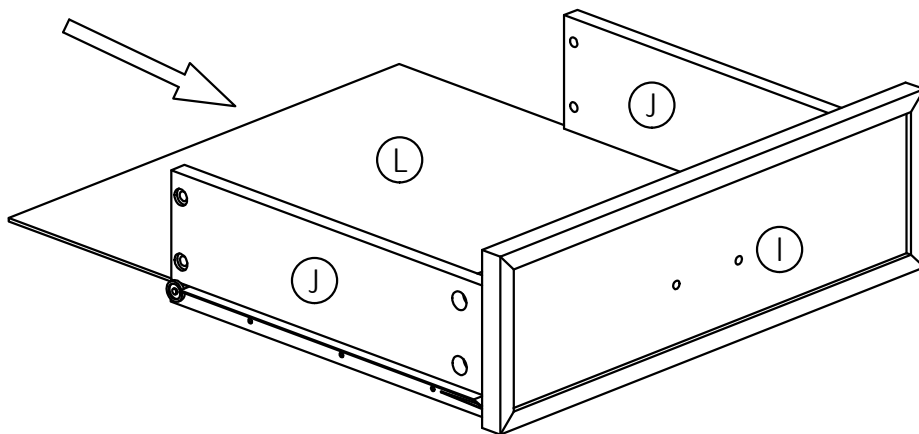

1. Slide Drawer Bottom (L) firmly into slots on Drawer Sides (J) and Drawer Front (1).



ASSEMBLY

 STEP-3

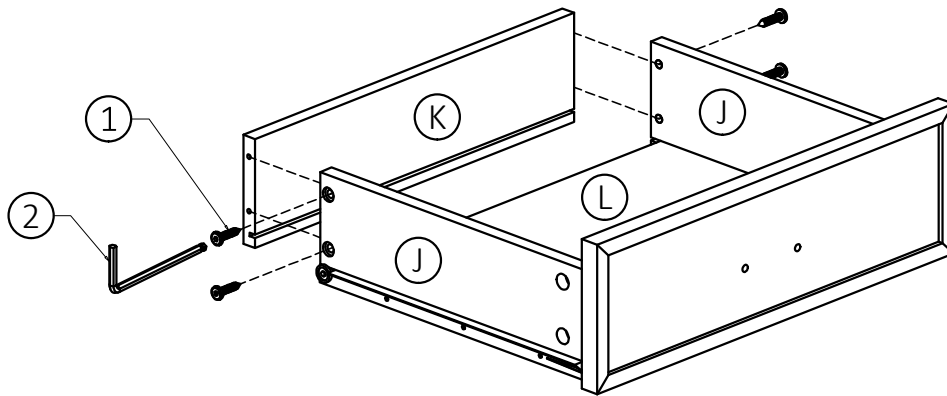


1. Align Drawer Back (K) with Drawer Bottom (L) and press firmly into slot.
2. Attach Drawer Back (K) using two Allen Key Screws (1) through pre-drilled holes on each Side (J).
3. Use Allen Key (2) to tighten Screws. Do not over-tighten.

  STEP-4

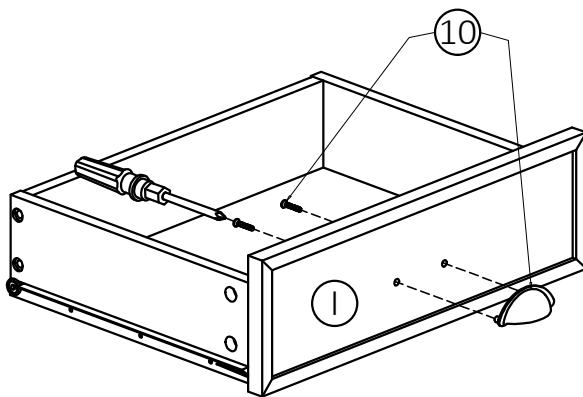


NOTE: The screwdriver is not included in the hardware pack.

 1. Use phillips screwdriver to attach Handle (10) to Drawer Front (I).

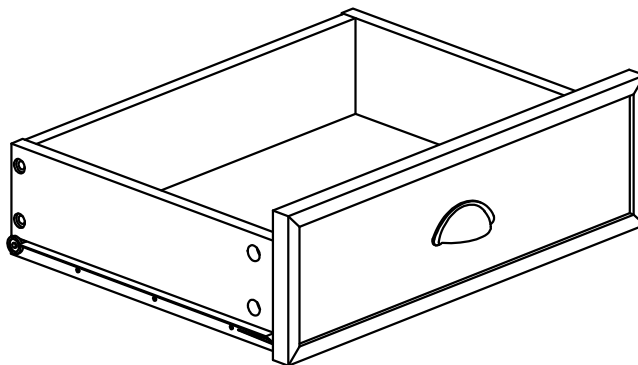


ASSEMBLY

 STEP-5

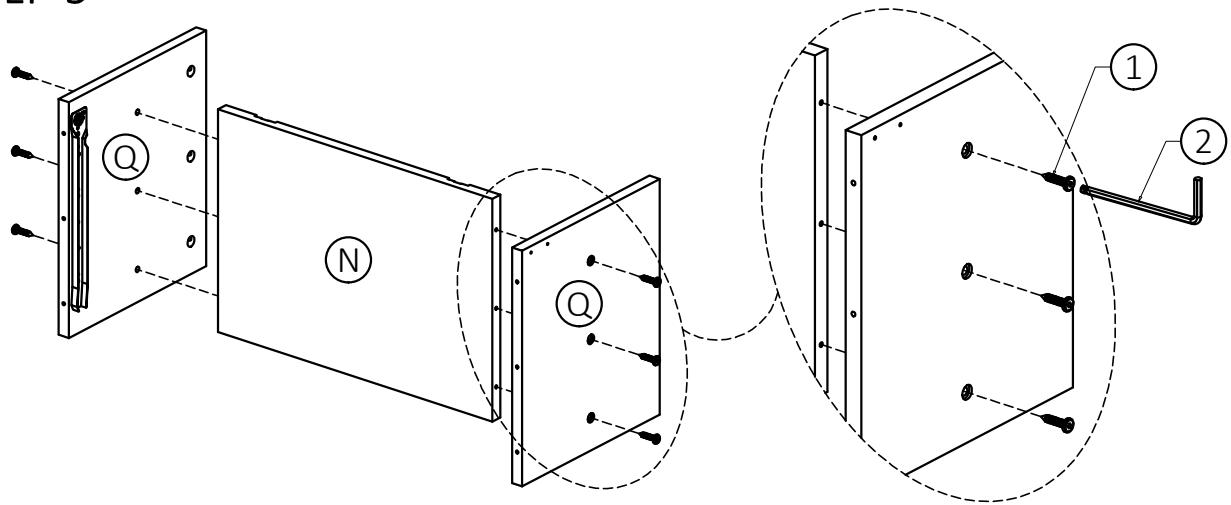

1. Attach Middle Dividers (Q) to Middle Shelf (N) using six Allen Key Screws (1) (three screws on each Middle Divider).
2. Use Allen Key (2) to tighten. Do not over-tighten.

 
STEP-6

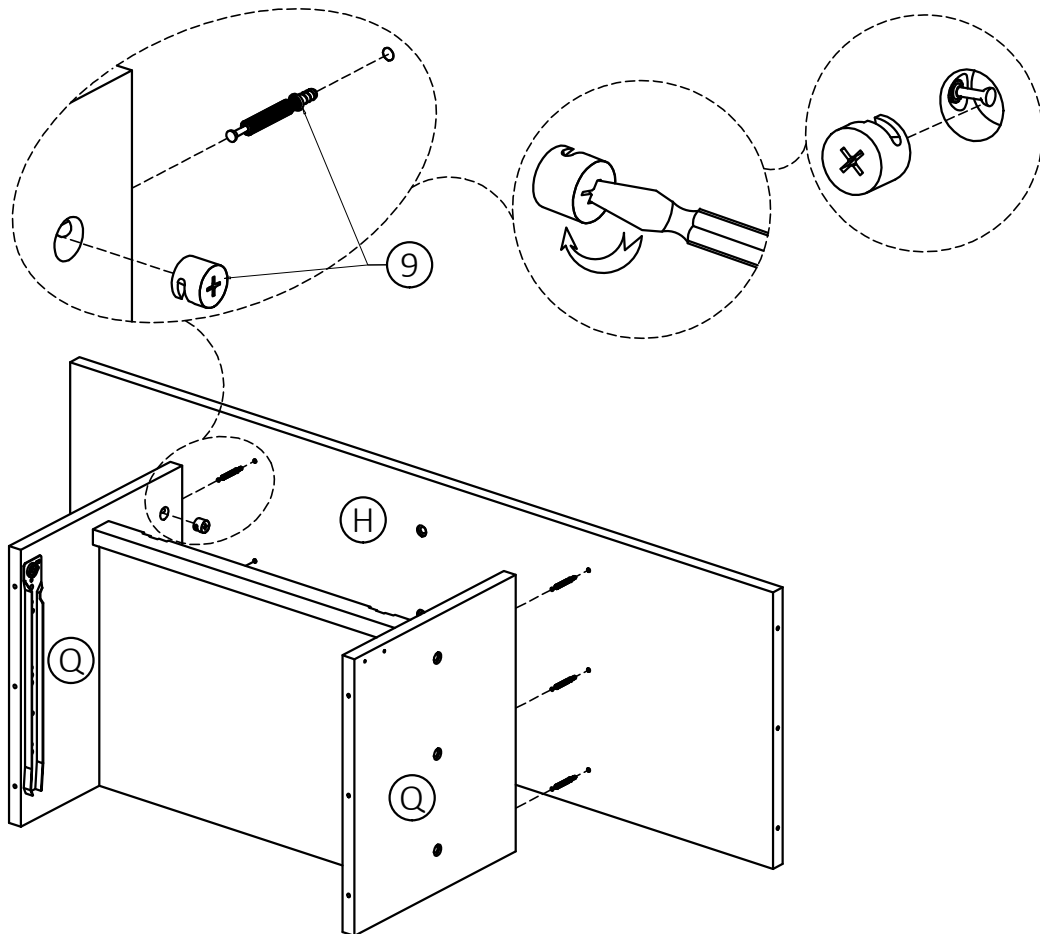

1. Attach six Cam Lock Pins (9) to underneath of Top Shelf (H).
2. Align Cam Lock Pins with pre-drilled holes and attach Middle Dividers (Q).
3. Insert three Cam Locks (9) into pre-drilled holes on each Middle Divider (Q).
4. Use flathead screwdriver to secure Cam Locks.

ASSEMBLY

 
STEP-7

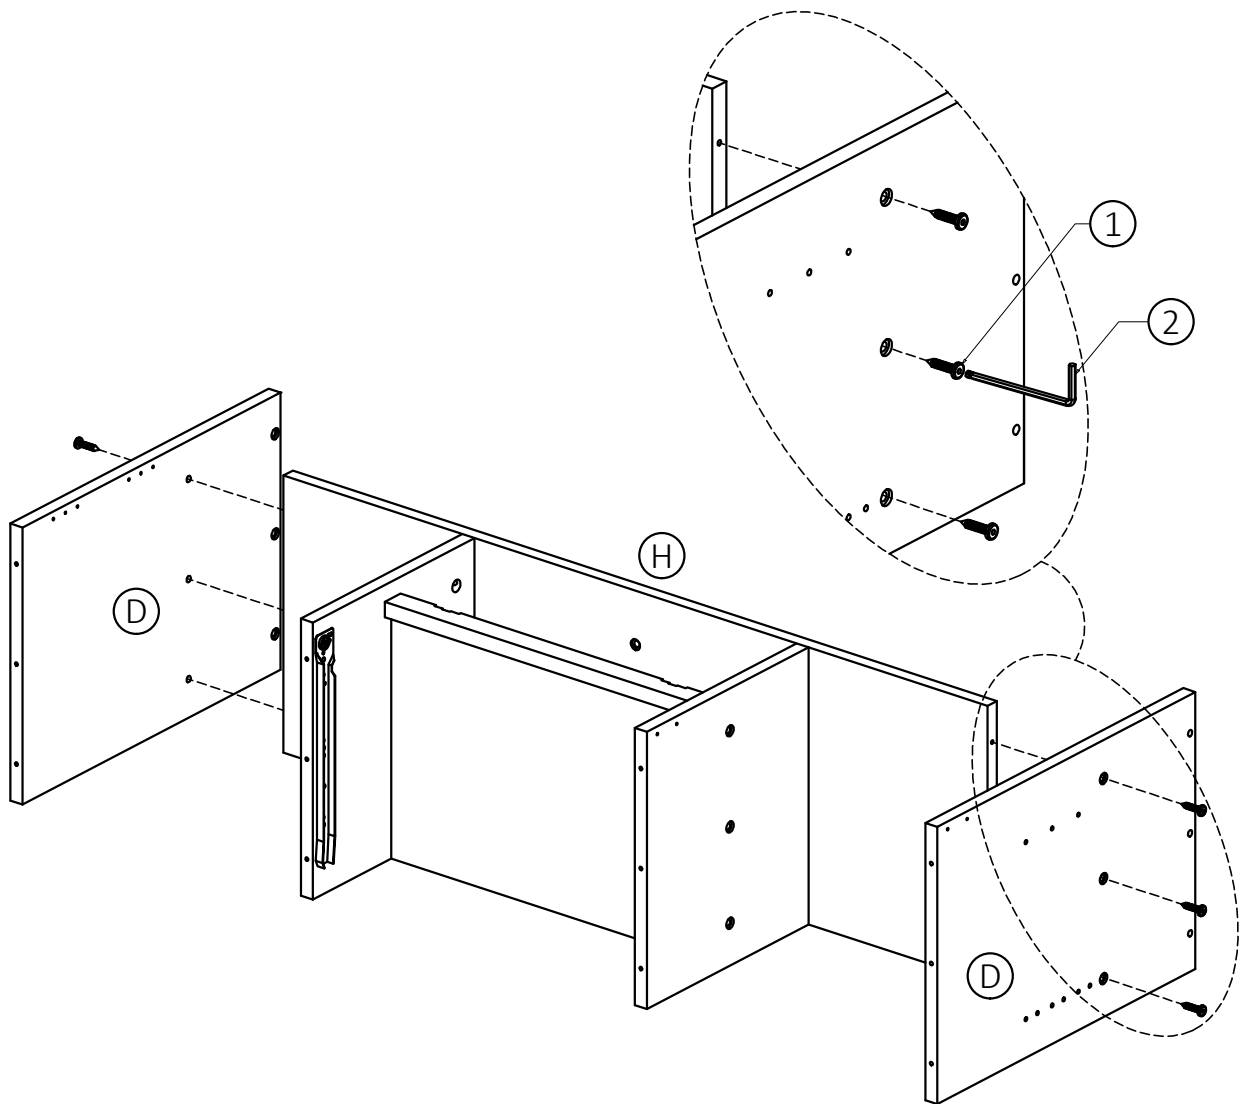

1. Attach Large Dividers (D) to Top Shelf (H) using six Allen Key Screws (1) (three screws on each Divider).
2. Use Allen Key (2) to tighten Screws. Do not over-tighten.

ASSEMBLY

 
STEP-8

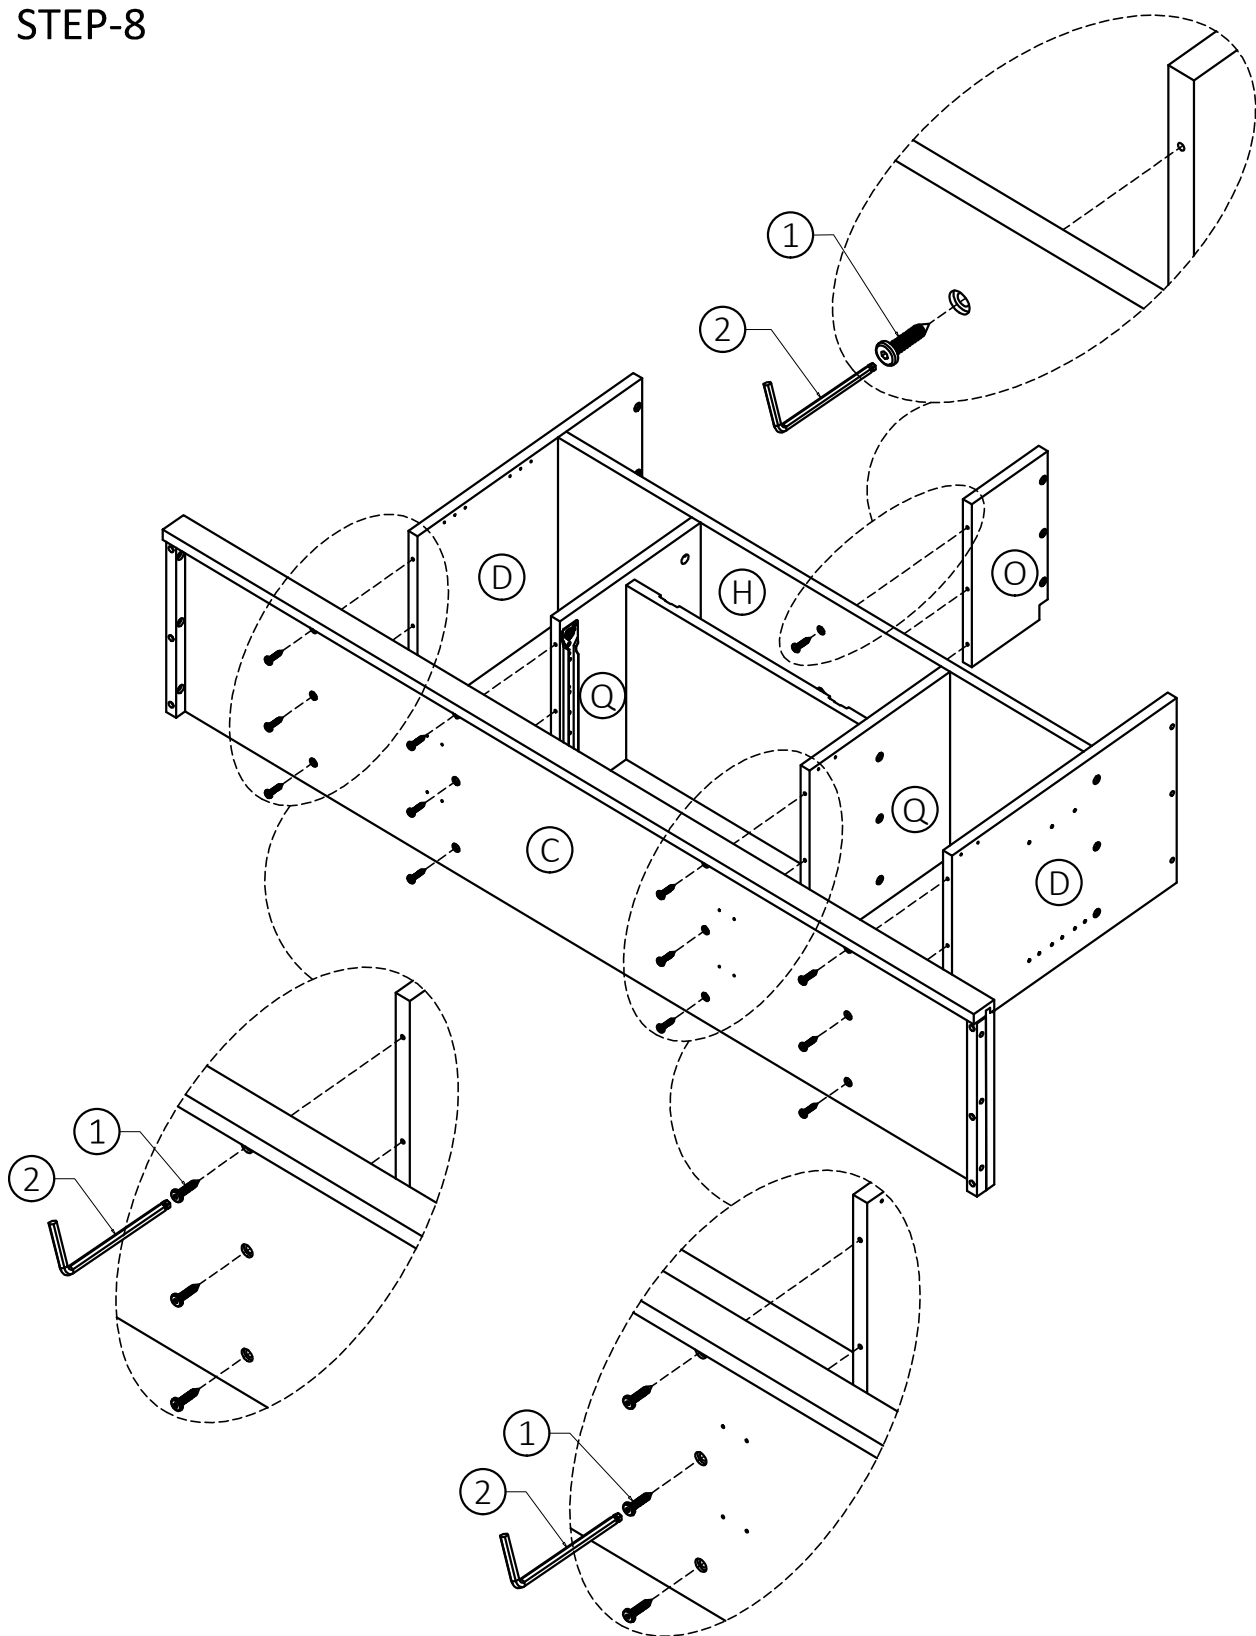


1. Attach Bottom Shelf (C) to Middle Dividers (Q) and Large Dividers (D) using twelve Allen Key Screws (1) (three screws on each Divider).
2. Attach Small Divider (O) to Top Shelf (H) using three Allen Key Screws (1)
3. Use Allen Key (2) to tighten. Do not over-tighten.

ASSEMBLY

 STEP-9



 
NOTE: The screwdriver is not included in the hardware pack.

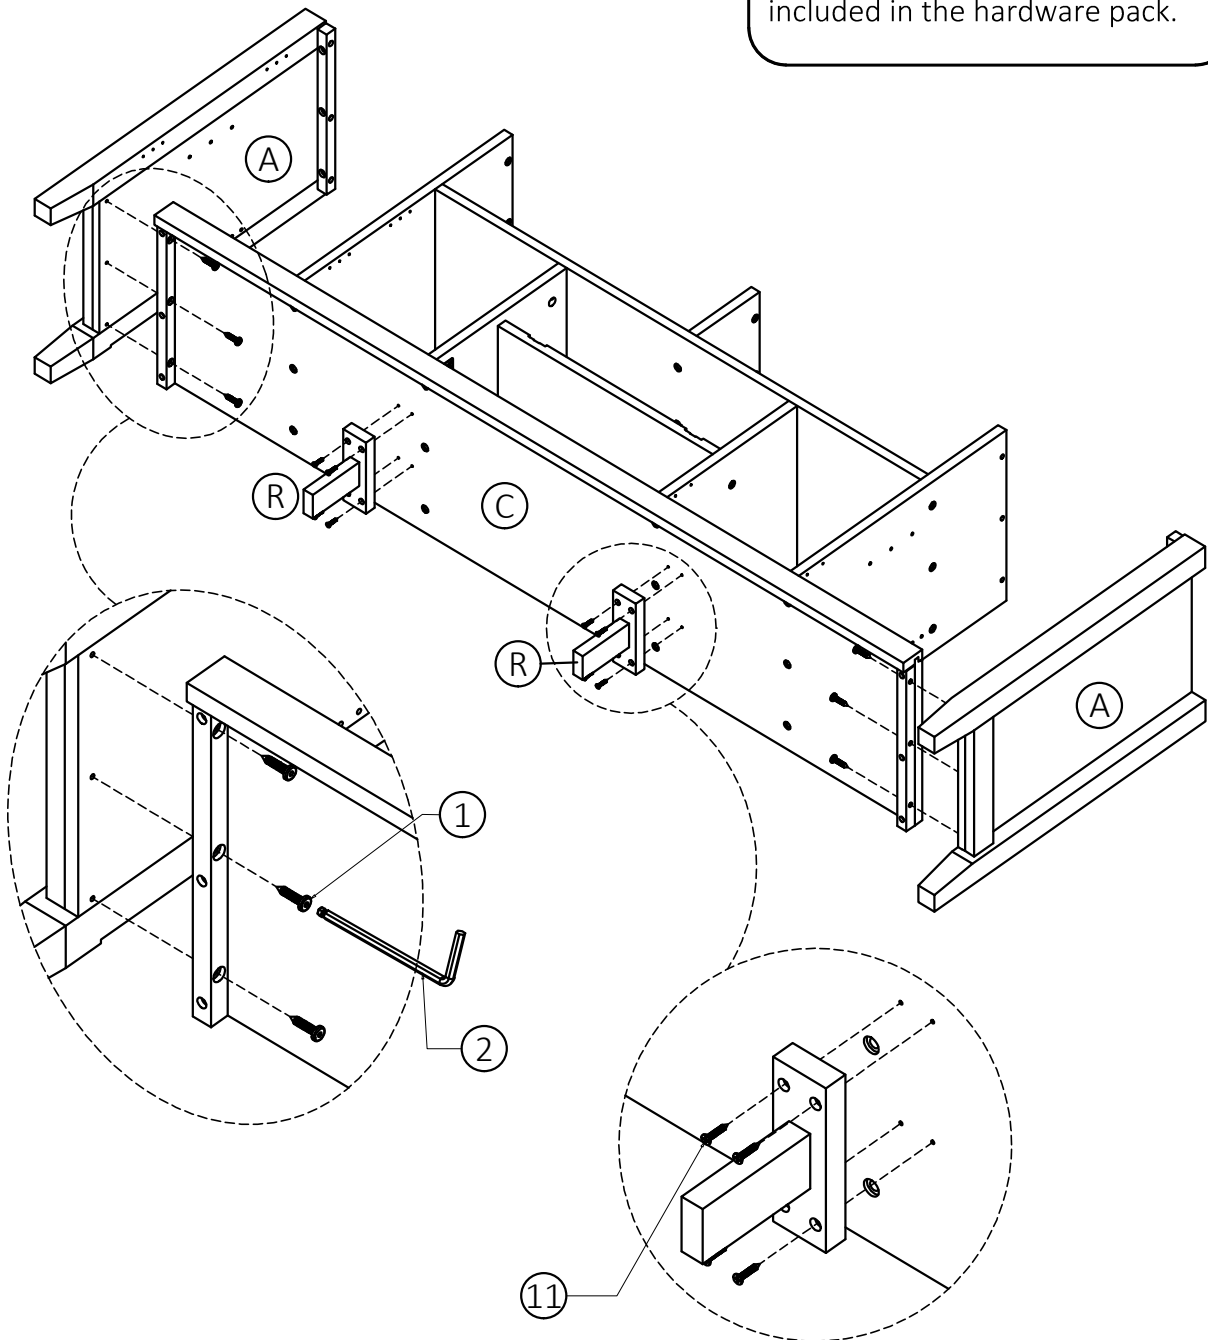

1. Attach Sides (A) to Bottom Shelf (C) using six Allen Key Screws (1) (three Screws on each Side).
2. Use Allen Key (2) to tighten Screws. Do not over-tighten.
3. Attach Support Legs (R) to Bottom Shelf (C) using eight Phillips screws (11) (four Phillips screw on each Support Leg).
4. Use Phillip Screwdriver to snugly tighten screw.


ASSEMBLY

 STEP-10

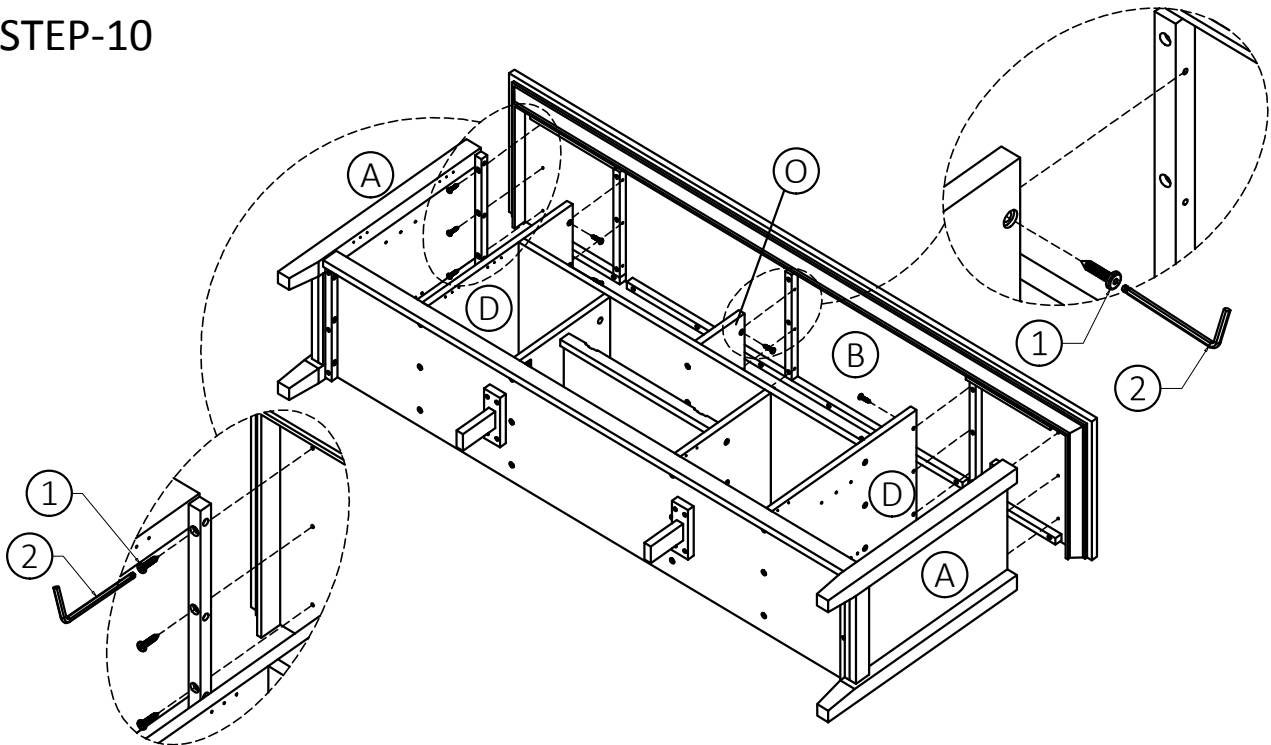

1. Attach Top (B) to Sides (A), Small Divider (O) and Large Dividers (D) using fifteen Allen Key Screws (1) (three screws on each Side, Divider).
2. Use Allen Key (2) to tighten. Do not over-tighten.

 
STEP-11

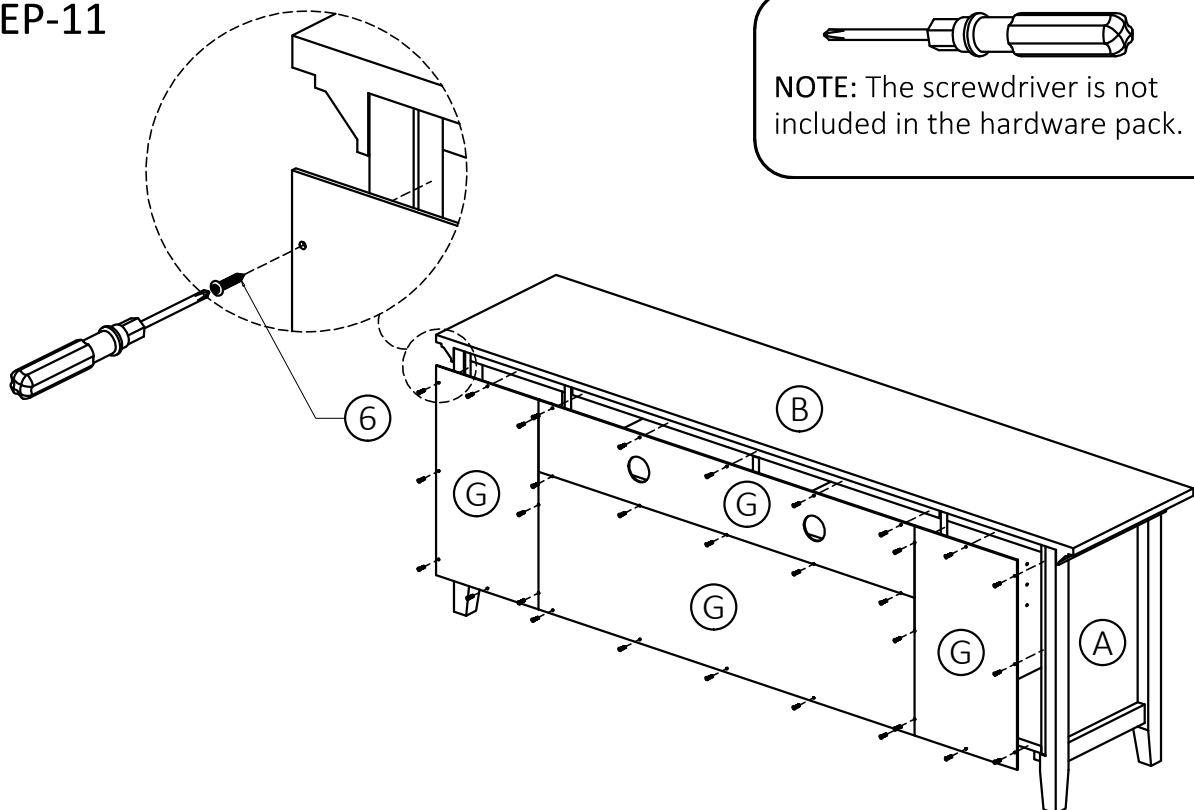

1. Attach Back Panels (G) to back frame of TV using thirty one Phillips Screws Round Head (6) into pre-drilled guide holes.
2. Use Phillips screwdriver to tighten screw. Do not over-tighten.

ASSEMBLY

 
STEP-12

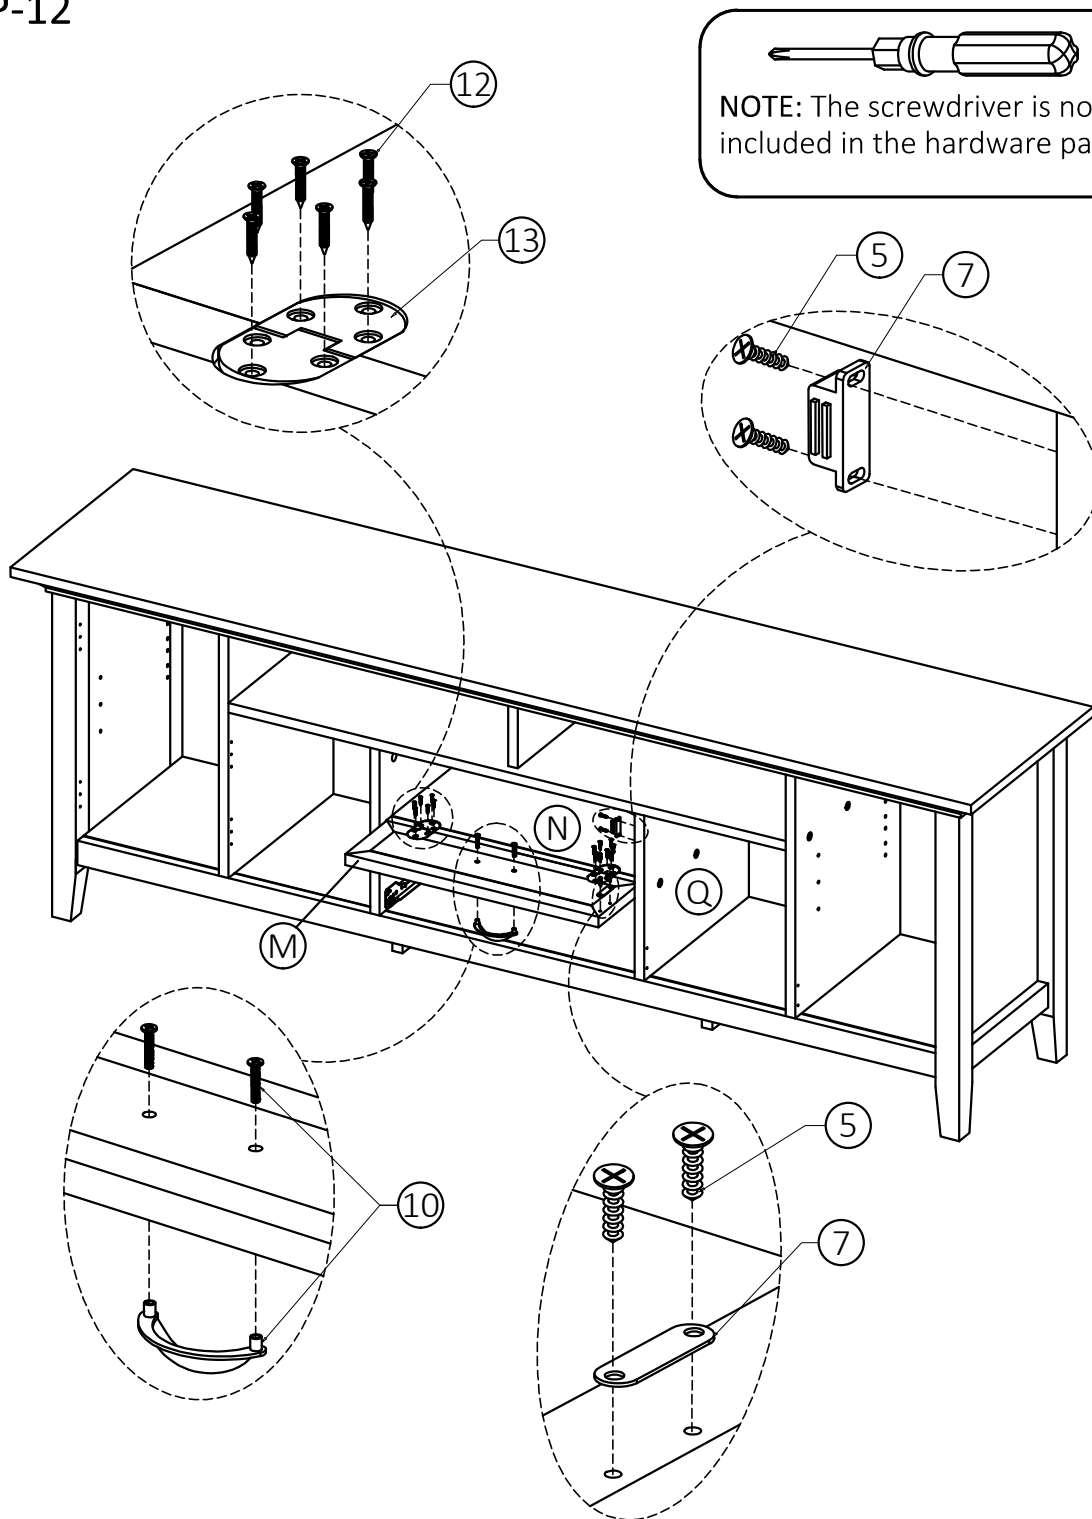


1. Attach Flip Down Door (M) to Middle Shelf (N) using two Hinges (13) and twelve Phillips Screws (12).
2. Attach Magnet Plates (7) to top corner of Middle Divider (Q) using Phillips Screws (5) into guide holes on Middle Divider (Q).
3. Attach Magnets (7) to Flip Down Door (M) using Phillips Screws (5) into guide holes on Flip Down Door (M).
4. Use a Phillips screwdriver to snugly tighten screw.

ASSEMBLY

 STEP-13



 
NOTE: The screwdriver is not included in the hardware pack.

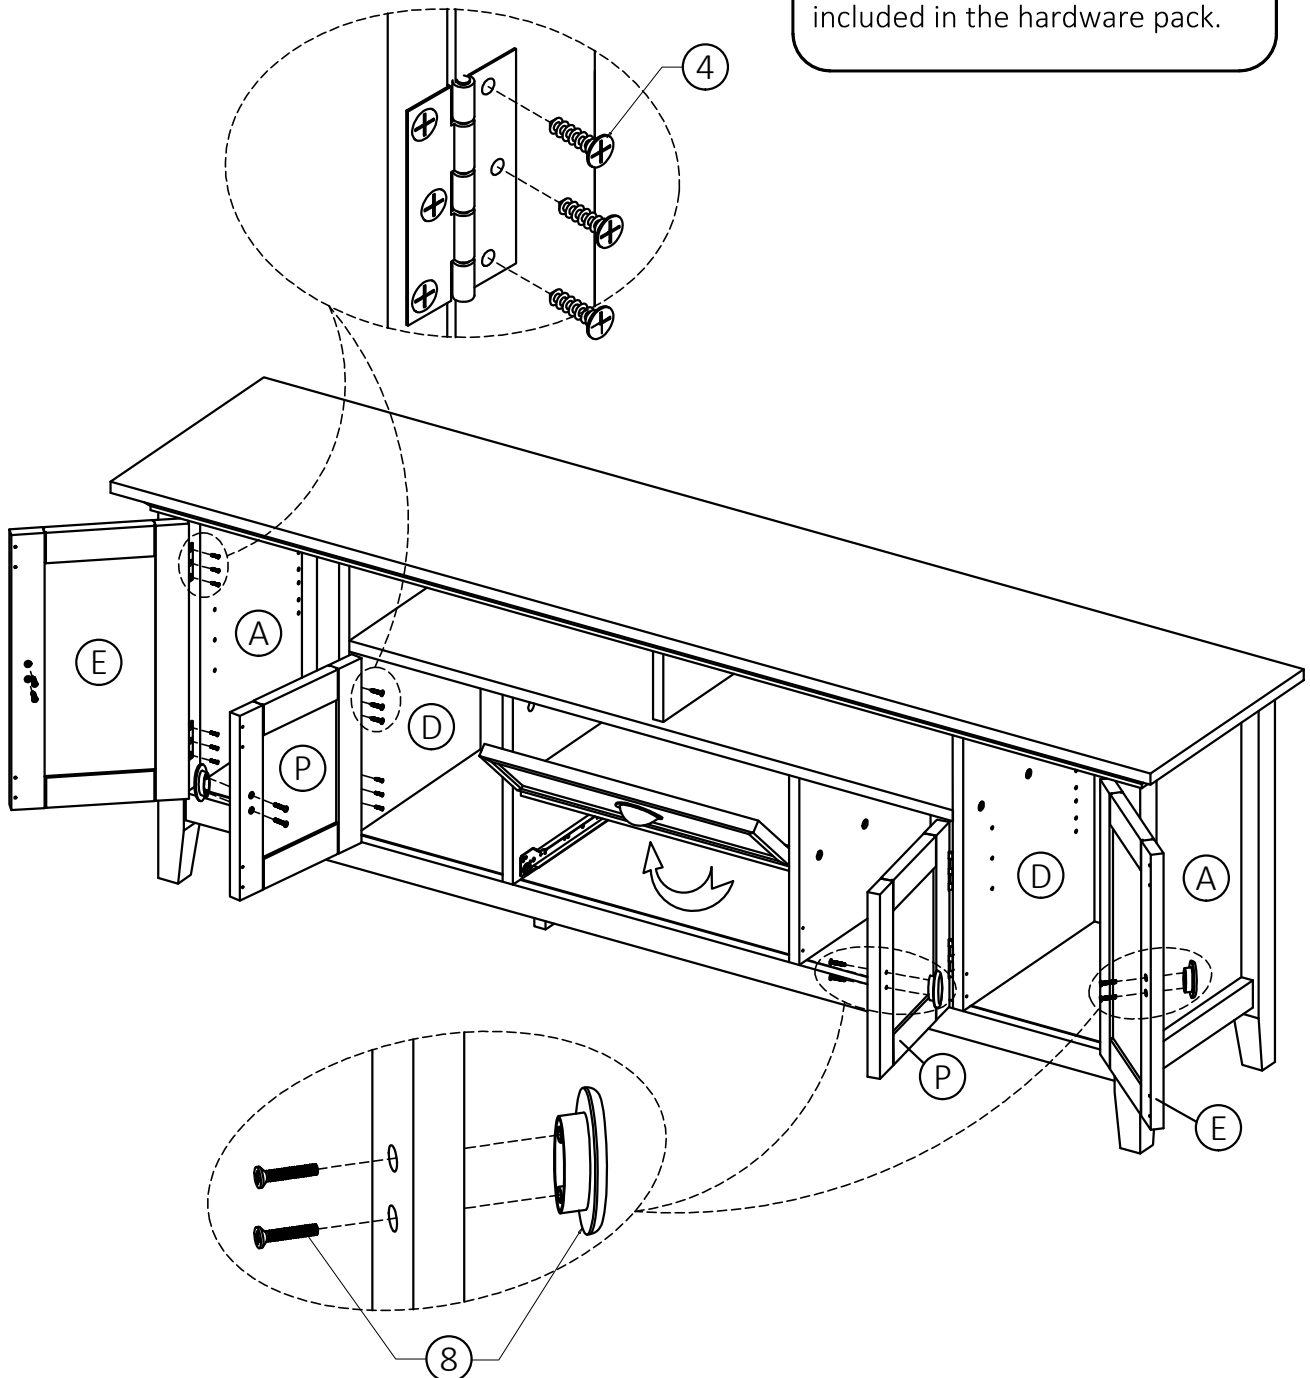


1. Attach hinges on Large Doors (E) to Sides (A) using Phillips Screws (4) into guide holes.
2. Attach hinges on Small Doors (P) to Large Dividers (D) using Phillips Screws (4) into guide holes.
3. Use a Phillips screwdriver to snugly tighten screw.
4. Use Phillips screwdriver to attach Handle (8) to Large Doors (E) and Small Doors (P).

ASSEMBLY

 STEP-14



 
NOTE: The screwdriver is not included in the hardware pack.

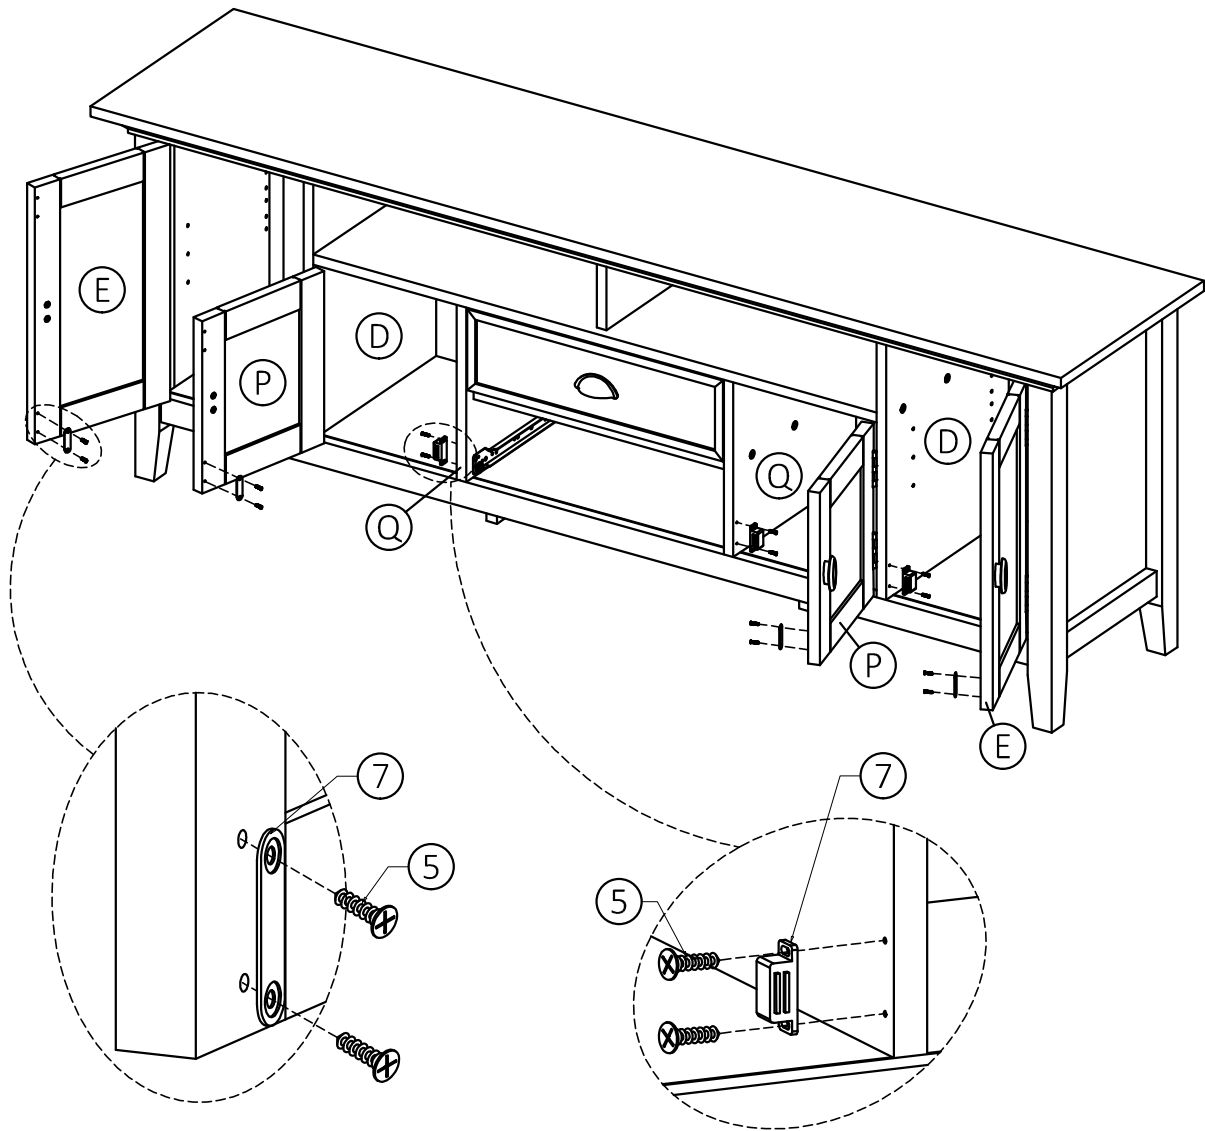

1. Attach Magnets Plates (7) to bottom corner of Large Doors (E) and Small Doors (P) using Phillips Screws (5) into guide holes on Large Doors (E) and Small Doors (P).
2. Attach Magnets (7) using Phillips Screws (5) into guide holes on Large Dividers (D) and Middle Dividers (Q).
3. Use Phillips Screwdriver to snugly tighten screw.

ASSEMBLY

 STEP-15

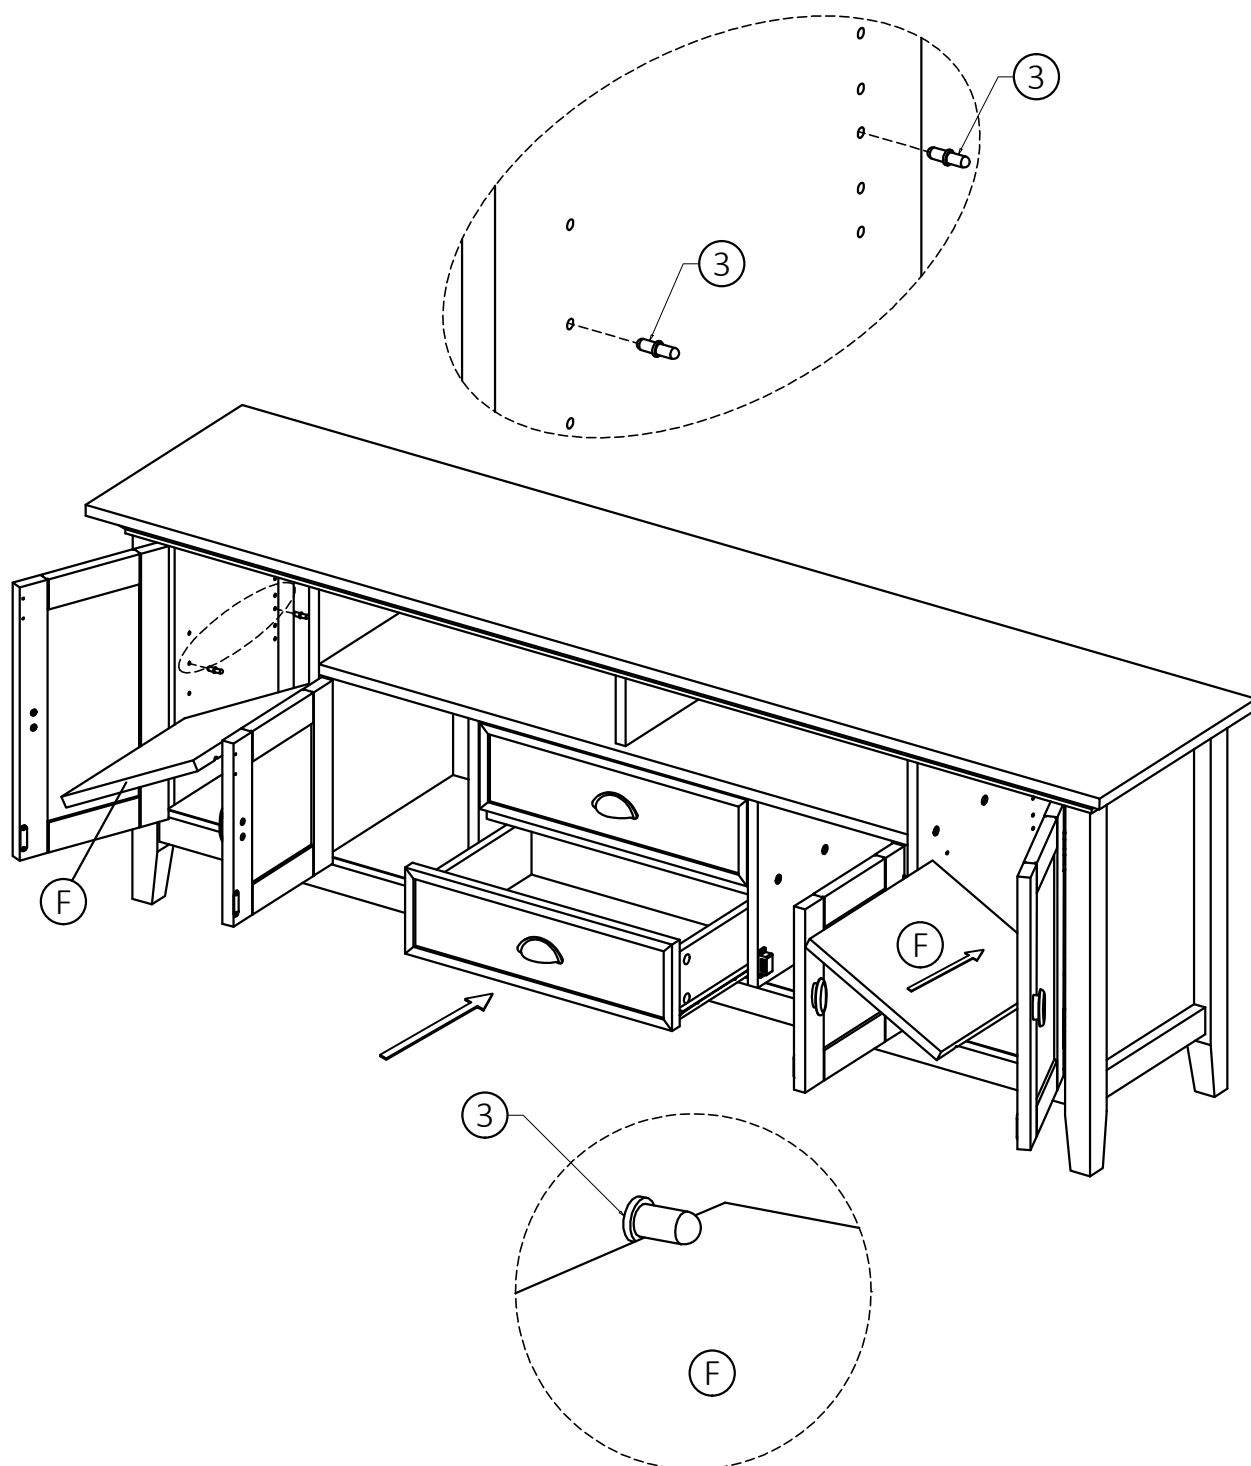


1. Use four Shelf Supports (3) for each Cabinet Shelf (F) in desired location.
2. Two Shelf Supports (3) may be used on back top of each Cabinet Shelf (F) as a tipping restraint.
3. Insert assembled drawer into glides on assembled TV Media Stand.


FURNITURE ANTI-TIPPING RESTRAINT ASSEMBLY

NOTE: Injuries and damage can occur from furniture tip-over. It is important to use the safety bracket included. If the tipping restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

 STEP-16



 NOTE: The screwdriver is not included in the hardware pack.

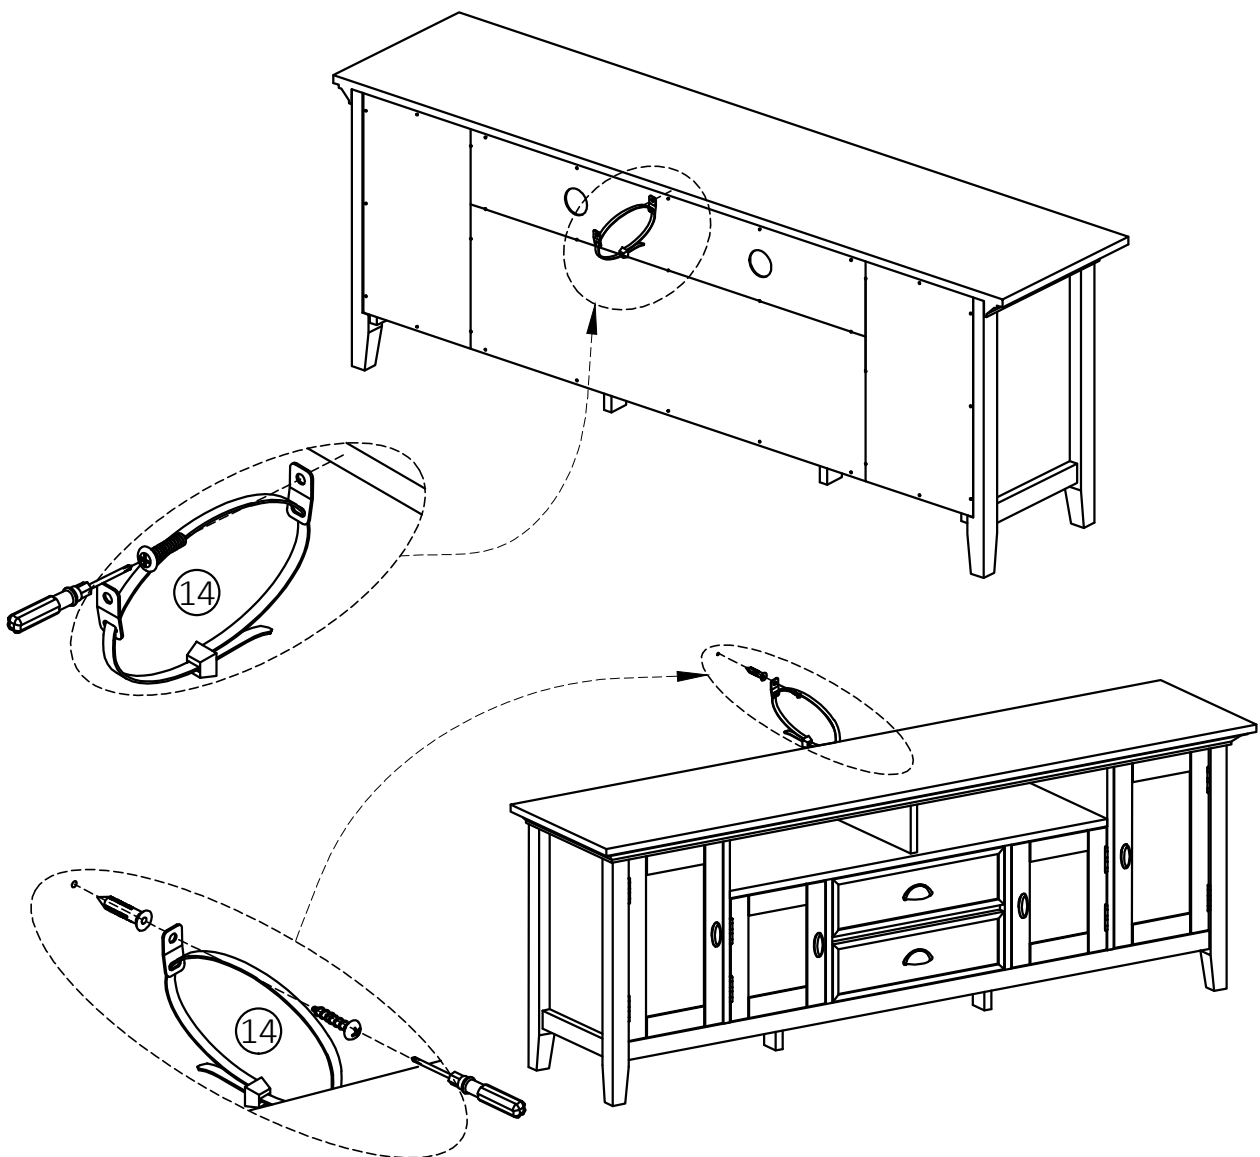

FURNITURE ANTI-TIPPING RESTRAINT ASSEMBLY

Furniture Anti-Tipping Restraint Instructions:

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.
 2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches below the bracket mounted to the furniture.
 3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
 4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
 5. Place the furniture so the back edge is in line with the bracket on the wall.
 6. Lace an end of the nylon restraint down through each bracket. Bring both ends together and slide the beaded end of the strap through the keyhole shaped slot in the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
 7. To double lock, return the beaded end back through the keyhole as shown.
 8. Check to make sure the strap is securely laced and locked to the brackets.
-
- **DO NOT** place heavy objects in top drawers
 - **DO NOT** let children climb or hang on drawers, doors or shelves

WARRANTY

Thank you for purchasing our product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.

Question, problems, missing parts?

Before returning your product
please email or call Customer Support

For more information visit us on our website

Like us on facebook