


Ceiling Fan Light User Manual

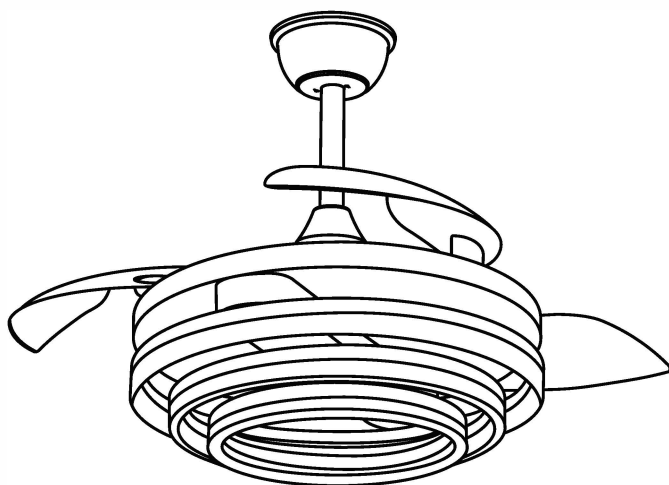

Warm Tips

1. Insert the downrod ball head into the groove of the mounting bracket. (Figure 1)
2. About Light Memory: (Figure 2)
 - Wall switch:
 - *Keep the light needed on over 10 seconds
 - *Turn off the wall switch over 10 seconds
 - * Turn on the wall switch, light will keep the same before turn off.
 - Remote controller:
 - * Just use light on/off button, it will always keep the light setting.
3. Remote control code clearing method:
 - *Power on, press blue + yellow bulb button for 3s.
(Light flashing + Buzzer sound)
4. The lighting kit can be replaced if fault in the future.
5. Using a full range dimmer switch to control fan speed will damage the fan.

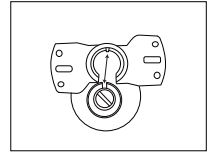


Figure 1

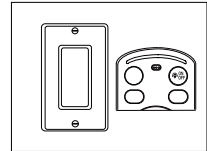



Figure 2

WARNING!!!

- To avoid fire, shock and serious personal injury, follow these instructions.
1. Read your user's manual and safety information before installing your new fan. Review the accompanying assembly diagrams.
 2. Before servicing or cleaning the unit, switch off the power at the service panel and lock the service panel to prevent power from being switched on accidentally. If the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.
 3. Be cautious around the fan and blades when clearing, repairing, or working near the fan. Always turn off the power to the ceiling fan before performing any servicing.
 4. Do not insert anything into the fan blades while the fan is operating.
 5. This appliance is not intended for use by young children or individuals with disabilities without supervision. Young children should be supervised to ensure they do not play with the appliance.
 6. Before installing your ceiling fan, refer to the section on the proper method of wiring your fan. If you feel that you do not have enough wiring knowledge or experience, it is recommended to have your fan installed by a licensed electrician.



Accessories



 
- Check to see that you have received the following parts:


3 (a)  Wire nut	2 (b)  J-box screw	4 (c)  Washer	4 (d)  Plastic expansion tube	4 (e)  Self-tapping screw	2 (f)  Expansion screw
---	--	---	---	---	--

Package Contents

  - Check to see that you have received the following parts

1(A)  Canopy cover	2(B)  Downrod	1(C)  Coupling cover	1(D)  Wrench
--	---	--	---

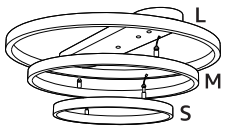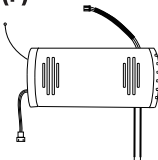 3(E)  Light body	1(F)  Receiver	1(G)  Mounting bracket	1(H)  Motor host
---	---	--	---

 1(I)  Remote control	1(G)  Remote control bracket	1(K)  Nut	1+1(L)  Hex nut /lock washer
--	--	---	---

Energy Saving Usage

- Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.

Choosing The Appropriate Mounting Location

Ceiling fans should be installed or mounted in the middle of the room and positioned at least 7 feet above the floor and 18 inches away from the walls. If the ceiling height allows, it is recommended to install the fan 7~9 feet above the floor to achieve optimal airflow.

Turn Off When Not In The Room

If the room is unoccupied, turn off the ceiling fan to save energy.




Using The Ceiling Fan Year Round

Summer Season: Use the ceiling fan in the counterclockwise direction. The airflow created by the ceiling fan produces a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze; lower speeds consume less energy.

Winter Season: Reverse the motor and operate the ceiling fan at a low speed in the clockwise direction. This produces a gentle updraft, which pushes the warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan. This simple step can lead to additional energy and cost savings.

Electrical and Structural Requirements

- Your new ceiling fan will require a grounded electrical supply line of AC 110-130V/60Hz and a 15 Amp circuit. According to electrical codes, it is necessary to use a fan-rated outlet box to support the additional weight and motion associated with a ceiling fan. A fan-rated box will be clearly labeled as such and is typically designed to support ceiling fans weighing up to 70 pounds. Fan-rated outlet boxes are available in various ratings and designs. It is essential to ensure that the rating of your ceiling fan outlet box meets the requirements for the specific ceiling fan you are installing. Please refer to the figures below for different structural configurations that can be used for mounting the outlet box.
- Low-profile use (Figure 1):
A 1/2-deep pancake box is meant to be screwed to a joist or block. It is used if only one cable is coming into the box. It is also available in a saddle-mount configuration.
- Deep-profile use (Figure 2)
A 2-1/4" deep box can be attached to blocking between joists and is roomy enough to handle more than one cable.
- Brace use (Figure 3)
Paired with a deep box, this hanger is meant to span between two joists and takes the place of wooden blocking.
- If your fan is to replace an existing light fixture, turn power off at the main fuse box and remove the existing light fixture.

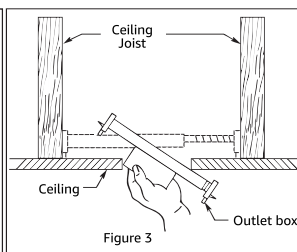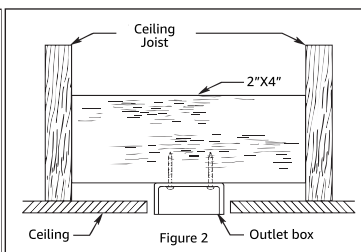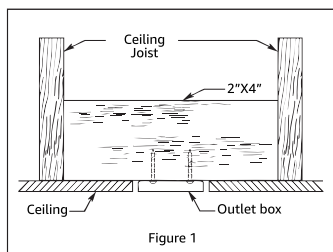

⚠ WARNING

To ensure safety and prevent potential electrical shock, it is not sufficient to simply turn off the wall switch. Prior to wiring, make sure to turn off the electricity at the main fuse box. All wiring should be done in accordance with national and local electrical codes. Additionally, it is important to properly ground the ceiling fan as a precautionary measure against possible electrical shock. Following these guidelines will help ensure the safe installation and operation of your ceiling fan.

⚠ WARNING

Do not use a variable (rheostat) wall controller or dimmer switch to operate this fan. Doing so can cause damage to the ceiling fan's remote control unit. It is recommended to only use the provided remote control.

Installation

Fig.1


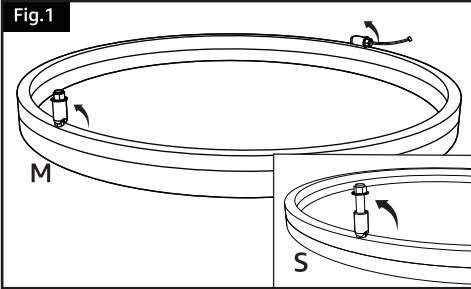


Fig.2

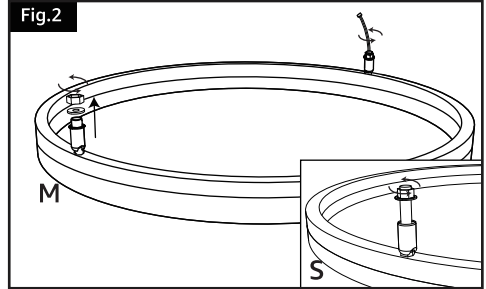

- Straighten the mounting arms on both sides of the light body (for models S and M light bodies).
- Unscrew and remove the hex nuts and washers from each of the four mounting arms.

Fig.3


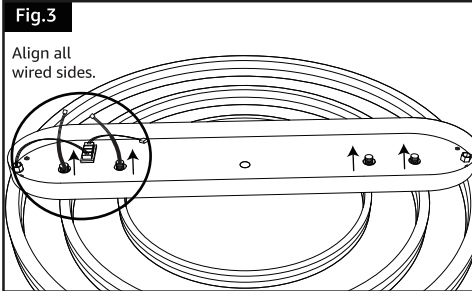


Fig.4

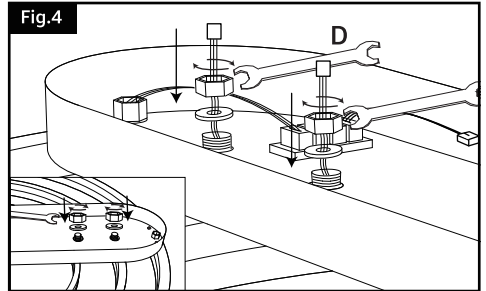

- Align all wired sides. Pass wires and opposite mounting arms through their respective panel holes.
- Then, secure the S, M, and L-model light bodies by tightening the hex nuts and washers (removed in Step 2) with the wrench.

Fig.5




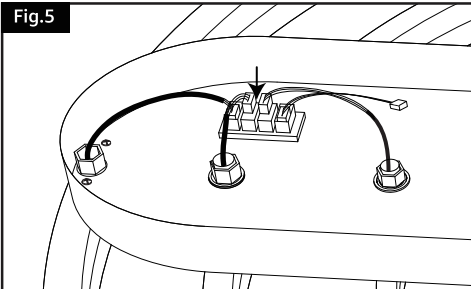


Fig.6

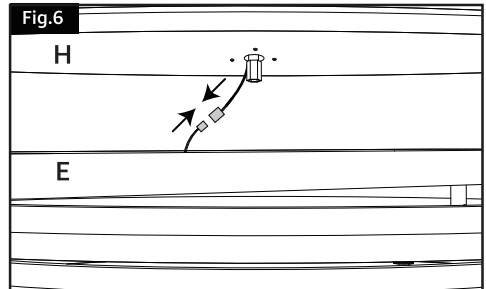
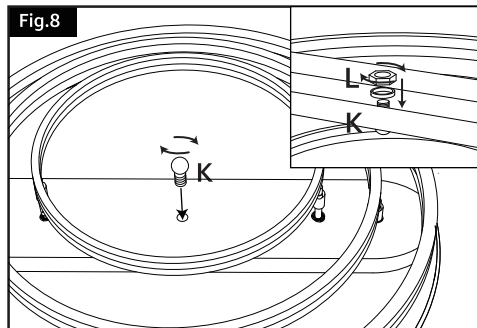


- Insert the light wires from the S and M light bodies into the corresponding ports of the splitter on the L model.
- Insert the remaining set of terminals on the light body into the corresponding light wire ports on the motor host.



Installation

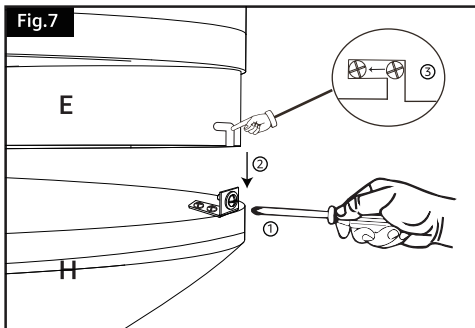

- Turn motor host upside down, then loosen the two side frame screws on it. Align the light body slots with the screws, slide light body to position, then tighten both screws.
- Position the nut K through the aligned holes of the lightbody and motor host, then use the hex nut and lock washer to tighten it clockwise to secure both parts together.

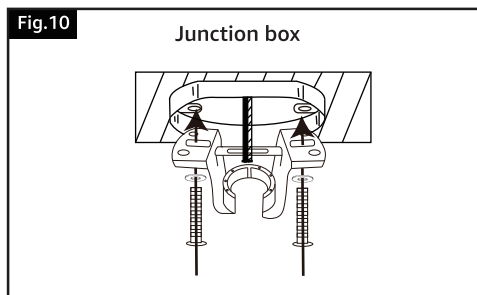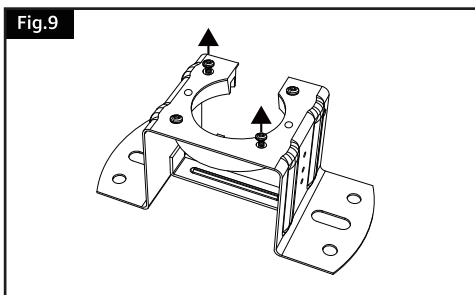

- Unscrew the two diagonal screws on the mounting bracket 2~3 circles, and ensure that they remain securely fixed to the bracket.
- **Junction box:** Secure the bracket to the ceiling using j-box screws and washers.

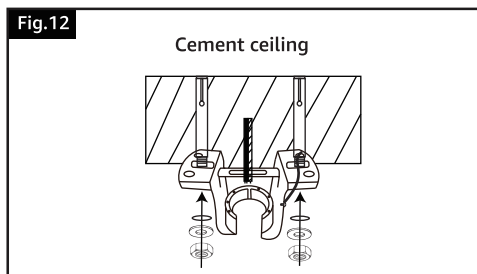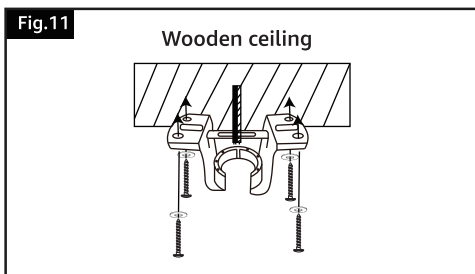

- **Wooden ceiling:** Drive self-tapping screws directly into the wooden ceiling.
- **Cement ceiling:** Drill holes into the cement ceiling, then utilize expansion screws or expansion tubes along with self-tapping screws for fixation.

Installation

Fig.13


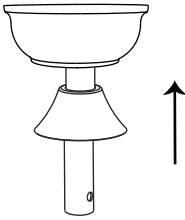


Fig.14

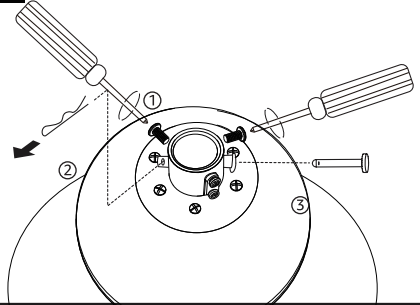

- Mount the canopy cover and coupling cover onto the downrod.
- Loosen the screws, then pull out the pin lock and remove the pin.

Fig.15


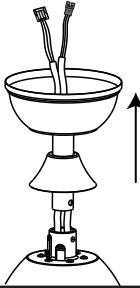


Fig.16

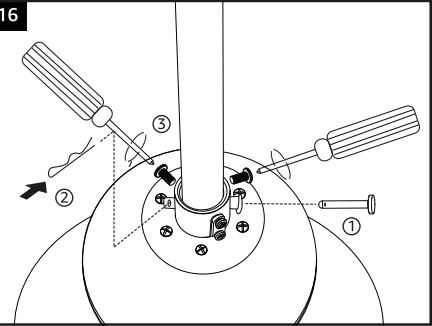

- Assemble the canopy and coupling cover as shown in the figure, thread the wires through the downrod.
- Insert the downrod into the motor host and secure it with the pin, then tighten the two screws on the yoke.

Fig.17


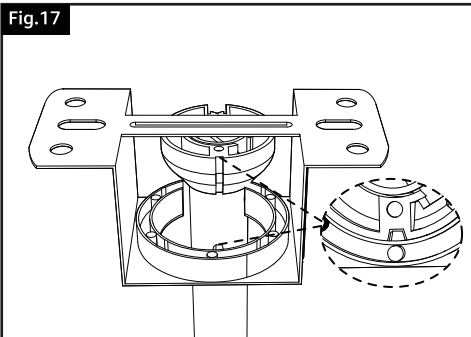


Fig.18

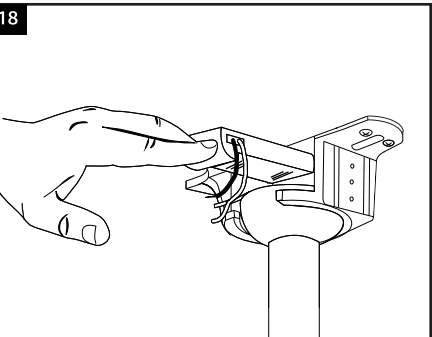

- Hang the downrod onto the bracket, ensuring that the two slots align.
- Insert the receiver into the mounting bracket.

Installation

Fig.19


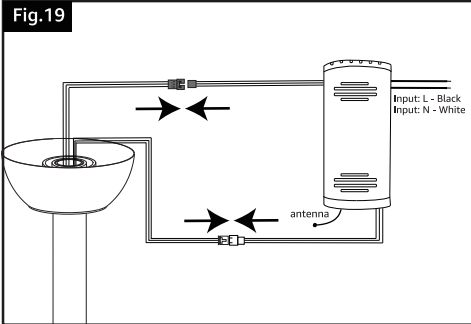


Fig.20

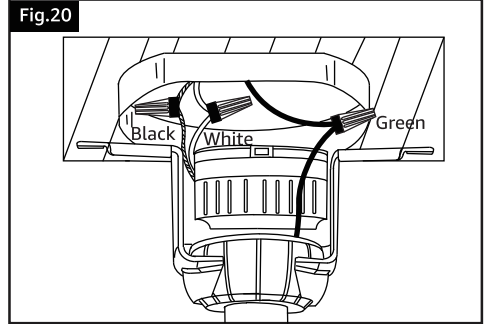

- Connect the wires between the receiver and the fan motor host.
- Wiring:
Connect the "Neutral wire" (white wire) from ceiling to the white wire.
Connect the "Live wire" (black wire) from ceiling to the black wire.
Connect the "Ground wire"
(green or yellow/green or bare) from ceiling to the green wire.

Fig.21


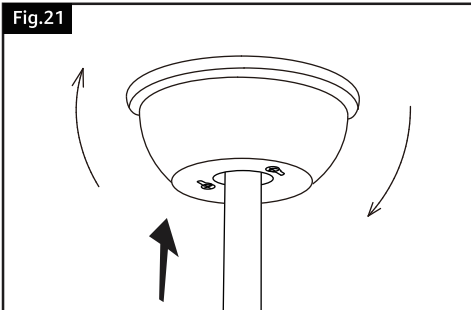



Fig.22

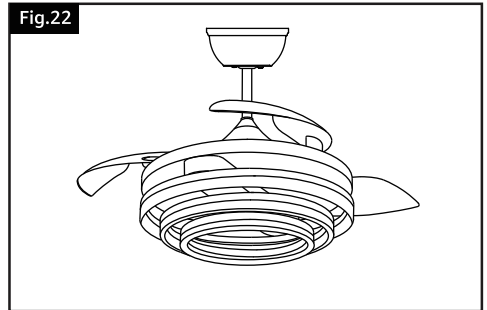

- Push the canopy cover upward, align it with the two screws from step 9, rotate and tighten the screws to secure canopy cover.
- Installation completed.


Operate Your Ceiling Fan

- **IMPORTANT:** Using a full range dimmer switch to control fan speed will damage the fan. To reduce the risk of fire or electrical shock, do not use a full range dimmer switch to control the fan speed. (Figure 1).
Only control light on/off via wall fan switch.
- Restore electrical power to the outlet box by turning the electricity on at the main fuse box.(Figure 2).

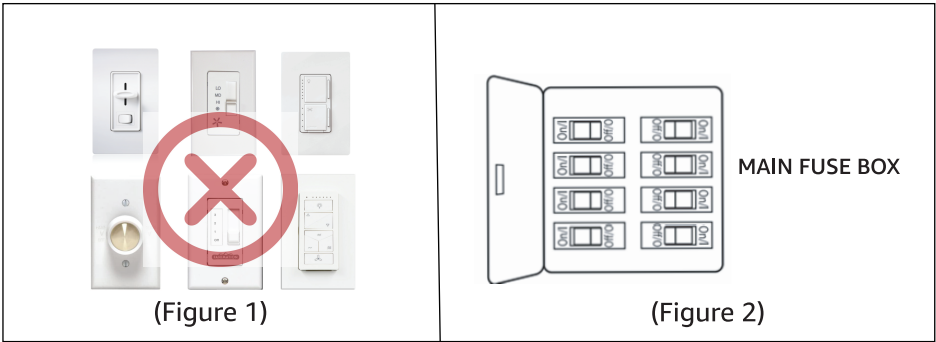

Installation Recommended

Recommended Room Size:

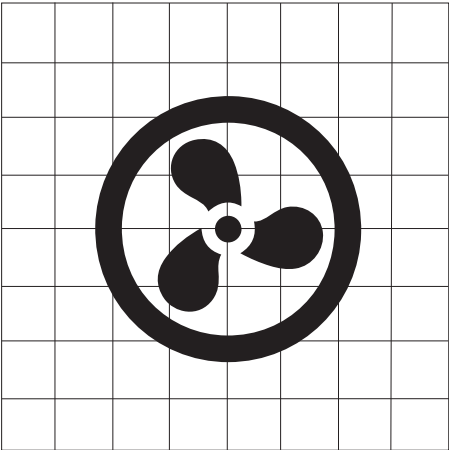


UP TO 9 ft x 11ft

Recommended installation Height:

Installation Height	7FT	8FT
Downrod Length:		
	9FT	10FT

Remote Control

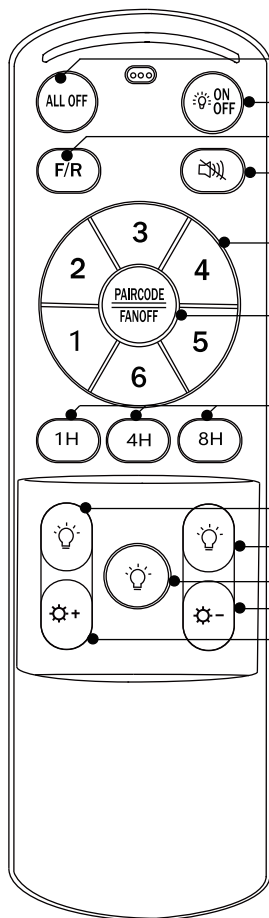

Light & fan all off

Light on/off

Forward or reverse

Remote controller mute

Fan speed(fan on)

Press and hold: pairing button
Click: fan off

Fan stop & light off after
1/4/8 hours

Warm light

Cold light


Neutral light

Brightness -

Brightness +

Installing Wall Plate :

Attach wall plate using the two provided screws.

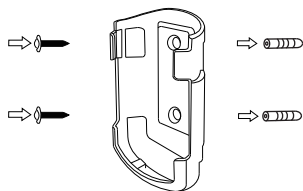

To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. If not used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.

Pairing method: (single/multiple fans)

The remote control transmitter can be used to control multiple receivers.

1. For the ceiling fan you want to pair, turn the main power switch off for at least 60 seconds.


2. Turn on the main power wall switch of the ceiling fan, then within 3 seconds, press and hold button until hearing "beeping", indicating that the code is successful.

3. The pairing process is completed. If the pairing process is unsuccessful, repeat above steps after turning off wall switch 1 minute.



APP Control

NOTE: For iPhone users, you can search for APP in the AppStore. For Android users, please download app. (Please enable Bluetooth and pair the fan with app to control it!)

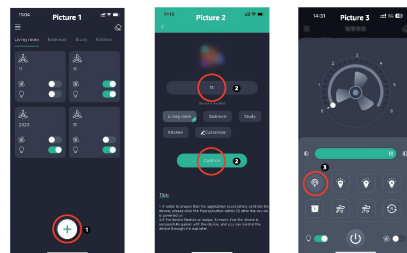

Turn on the fan's power wall switch, once the light is on, press the pairing button within 5s. When the fan light flashes twice, it indicates that the fan has been successfully paired with the phone and can now be controlled through the phone.



Slide to change the fan speed



Slide to change the brightness of the light



Quick switch for "Natural" light color



Quick switch for "Yellow" light color



Quick switch for "White" light color



Not available for this model



Timer the fan



Natural wind: fan speed will change automatically when use this function



Not available for this model



Night light (10% brightness in neutral white)



Not available for this model



Fan moves forwards



Fan moves reversely



Not available for this model



 
Light off/on




Fan off/on



1. Ensure Bluetooth is enabled on your mobile device.



2. Make sure you allow this app to access Bluetooth. (For iPhone users, Android users can ignore this step.)
Method 1: Click "Allow" when opening the app for the first time.
Method 2: Go to your phone's settings, find the app, and enable Bluetooth access.

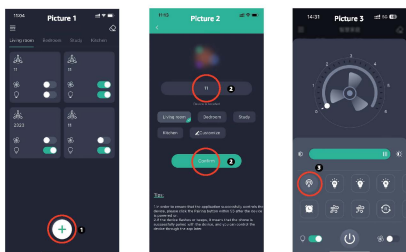

Picture 1

3. Enter the app page and click the plus sign below (Add group).

Picture 2

4. Enter any name, then click Confirm.

Picture 3

5. Turn on the fan's power wall switch, once the light is on, press the pairing button within 5s. The fan light will flash twice to indicate successful pairing.

Troubleshooting



PROBLEM	SUGGESTED REMEDY
If Fan Does Not Start	1. Check the main and branch circuit fuses or circuit breakers. 2. Ensure that the wall control is turned "ON", do not use dimmer switch. 3. Check the line wire connections to the fan and switch wire connections in the switch housing. CAUTION: Make sure to turn off the main power before making any electrical connections.
If The Fan Sounds Noisy	1. Make sure all screws in the motor housing are snug (not over tightened). 2. Check that wire connectors in the switch housing are not rattling against each other or the interior wall of the switch housing. CAUTION: Turn off the main power before entering the switch housing. 3. Ensure that the securing screws are tight. Make sure the light bulb is tight in the socket and not touching the lamp frame or blades. 4. Note that some fan motors are sensitive to signals from solid-state variable speed controls. Do not use a solid-state variable speed control. 5. Allow a "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period. 6. Check if the fan blades are in contact with the light bulb. If so, adjust the angle of the light arm and tighten it again.
If Fan Wobbles	1. Make sure that the canopy and mounting plate are tightened securely to the ceiling junction box, and the junction box is mounted firmly to the ceiling joist. 2. Check if the fan blades are in contact with the light bulb. If so, adjust the angle of the light arm and tighten it again.
If Light Does Not Work	1. Check the black wiring of motor to receiver, and receiver to AC input. 2. Check for loose or disconnected wires in the fan switch housing.
Remote Does Not Work	1. Battery out of power or not installed correctly; change new AAA battery and ensure well installed. 2. Re-pairing the remote.

Customer Service :

30-days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

Quick Response Within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. (It would be appreciated if you could provide us with a video or pictures, if available)

2-year Warranty

Your fan light comes with a two-year warranty. If a malfunction occurs due to product quality issues, we will assist in diagnosing the problem and provide replacement parts free of charge to ensure your fan light resumes normal operation.

Contact Information :



: You can contact us by sending an email