


# Assembly Instruction Sheet for Model HL566027

## Package Contents

Part	Description	Quantity
A	Mounting Bracket	1 pc.
B	Antler Fixture Arm	multi pcs.
C	Arm Support Plate	1 pc.
D	Chain	1 pc.
E	Ceiling Canopy	1 pc.

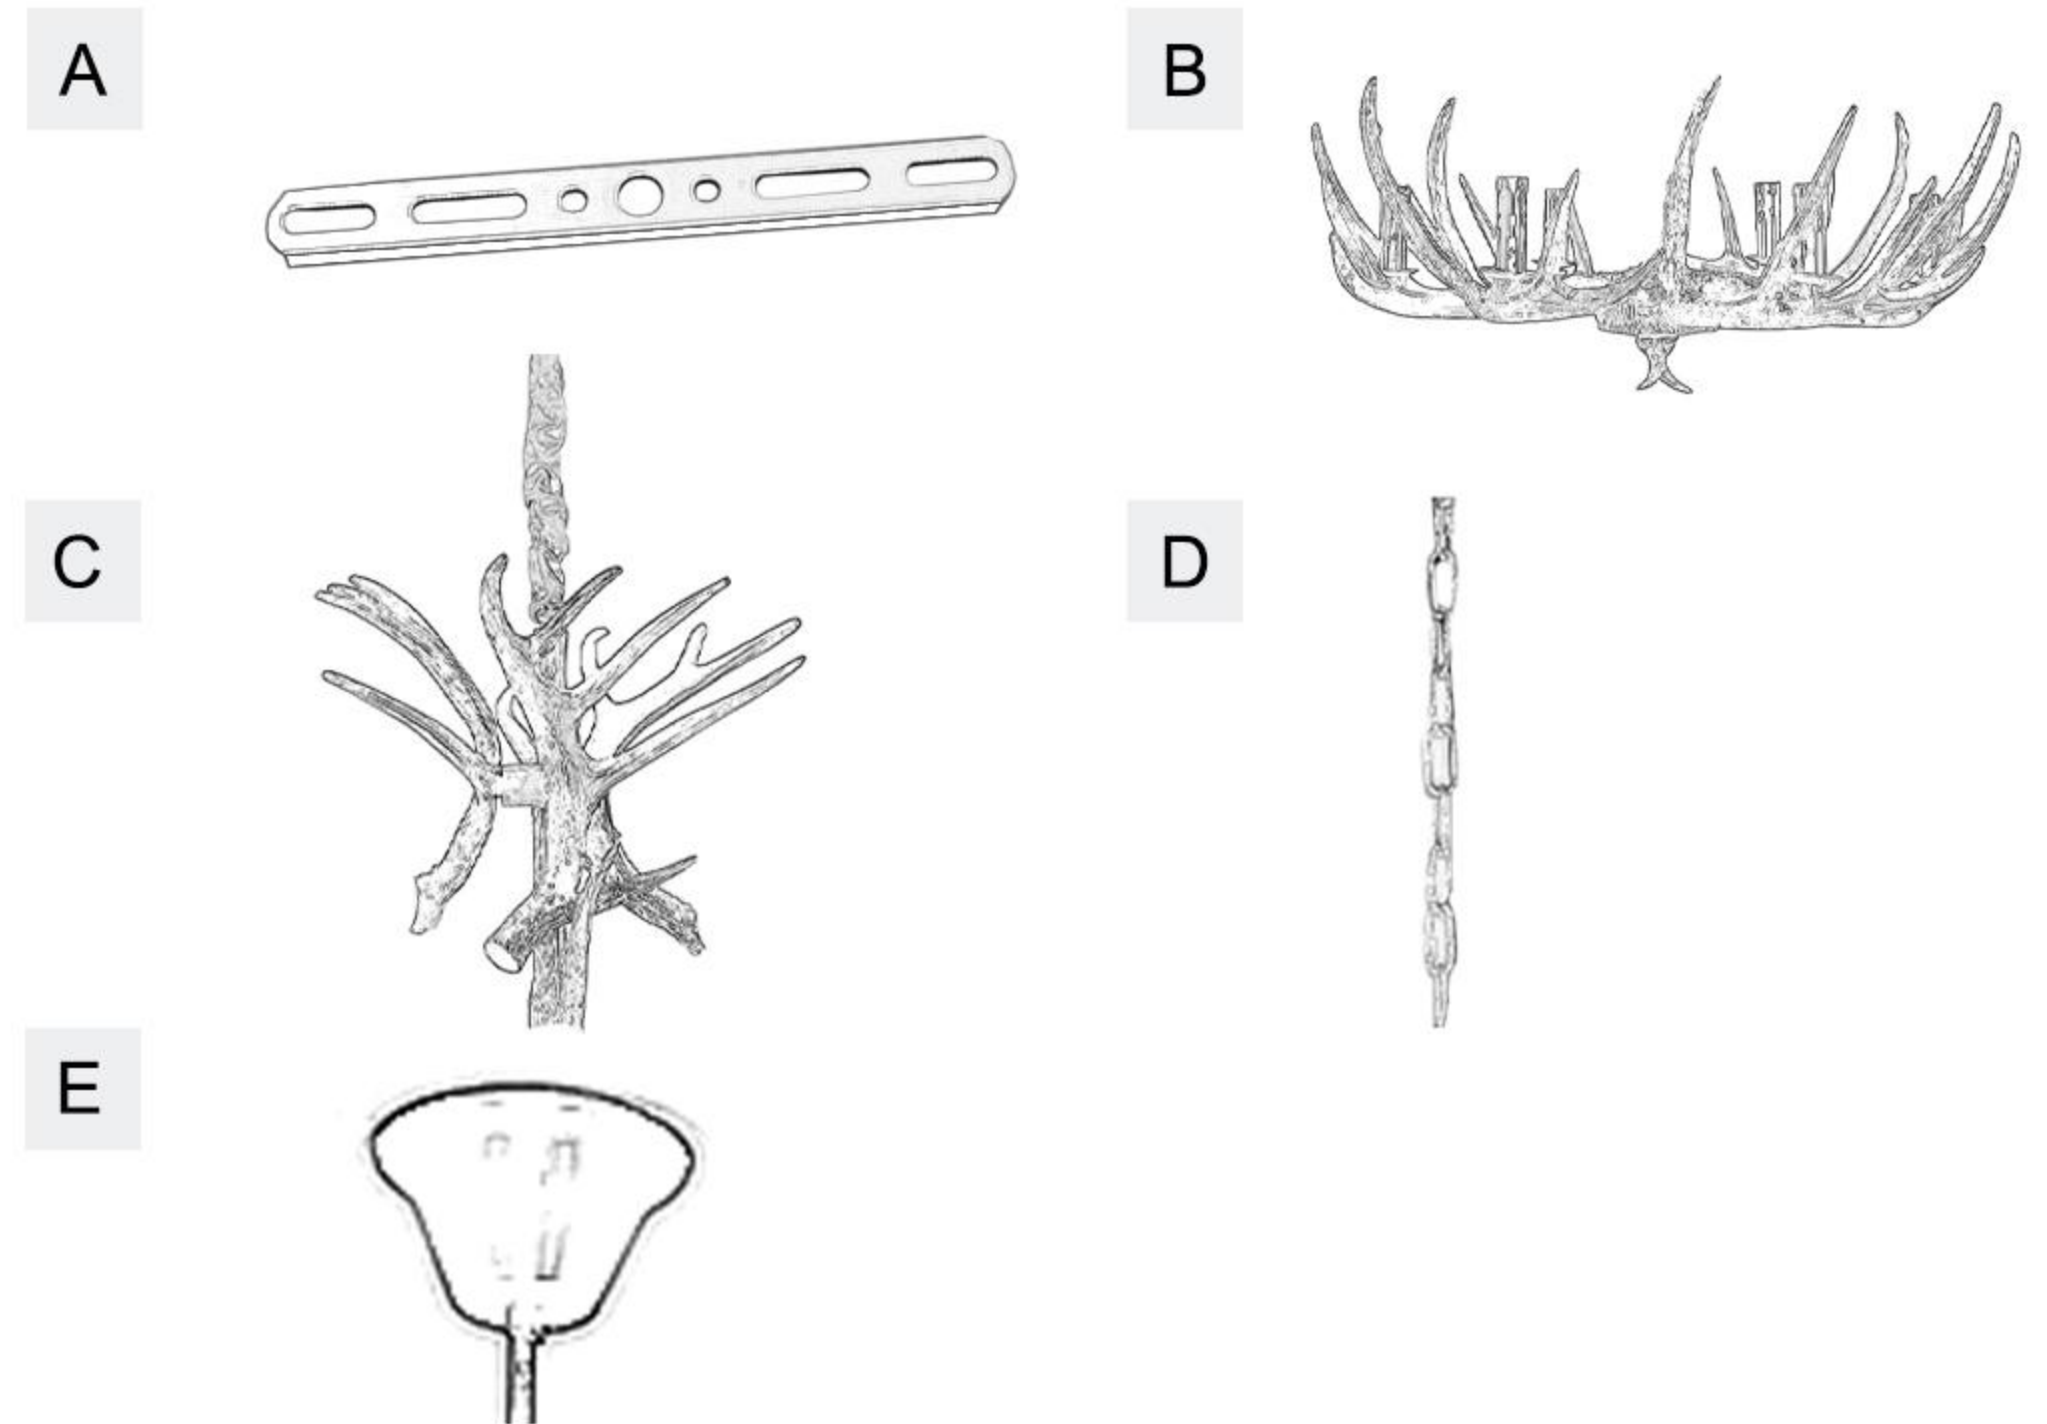

### STEP 1

Mark the drilling position on ceiling with the help of the Mounting Bracket(A).  
Drill holes on the marks and stick the expansion anchors into the holes.  
Fix the Mounting Bracket(A) to the expansion anchors with self-tapping screws.

### STEP 2

Thread the wire of Antler Fixture Arm(B) to the hole of Arm Support Plate(C),  
and screw the Antler Fixture Arm(B) to the Arm Support Plate(C).  
Repeat the above step to fix the other Antler Fixture Arms(B).

### STEP 3

Connect wire color Black/Red from the Arm Support Plate(C) as one strand of wire.  
Connect wire color Blue of Arm Support Plate(C) as the other strand.

### STEP 4

Fix the Chain(D) to the hole of Arm Support Plate(C),  
and screw the Chain(E) to the hole of Ceiling Canopy(E).  
Hold the fixture close to ceiling.  
Connect live line to wire color Black/Red from the canopy of Arm Support Plate(C).  
Connect neutral line to wire color White/Blue from the the canopy of Arm Support Plate(C).

### STEP 5

Attach the Ceiling Canopy(E) to the Mounting Bracket(A).

### STEP 6

Insert your bulb to the bulb base.

Your fixture is now assembled and ready to use.