

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


 






NOTICE

* Please make sure that you have all parts indicated before you begin assembly of this item


* This item should be assembled on a soft surface to prevent scratching the finish during assembly

* This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top		1X
B	Side panel		2x
C	Back Panel		1x
D	Shelf		2x
E	Bottom shelf		1x
HW1	Screw		10x
HW2	Buckle		10x
HW3	ALLEN BOLT		8x40mm

 Product Dimensions:30"Wx14.17"Dx48"H

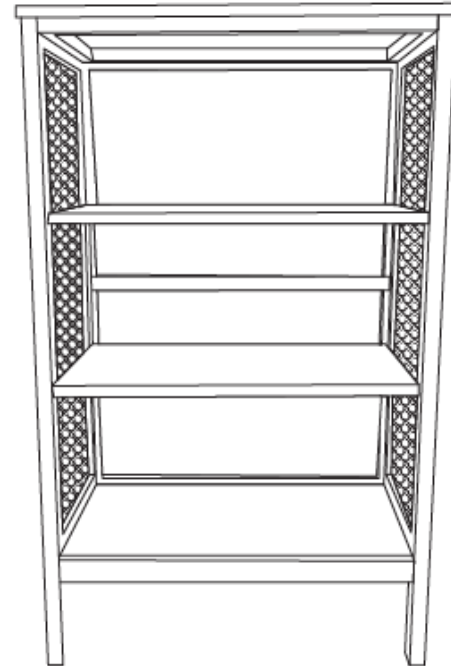

HW4

ALLEN KEY



1X

 
PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

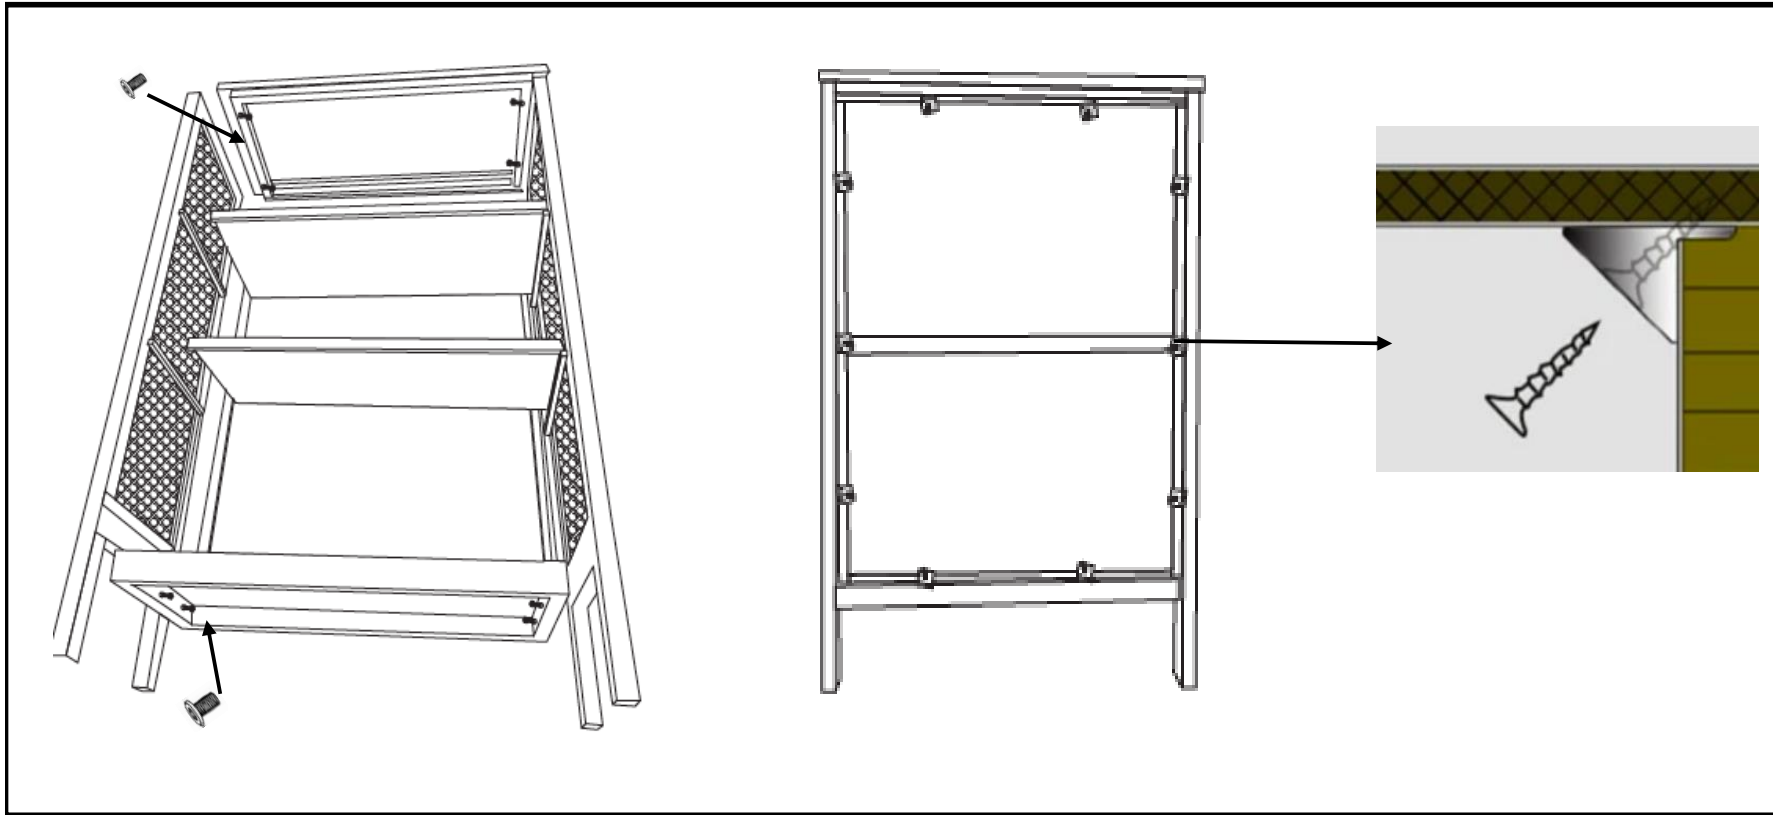

1. Attach all parts together, tighten the bolts on top and bottom shelf

2. using the buckle and screw to fix the back panel