

CAUTION: IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupter (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Do not let lamps rest on the supply cord or any wire.
- **CAUTION:** This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Never operate this product if the power cord or plug is damaged.
- Use only manufacturer specified replacement bulbs.
- Read and follow all instructions that are on the product or provided with the product.

USE AND CARE INSTRUCTIONS

- When storing the product, carefully remove the product from wherever it is placed, avoiding any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

IMPORTANT NOTE: Some unassembled section pieces have light string wires strung between them. Be careful not to put unnecessary strain on the wires during assembly procedures.

Assembly (Diagram 1)

1. Attach the two halves of the snowman bottom section together by first inserting the rods into the loops in two places (A1 and A2) and securing the halves in two places with plastic ties through the loops (B1 and B2).
2. Attach the two halves of the snowman upper section in the same manner; rods into loops (C) in two places at bottom; plastic ties through both sets of loops (D) in two places at top.
3. Attach the upper section to bottom by sliding the hooks located at the base of the upper section into and under the frame of the bottom section. Secure sections together through lined up loops using tie wrap supplied (E).
4. Attach the two hat halves together by inserting the rods into the loops (F) in two places at top; plastic ties through both sets of loops (G) in two places at bottom. Attach hat to body by inserting rods into loops (H).
5. Attach the nose by inserting the rod into the loop (I).
6. Attach the two arms as shown in the diagram by inserting the rods into the loops on the body (J).
7. (Diagram 2) Wrap scarf around the snowman below the head as desired.




 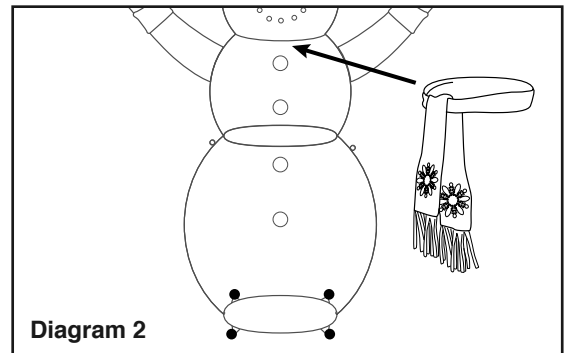


Diagram 2

8. (Diagram 2) Secure decoration to the ground using the supplied stakes at points indicated by dots (●).



Bulb Replacement

 1. Unplug light string from power source.
2. Gently pull the bulb straight out of the socket (Figure 1).
3. Carefully insert new bulb into socket – bulb is keyed and only goes in one way (Figure 2).

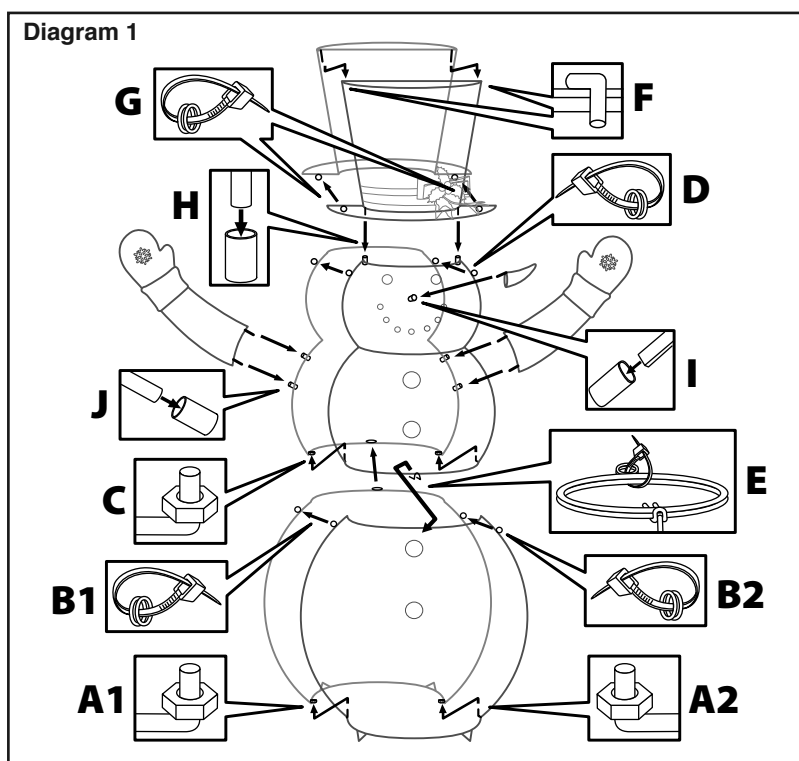

Fuse Replacement

1. Unplug light string from power source.
2. Slide the fuse access cover away from cord side (in direction of arrow, Figure 3) exposing fuses.
3. Remove fuses from compartment and examine. Replace burnt out fuse with new one.
4. Close fuse compartment by sliding access cover back in towards cord side of plug (Figure 4).

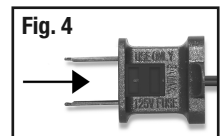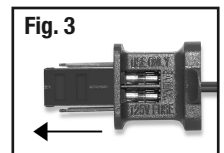

SAVE THESE INSTRUCTIONS