
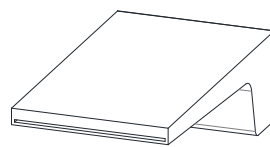
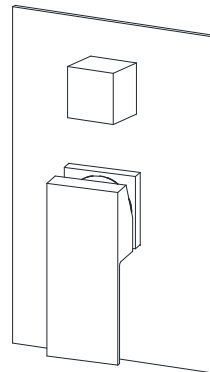


INSTALLATION GUIDE

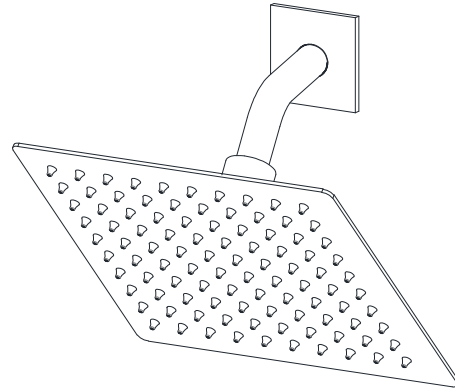

TUB AND SHOWER FAUCET

| MODEL | FINISH |
|------------|----------------|
| S3134WB-CH | CHROME |
| S3134WB-BN | BRUSHED NICKEL |
| S3134WB-MB | MATTE BLACK |
| S3134WB-BG | BRUSHED GOLD |

HOT LINE: +1-866-203-0866

THANK YOU

Dear Valued Customer,

Thank you for choosing SUMERAIN products. We sincerely appreciate your recent purchase and hope you are fully satisfied with your new product. At SUMERAIN, all our products are meticulously designed, engineered, and rigorously tested to ensure long-lasting, trouble-free performance under normal conditions.

Installation is simple with basic tools and our step-by-step illustrated guide. We welcome your questions or feedback and look forward to assisting you in the future. For any inquiries, please contact us at +1-866-203-0866 or email us at supports@sumerain.com.

Thank you again for selecting SUMERAIN. We remain dedicated to providing exceptional customer service.


Sincerely,

SUMERAIN Customer Service Department.


BEFORE PROCEEDING

1. Unpack the product and ensure all components are included in the package. Keep the product in its original packaging until you are ready to install it to prevent damage.
2. Locate the water supply inlets and turn off the water supply valves, which are typically near the water meter or under the sink. If replacing an existing unit, remove the old one and thoroughly clean the mounting surface.
3. Follow all applicable local and state plumbing and building codes to ensure proper installation.
4. If you are uncertain about the installation process, we strongly recommend consulting a professional to avoid potential issues.


TOOLS RECOMMENDED

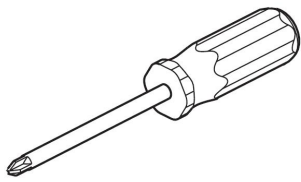

Philips Screwdriver

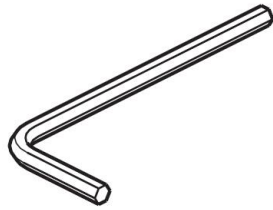

Allen Wrench

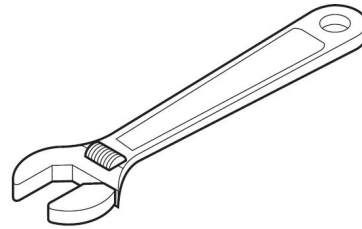

Adjustable Wrench



Channel Locks



Teflon Tape

LIMITED LIFETIME CONSUMER WARRANTY

VERSION: 140320.15.3

This product is manufactured and rigorously tested to meet the highest quality standards by HONGKONG SUMERAIN SANITARY INDUSTRY Co., Limited ("SUMERAIN"). This warranty is exclusively applicable to SUMERAIN products purchased by consumers in the United States on or after January 1, 2020. If a faucet develops leaks or drips during normal usage, SUMERAIN will provide the required faucet cartridge to the purchaser, free of charge, to restore the faucet to proper working condition. For any defects identified under normal residential use, SUMERAIN may, at its discretion, repair the product, supply replacement parts or products, or make necessary adjustments to ensure optimal functionality.

WHO IS COVERED BY THE WARRANTY

This warranty exclusively covers the original consumer purchaser, including those who purchased through online retail platforms. Customers specifically covered under the "Online Consumer Limited Lifetime Warranty & Return Policy" are also included. Please note that this warranty is non-transferable and cannot be assigned to any other individual or entity.

WHAT IS COVERED BY THE WARRANTY

This warranty applies exclusively to SUMERAIN-manufactured products purchased by the consumer. SUMERAIN warrants against defects in materials or workmanship under normal installation, use, service, and maintenance. If the product or its components are found to be defective due to faulty materials or workmanship, SUMERAIN will, at its discretion, provide free replacement parts or replace the entire product.

FINISH WARRANTY

Customers are responsible for inspecting the product for any material or finish defects within three days of receipt. Please note that surface finish defects are not covered under warranty once the fixture has been installed.

ELECTRONIC FAUCETS WARRANTY

SUMERAIN warrants its LED components, including electronic faucets, valves, controllers, and battery-powered devices, against material and manufacturing defects for one year from the date of purchase under normal use. The water flow impeller power device (LED power generation unit) is covered against manufacturing defects for three months from the date of purchase.

LENGTH OF WARRANTY

As stated in the following, any replacement or repaired parts of the product will be covered for the duration of this warranty, which SUMERAIN provides for a period of 1 year from the original date of purchase.

CIRCUMSTANCES THAT SUMERAIN WILL NOT WARRANT AND PAY FOR:

- A. Conditions, malfunctions, or damage that are not caused by defects in material or workmanship are not covered under the warranty.
- B. Conditions, malfunctions, or damage resulting from normal wear and tear, improper installation, improper maintenance, misuse, abuse, negligence, accidents, alterations, or the use of abrasive or caustic cleaning agents, "no-rinse" cleaning products, or operation contrary to the provided instructions, including issues caused by home conditions such as excessive water pressure or corrosion, are excluded from the warranty.
- C. Labor costs or other expenses related to the disconnection, deinstallation, or return of the product for warranty service, as well as the installation or reinstallation of the product, are not covered under the warranty.
- D. Accessories, connected materials, and related products (including but not limited to hand shower flexible hoses, spray flexible hoses, hand showers, and showerheads) that are not manufactured by SUMERAIN are excluded from warranty coverage.

TO OBTAIN WARRANTY PARTS OR INFORMATION

To obtain warranty parts or information, please follow these steps:

Contact your SUMERAIN retailer, call the technical service line at +1-866-203-0866, or email supports@sumerain.com.

When applying for warranty service, provide the following information:

- a. A sales receipt or proof of purchase date and platform.
- b. A detailed description of the issue.
- c. Ship the product or defective parts to the designated SUMERAIN warehouse in the United States with prepaid postage. Ensure the items are carefully packaged and insured. Once the warranty service is completed, repaired or replaced products or parts will be returned to you with prepaid postage.

If you have further questions or require additional assistance, please contact SUMERAIN using the information provided above.

EXCLUSIONS & LIMITATIONS


Under the terms of this warranty, repair, replacement, or, in limited cases, a refund of the purchase price is the sole remedy available to the purchaser. SUMERAIN assumes no obligations or liabilities and does not authorize any individual to create obligations or liabilities related to this product. SUMERAIN is not liable for any incidental, special, or consequential damages resulting from a breach of this warranty or any implied warranties, including merchantability. Please note that some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty provides specific legal rights, and you may also have additional rights that vary by state. Before filing any legal action under the Magnuson-Moss Warranty Act, you may be required to provide SUMERAIN with a reasonable opportunity to address or resolve any non-compliance.

PRODUCT INSTRUCTIONS & QUESTIONS




Prior to installation, we strongly recommend thoroughly inspecting your SUMERAIN product for any potential damage or visible defects caused during shipping. Carefully review the included instructions for proper installation, maintenance, and care procedures. If you have any questions regarding the use, installation, performance, or warranty of your SUMERAIN product, please contact us at +1-866-203-0866 or email supports@sumerain.com. Our customer support team is available to assist with any concerns or inquiries you may have.

FUNCTIONS AND SPECIFICATION


| | |
|---|-------------------------------|
| Faucet Type | Tub & Shower Faucet |
| Theme | Modern, Contemporary |
| Mounting Type | Wall Mount |
| Number of Handles | One |
| Handles Material | Metal |
| Handle Style | Lever |
| Shower Arm Reach | 6-11/16 Inch |
| Showerhead Width | 8 Inch |
| Showerhead Length | 8 Inch |
| Valve Type | Pressure Balance Valve |
| Faucet Body Material | Brass |
| Escutcheon Material | Brass |
| Diverter Included | Yes |
| Diverter Location | Rough-in Valve |
| Showerhead Type | Rain Shower |
| Showerhead Shape | 8" Square |
| Showerhead Function | Single Function |
| Showerhead Material | SUS304 Stainless Steel |
| Showerhead Flow Rate | 1.8 GPM @60PSI |
| Tub Spout Flow Rate | 4.56GPM@60PSI |
| Tub Spout Material | Brass |
| Tub Spout Reach | 7-1/16 Inch |
| Tub Spout Width | 3-15/16 Inch |
| Recommend Working Water Pressure | 43.5PSI~101.5PSI |
| Net Weight | 7.98 lbs |
| Gross Weight | 9.88 lbs |
| Packing Box [L x W x H] | 19-11/16" x13-9/16" x 5-5/16" |

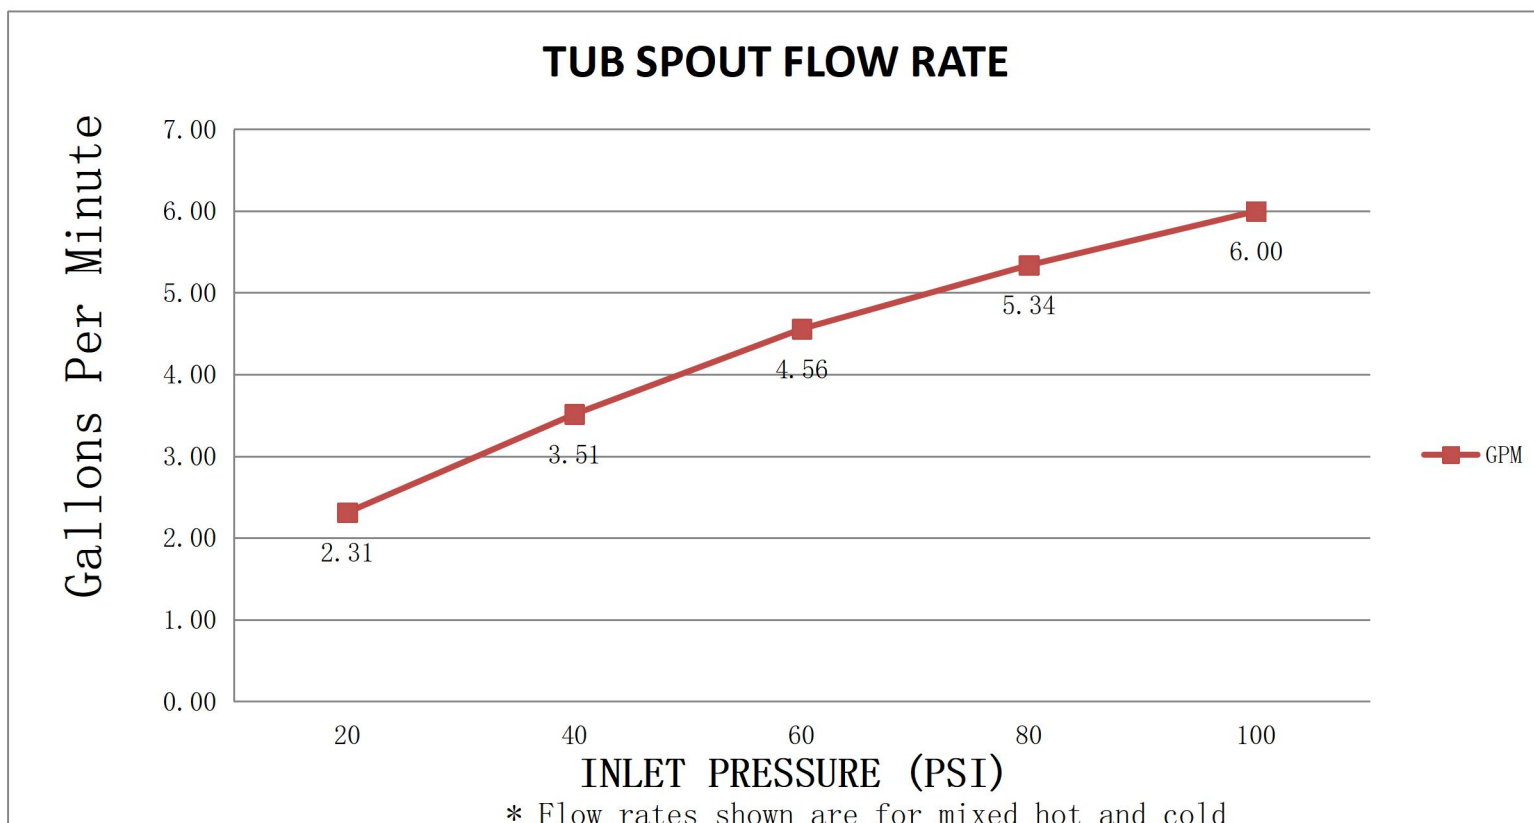

DIMENSION

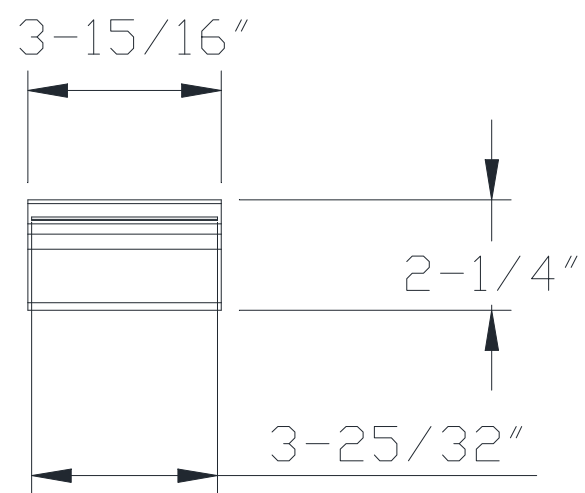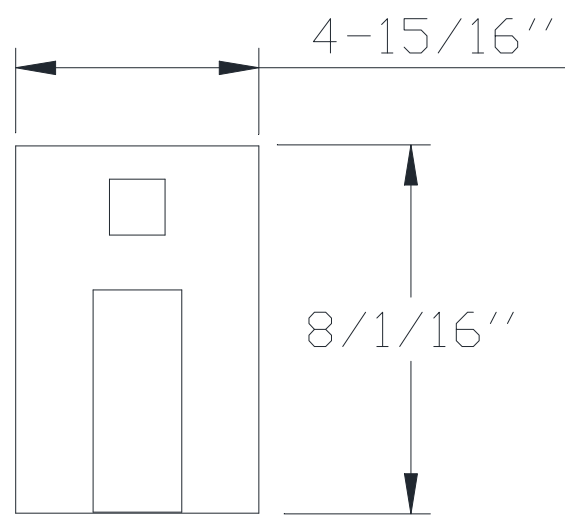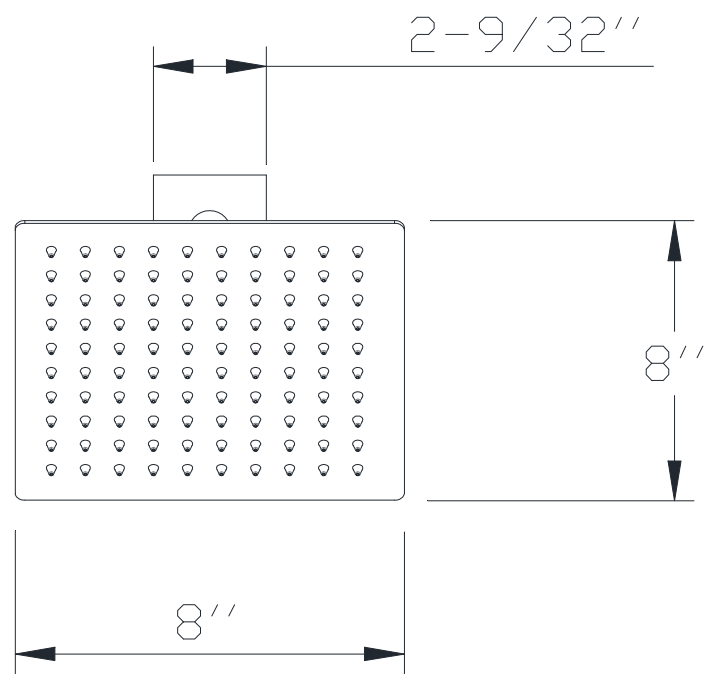

FRONT VIEW OF SHOWER

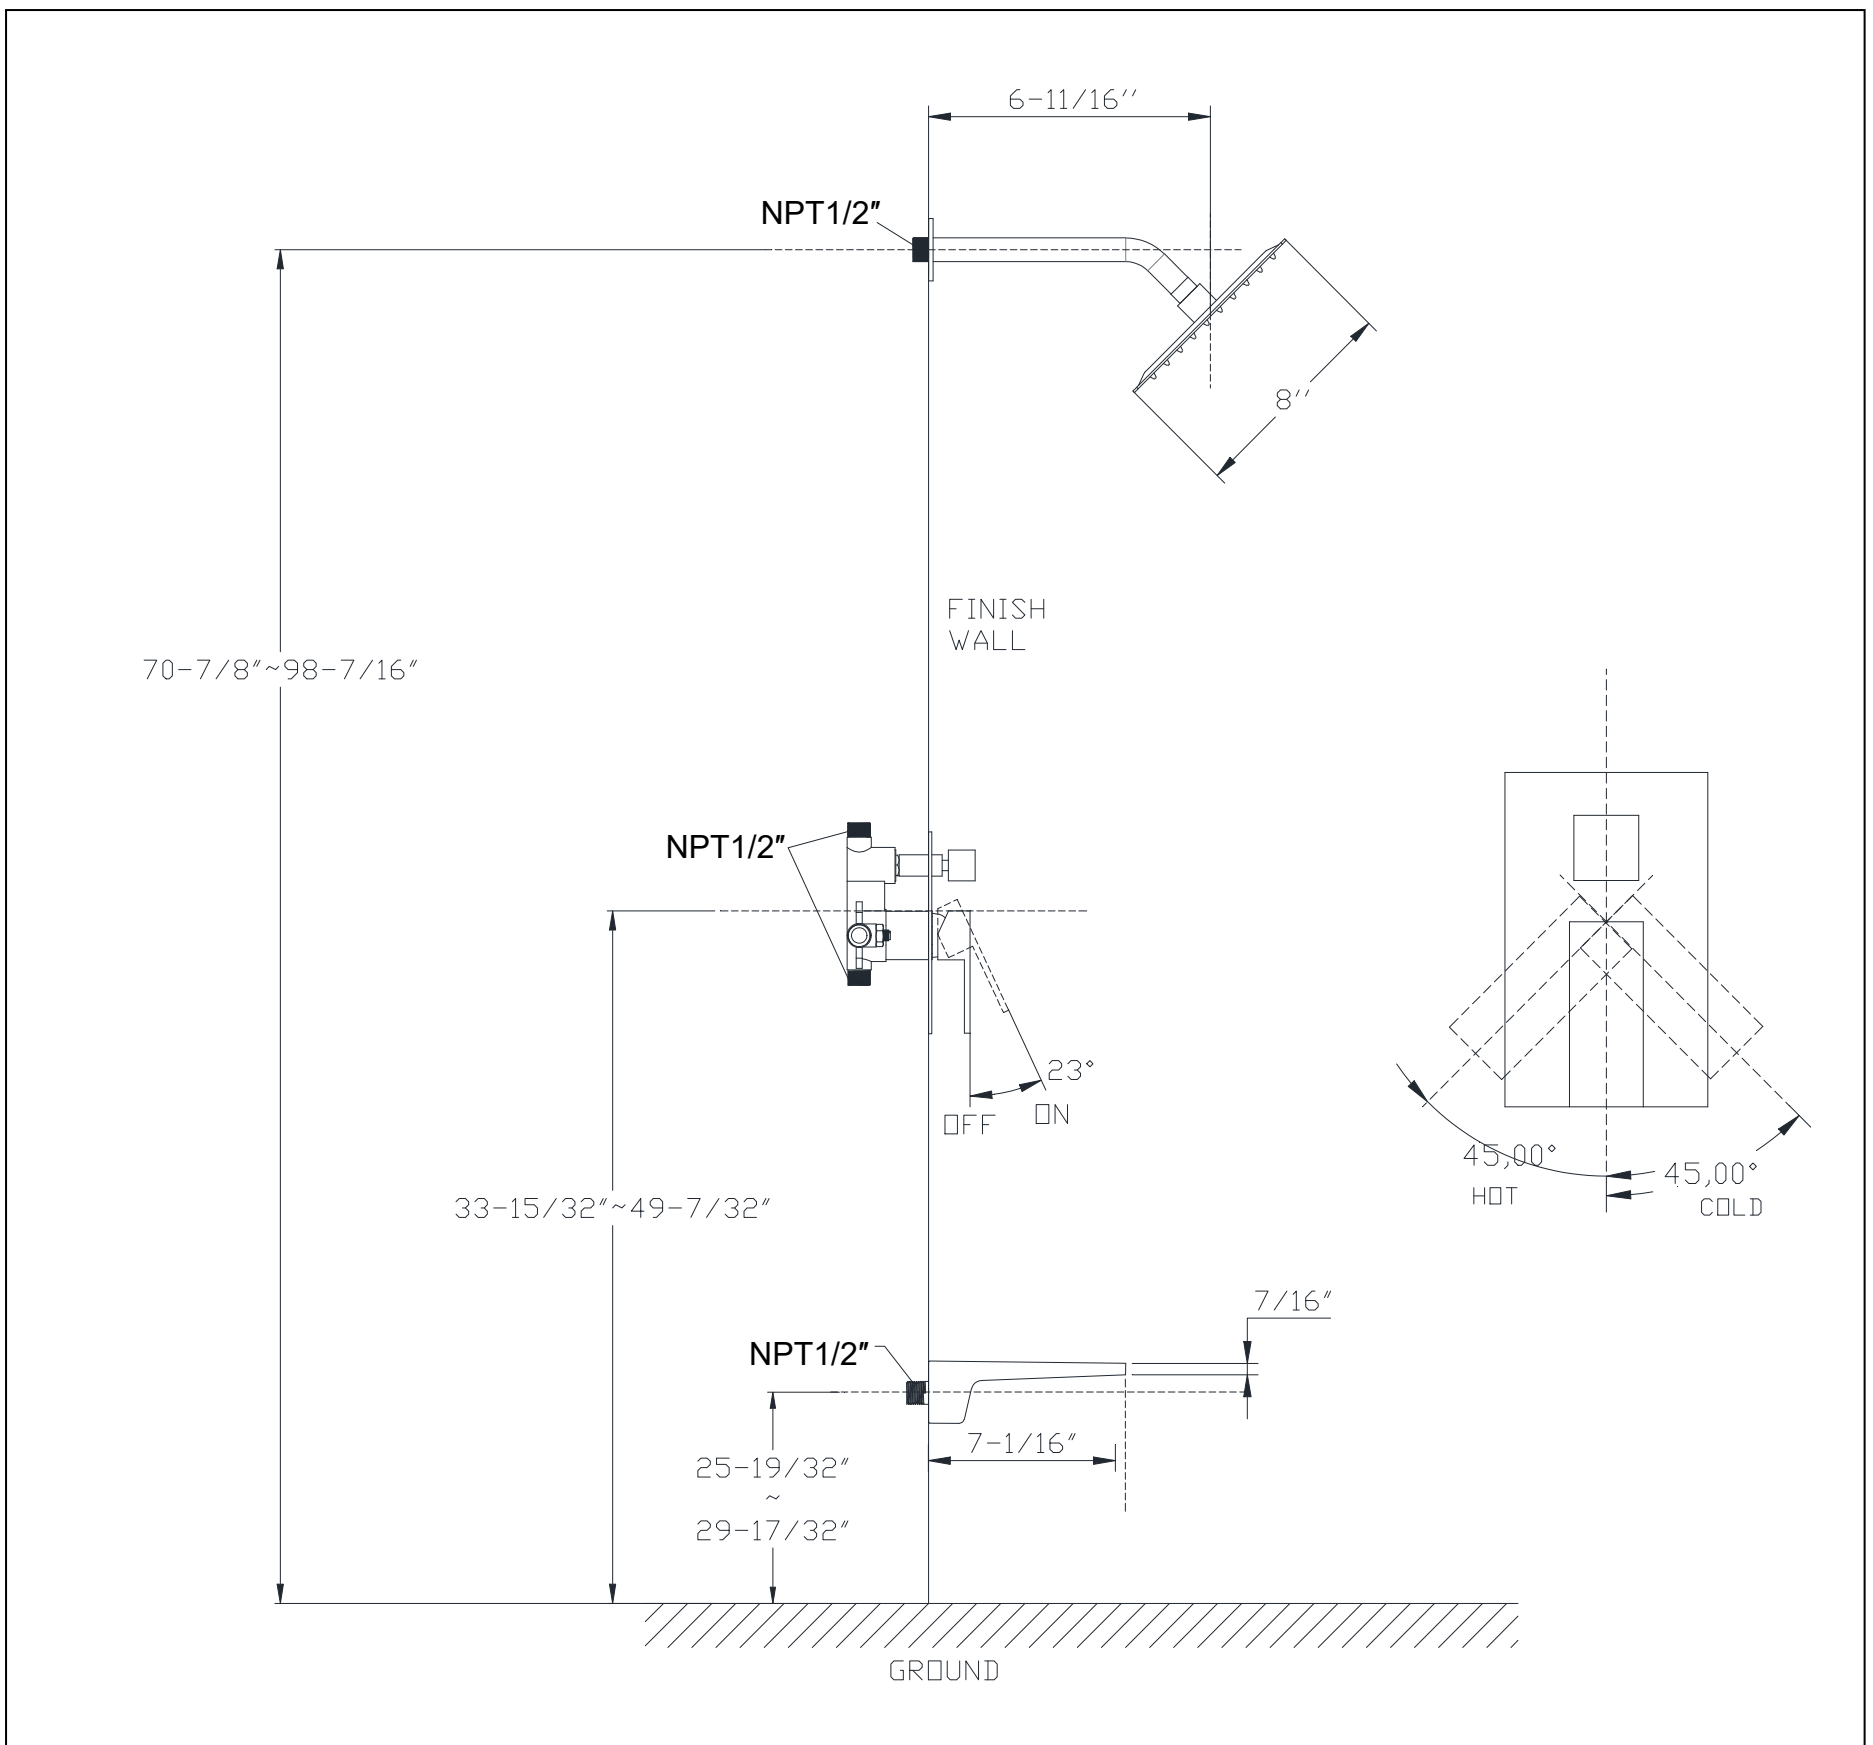

SIDE VIEW OF SHOWER

INSTALLATION STEPS

1. BEFORE PROCEEDING




WARNING: Before beginning any installation or operation, read all instructions carefully. If you are unsure about installing this product, consult a licensed professional. This product must be installed in compliance with all applicable local and state plumbing and building codes. Professional assistance is strongly recommended.

2. SHUT OFF WATER SUPPLY

Locate the water supply inlets and turn off the corresponding water supply valves, typically located under the sink or near the water meter. If replacing an existing unit, remove the old unit and thoroughly clean the mounting surface to ensure proper installation

3. CHECKING THE CONTENTS OF THE BOX

Upon opening the box, verify that all the listed components are included.

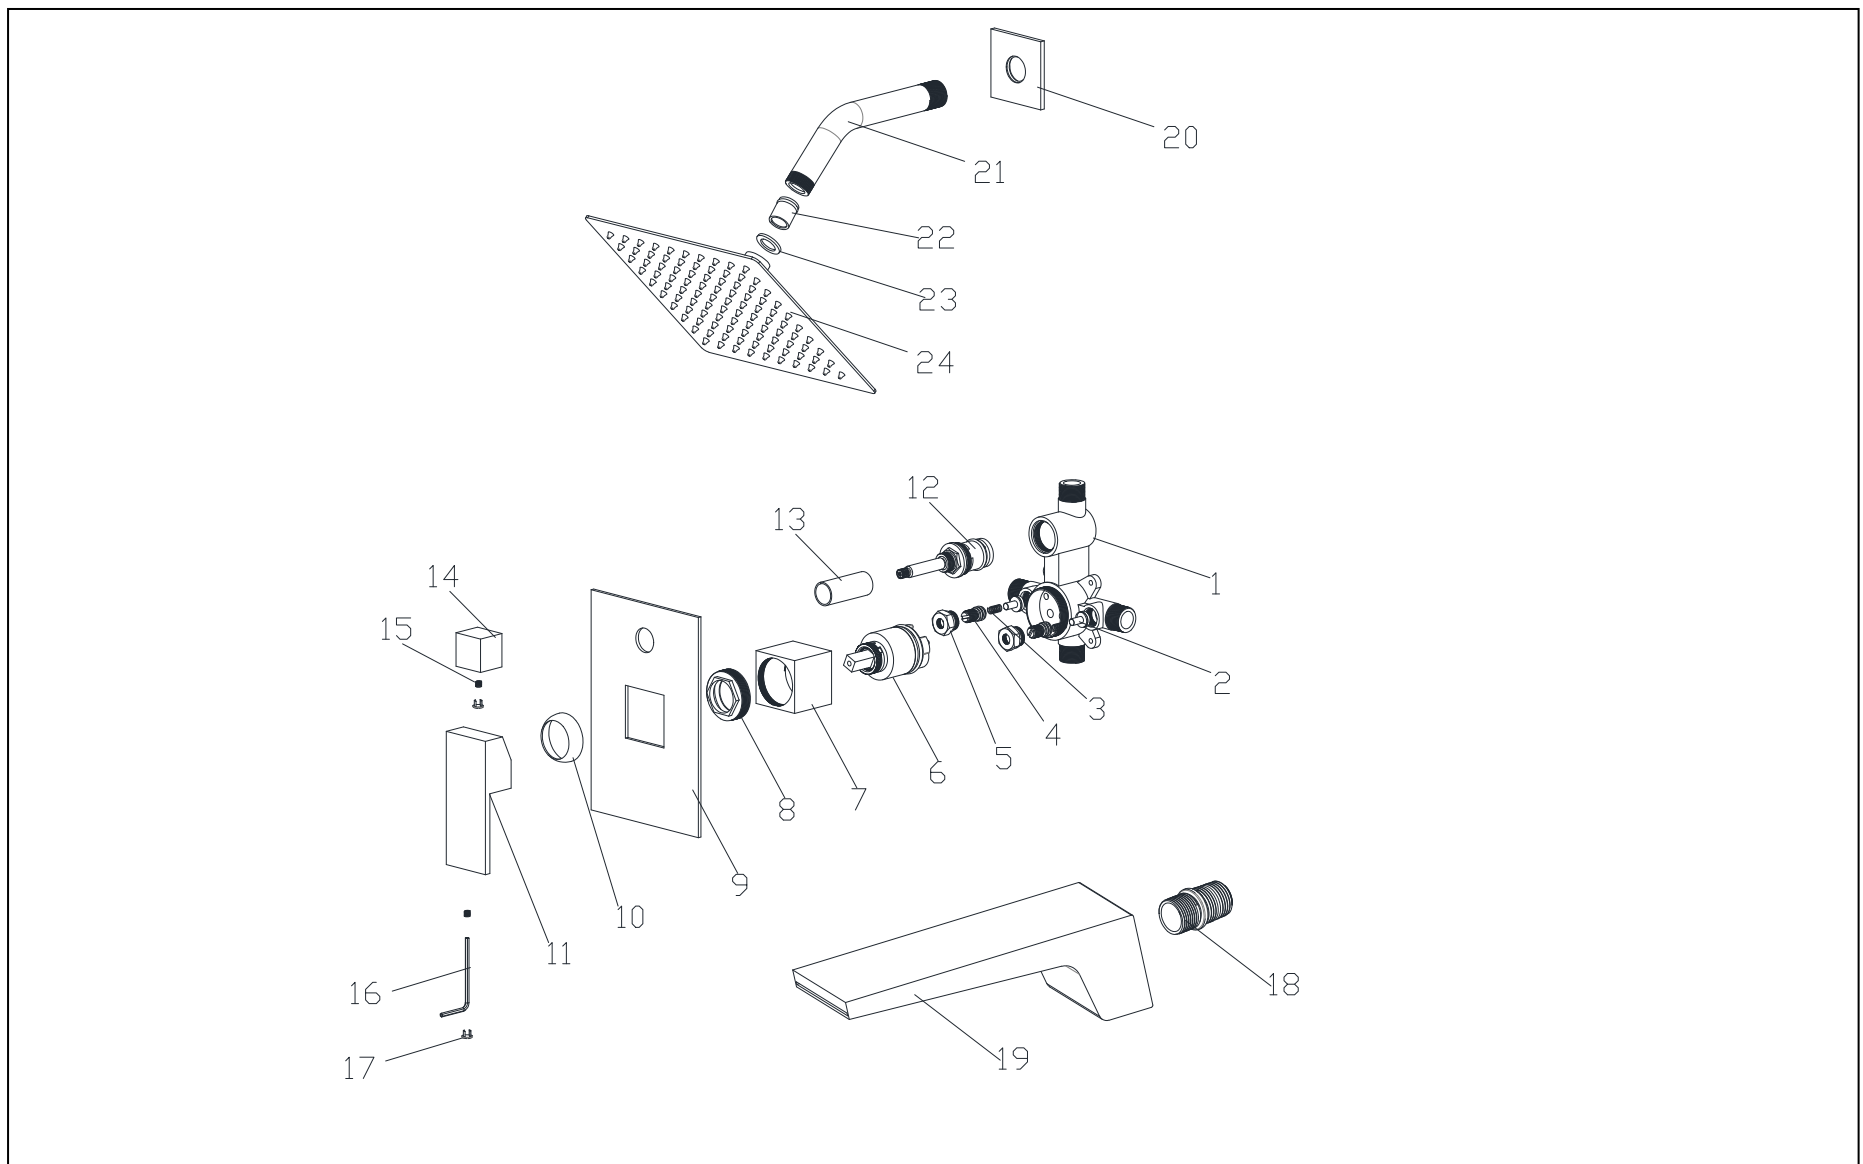

| NO | ITEM NAME | MATERIAL | QTY | PART NO. | NO | ITEM NAME | MATERIAL | QTY | PART NO. |
|----|----------------------------|---------------|-----|------------|----|-------------------|---------------|-----|------------|
| 1 | Rough-in Valve | HPB59-1 | 1 | PVB32260PB | 13 | Diverter Sleeve | HPB59-1 | 1 | PSL32181XX |
| 2 | Check Valve | HPB59-1 | 2 | PSA32100PB | 14 | Diverter Knob | Zn alloy No.3 | 1 | PHD00001XX |
| 3 | Spring | SUS304 | 2 | PSA32101XX | 15 | Set Screw | SUS304 | 2 | PSC05050XX |
| 4 | Check Valve Screw | HPB59-1 | 2 | PSC32100PB | 16 | Allen Wrench | Fe45# | 1 | PSA00003XX |
| 5 | Check Valve Nut | HPB59-1 | 2 | PNT32100XX | 17 | Screw Cover | ABS | 2 | PSA00002XX |
| 6 | Pressure Balance Cartridge | ASSEMBLE | 1 | PCT40009XX | 18 | Spout Shank | HPB59-1 | 1 | PCN21291XX |
| 7 | Sleeve | HPB59-1 | 1 | PSL32260XX | 19 | Tub Spout | SUS304 | 1 | PSP31340XX |
| 8 | Bonnet | HPB59-1 | 1 | PSC43125XX | 20 | Shower Arm Flange | Zn alloy No.3 | 1 | PFC00003XX |
| 9 | Escutcheon | SUS304 | 1 | PCP32180XX | 21 | Shower Arm | SUS304 | 1 | PPI32181XX |
| 10 | Bonnet Cap | HPB59-1 | 1 | PFC37125XX | 22 | Check Valve | ASSEMBLE | 1 | PAE00043XX |
| 11 | Handle(lever) | Zn Alloy No.3 | 1 | PHD00008XX | 23 | Rubber Washer | NBR | 1 | PRW19020XX |
| 12 | Diverter Cartridge | ASSEMBLE | 1 | PCT00001XX | 24 | Shower Head | ASSEMBLE | 1 | PTR00001XX |

If any of these items are missing, please contact SUMERAIN consumer service by email to: supports@sumerain.com

4. PLANNING AND INSTALLATION INSTRUCTIONS



Attentions: The shower system must be installed, flushed, and inspected in accordance with applicable regulations to ensure proper functionality.



The dimensions of the shower setup must be measured and adjusted individually to ensure proper installation. The maximum operating pressure at the control valve is 101.5 PSI, with a recommended operating pressure of 43.5 PSI. The maximum hot water temperature is 140°F.

5. ROUGH-IN VALVE INSTALLATION


5.1 Construct a sturdy wooden mounting stringer capable of supporting the rough-in valve. Measure and position the stringer so that the distance from the front of the finished wall to the stringer is 2-9/16 inches, with a tolerance of $\pm 13/32$ inches.




Note: Exceeding the specified distance range may result in significant reconstruction costs or the need for customized extension parts.

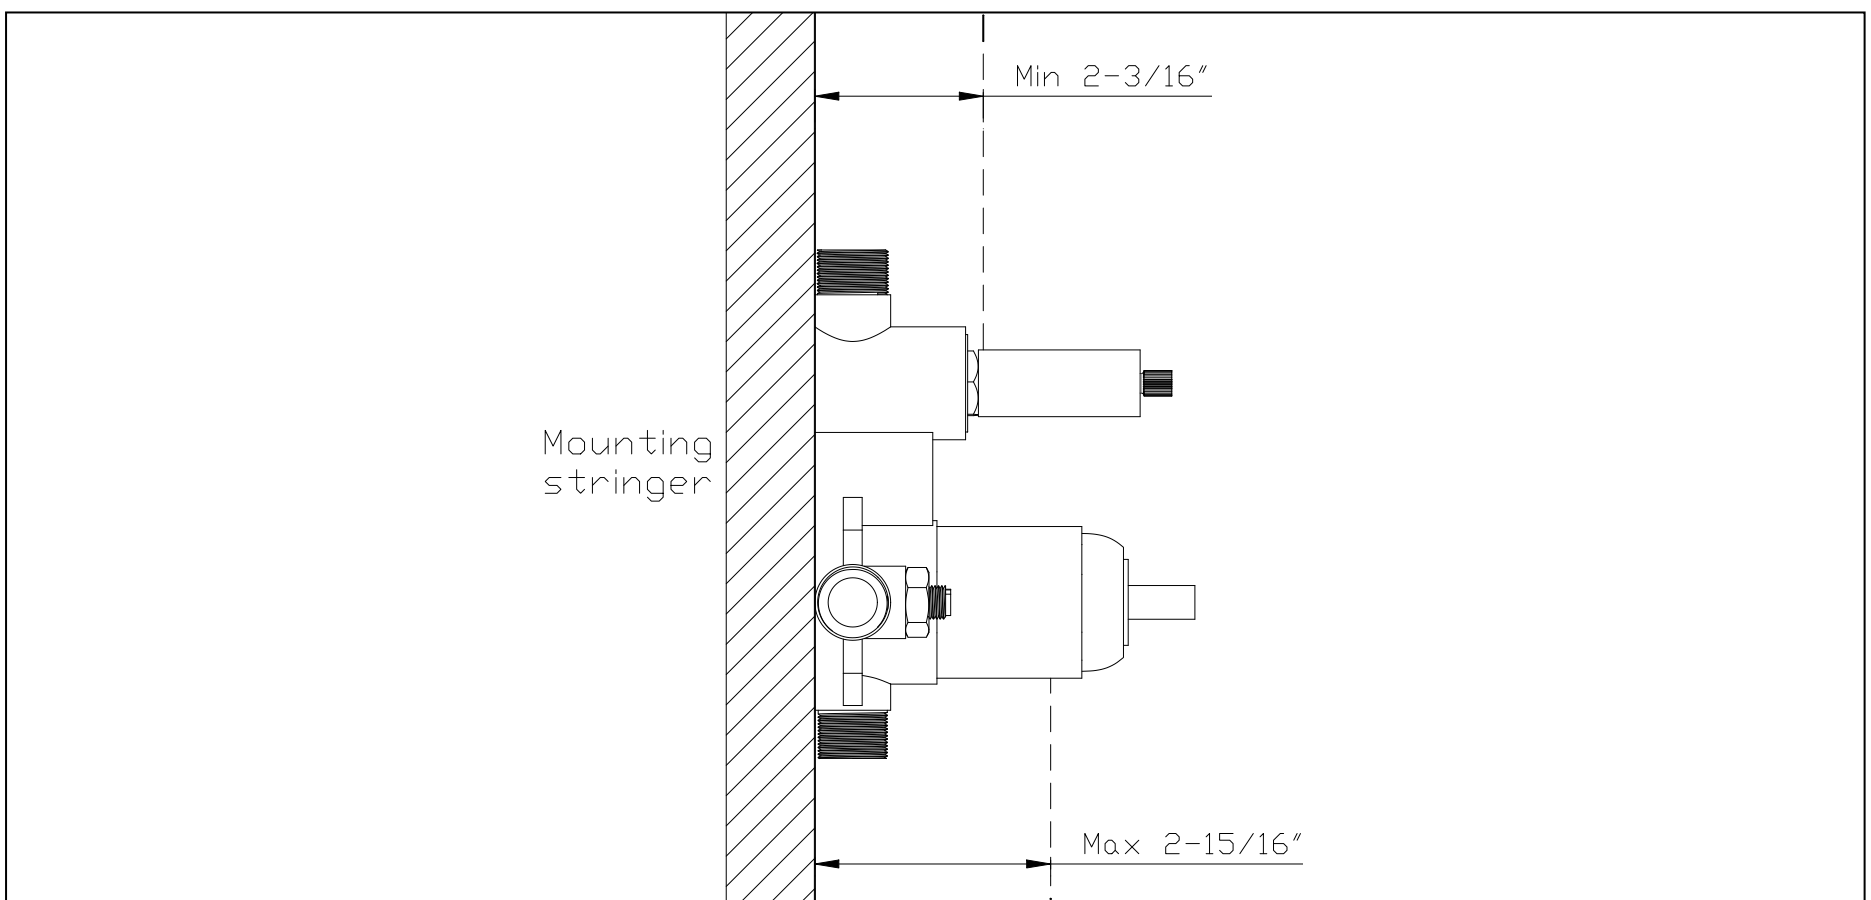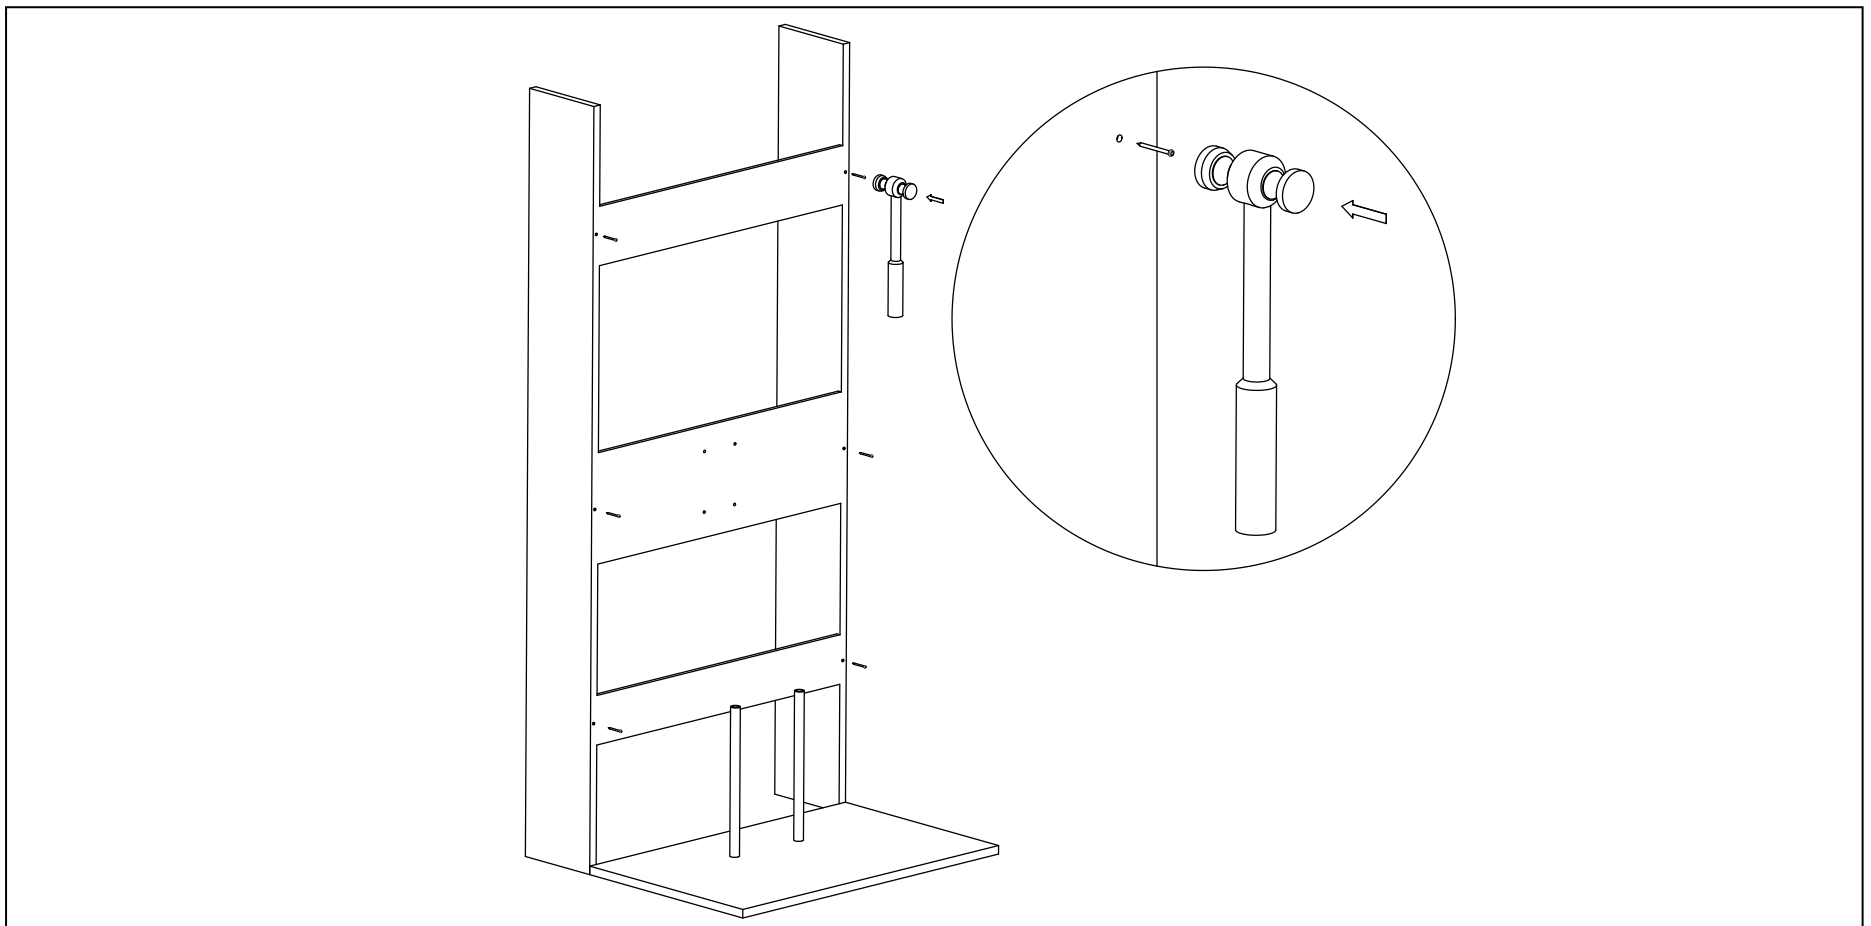

5.2 Turn on the shut-off valve to flush the hot and cold water supply lines before connecting them to the valve body. Allow the water to run for 3-5 minutes to remove dirt and debris. Shut off the water supply again after flushing.

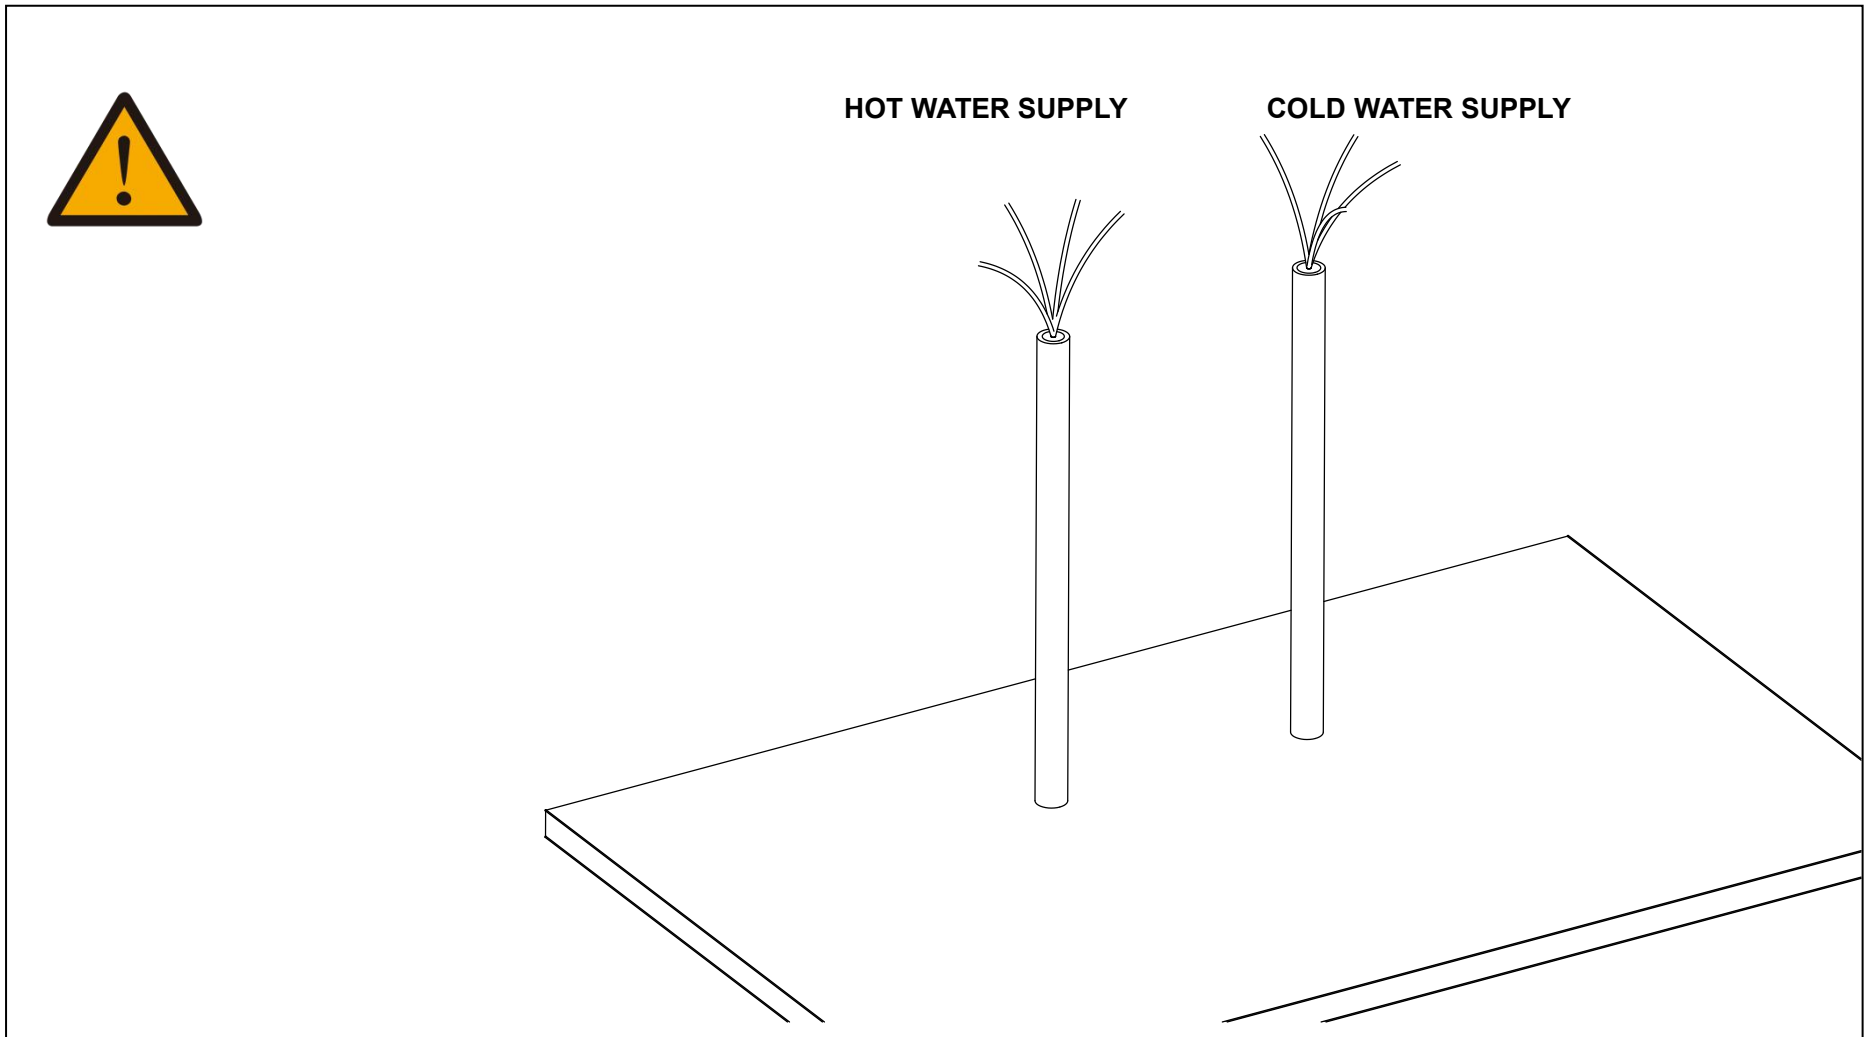

5.3 Position and level the valve assembly using a leveling tool. Mark the mounting holes for the rough-in valve on the mounting rack.

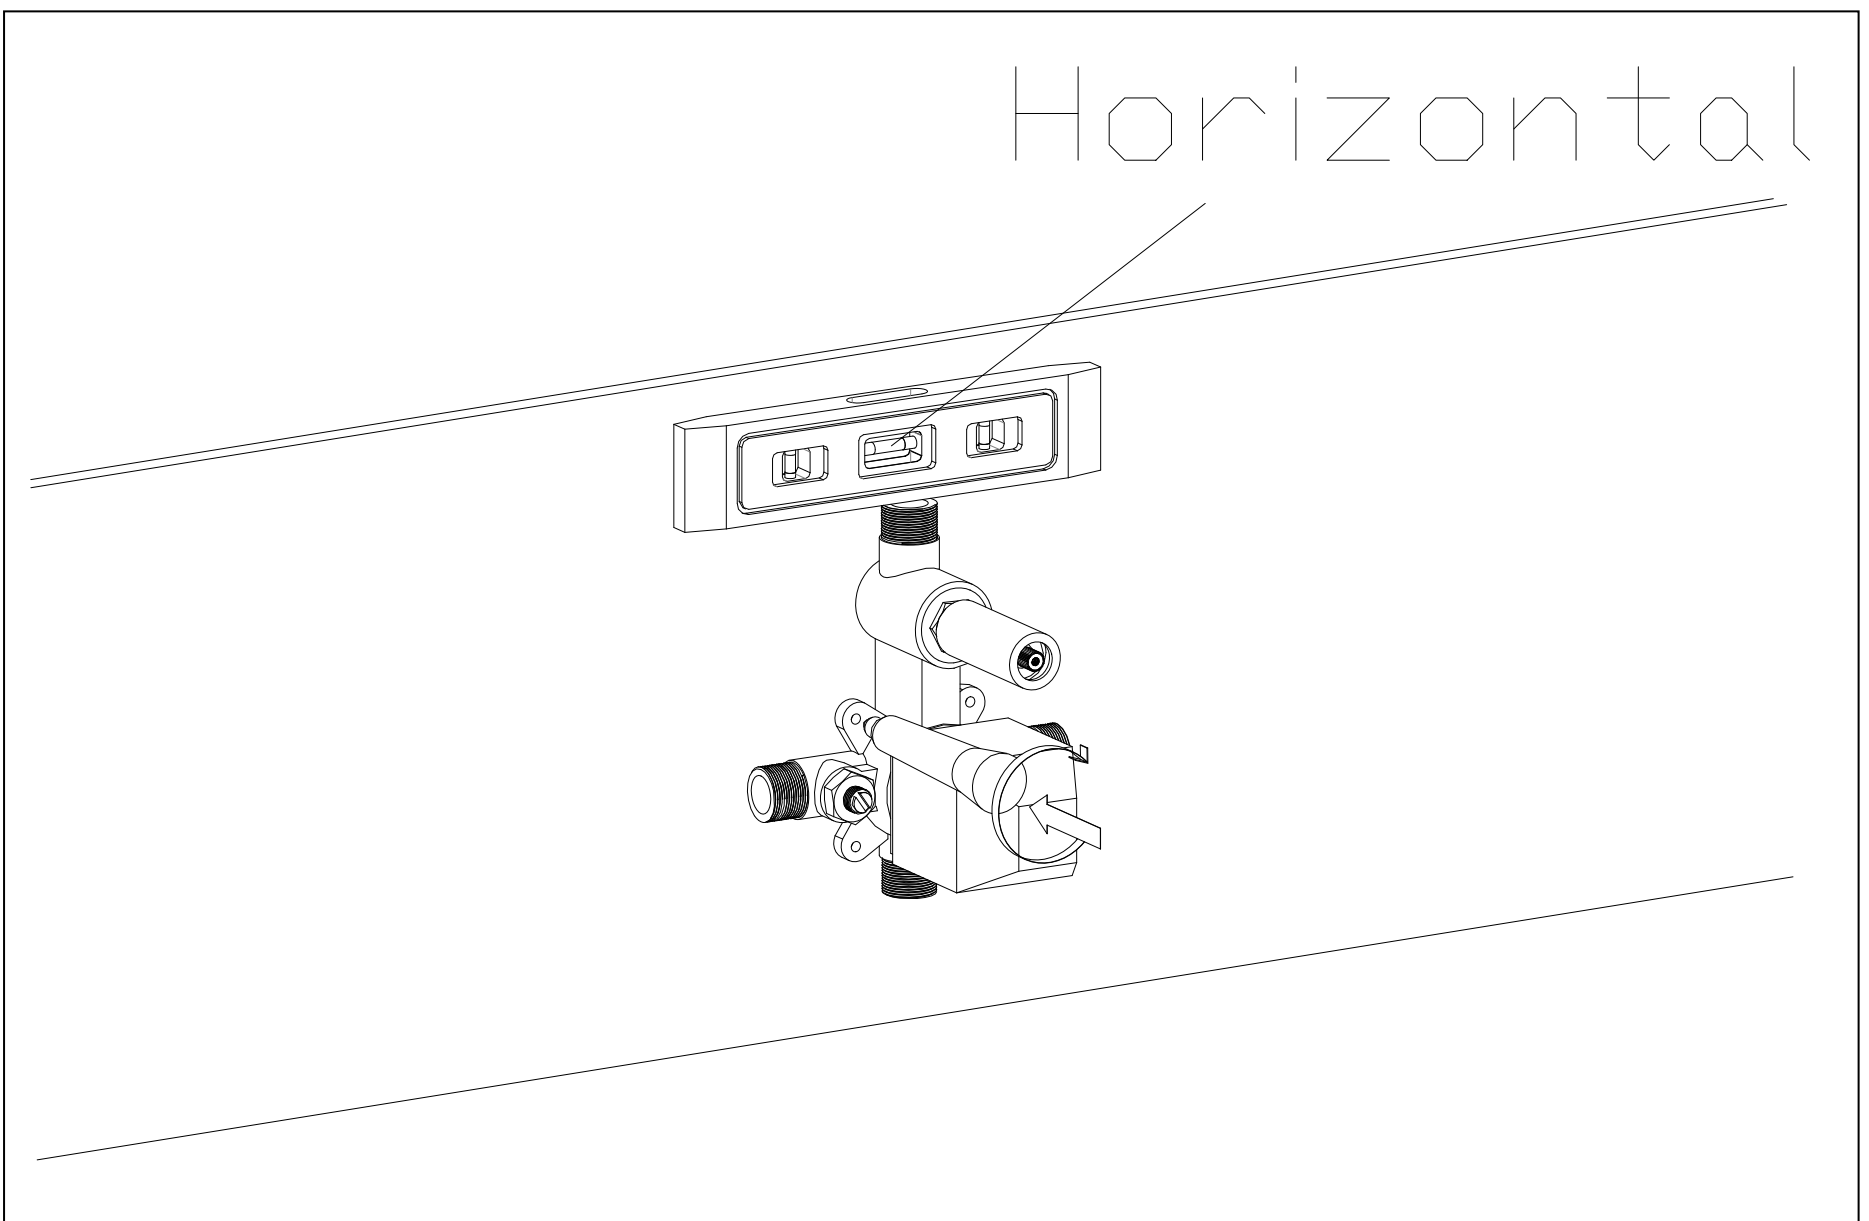


5.4 Connect the valve body to the water supply lines using the appropriate fittings for your valve body type (copper tubing, iron pipe, or PEX).


Note: For PEX installations, ensure you use the correct fitting for crimping and the proper tool for cold expansion.

For copper tubing:


5.4.1(a) Remove the pressure balance cartridge, diverter cartridge, and check valve from the valve body before soldering.

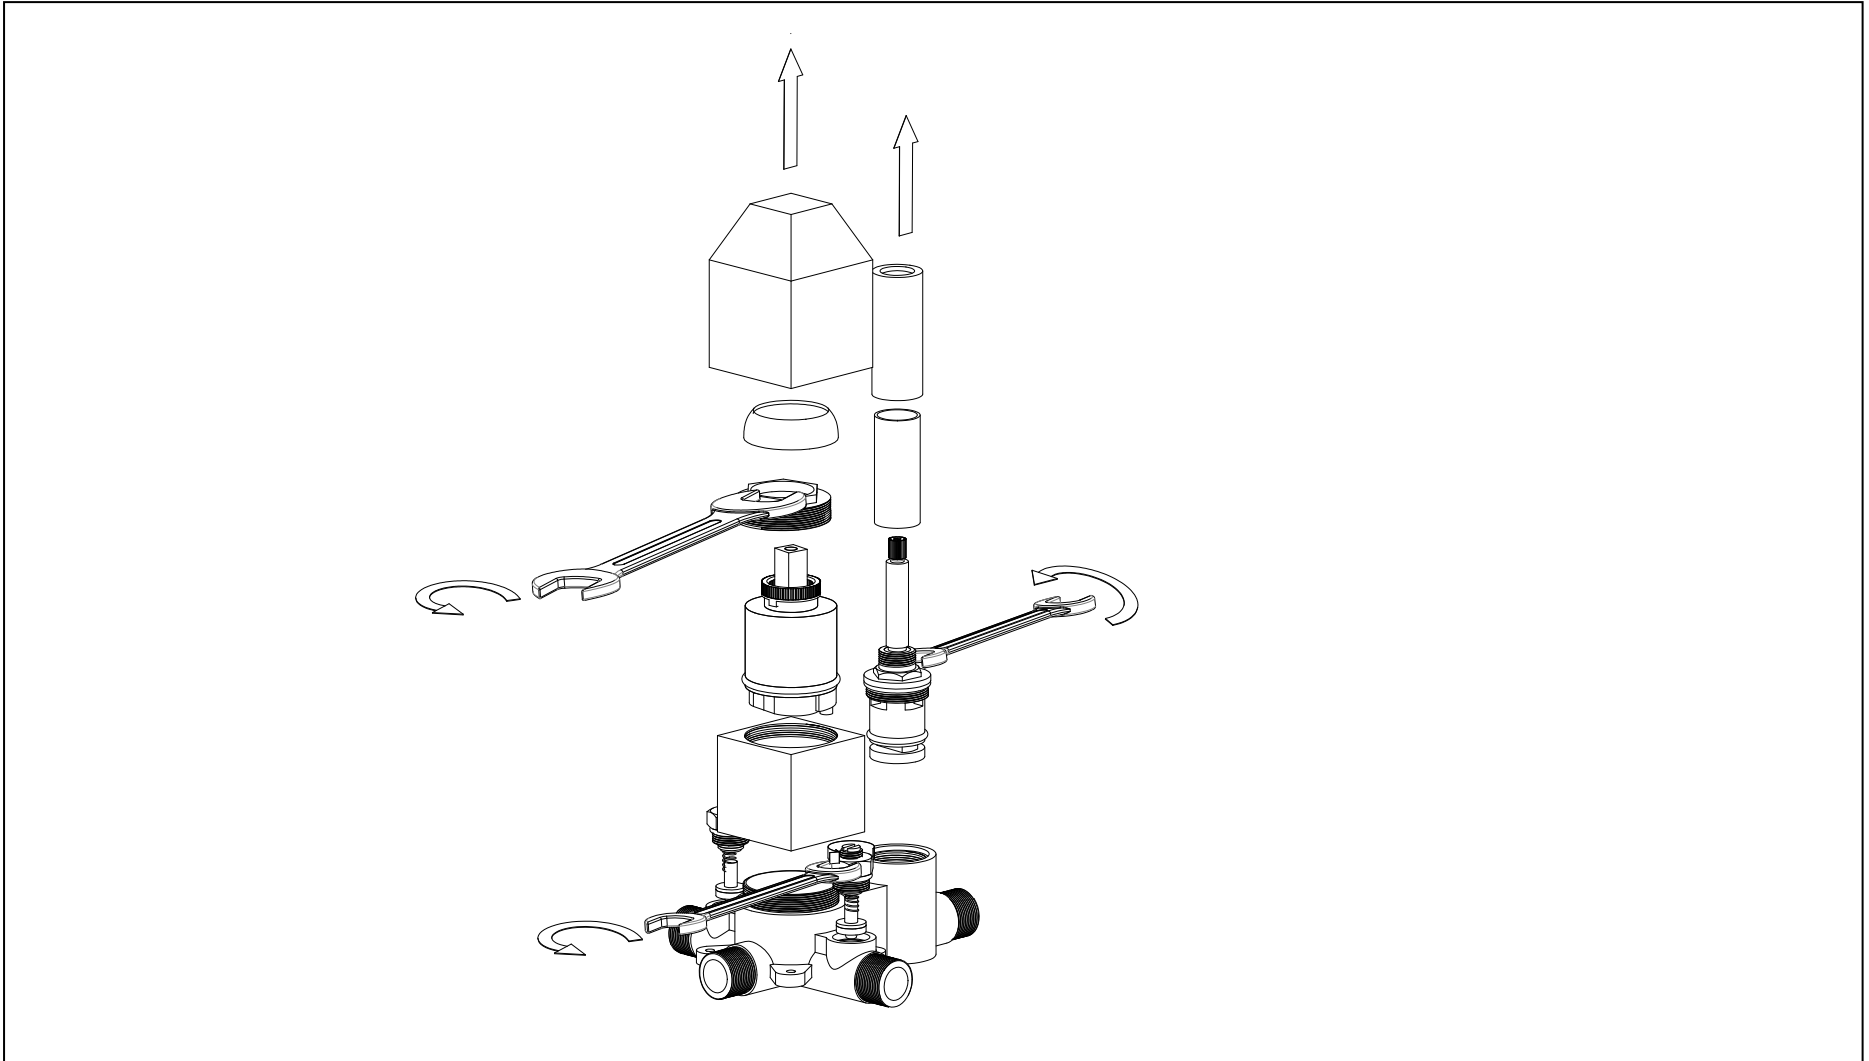


5.4.2(a) Solder the copper tubing to the hot and cold water inlets of the valve body.

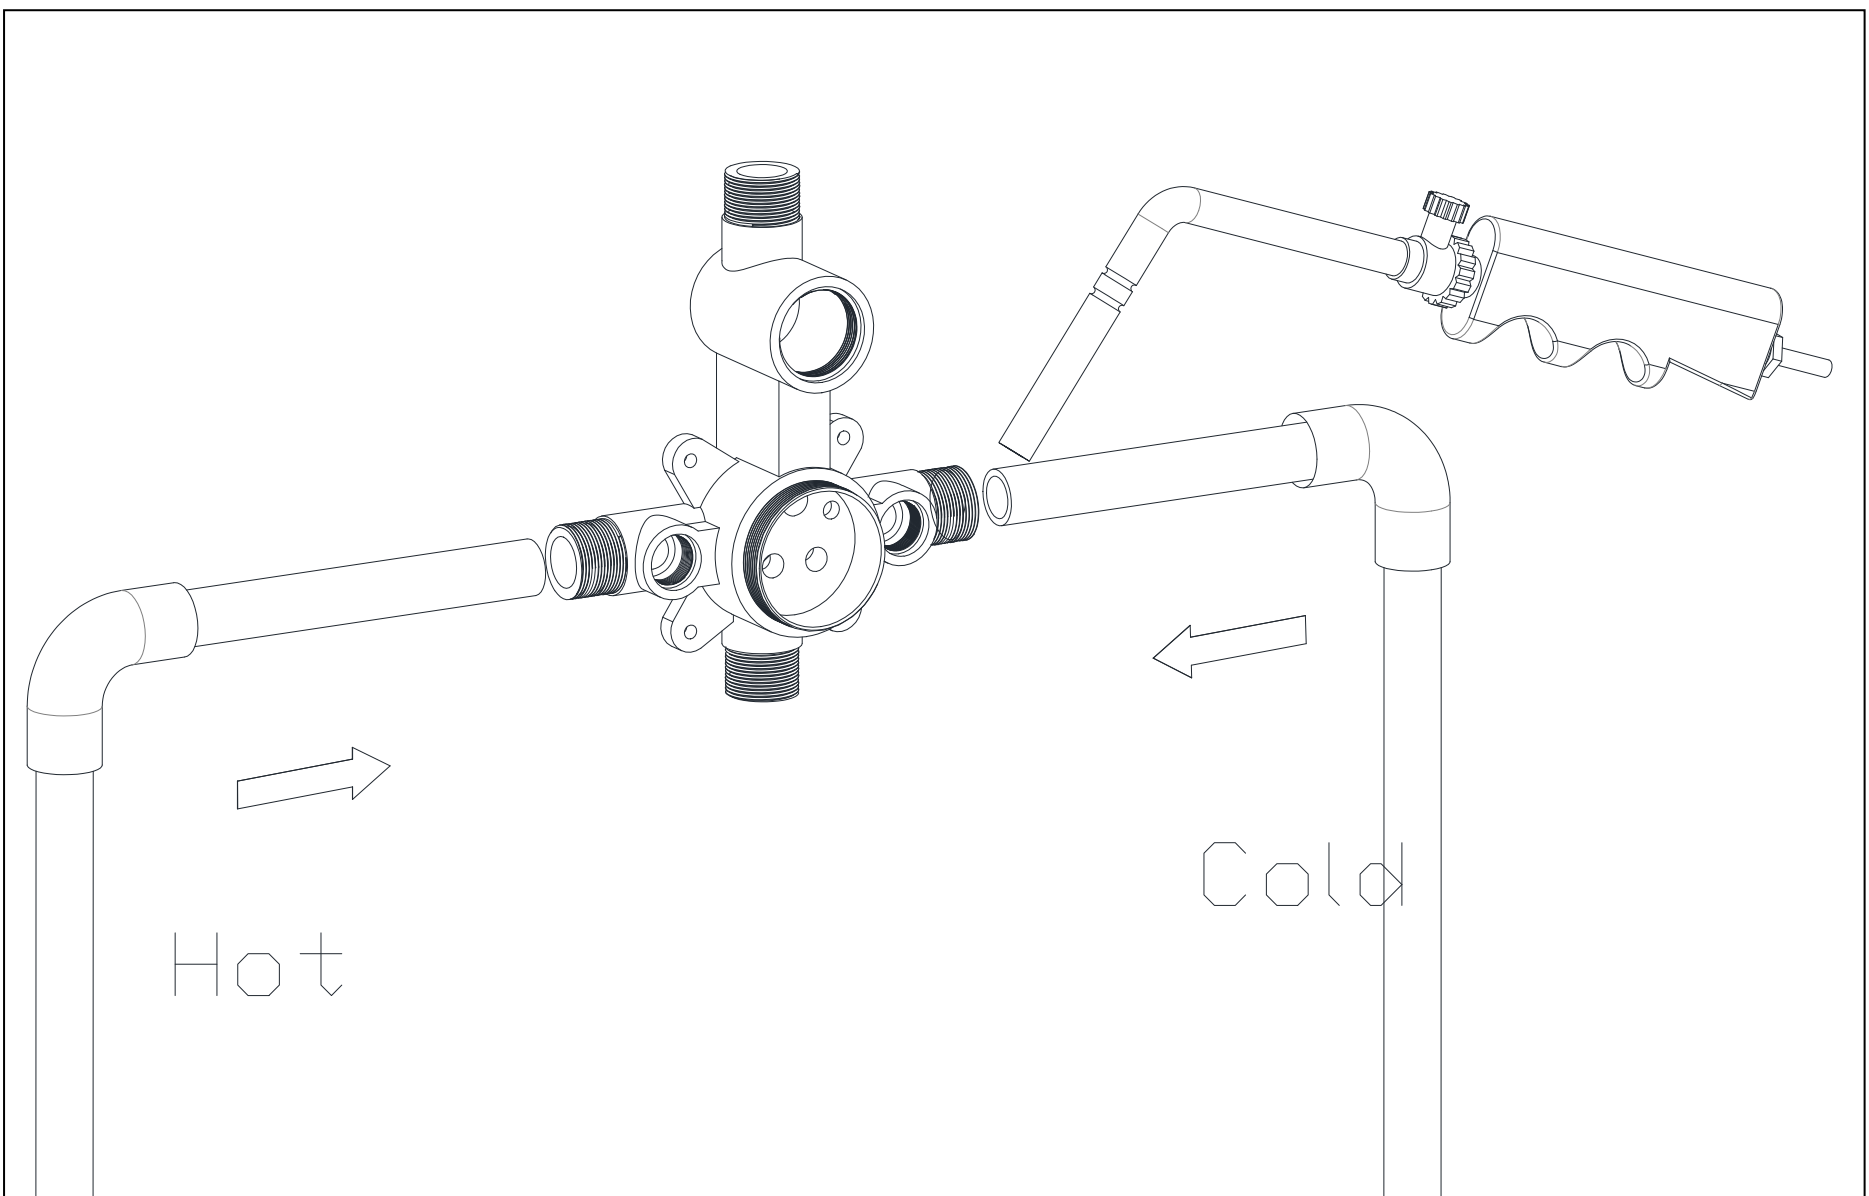


5.4.3(a) Solder the copper tubing to the top shower outlet and the bottom outlet of the valve body, then securely tighten the plugs.

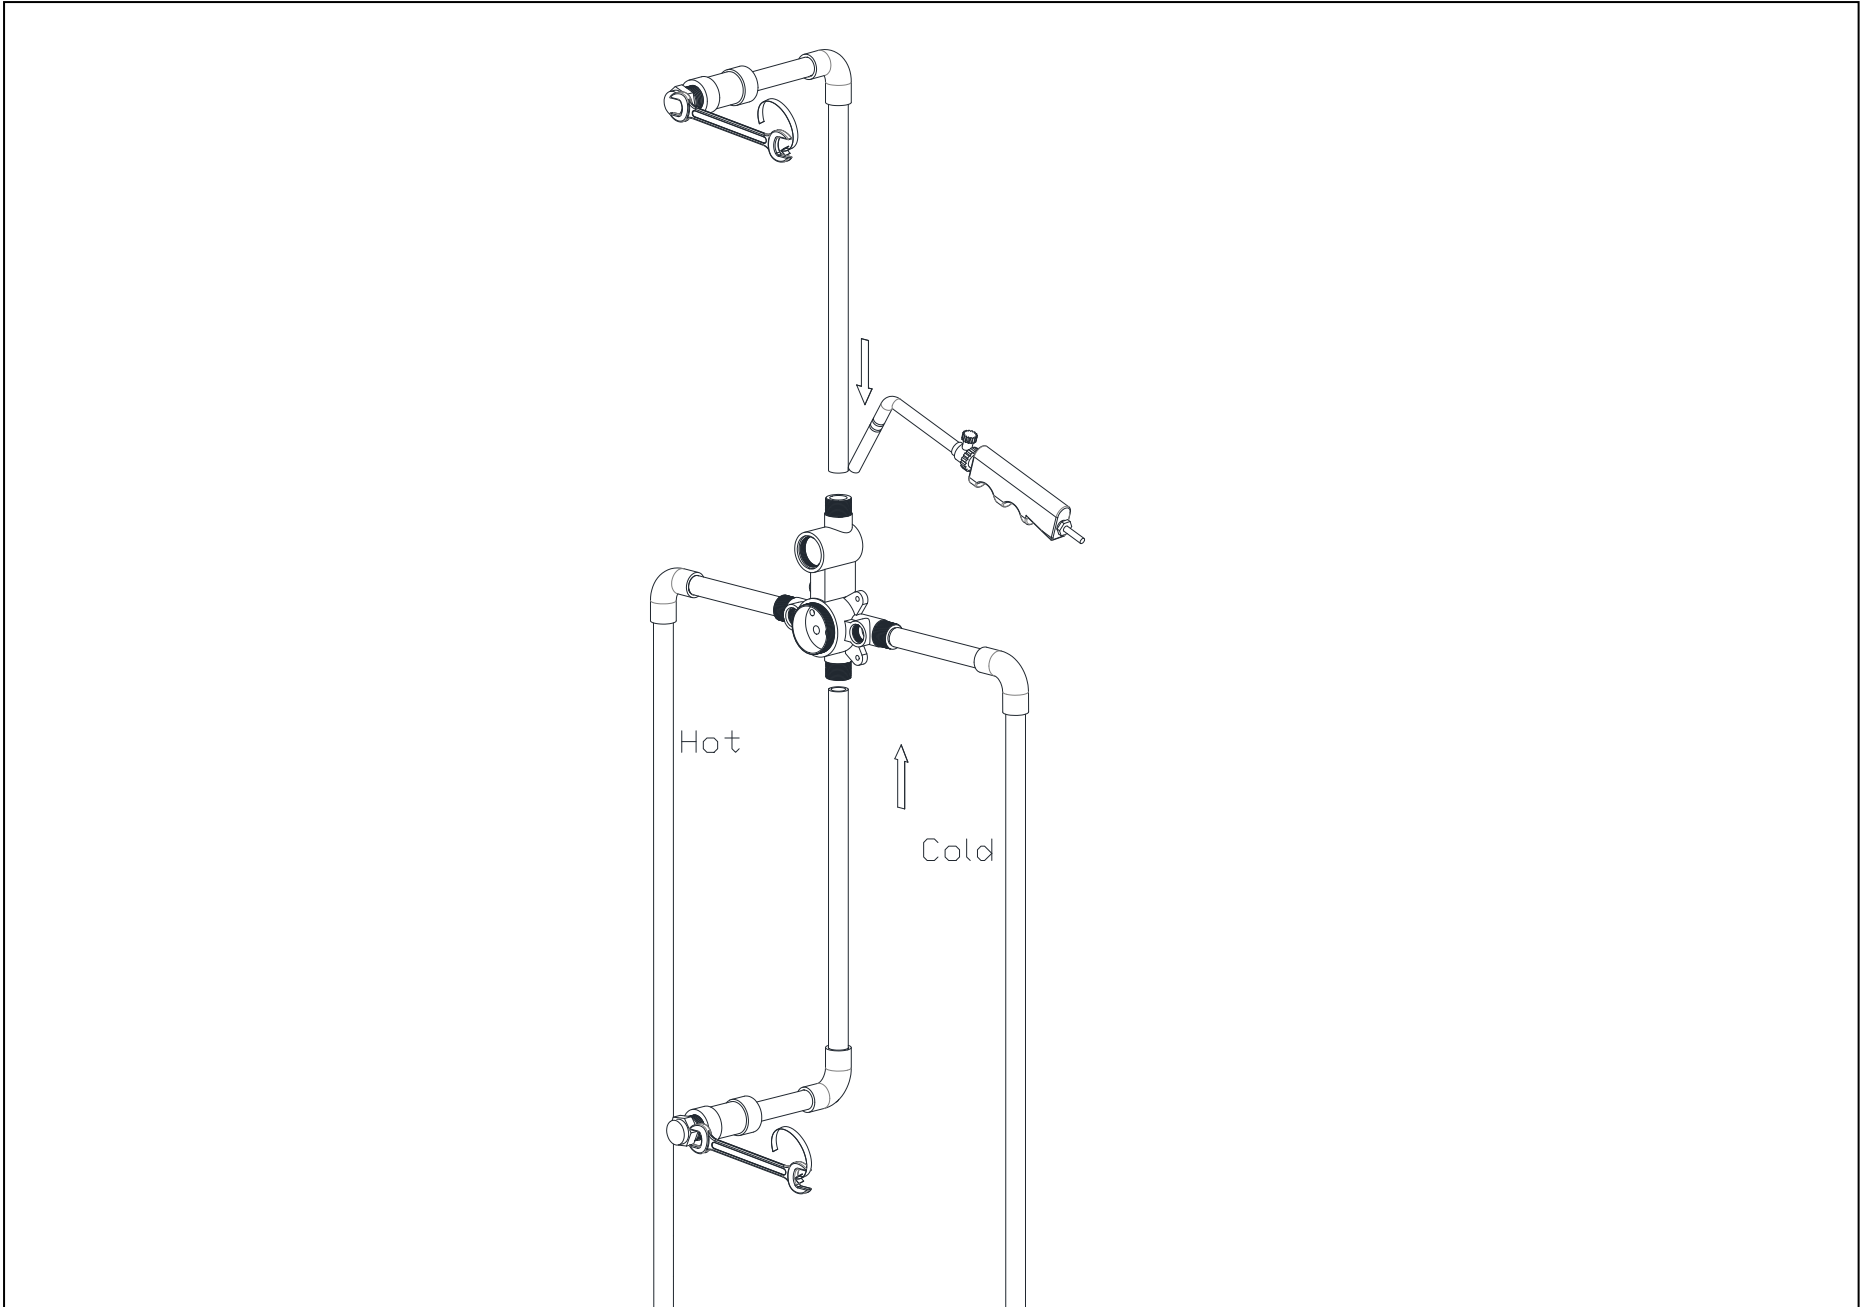


5.4.4(a) Reassemble the rough-in valve.

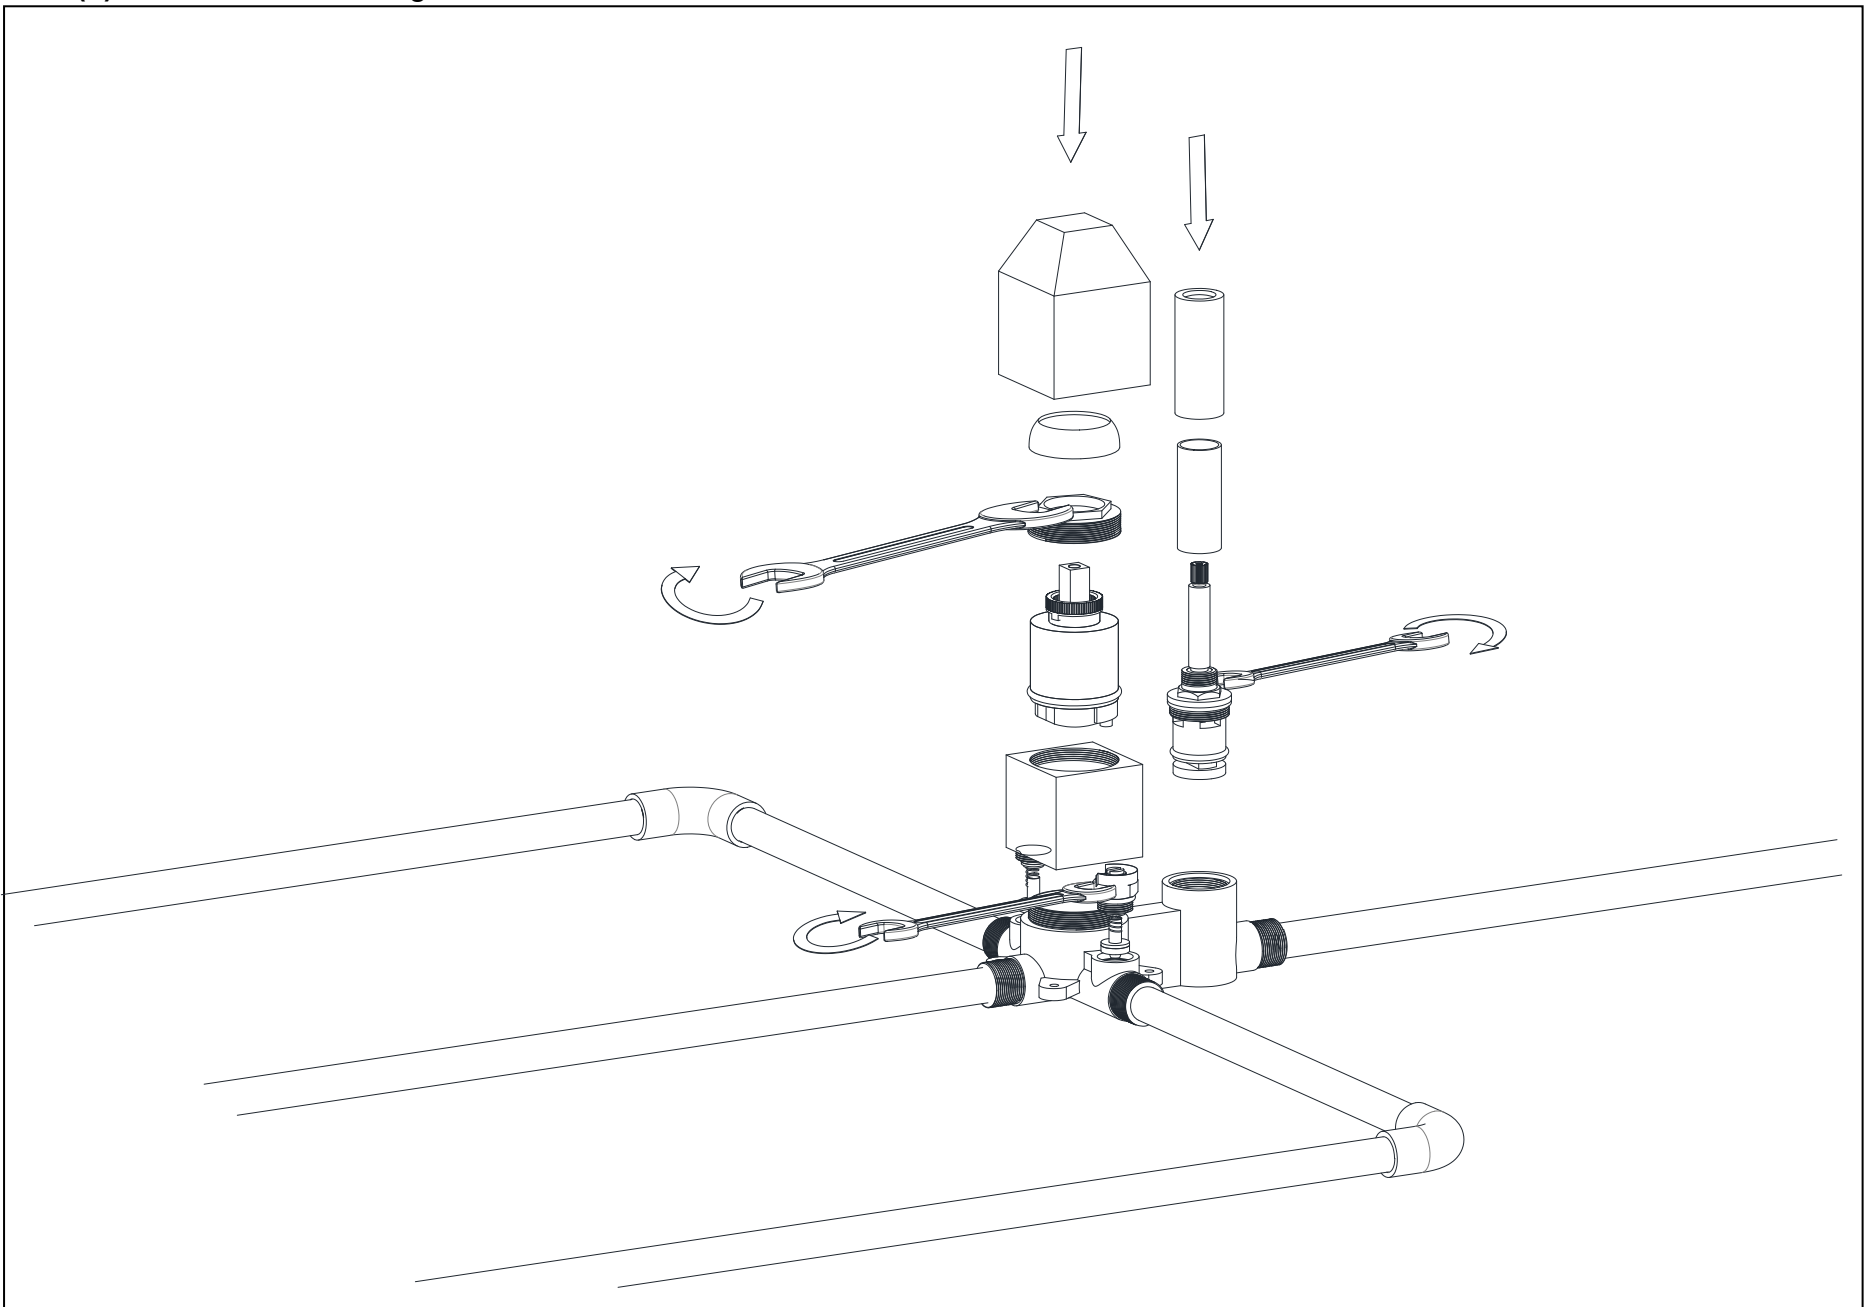


5.4.5 Position and level the valve assembly, then secure it to the mounting bracket using screws and anchors.

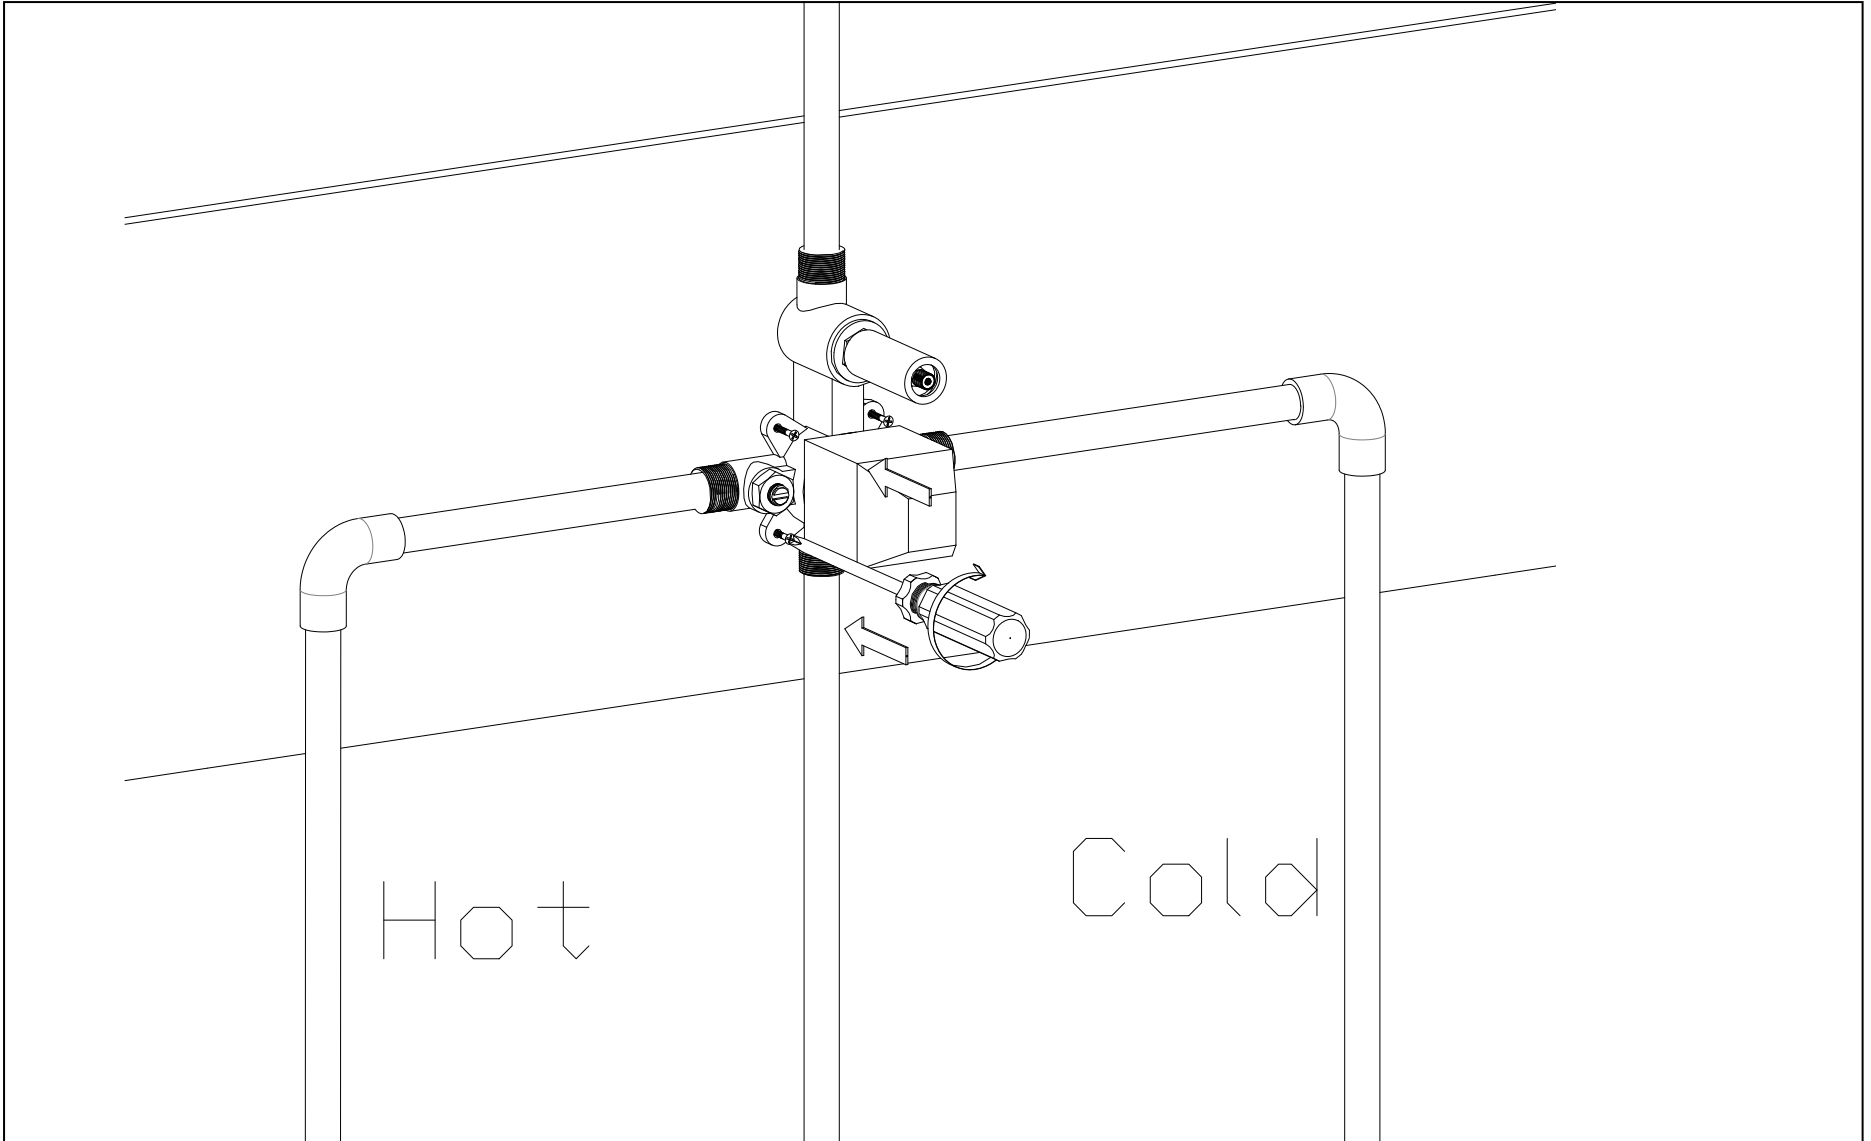


5.4.6 The rough-in valve installation is complete.

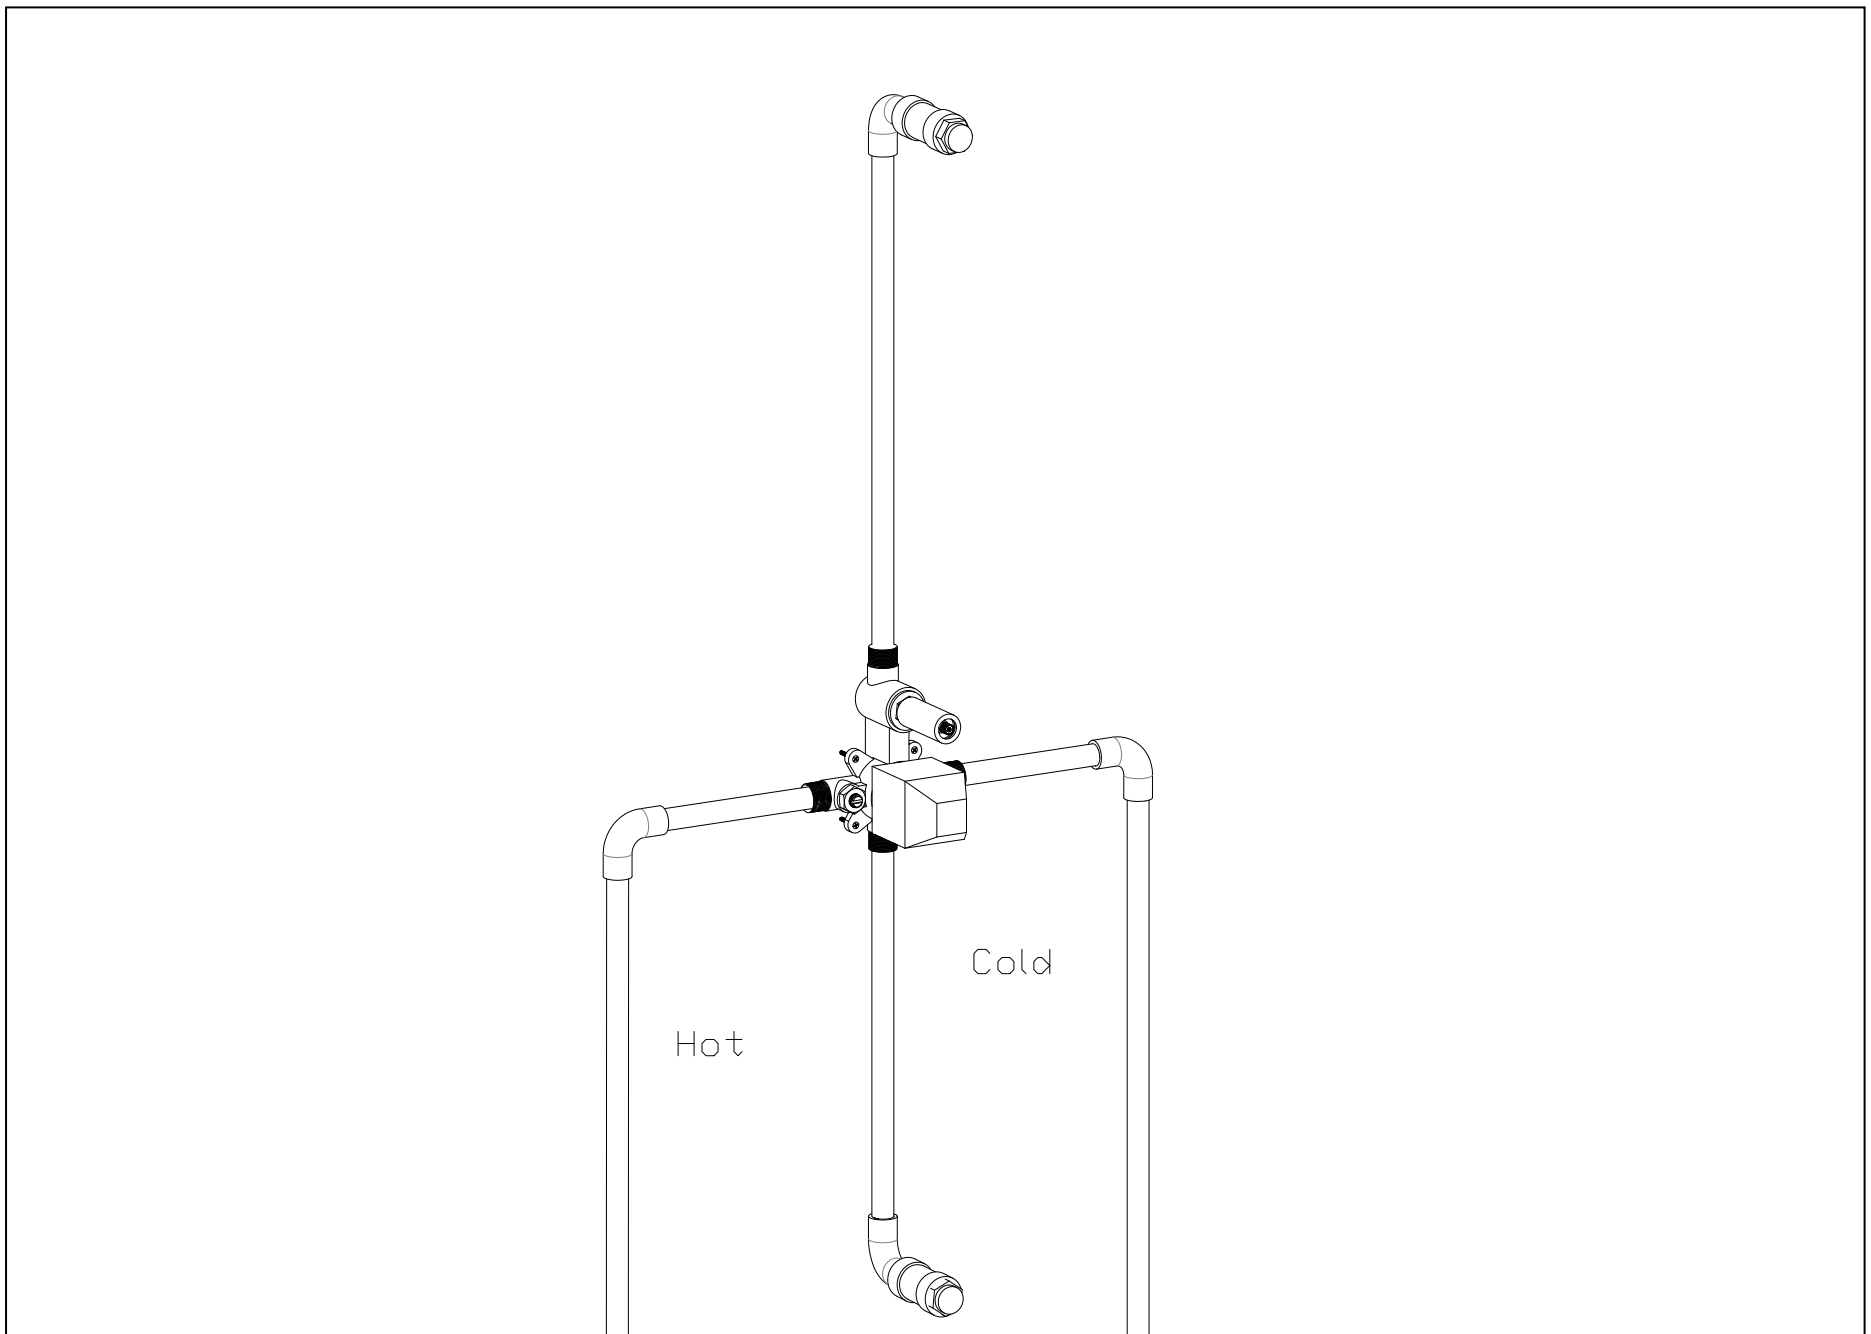

5.4.7(b) If using PEX or PVC fittings, skip steps 5.4.1(a) through 5.4.4(a). Disassembling the valve body is not required. Apply Teflon tape to the valve body threads, and connect it to the supply and shower pipes using PEX fittings. Ensure hot water is on the left and cold water is on the right.

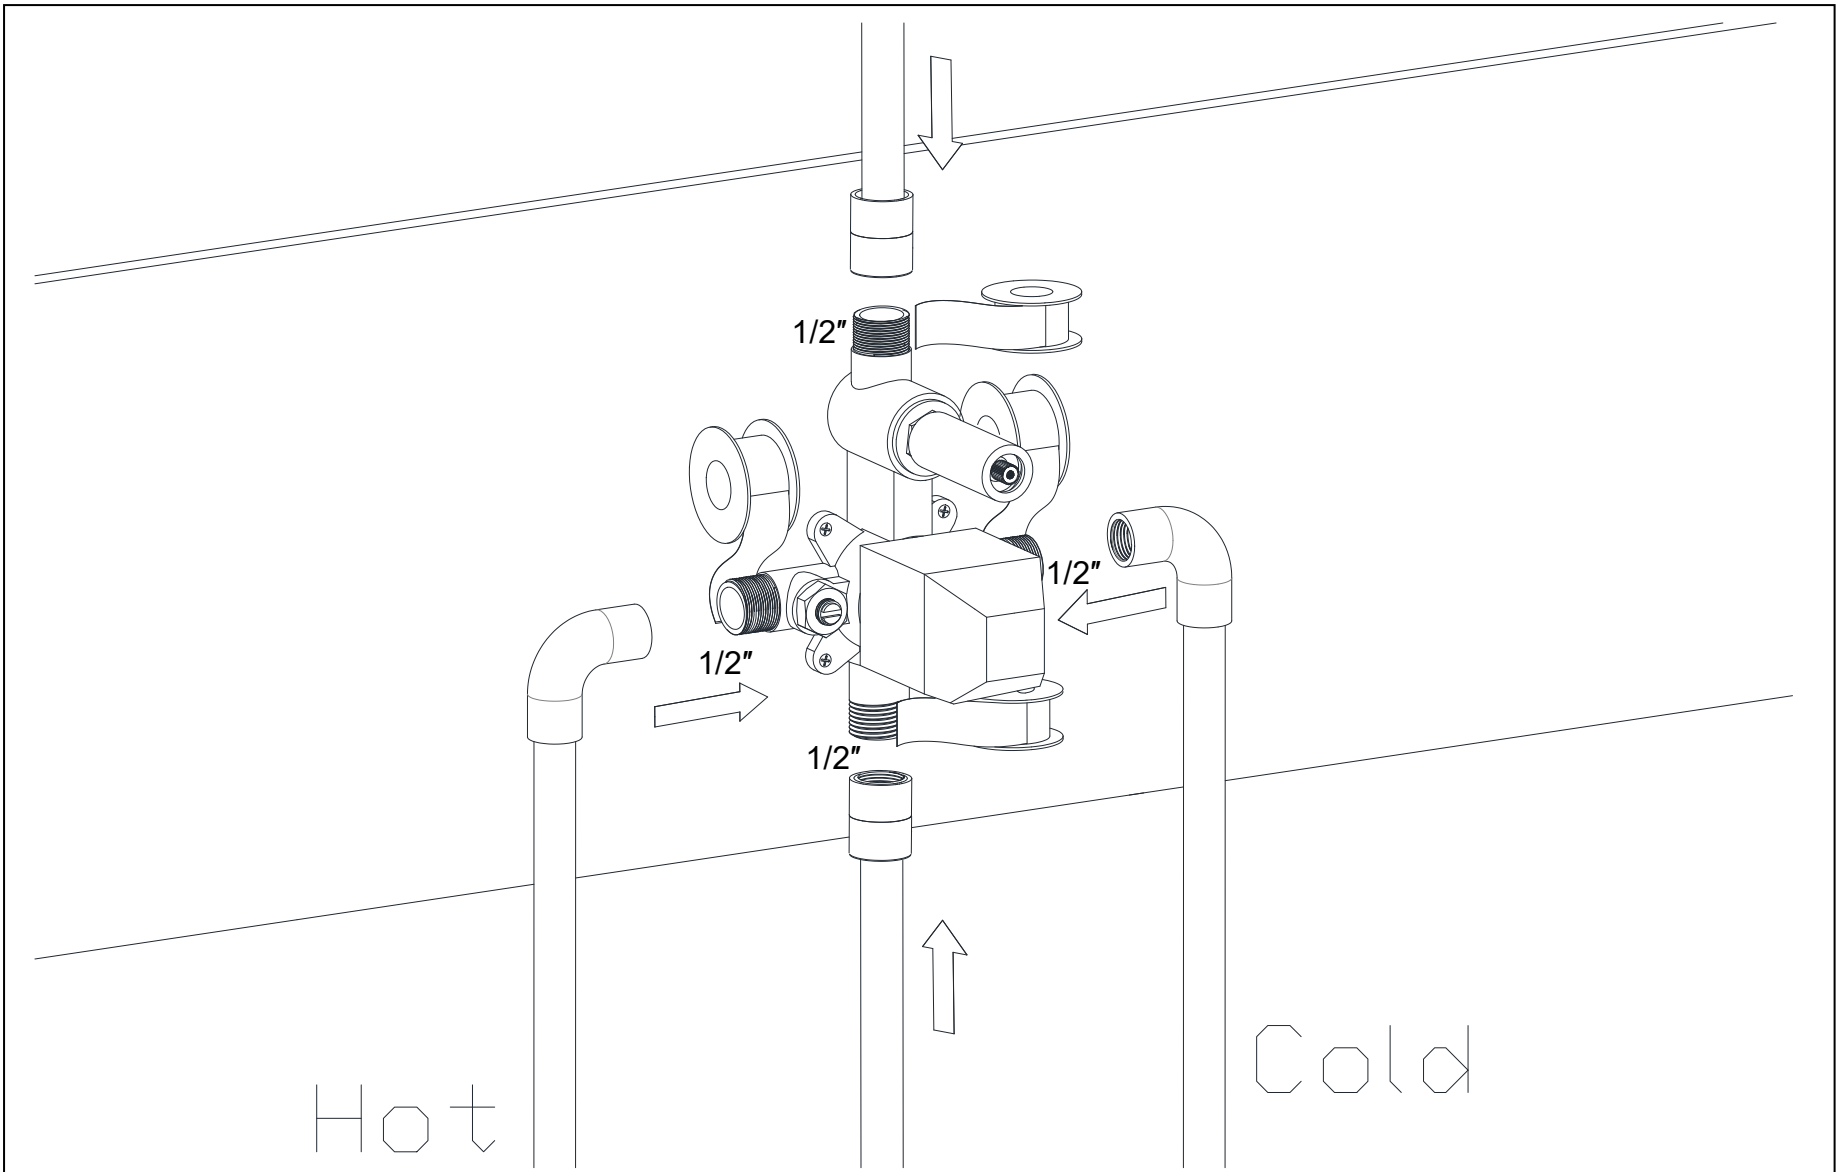


5.4.8(b) The rough-in valve installation is complete.

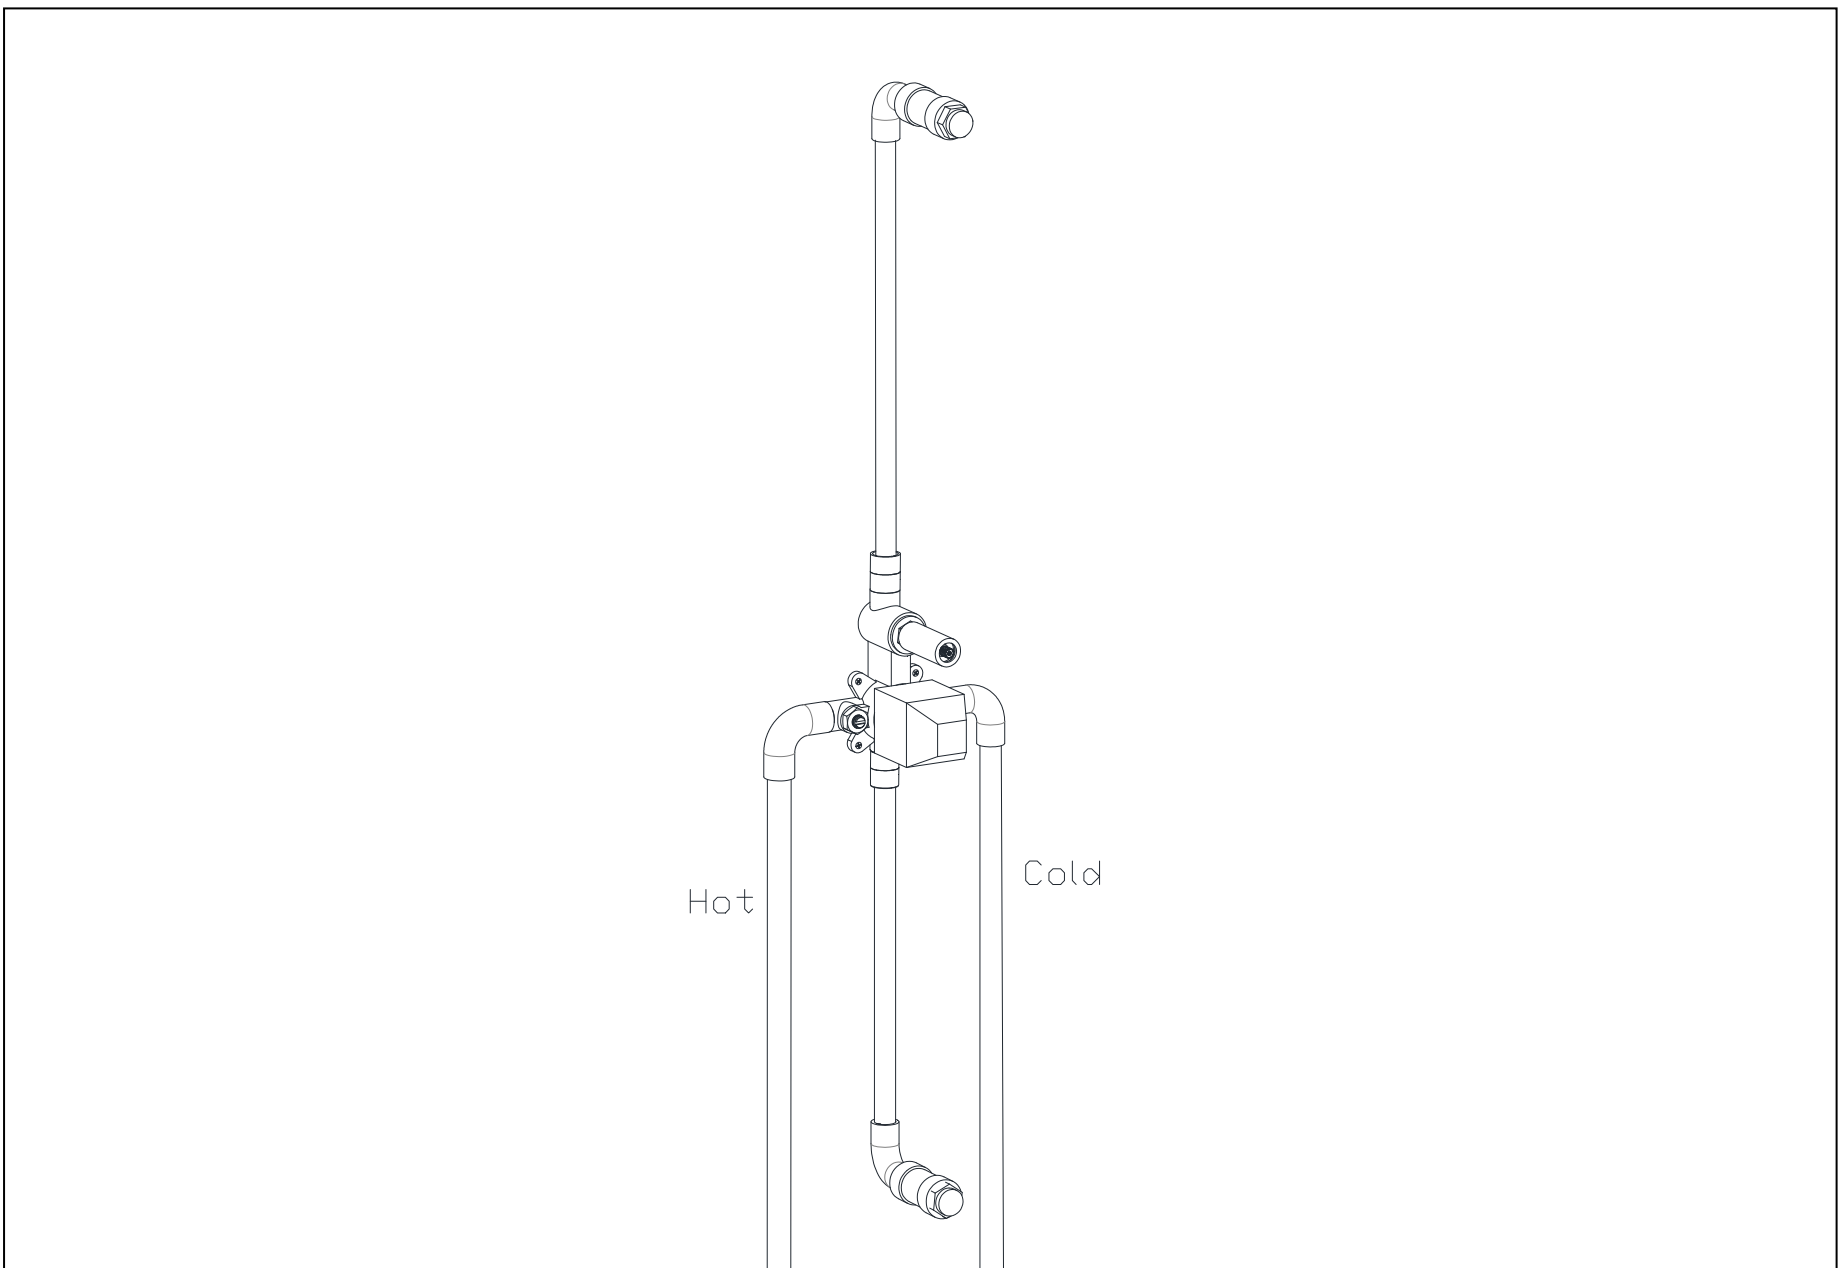

5.4.9 Align the front face of the elbow with the finished wall.




Improper elbow installation depth may result in leaks at the connector or necessitate the customization of extension parts.

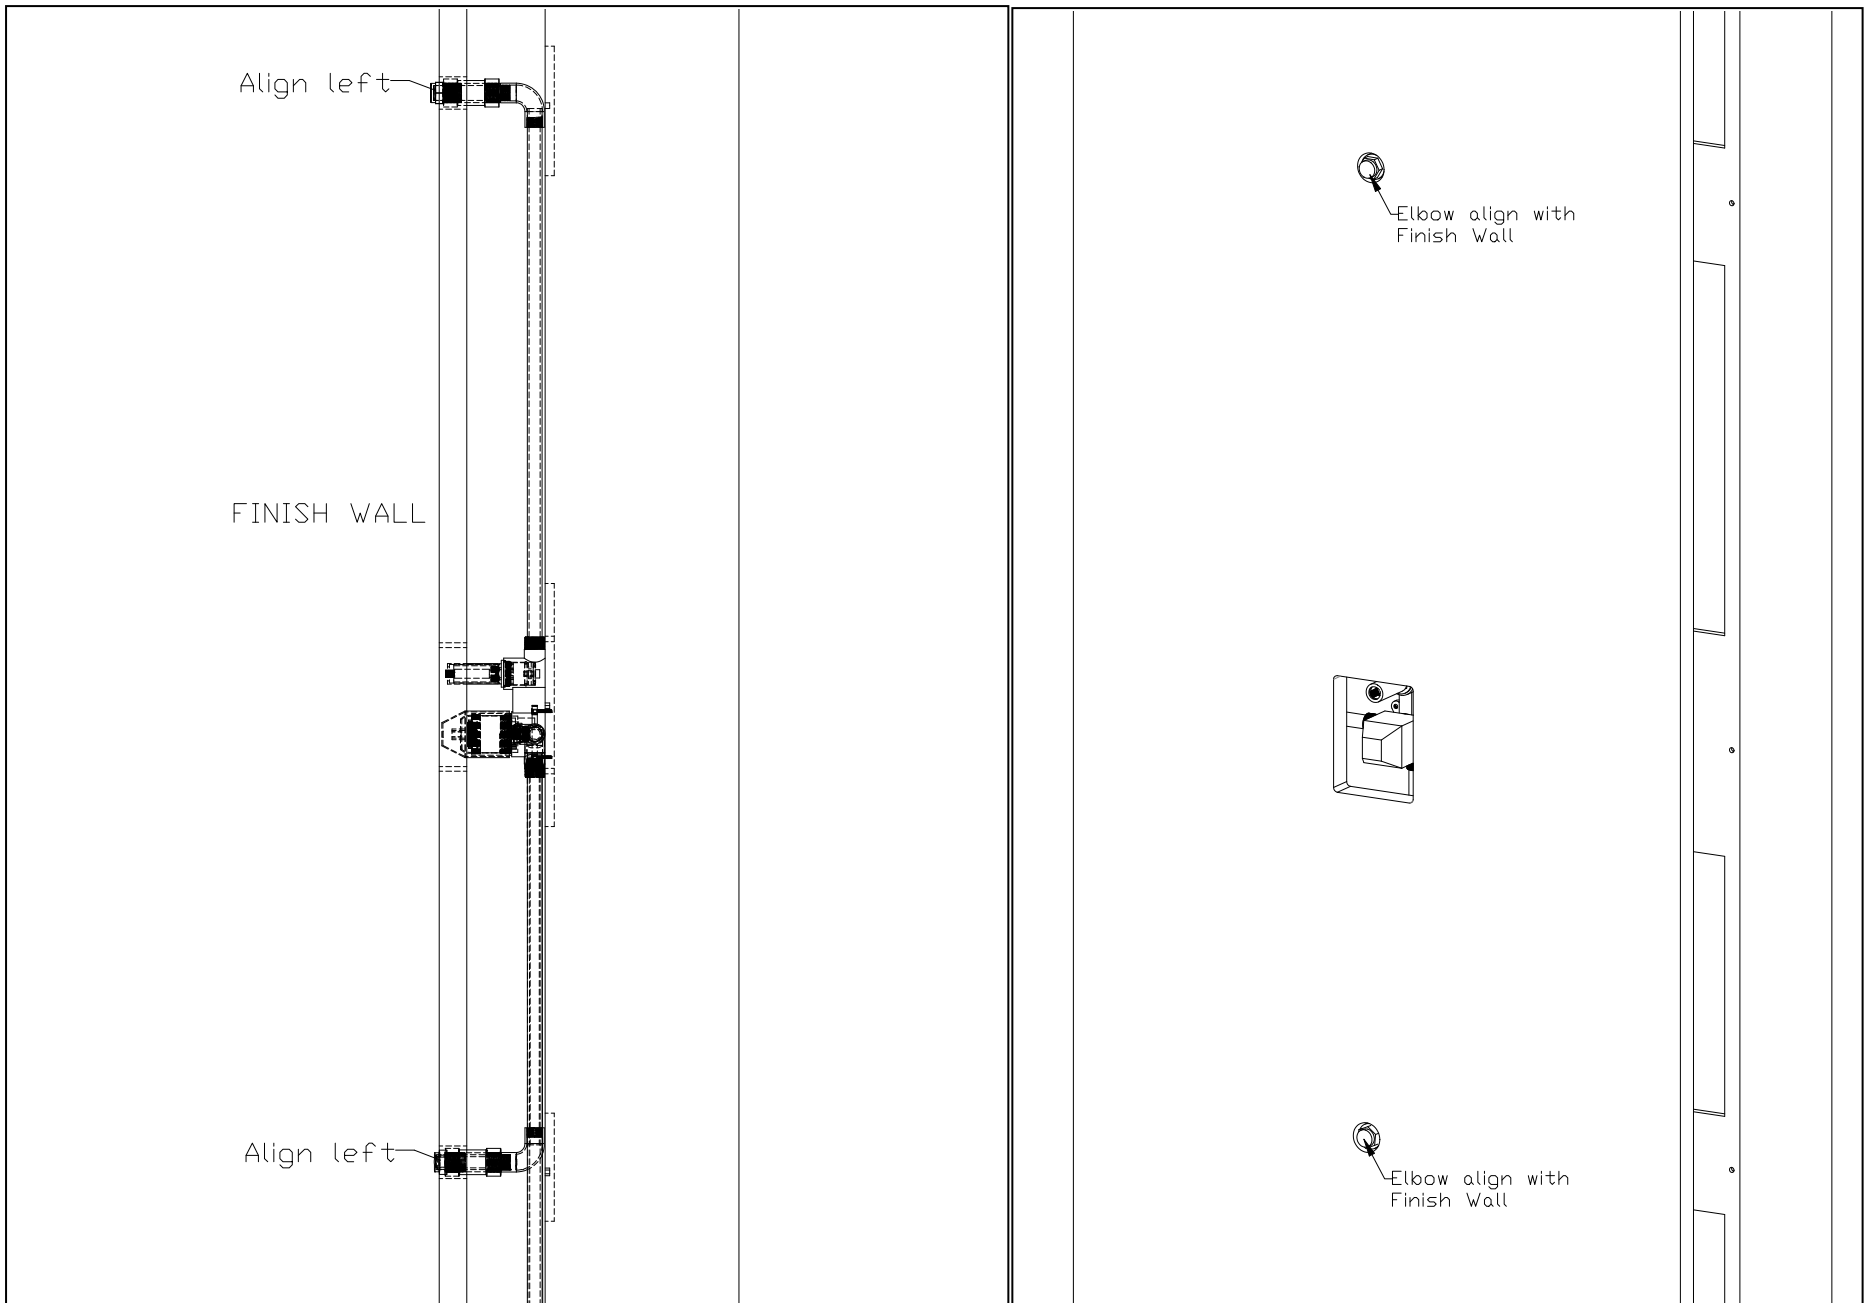

6. VALVE TRIM INSTALLATION

6.1 Remove the plaster guard covers.

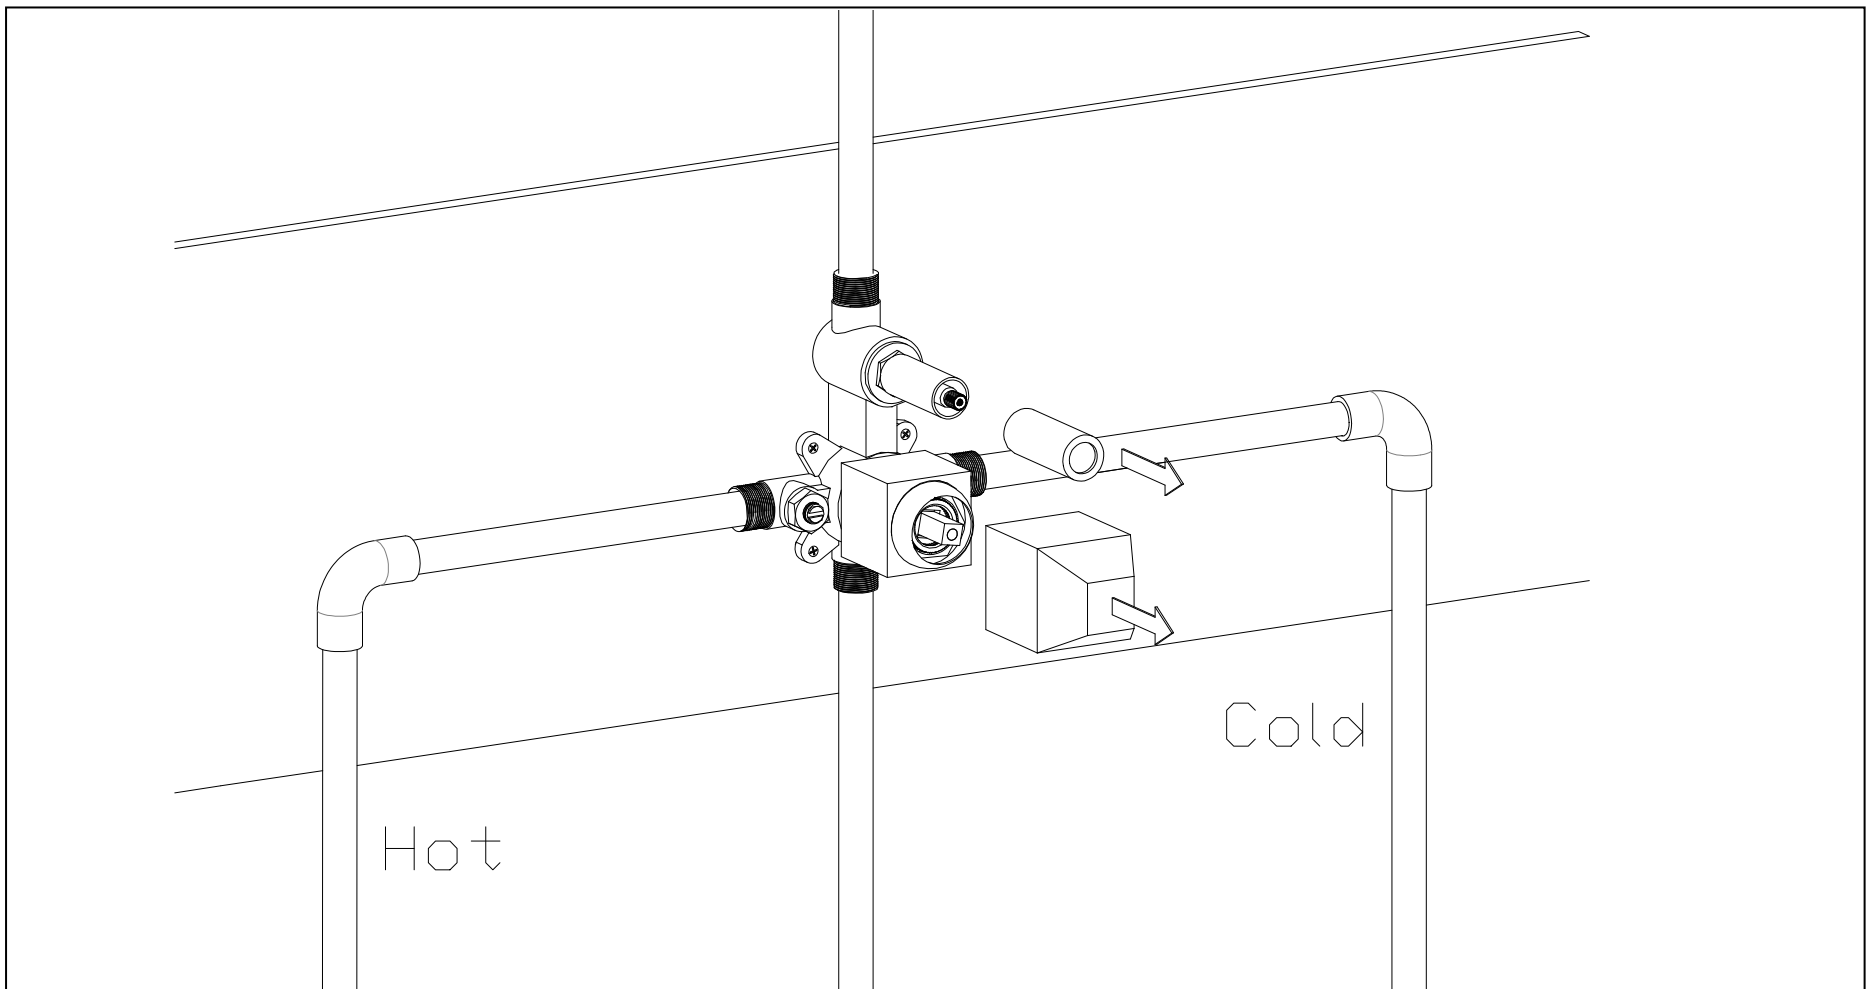

6.2 Plumbing Pressure Testing and Leak Testing.

(a.) Water Pressure Testing Standards

Test Pressure:

- The test pressure shall be 1.5 times the working pressure of the piping system, but not less than 60 PSI (pounds per square inch).
- If the design working pressure of the piping system is less than 60 PSI, the test pressure shall be 60 PSI.
- Recommended test pressure: 100 PSI to 120 PSI.

Test Duration:

- The test duration is typically 15 minutes.
- During the test, the pressure should remain stable with no significant drop.

Testing Method:

1. Seal the piping system, ensuring all openings (e.g., faucets, valves) are closed.
2. Use a manual pump or pressure testing equipment to pressurize the system to the specified test pressure.
3. Observe the pressure gauge to ensure the pressure remains stable during the test.
4. Inspect all connections, joints, and faucets for any signs of leakage.

Pass Criteria:



- If the pressure remains stable with no significant drop and no leakage is observed during the test, the piping system passes the test.
- If the pressure drops or leakage is detected, repair the issue and retest.


Precautions:




- Safety: The test pressure should not exceed the rated pressure of the pipes and fittings to avoid damage.
- Record: Record the test pressure, duration, and results for future inspection or maintenance purposes.

(b.) Leak Testing: After completing the plumbing pressure test, turn on the hot and cold water supply again and check all connections for leaks. If no leaks are detected, shut off the hot and cold water supply and reinstall the plaster guard covers.

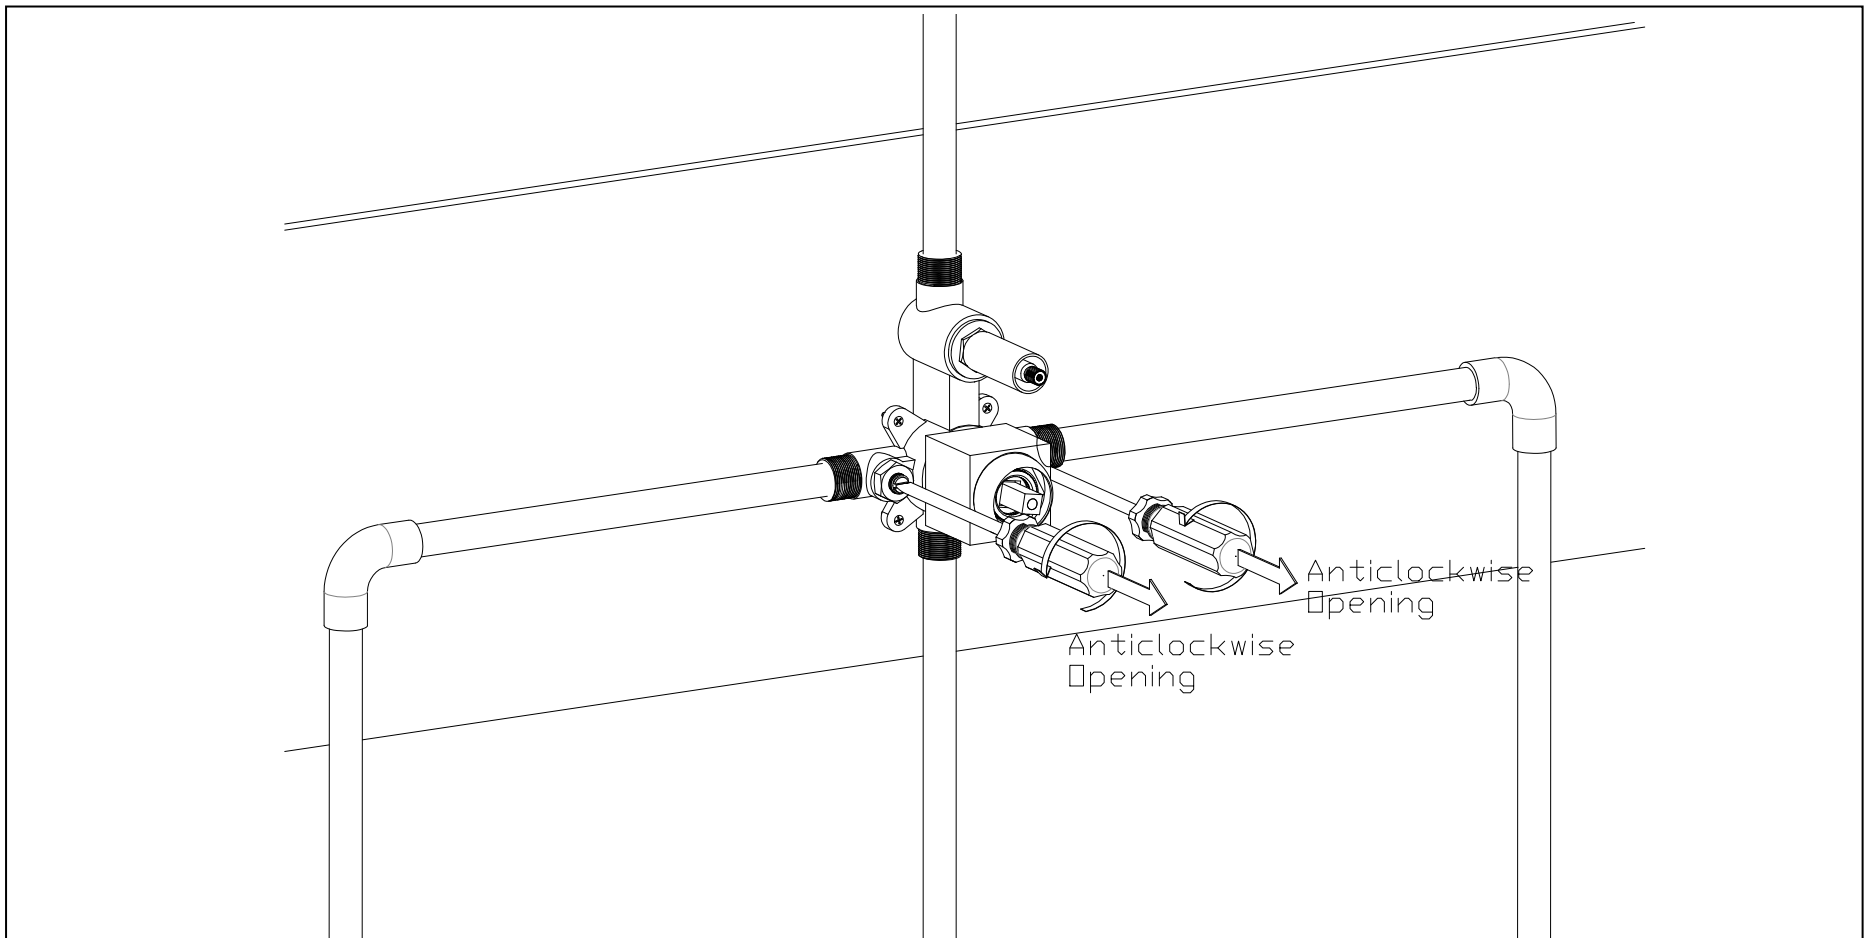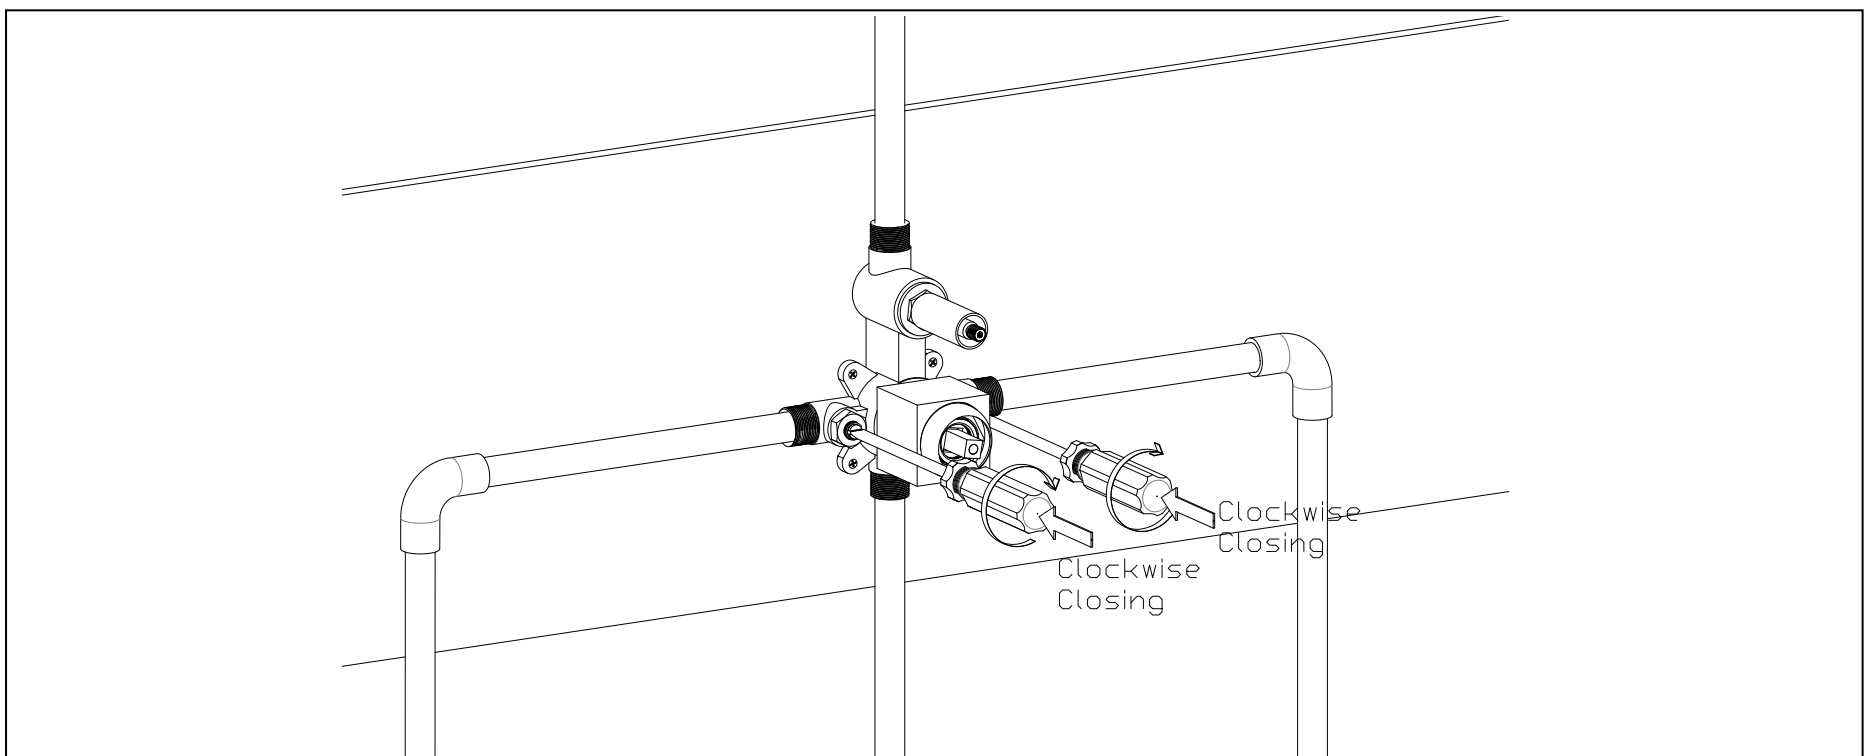

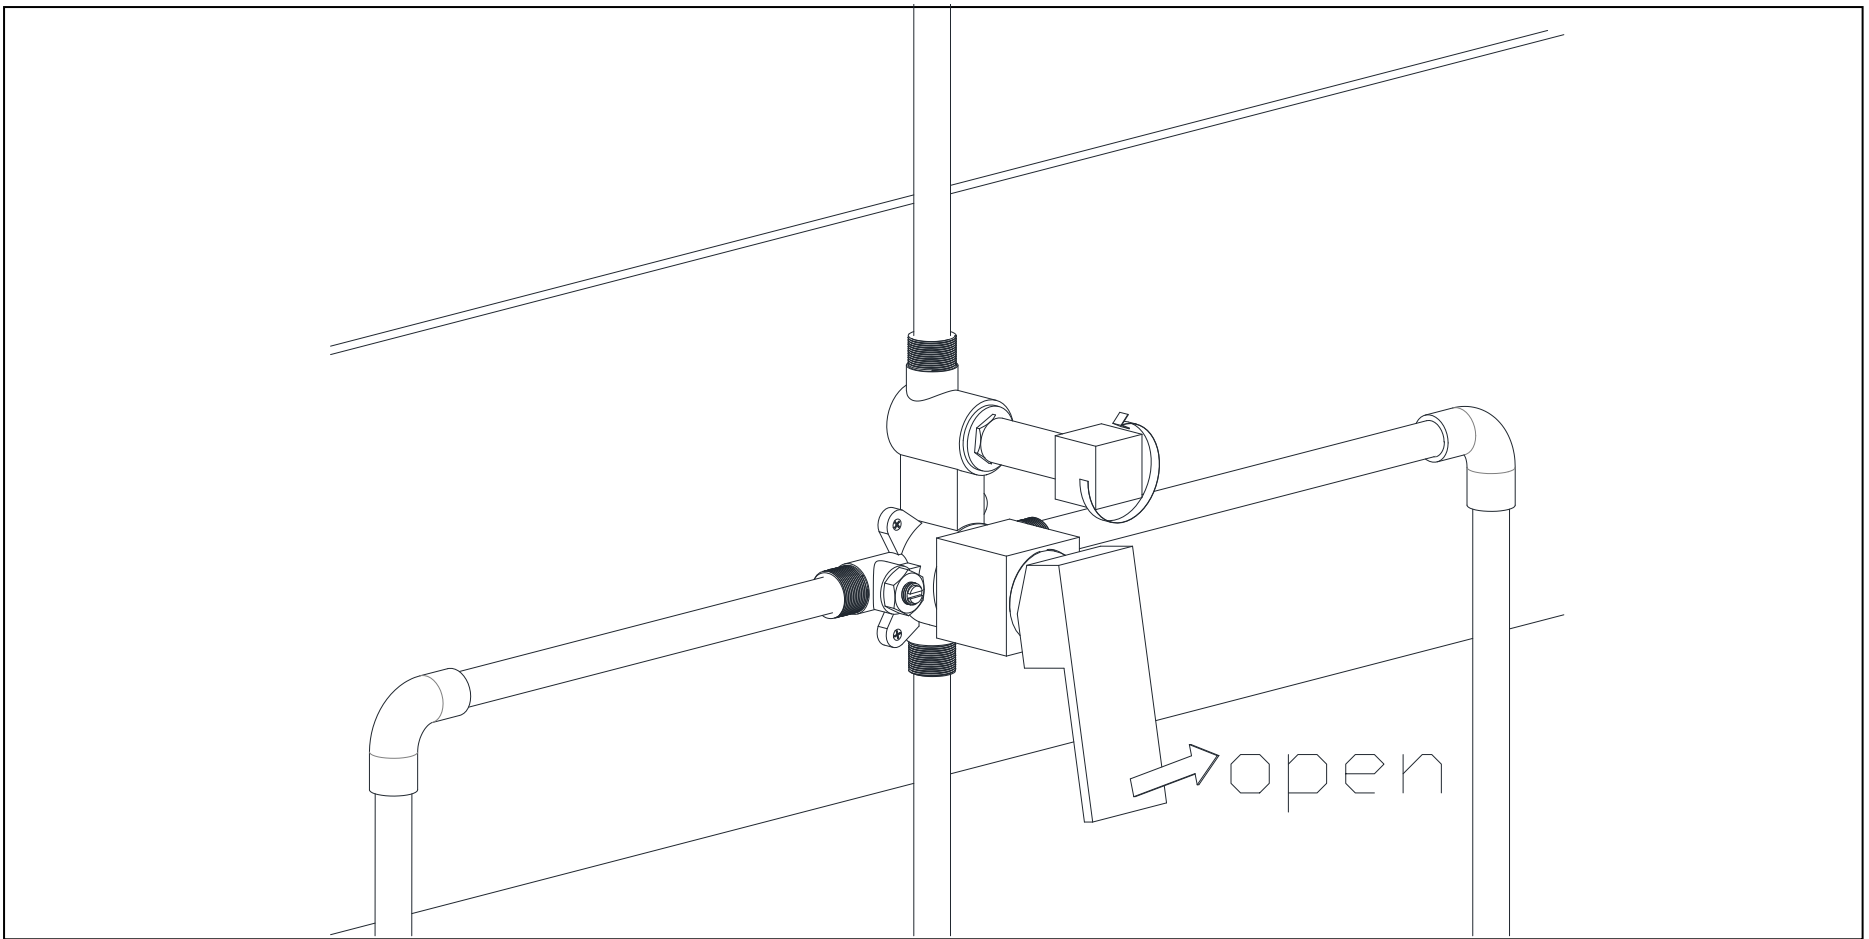

6.3 Remove the escutcheon and the temperature limit ring from the valve assembly.

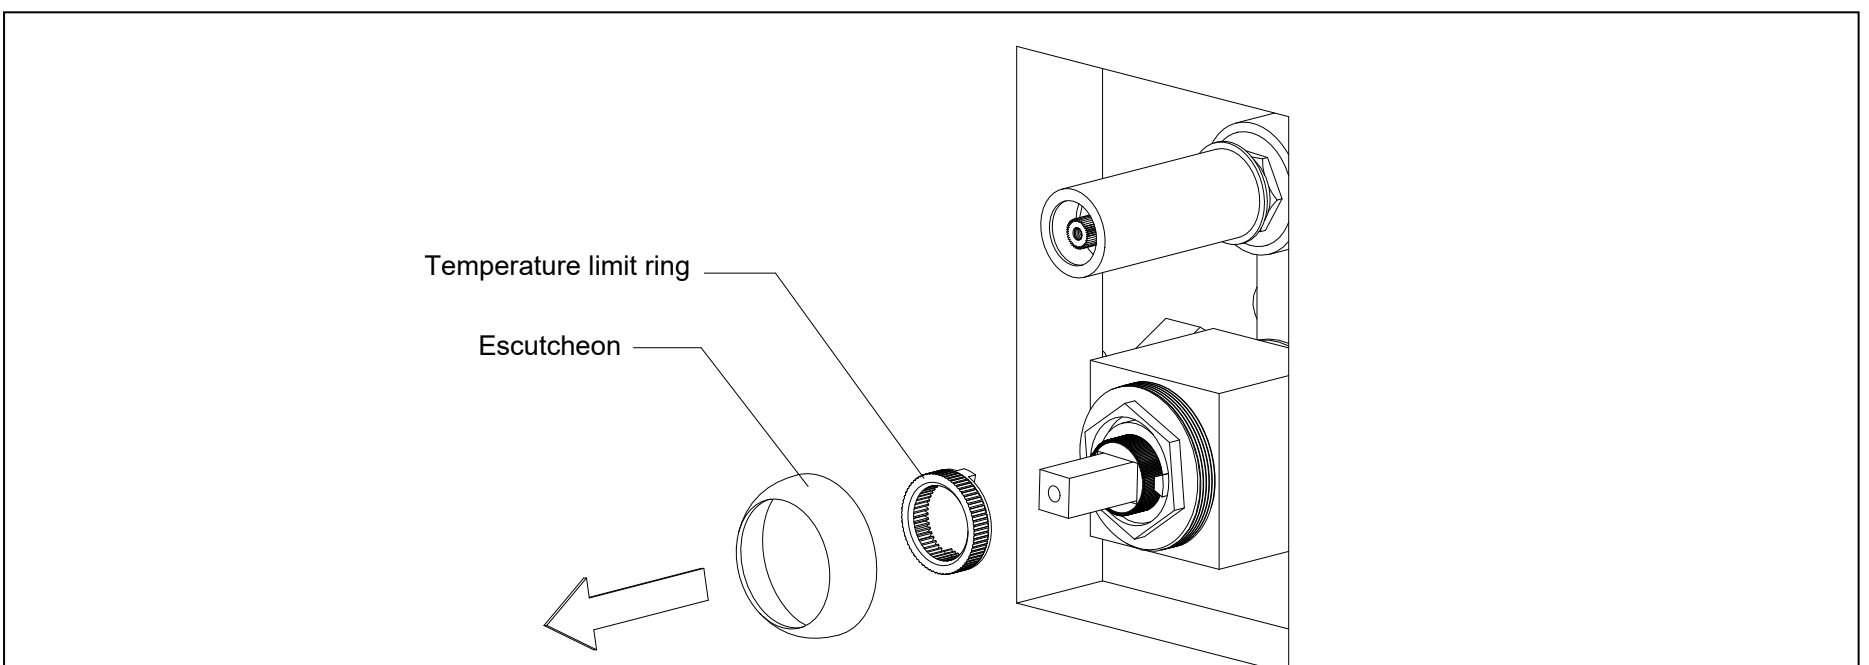


6.4 Turn on and adjust the handle to achieve the desired maximum shower water temperature.


Anti-scald protection: Regular testing of the mixer valve is essential to prevent the risk of scalding and ensure user safety. Follow these steps to perform the test: Set the mixer blend temperature to 100.4°F (38°C) and isolate the cold water supply. The outlet flow rate should reduce to a safe level. Recommended outlet temperatures:

- 111.2°F (44°C) for bath fill (refer to additional notes).
- 105.8°F (41°C) for showers.
- 105.8°F (41°C) for washbasins.
- 100.4°F (38°C) for bidets.



The mixed water temperatures must never exceed 114.8°F (46°C) at the terminal fitting.

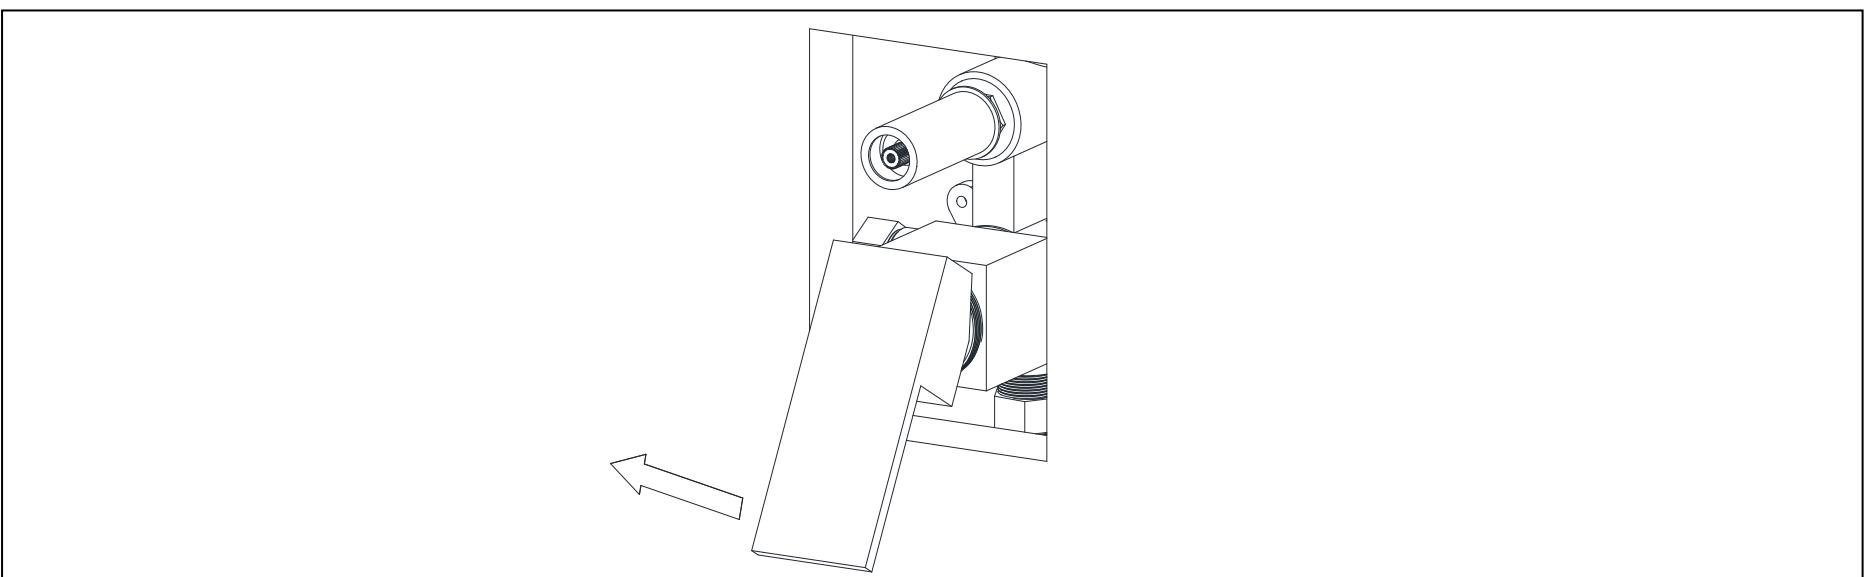


6.5 Attach the temperature limit ring to the cartridge to secure the maximum temperature setting. Then, reinstall the bonnet cap onto the bonnet.

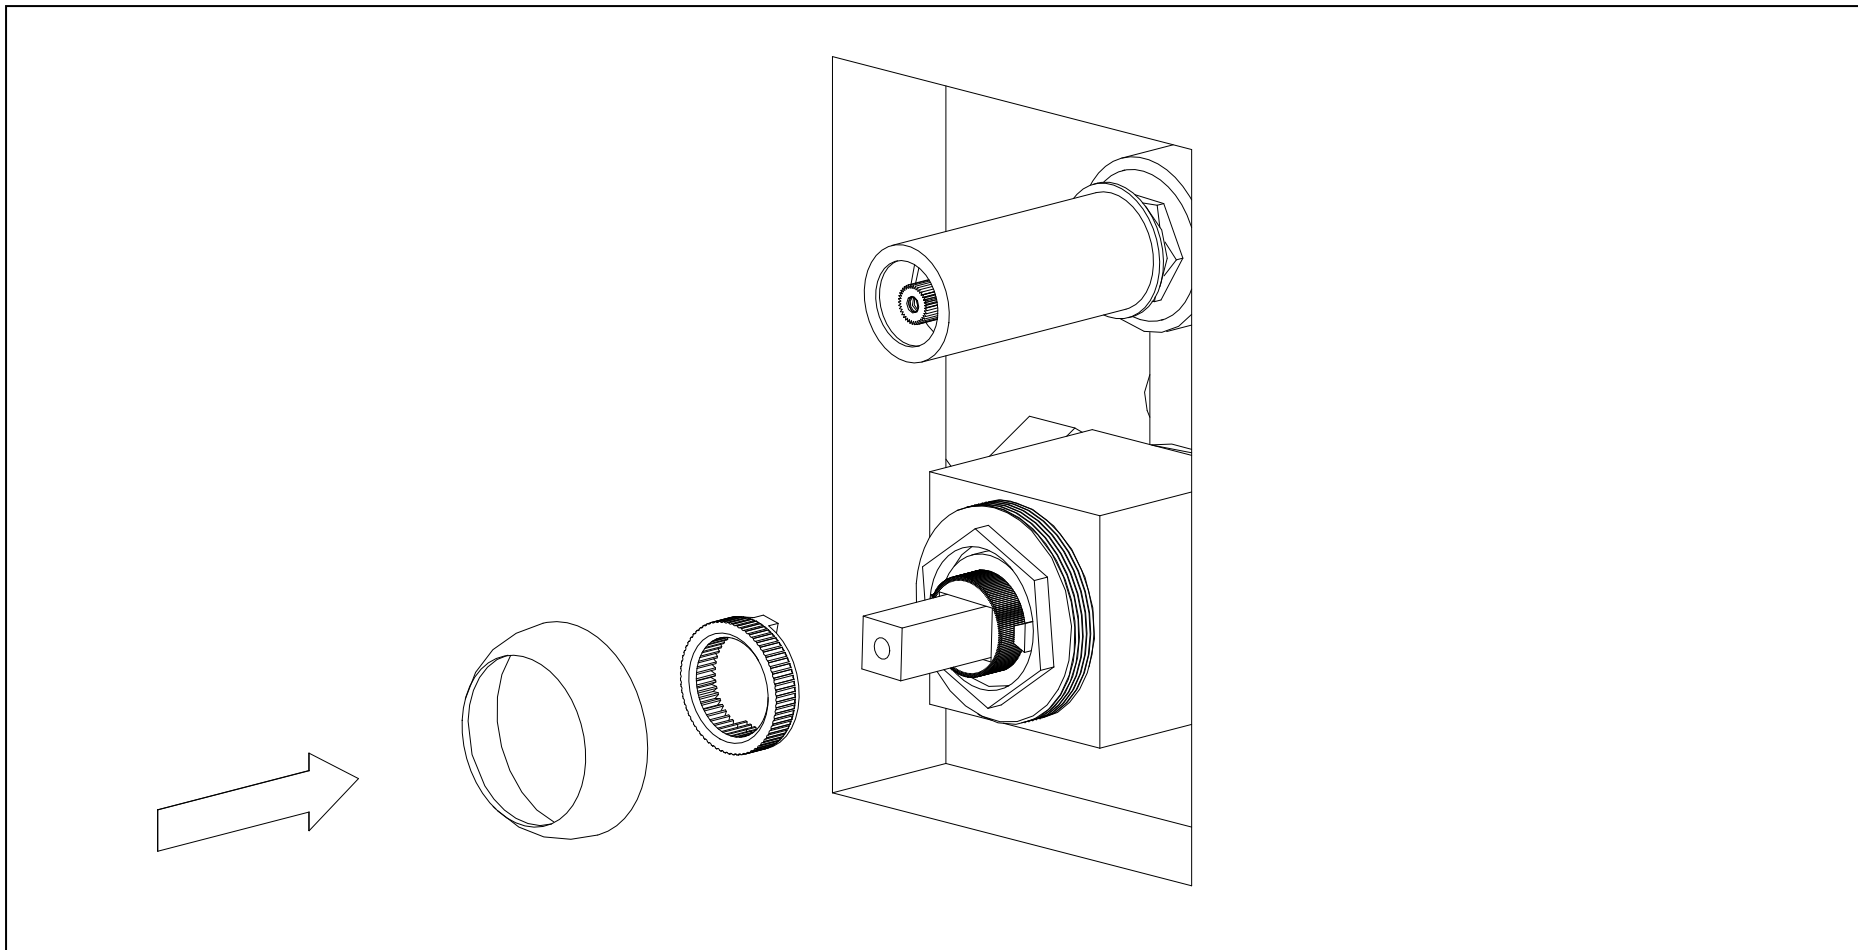


6.6 Position the escutcheon over the valve body, slide it firmly against the finished wall, and seal the perimeter of the escutcheon edge with waterproof sealant.

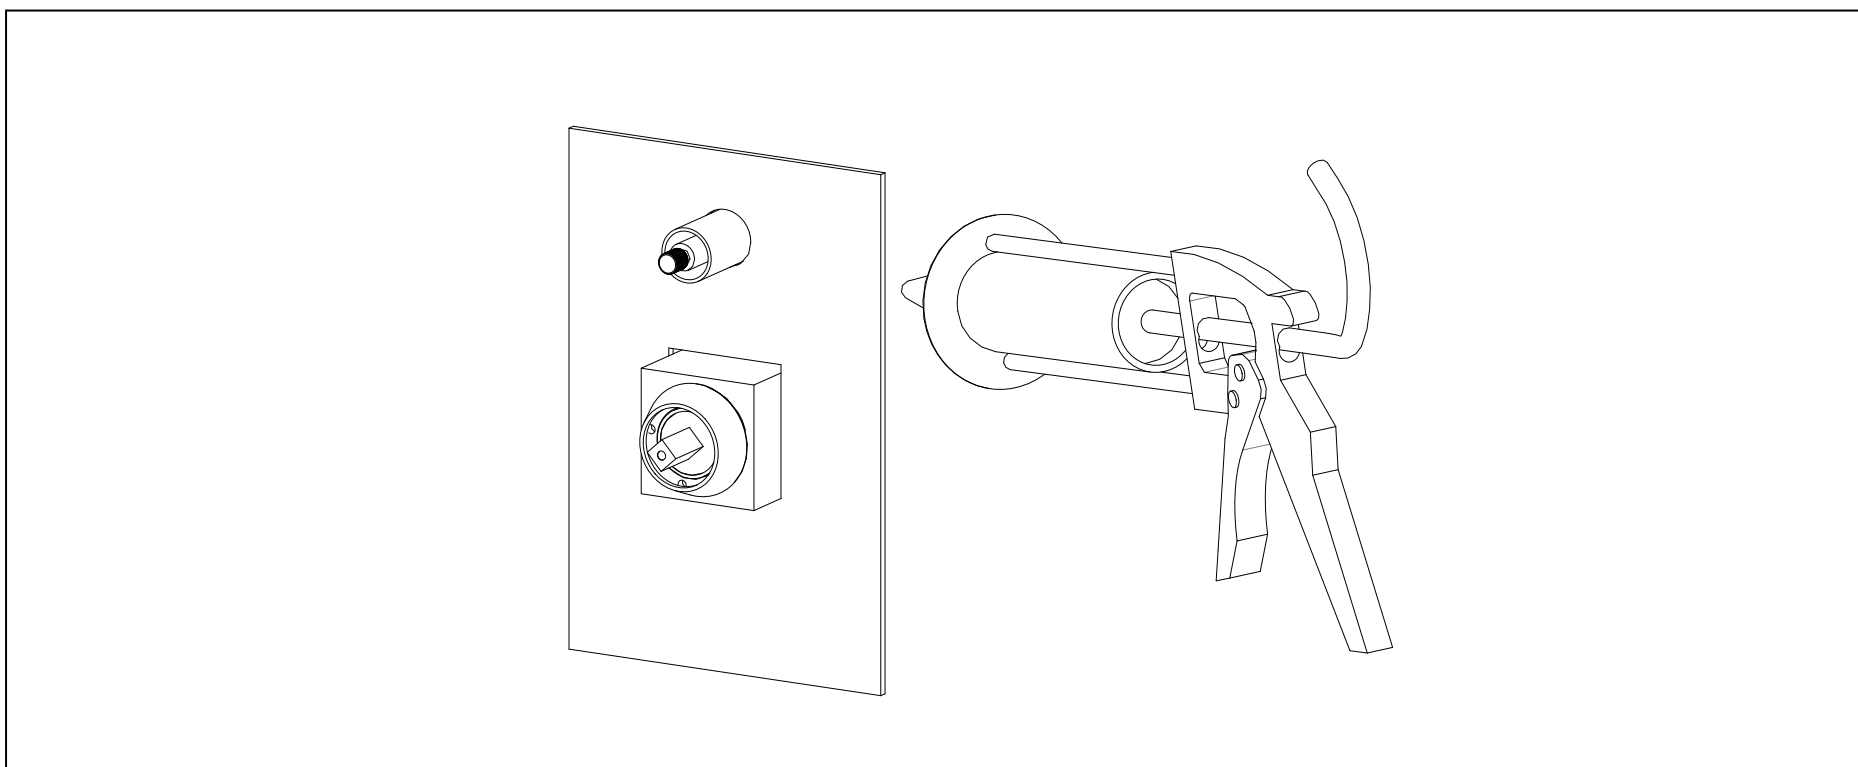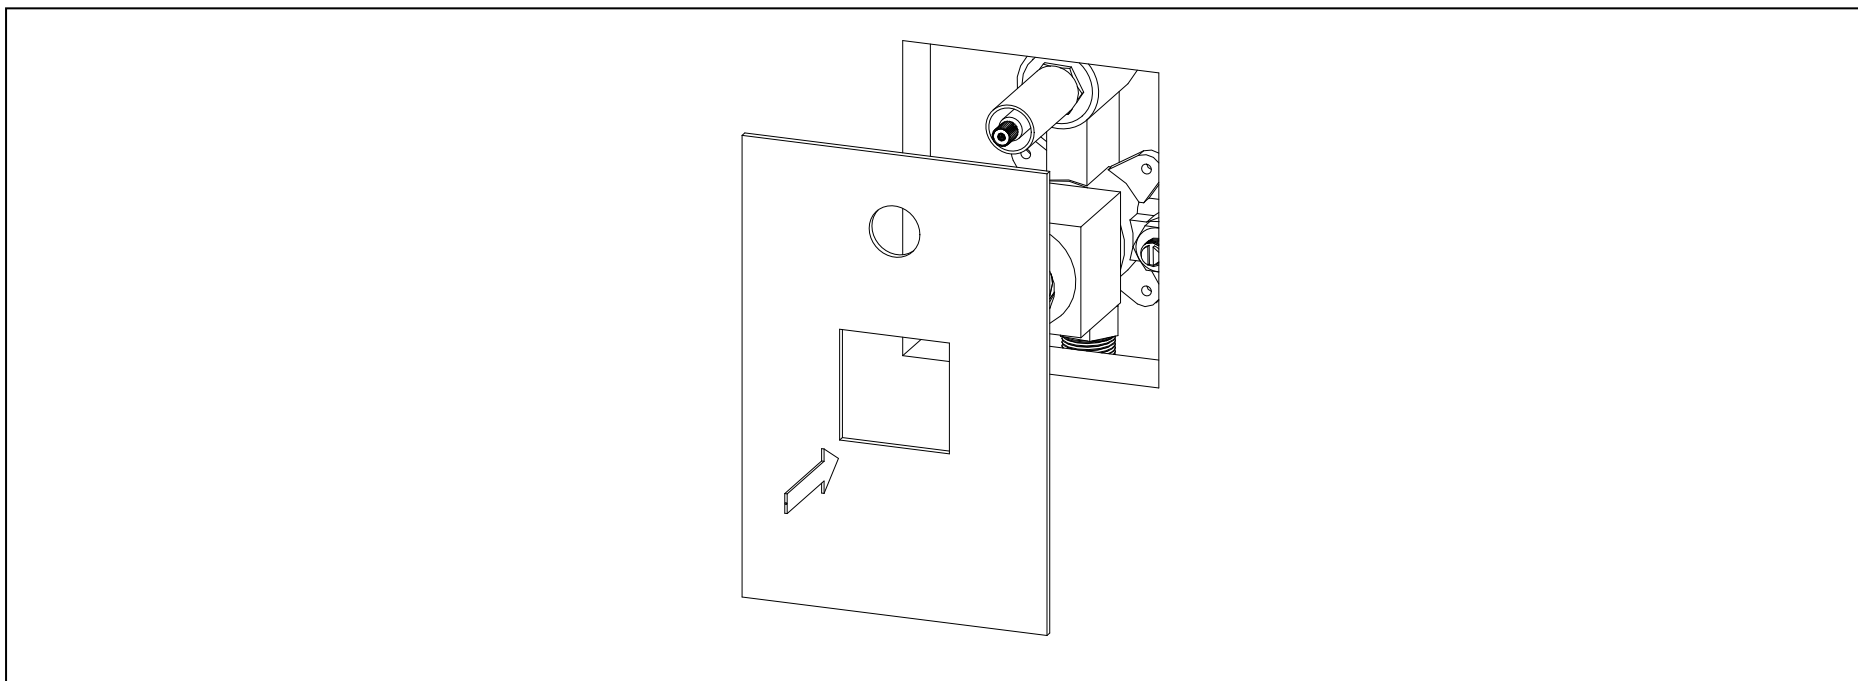

6.7 Attach the handle to the valve stem and tighten the set screw using the provided Allen wrench. Be careful not to overtighten. Repeat the same procedure for the diverter knob. Finally, press in the screw covers.

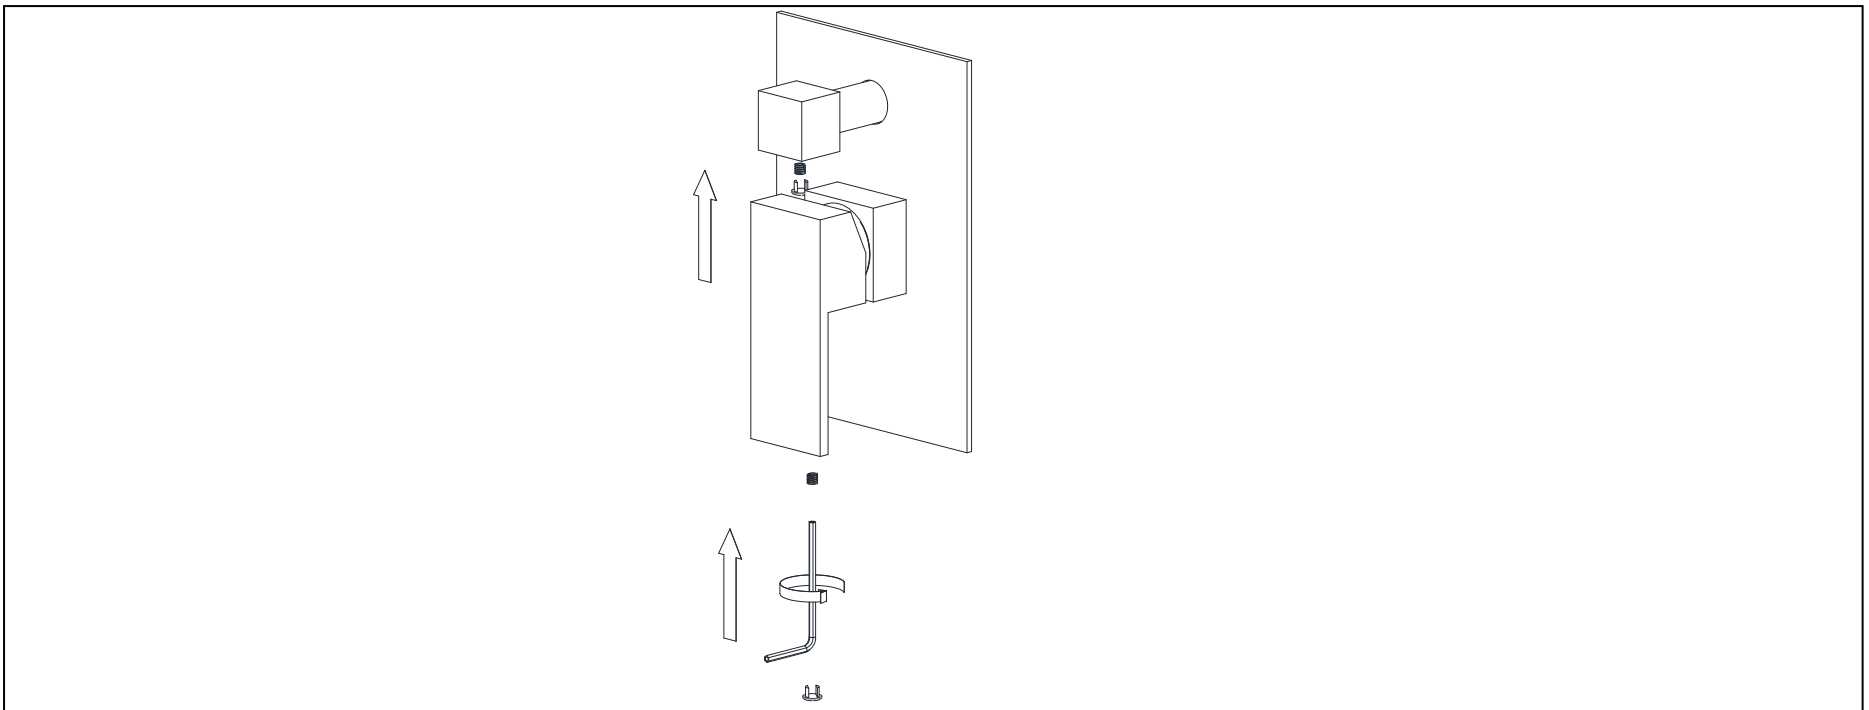



6.8 The valve trim installation has been completed.

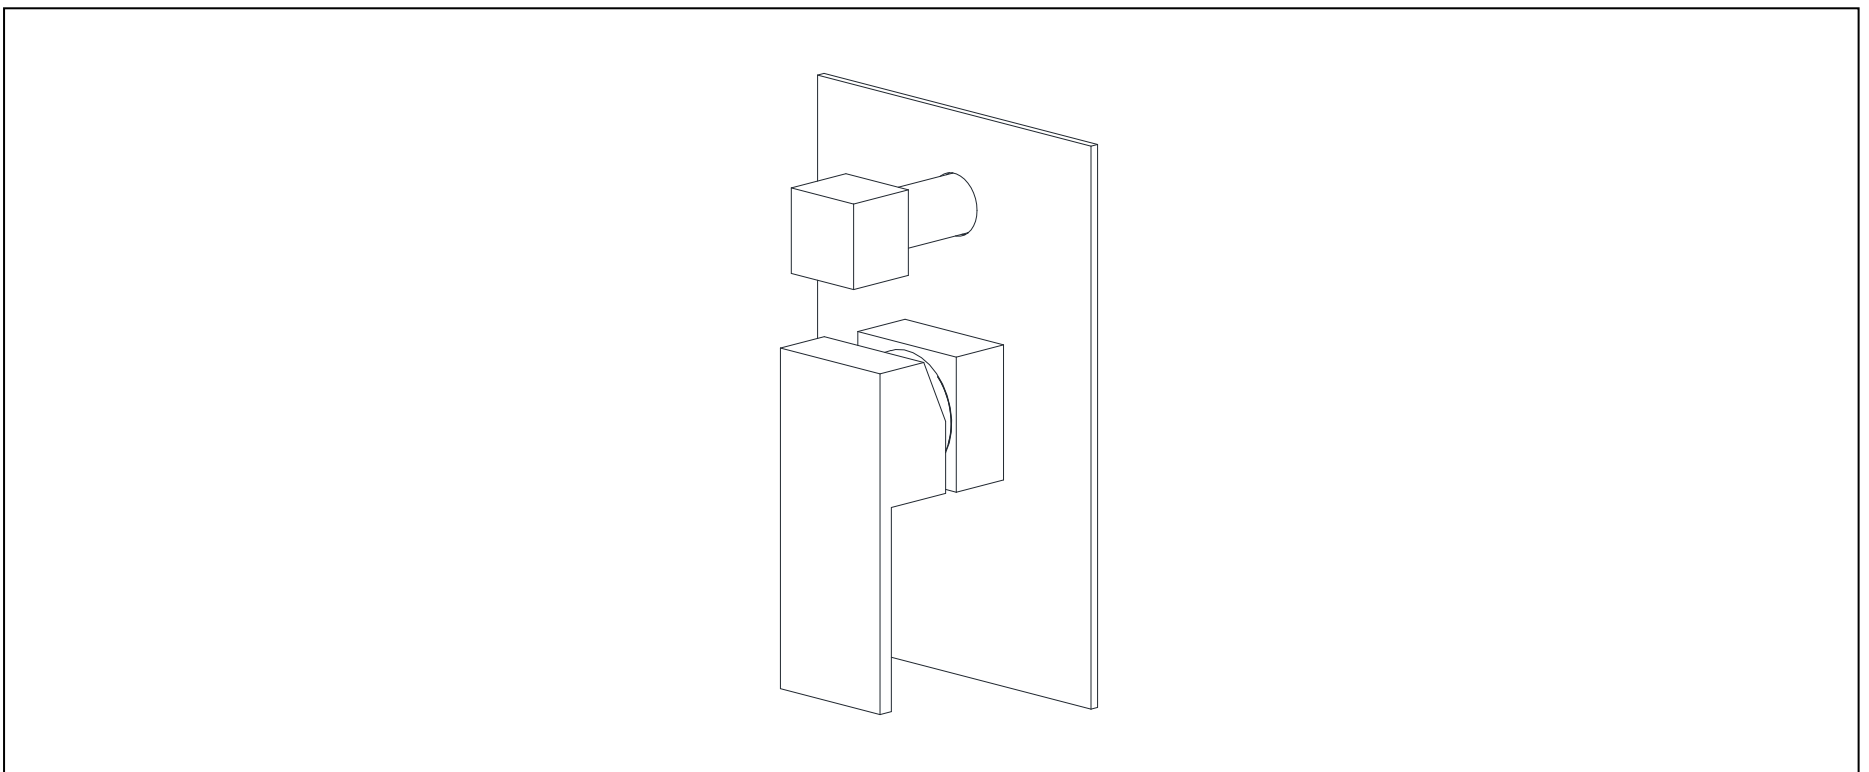


7. SHOWERHEAD INSTALLATION

7.1 Attach the shower arm escutcheon to the shower arm. Apply thread seal tape to the threads of the shower arm, then secure the shower arm into the pipe elbow inside the wall by rotating it clockwise until tight. The standard thread size for the shower arm inlet is NPT 1/2-14 (US/CA).


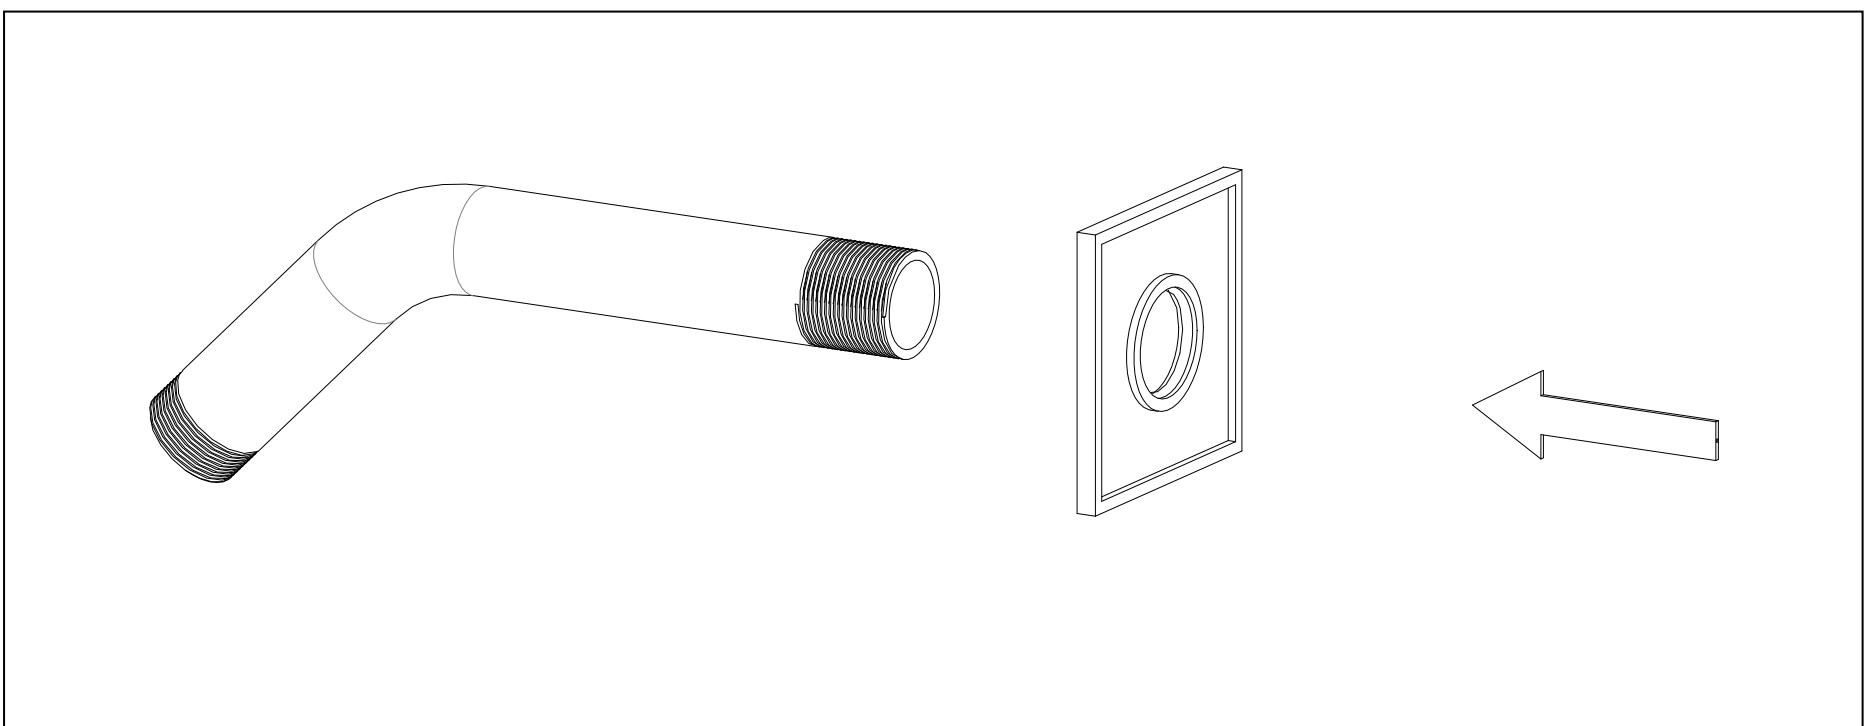


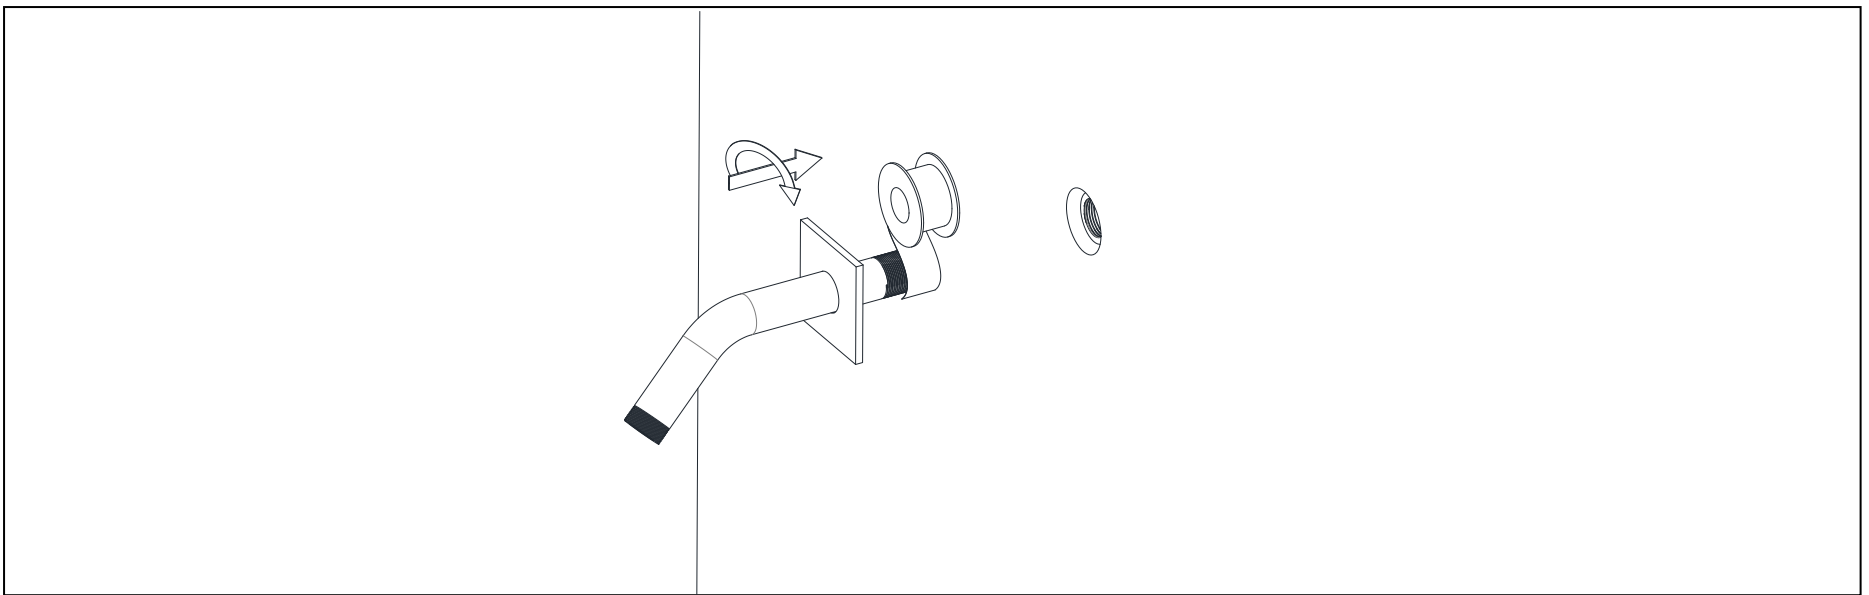

7.2 Apply waterproof sealant around the shower arm escutcheon to seal the wall.

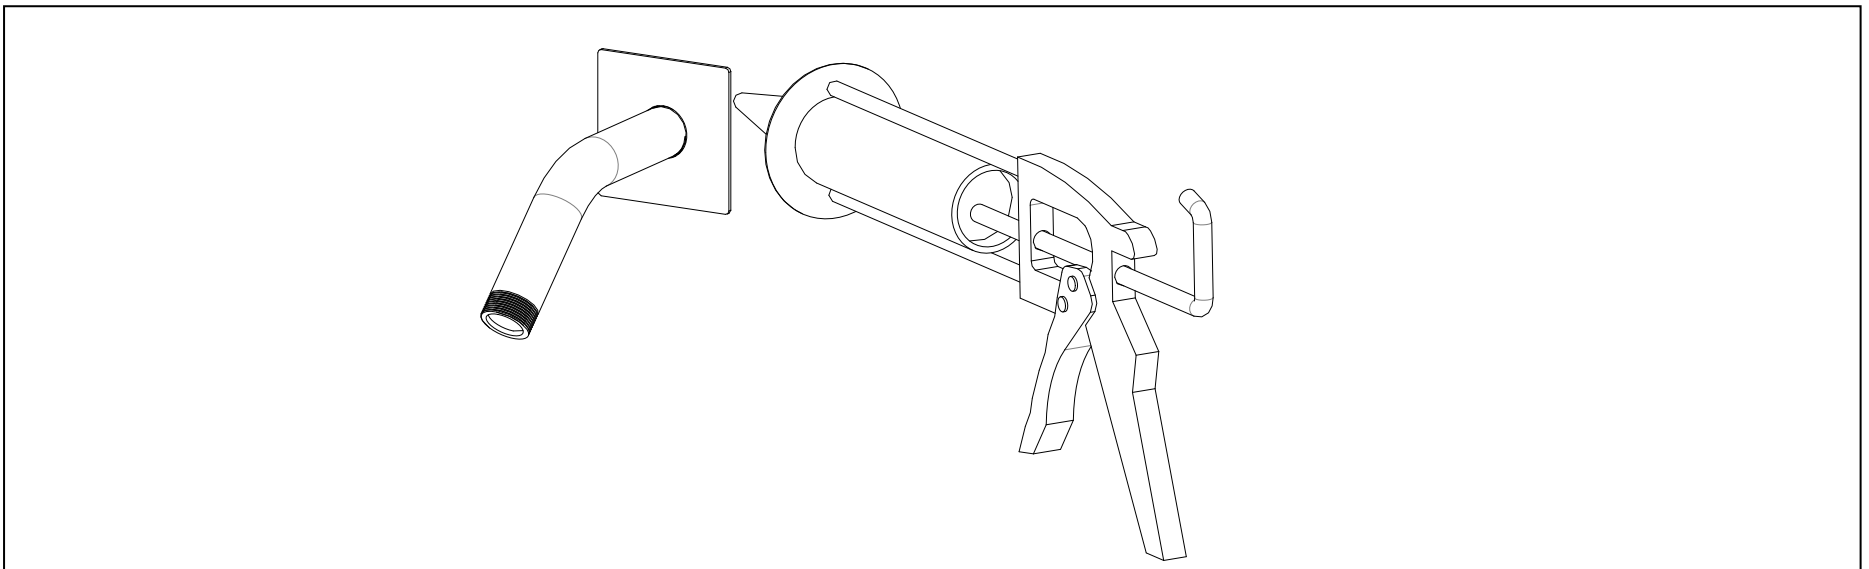


7.3 Insert the screen washer into the showerhead connector and the check valve into the shower arm. Then, attach the showerhead to the shower arm and tighten it by hand in a clockwise direction.

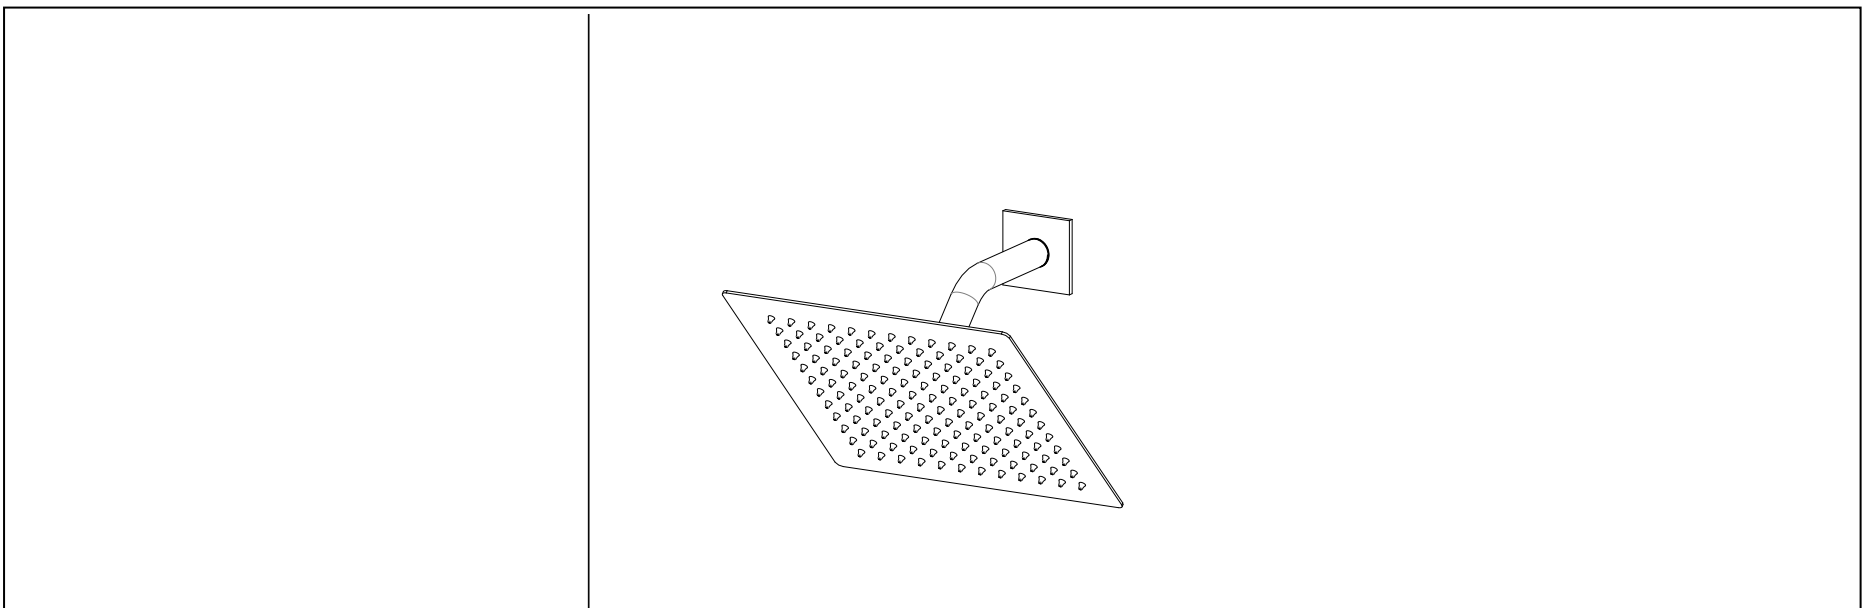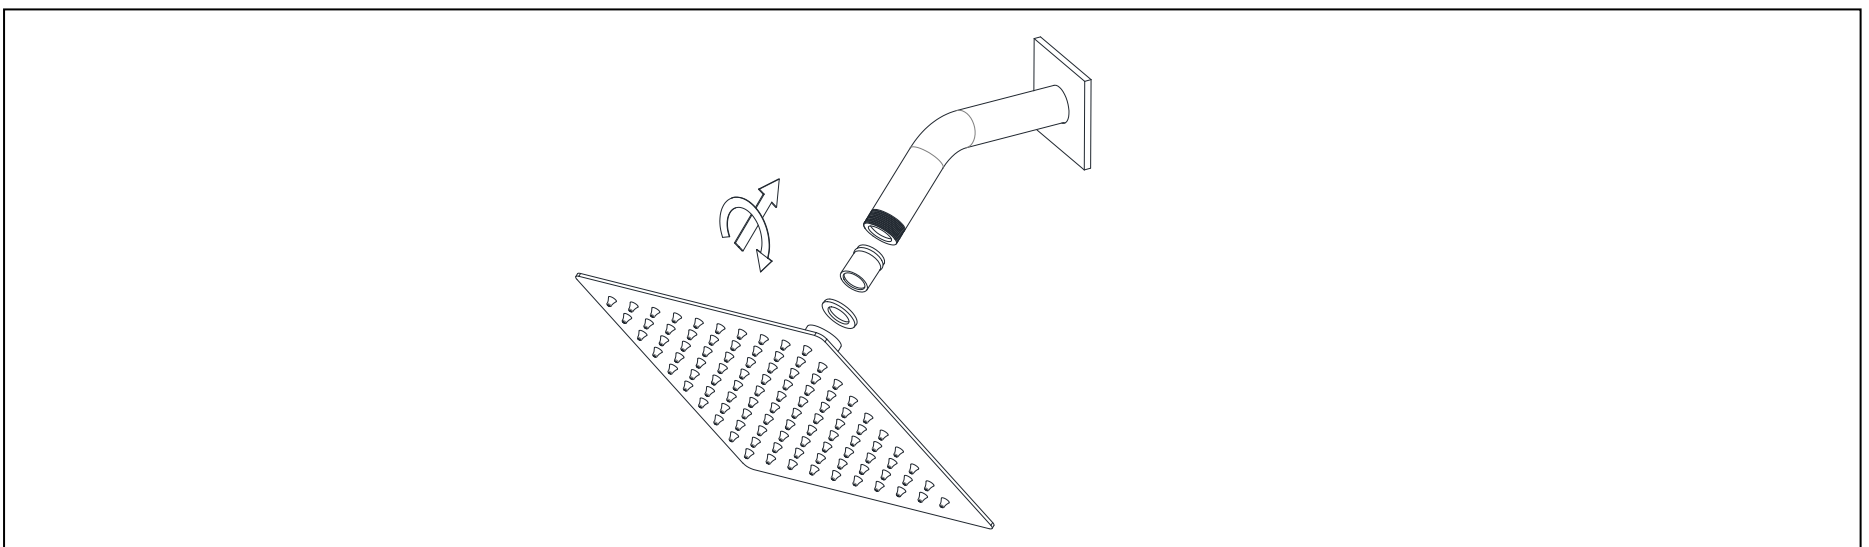


8. TUB SPOUT INSTALLATION

8.1 Apply thread seal tape to the spout threads and screw the spout into the pipe elbow inside the wall.

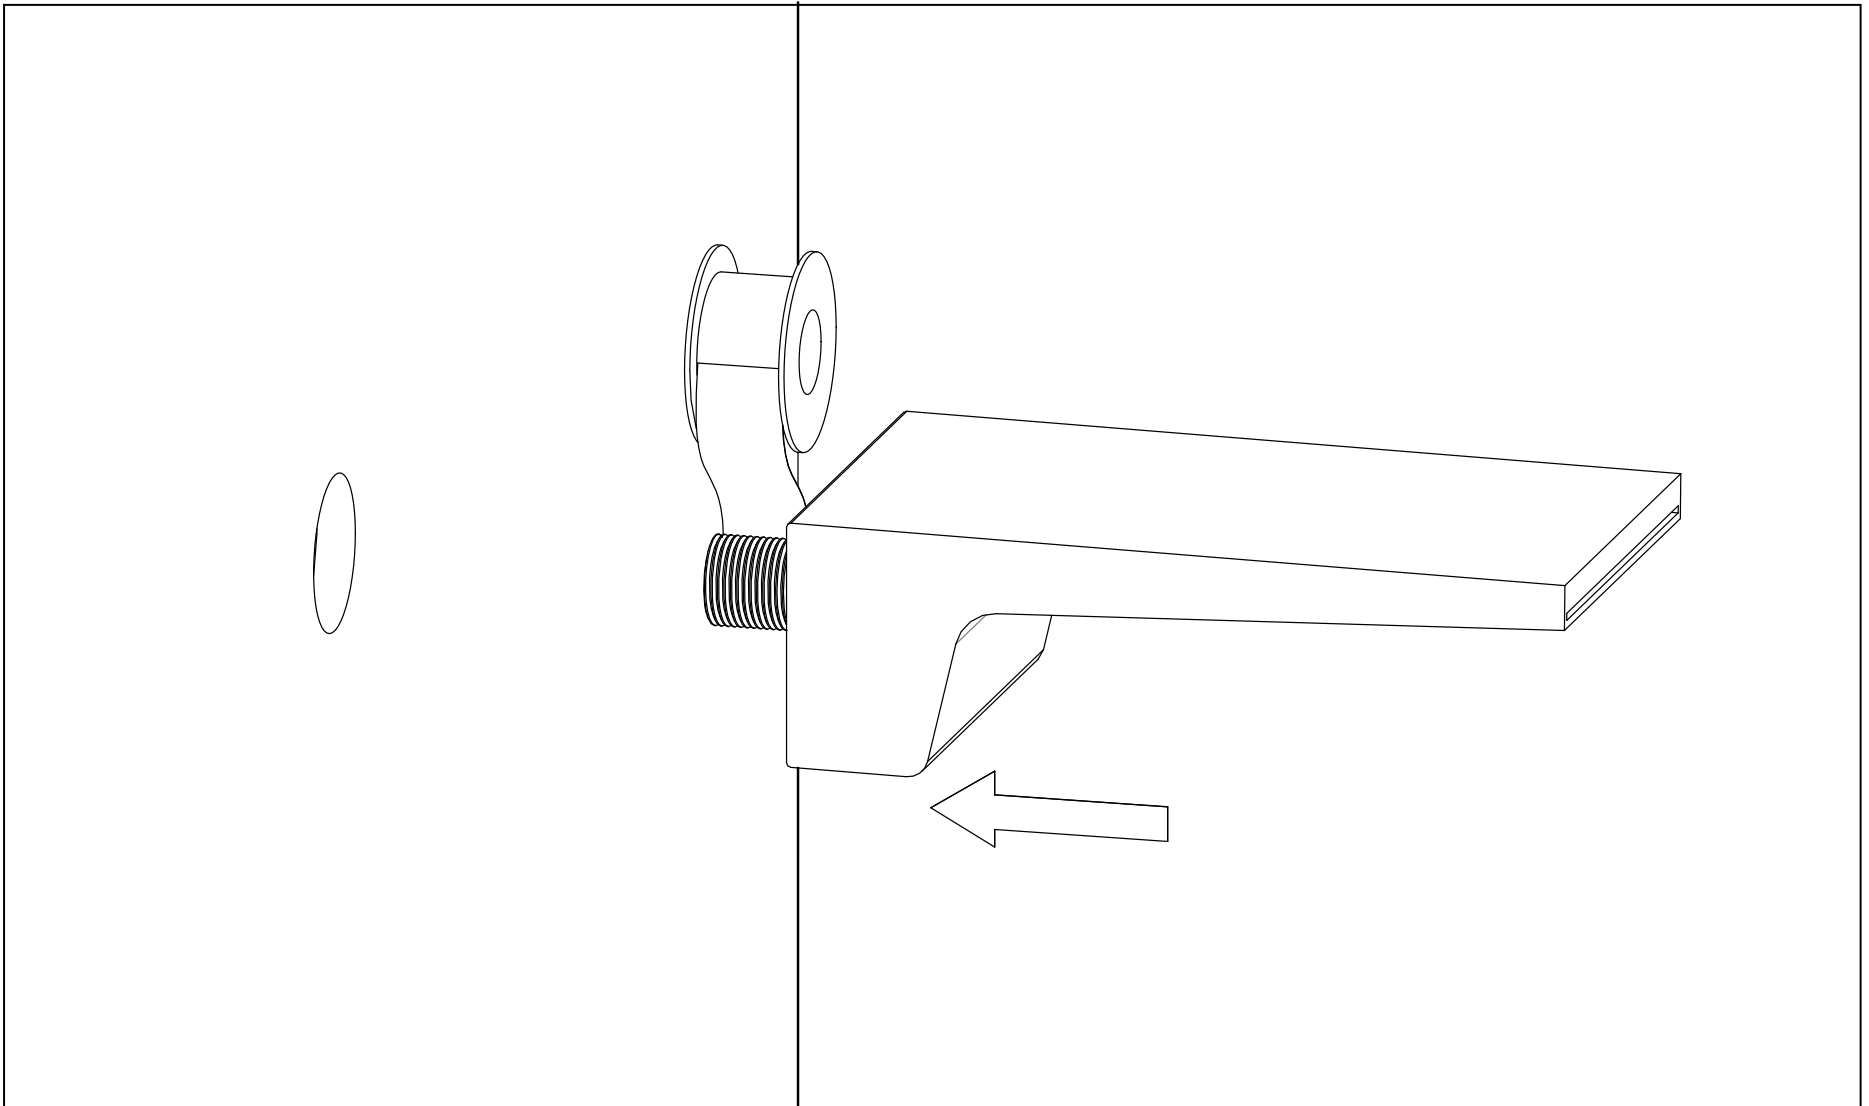


8.2. The installation is complete.

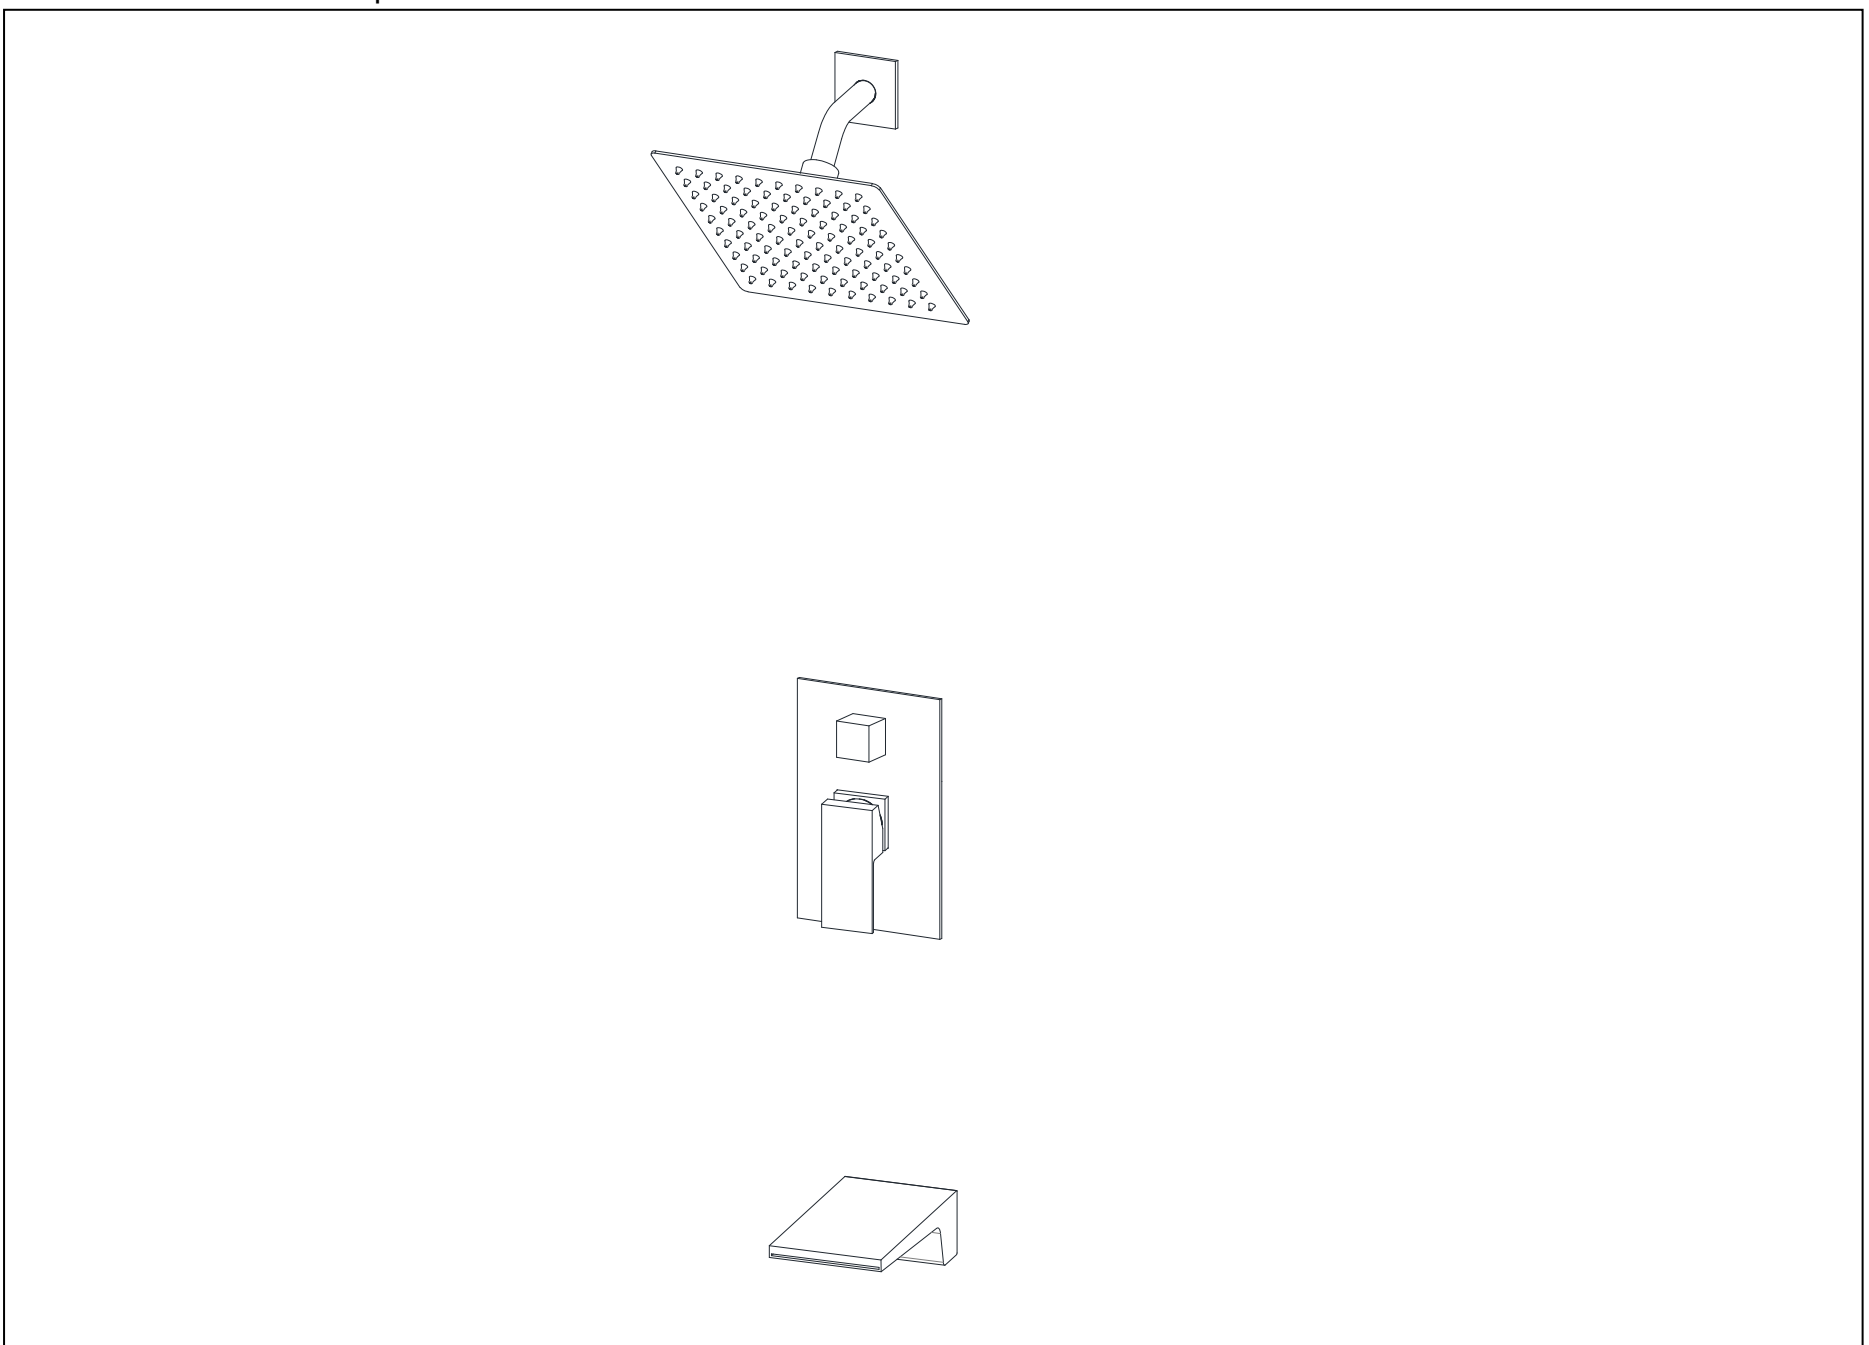

9. SHOWER FUNCTION INTRODUCTION

9.1 Turn the handle clockwise to release hot water, and rotate it counterclockwise to release cold water. To divert water to the showerhead, turn the diverter knob counterclockwise; to direct water to the spout, turn the knob clockwise

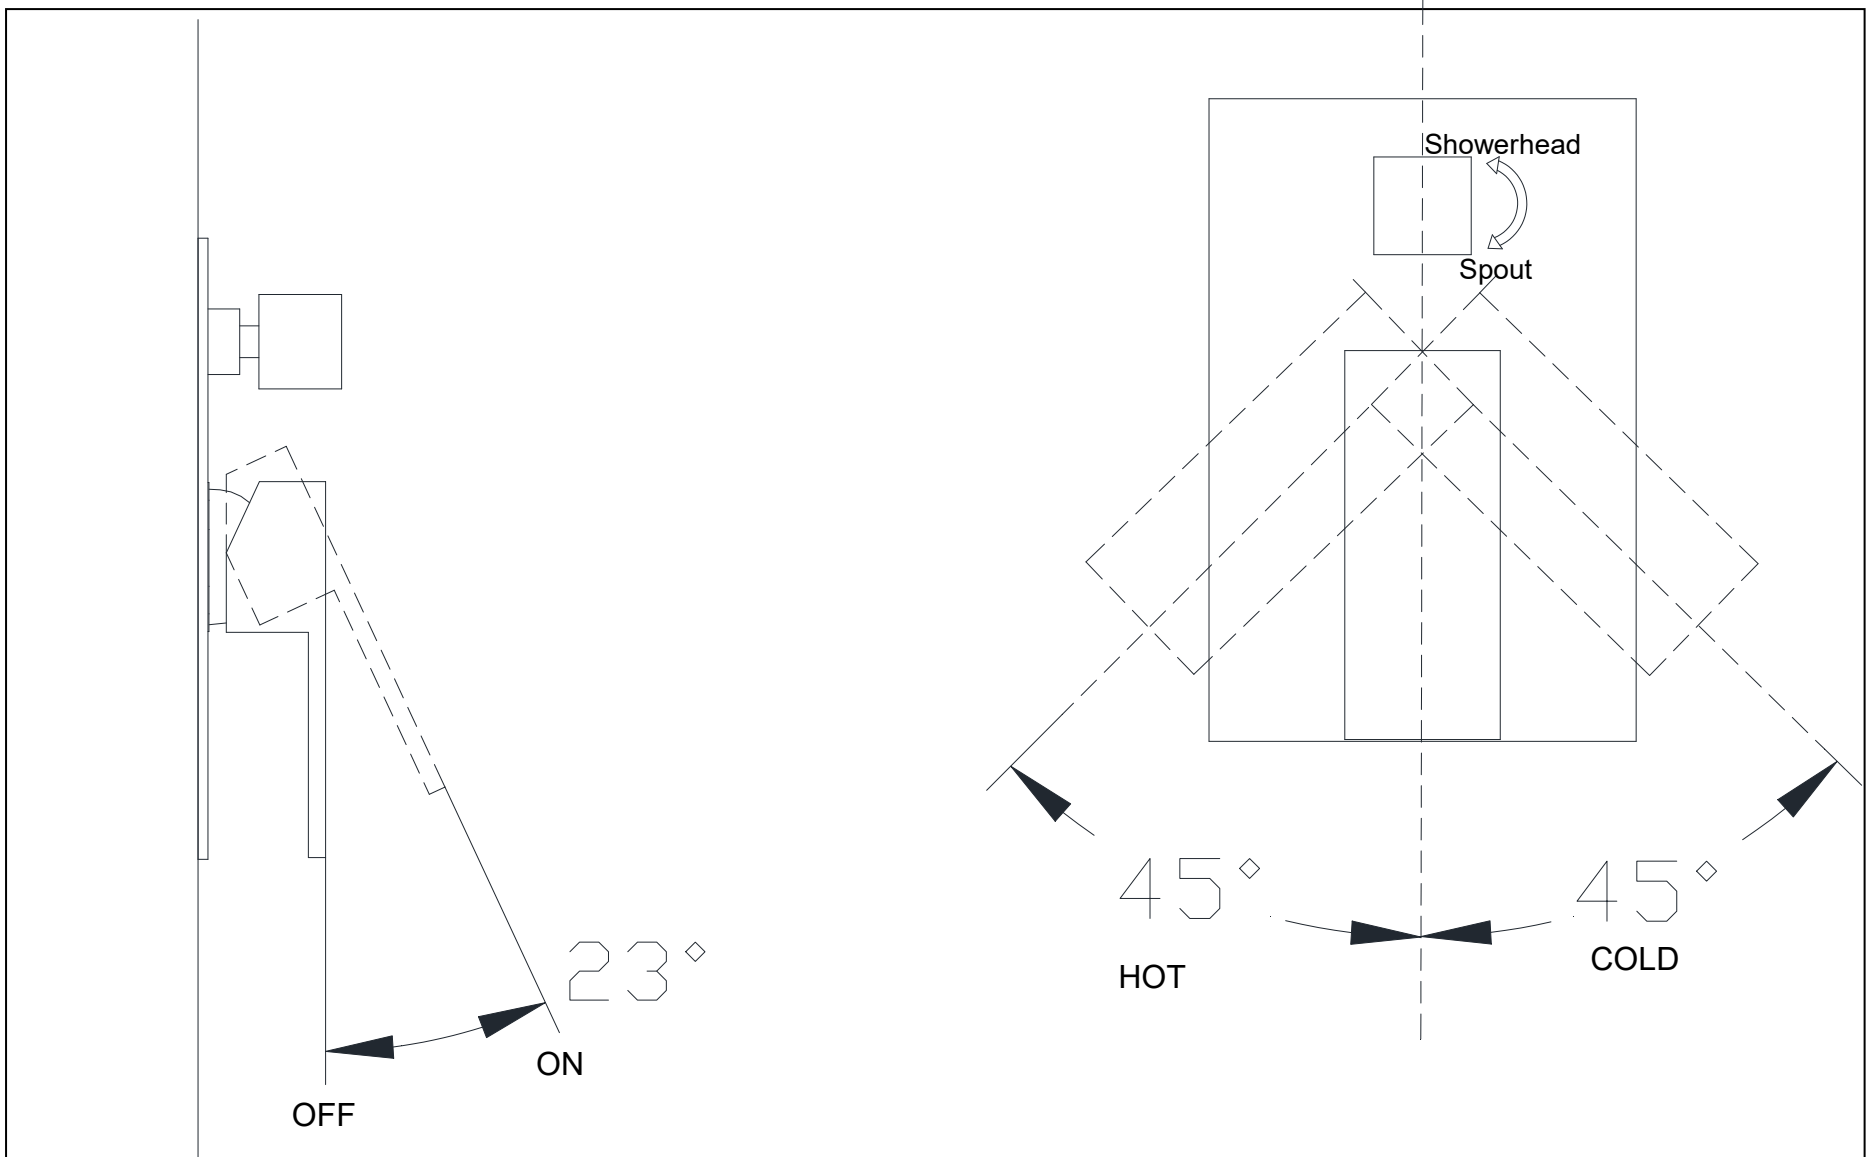

10. INSPECTION

10.1 Turn on the hot and cold water supplies and check all connections to ensure there are no leaks.

INSTALLATION COMPLETED

TROUBLESHOOTING

| Symptom | Solution |
|---|---|
| No or reduced water flow. | <ol style="list-style-type: none">1. Make sure to turn on the shut-off valve.2. Inspect all connectors to ensure there are no blockages.3. Ensure that both hot and cold water have sufficient pressure; the pressure balance valve will stop water flow if one of the hot or cold water supply systems is dry or provides only low water pressure. |
| Leak coming from the handle. | <ol style="list-style-type: none">1. Replace the cartridge.2. Replace the O-ring. |
| Reduced water flow from the showerhead. | <ol style="list-style-type: none">1. Remove and clean any calcification from the showerhead nipple.2. Clean the screen washer located in the showerhead inlet connector. |

CLEARNING RECOMMENDATION FOR SUMERAIN PRODUCTS

Modern lavatory faucets, kitchen faucets, and showers are crafted from a variety of materials to meet the market's demands for both design and functionality. To prevent damage and reduce the likelihood of returns, it is essential to follow the recommended cleaning guidelines.

Cleaning Materials for faucets & showers

When cleaning faucets and showers, it is essential to follow these professional guidelines:

- Use acidic cleaning agents specifically formulated for lime removal.
- Only use cleaning products designed for this purpose to avoid damage.
- Do not use cleaning agents containing hydrochloric, formic, phosphoric, or acetic acid, as these can cause severe damage to the surface.
- Never mix different cleaning agents, as this may lead to harmful chemical reactions.
- Avoid abrasive cleaning products or tools, such as unsuitable cleaning powders, rough sponge pads, or microfiber cloths that could harm the finish.

Cleaning instructions for faucets & showers

Please follow the cleaning material manufacturer's instructions carefully. Additionally, observe the following guidelines to maintain your faucets and showers:

- Clean faucets and showers regularly as needed to preserve their optimal function and appearance.
- Use the recommended amount of cleaning product and apply it for the specified duration. Avoid leaving the cleaner on the surface longer than necessary to prevent potential damage.
- Regular cleaning helps prevent calcification. For scale deposits on faucet surfaces or spouts, use a commercial descaler such as Lime-Away® or CLR®.
- If rust forms due to hard water, gently remove it by rubbing the affected area with aluminum foil soaked in water until smooth. Then, apply a small amount of chrome polish or an appropriate product like automotive wax (e.g., Meguiar's® or Turtle Wax®) to restore the finish.
- Solid stainless steel faucets and spouts, especially waterfall designs, usually lack a protective coating. While stainless steel resists tarnishing, it can oxidize over time. Keep stainless steel fixtures clean and dry, and use a stainless steel-specific cleaner such as Weiman® or CLR® for proper maintenance.
- When using spray cleaners, apply the product to a soft cloth or sponge first instead of spraying it directly onto the faucet. This prevents water droplets from entering the faucet openings and causing damage.
- After cleaning, rinse all surfaces thoroughly with clean water to remove any cleaner residue.

Important

Residues from liquid soap, shampoo, and shower gel can contribute to surface damage over time. To prevent this, thoroughly rinse these substances off with clean water after each use.



Note: If the surface is already damaged, using cleaning materials may worsen the damage.

Components with damaged surfaces must be replaced to prevent potential injury.

Please note that any damage caused by improper use, maintenance, or cleaning is not covered under the warranty.

SUMERAIN®

SUMERAIN INTERNATIONAL GROUP INC

Address: 1226 NORTH KING ST NUM 522
WILMINGTON, DE 19801
United States

Tel: +1(866)203-0866

Web: <http://www.sumerain.com>

E-mail: supports@sumerain.us

HONGKONG SUMERAIN SANITARY INDUSTRY CO., LIMITED

Address: FLAT/RM 3B 3/F BANK TOWER
NOS.351&353 KING'S ROAD
NORTH POINT
HK

Tel: +86-750-2731579

E-mail: supports@sumerain.com

SUMERAIN EUROPE SUPPORT

Address: Flottwellstr.15
10785 Berlin,
Deutschland

Tel: +49 (0)30/23975898

E-mail: de@sumerain.com