

## Using hidden features

Function	operating method	Note:
Radar induction switch setting	Press and hold the "Rear Wash" button on the remote control for about 5 seconds to set the radar switch (automatic lid opening) function. When the function is enabled, the buzzer emits a long beep; when the function is disabled, the buzzer emits a short beep.	
Automatic Flush When Lid Closes (for men after urinating)	Press and hold the "Front Wash" button on the remote control for about 5 seconds to set the automatic flush when the lid closes function. When the function is enabled, the buzzer emits a long beep; when the function is disabled, the buzzer emits a short beep.	Disabling the "Automatic Flush When Lid Closes" function means that the automatic flush for men after urinating is disabled.
Automatic Flush Function (after sitting and then leaving the seat)	Press and hold the "Flush" button on the remote control for about 5 seconds to set the automatic flush function. When the function is enabled, the buzzer emits a long beep; when disabled, a short beep.	Disabling the "Automatic Flush Function" means that all automatic flush functions are disabled.
Automatic Foam Function Switch	Press and hold the "Air Dryer" button on the remote control for about 5 seconds to set the foam shield function. When the function is enabled, the buzzer emits a long beep; when the function is disabled, the buzzer emits a short beep.	
Manual Foam Activation	Press and hold the "Self-Clean" button on the remote control for about 5 seconds to manually activate the foam shield.	
Energy Saving Mode	Press and hold the "Light" button on the remote control for about 5 seconds to set the energy-saving switch. When the function is enabled, the buzzer emits a long beep; when the function is disabled, the buzzer emits a short beep.	
Pre-wet Function	Press and hold the "Water Temp" button on the remote control for about 5 seconds to set the wall wetting function switch. When the function is enabled, the buzzer emits a long beep; when the function is disabled, the buzzer emits a short beep.	

Radar Distance Adjustment	Press and hold the "Air Temp" button on the remote control. When pressed and held for the first time, the buzzer emits a single beep, entering the radar distance level setting mode. At this point, you can adjust the radar sensing distance using the "Nozzle Forward" and "Nozzle Backward" buttons on the remote control, while the water temperature display area on the screen shows the corresponding radar setting level (range 1 to 5). After adjustment, briefly press the "Stop" button again to exit the setting mode. If no adjustment is made within 10 seconds, the setting mode will automatically exit after 10 seconds. Sensing distance (Level 1: approx. 0.3m, Level 2: approx. 0.6m, Level 3: approx. 0.9m, Level 4: approx. 1.3m, Level 5: approx. 1.8m).	
Temperature Unit Switch	Press and hold the "Water Pressure -" button on the remote control for about 5 seconds to switch the temperature unit between Fahrenheit and Celsius.	
Sterilization Light Function	Press and hold the "Nozzle Forward" button on the remote control for about 5 seconds to enable automatic sterilization when the lid is closed.	
Ambient Light Switch	When not seated, briefly turn the knob (side knob of the toilet) forward.	