



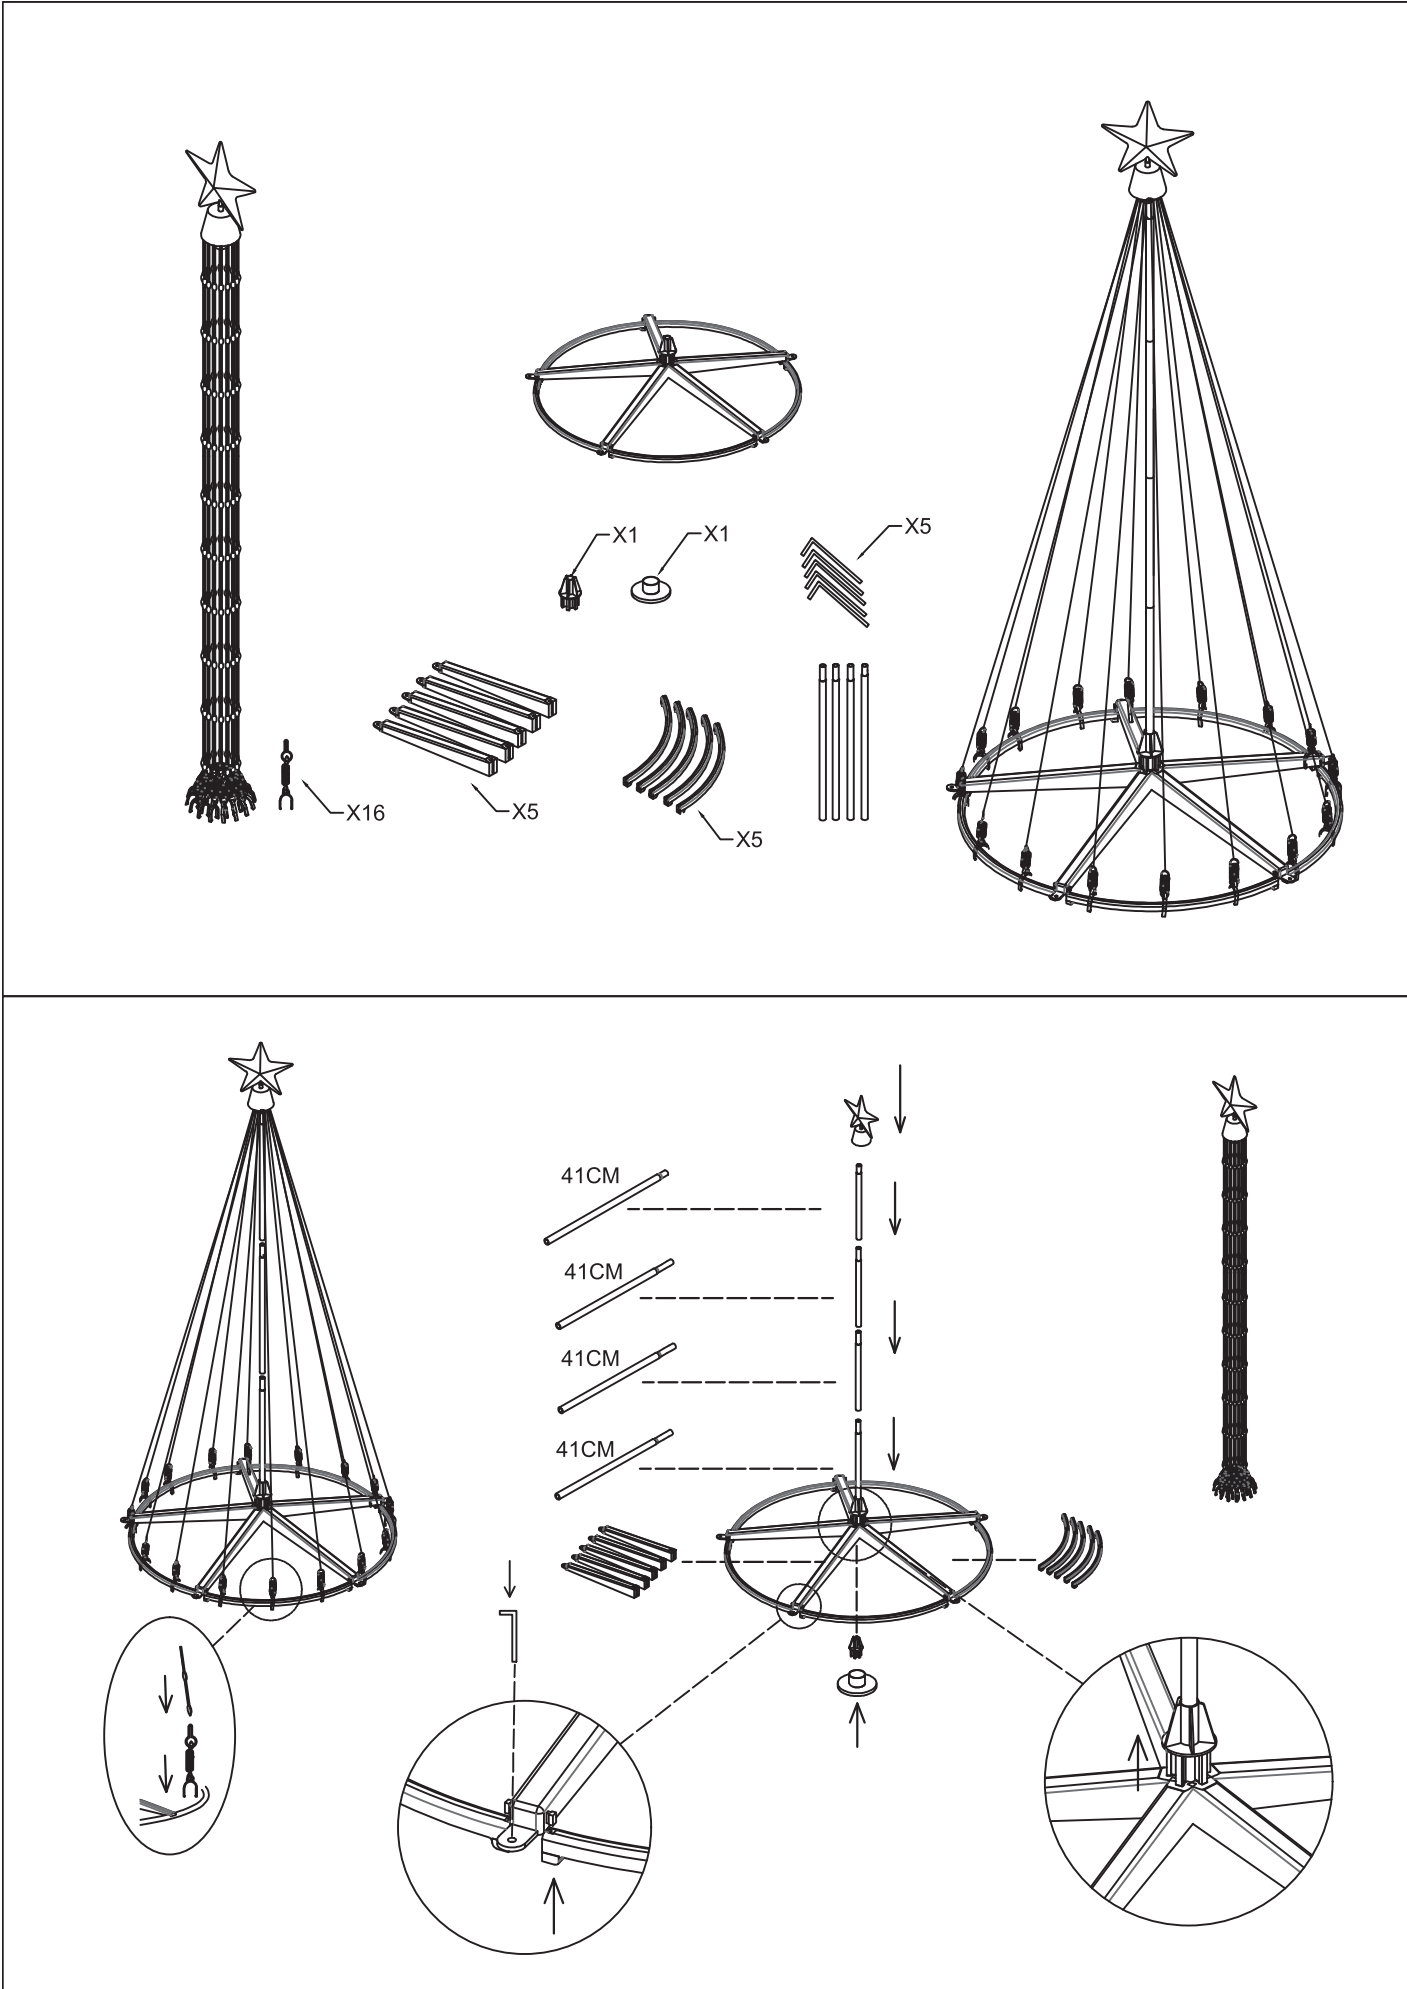

2.3 Remote Control Functions

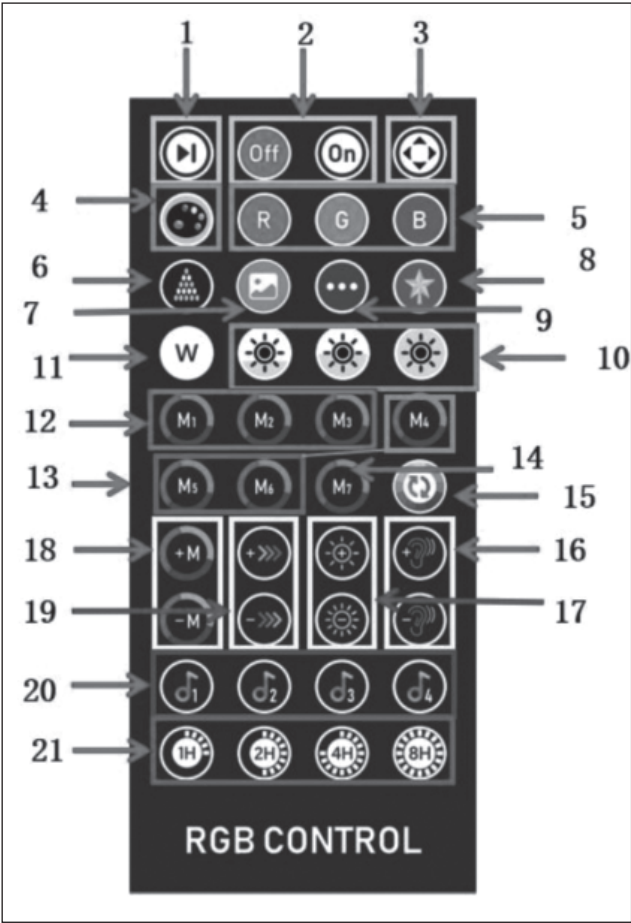

1. Pause/Play button.
2. On and Off button.
3. Light string pattern transformation modes: move up, move down, move left, move right, blink, fixed.
4. Color palette, tap to switch colors.
5. Single LED color button for quick switching between red, green, and blue modes.
6. Cycle through fixed scene modes.
7. Cycle through graphic scene modes.
8. Tree-top star control button, cycling through fixed warm light, scene follow, and off.
9. Toggle between text display or customizable.
10. Brightness button: from left to right, 25%, 50%, 100%.
11. Cool white and warm white button.
12. Switch between three fixed scene modes.
13. Switch between three graphic scene modes.
14. Text scene mode or customizable.
15. Cycle through individual theme scene modes, switching every 30 seconds.
16. Sensitivity adjustment buttons for music mode.
17. LED brightness adjustment buttons (increase/decrease).
18. Switch between individual scene mode and music mode, next and previous.
19. Scene mode speed adjustment (increase/decrease).
20. Four music modes.
21. Timer function: 1 hour, 2 hours, 4 hours, 8 hours.

Hello Fairy APP Custom DIY