


Betty Crocker

OVAL PROGRAMMABLE SLOW COOKER

For assistance regarding this appliance, please call 1-877-244-1110





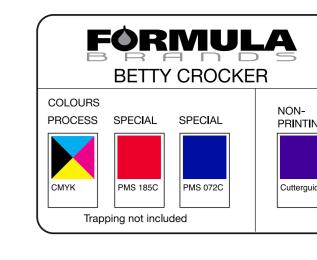


READ INSTRUCTIONS BEFORE USING

> Select from 3 pre-programmed settings: High, Low and Keep

Warm Program cooking times from 30 minutes to 20 hours.

Clean and sleek design Digital
Touch Control Panel.

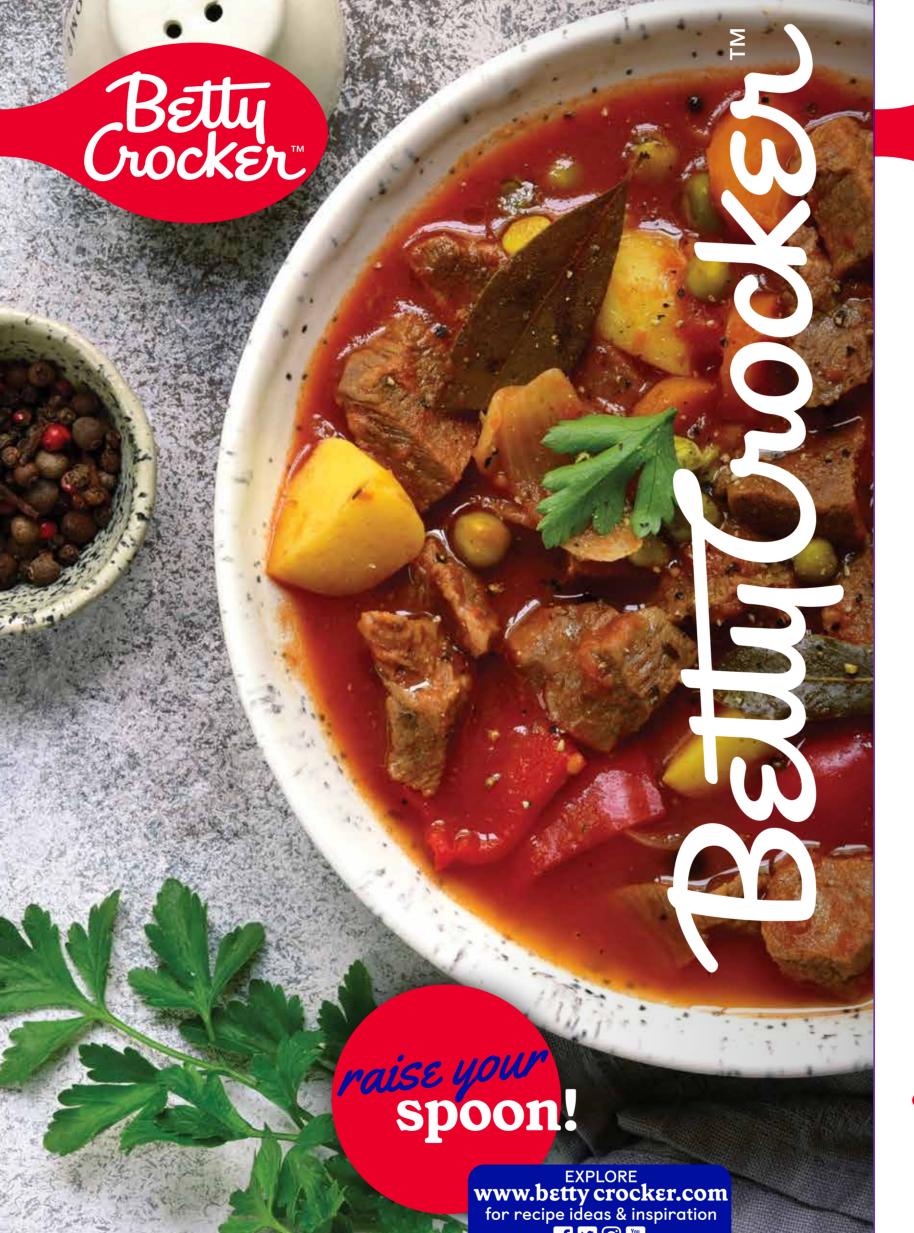

READ INSTRUCTIONS

BEFORE USING





large family meals and perfect cook your meals with consistent and even heat.





