 
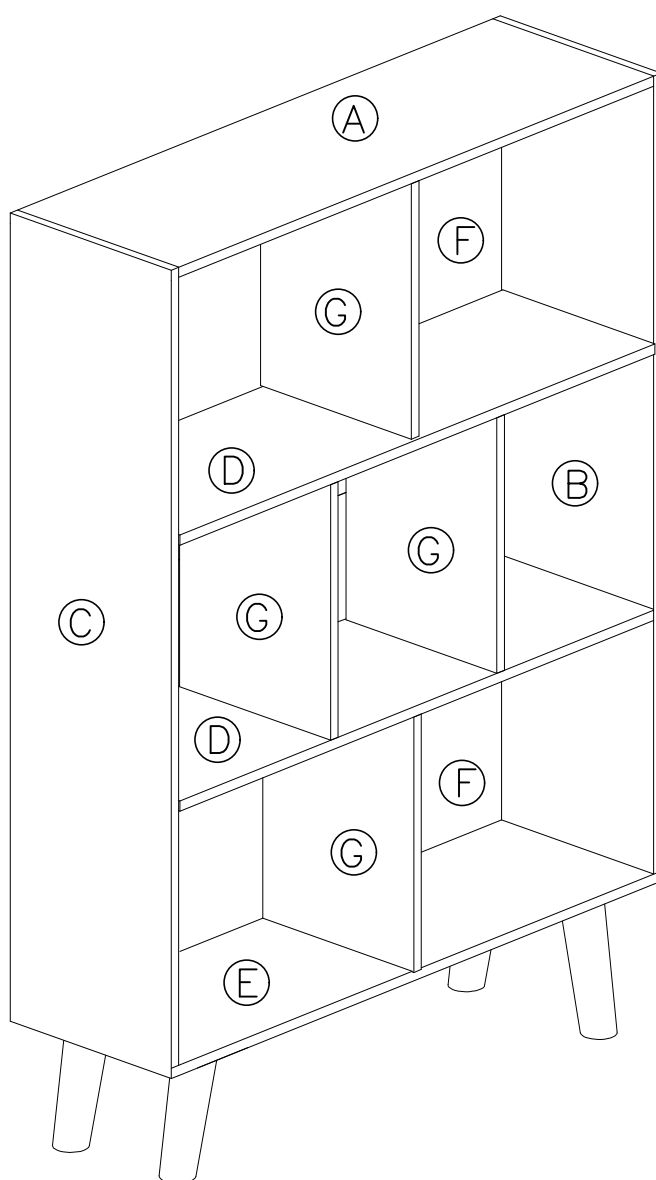 
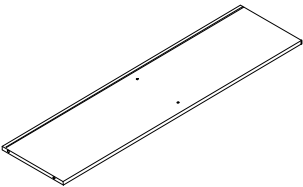 
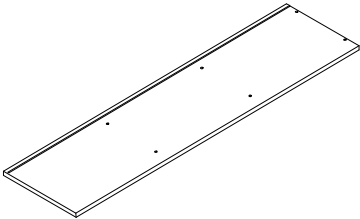 
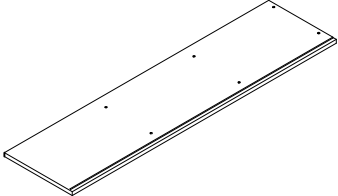 
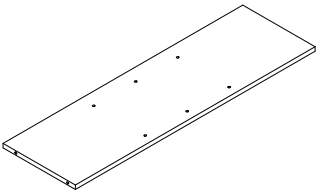 
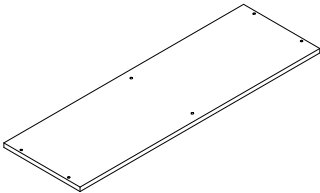 
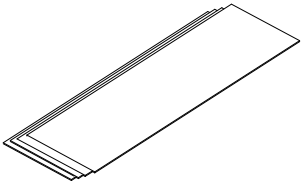 
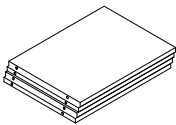 
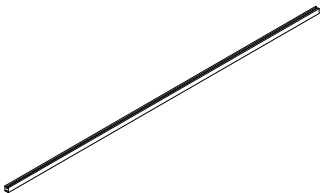 
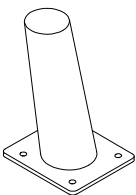 
 
 
 
 
 





Assembly Instructions



Parts List

Ⓐ X1 	Ⓑ X1 	Ⓒ X1 
Ⓓ X2 	Ⓔ X1 	Ⓕ X4 
Ⓖ X4 	Ⓗ X3 	
① X4 	② X32  M5x40mm	③ X10   M3x16mm
④ X1   M4x40mm M3x14mm	⑤ X16  M4x14mm	X1   M3

   
STEP1

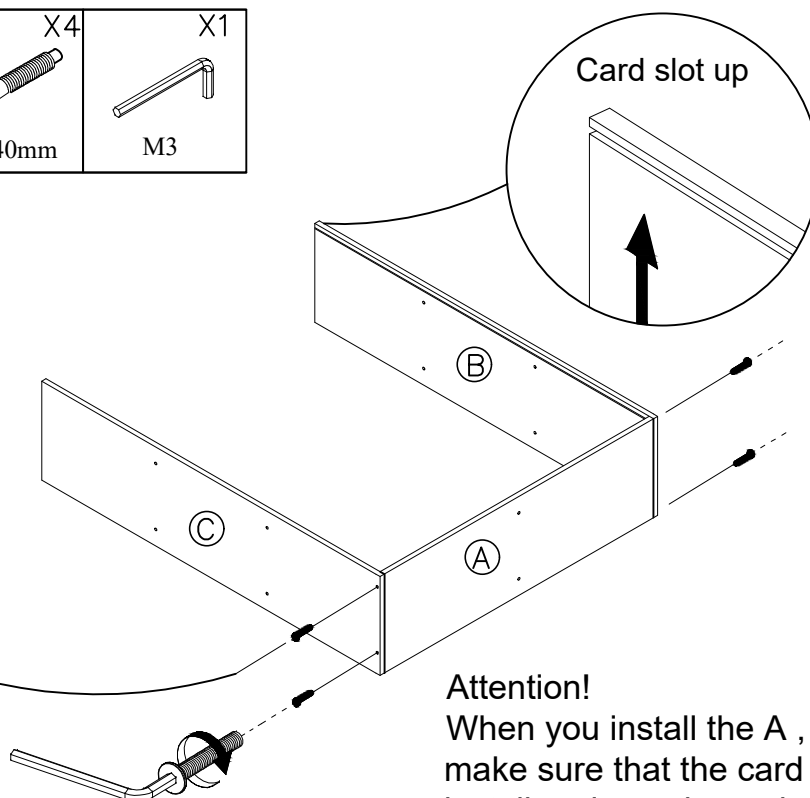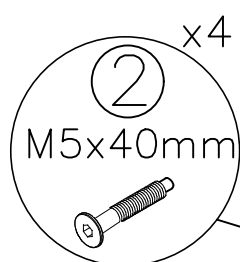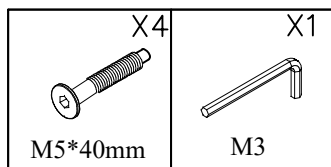


Attention!

When you install the A , B, C boards, make sure that the card slots used to install real panel remain on the same side! See the direction of the arrow in the illustration!


 
STEP2

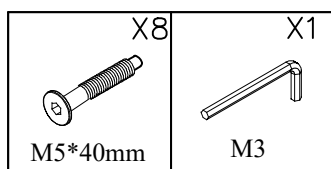


 
Please pay attention to the direction of the G board, otherwise the backplane cannot be installed

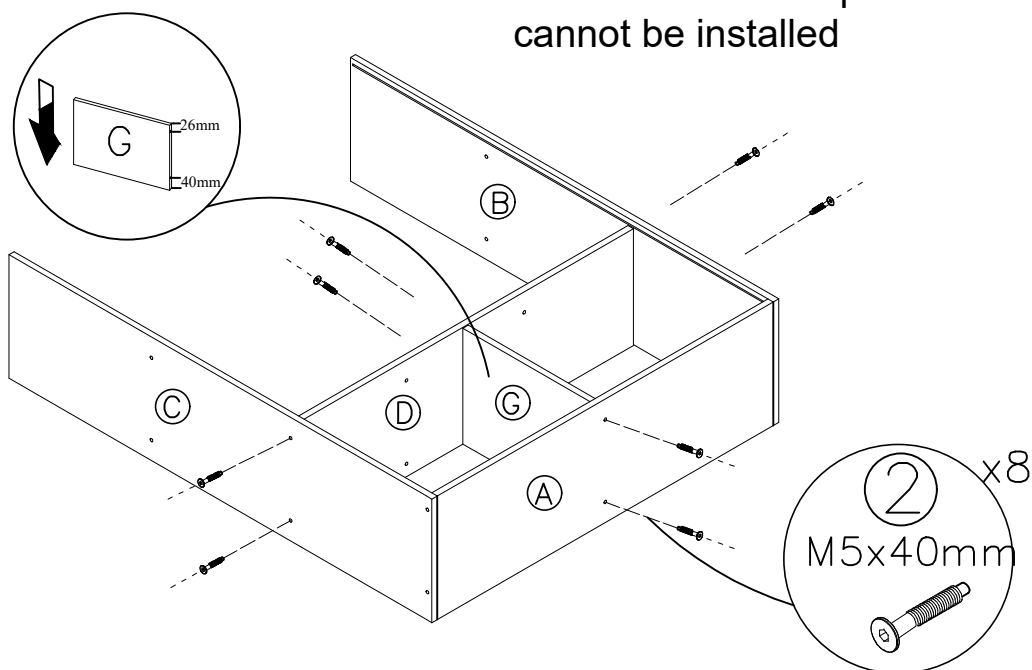

 
 
STEP3

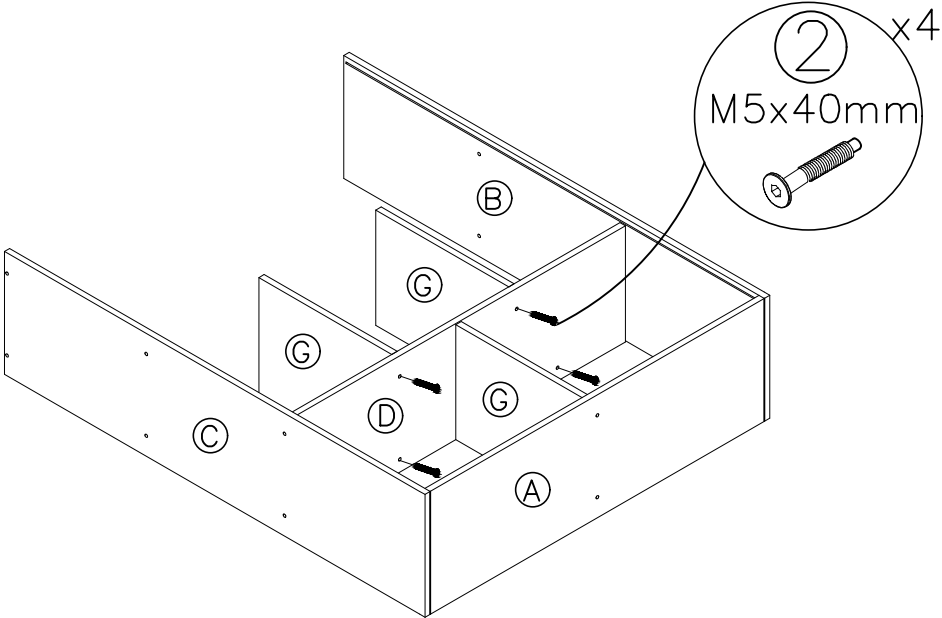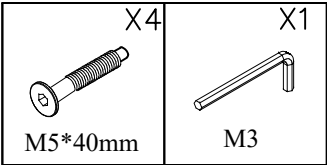

 
 
STEP4

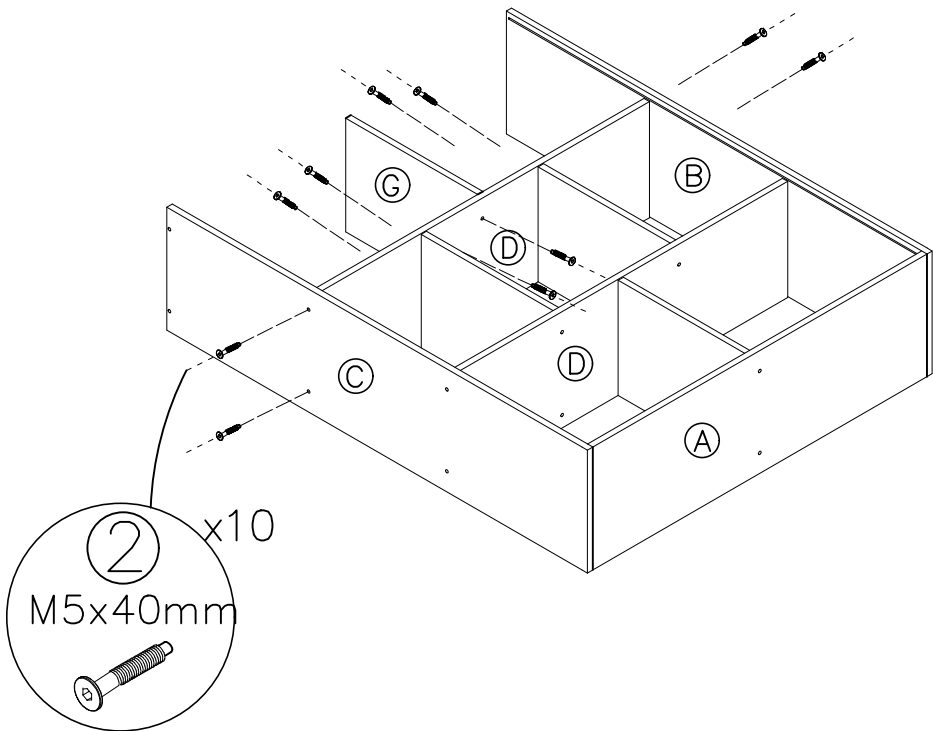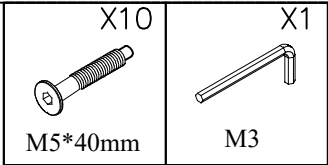

  
STEP5

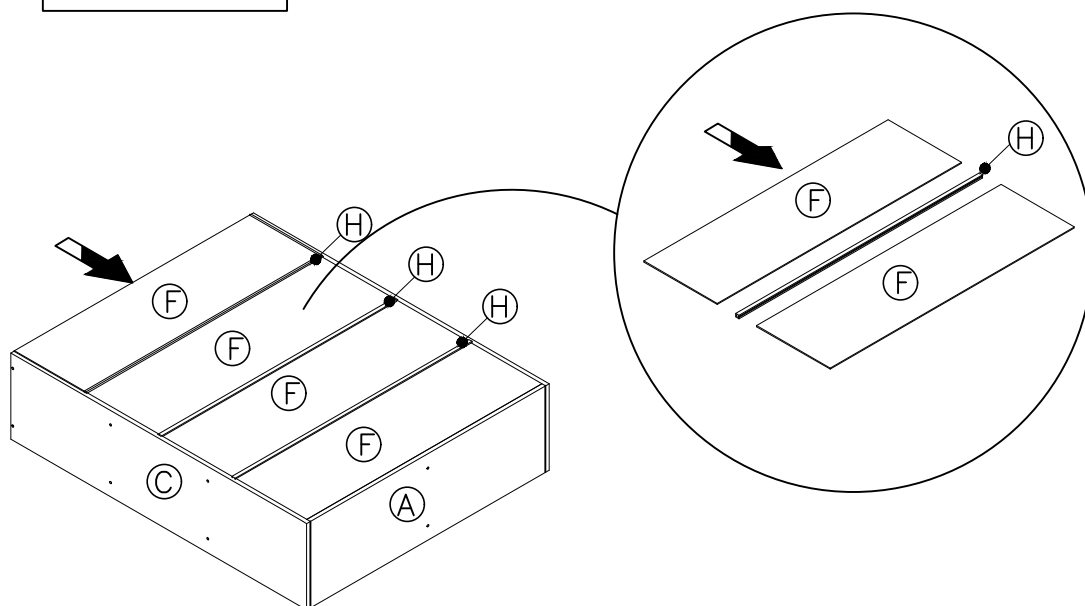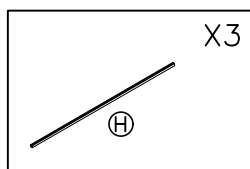


  STEP6

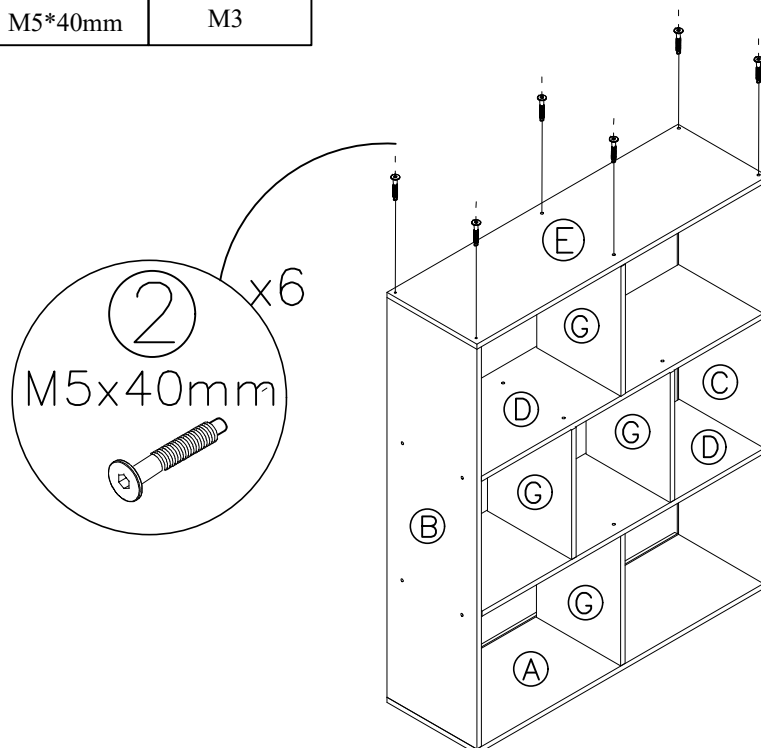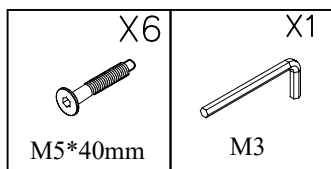

 STEP7

x10	x10	x4	x16	x1
	 M3*16mm		 M4*14mm	

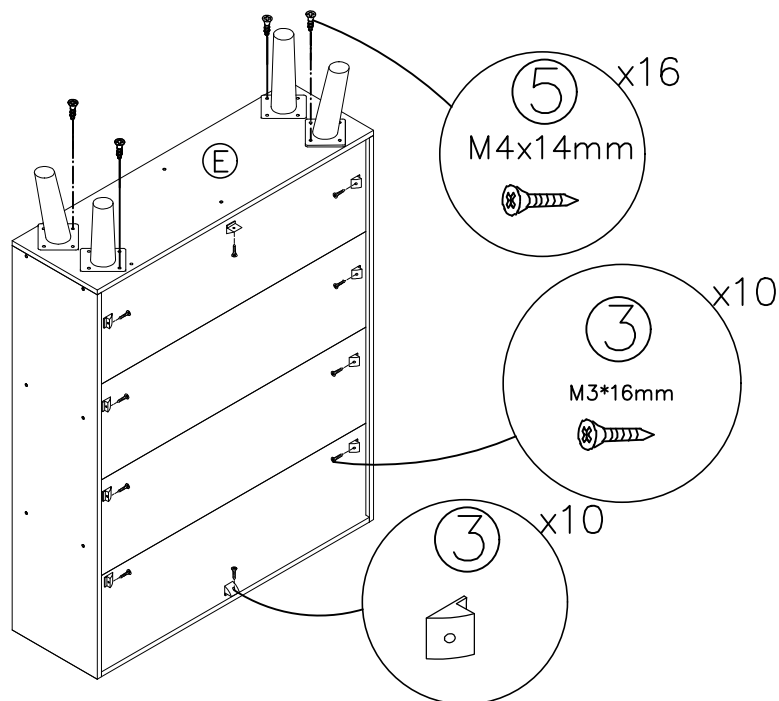 

STEP8

x2	x2			x1
 M4*40mm	 M3*14mm			

