


1 Pull out the leg.

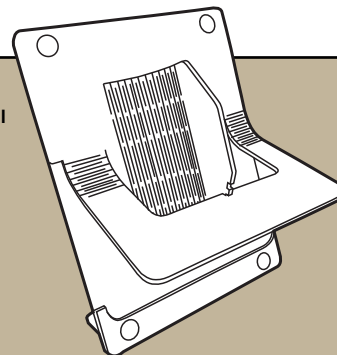

2 Swing out the support, gently push inward until notches align.

## TIPS

- Place the included silicone rubber pads onto the magnets to give it better traction to prevent sliding and scratches.
- When standing, the dry eraser may be attached to the magnets in the back corners for easy storage.
- If used as a tabletop sign, turn it horizontally for a wider, landscape format.

## CUSTOMIZATION

### Adding Photos:

Photos can be inserted by unscrewing the four bolts to separate the clear acrylic screen. Arrange your desired photos between the layers and reattach the screen to secure them in place.

### Creating Custom Signage:

To create professional-looking, hand-lettered signage, print out a typographical design and place it beneath the clear acrylic surface. Use the included marker to trace over the design for a polished and personalized touch.

## CLEANING

**Do not use chemical cleaners, such as Windex, as it may discolor the screen's surface.**

Instead, use the included dry eraser or a wet paper towel.

Over time, the screen may naturally darken from the ink. Replacement screens may be purchased from the Purelite website at [purelite.us](http://purelite.us).

For questions, please email us at [info@purelite.us](mailto:info@purelite.us)