



GOT QUESTIONS?  
WE'RE HERE FOR YOU!

1-800-281-0146  
support@mealthy.com

# Mealthy Glass Kettle User Guide



Congratulations on your purchase of the Mealthy Glass Kettle and welcome to the Mealthy Movement. The Mealthy Glass Kettle is a fast and fun way to boil water for tea, tisane, coffee, cocoa, or your favorite hot beverage. It's also great for instant soups and noodles!

Your safety and satisfaction with the Mealthy Glass Kettle are our #1 priority. This guide introduces you to your Glass Kettle and how it works. Read all instructions carefully and thoroughly before use.

*Let's get started!*



# Table of Contents

Important Safeguards - Safety First!.....	3 - 5
Introduction.....	6
Setup and Use.....	7 - 10
Care and Cleaning.....	11 - 12
Warranty.....	13 - 14

# Important Safeguards – Safety First!

**Read all instructions before use; save this guide for future reference!**



1. Read all instructions before use; save this guide for future reference!



2. **NEVER** use an extension cord with your Mealthy Glass Kettle. The short power cord is specifically made as a safety precaution to reduce the risk of children grabbing or playing with the cord, and to keep you from tripping over a long cord.



3. The Mealthy Glass Kettle is intended for countertop use **ONLY**. Ensure the surface is clean, level, and dry.



4. **ALWAYS** unplug kettle base when not in use.



5. **ALWAYS** ensure kettle is properly positioned on base before use.



6. **ALWAYS** use caution when operating your kettle. Keep kettle **AWAY** from children or individuals whose physical, sensory, or mental abilities may prevent safe use of the appliance.



7. To prevent electrical shock, **NEVER** immerse cord, plugs, or kettle in water or any other liquid. **DO NOT** rinse kettle under a tap. Doing so can cause damage, injury, and will void your warranty.



8. **NEVER** place kettle on or near hot gas, ceramic, induction, or electric burners. Doing so can cause damage, injury, and will void your warranty.



9. **NEVER** place kettle in an oven. Doing so can cause damage, injury, and will void your warranty.



10. Use **EXTREME CAUTION** when handling hot surfaces to avoid injury.

# Important Safeguards – Safety First!



11. **NEVER** move kettle when kettle is positioned on the base and is heating up. Doing so can cause damage, injury, and will void your warranty.



12. Regularly inspect your kettle and its power cord and plug. **DO NOT** use kettle if there is damage to the power cord or plug. If kettle malfunctions or is damaged in any way, immediately stop use and call Mealthy Customer Service.



13. **NEVER** tamper with, disassemble, or otherwise remove any portion of the Mealthy Glass Kettle. This can damage your kettle and will void your warranty.



14. To avoid injury, **NEVER** drape cord over counter edge.



15. The kettle glass and base become hot during the heating process. **ALWAYS** use care and caution when handling kettle.



16. **NEVER** connect kettle to an external timer switch or separate remote-control system.



17. **ALWAYS** provide adequate space above and around kettle for proper air circulation.



18. **NEVER** use kettle or kettle base in a microwave, toaster oven, convection oven, conventional oven, or on a ceramic, electric, gas, or induction cooktop, or outdoor grill. Doing so can damage your kettle and will void your warranty.



19. **ALWAYS** ensure kettle is clean before using. **NEVER** let power cord come in contact with hot surfaces.



20. Your Mealthy Glass Kettle is **ONLY** intended for use in 110-120V ~ 50-60Hz electrical systems in North America. **ALWAYS** plug power cord into a grounded electrical outlet.

# Important Safeguards – Safety First!



21. **ALWAYS** unplug and let kettle cool down before cleaning or storing.



22. **NEVER** start kettle without water inside. If you accidentally operate the kettle without water, the built-in, boil-dry protection will cause the kettle to automatically shut off. Allow kettle to cool completely before filling with cold water.



23. **ALWAYS** use caution when pouring hot water from kettle.



24. **ALWAYS** use handle to lift kettle. **NEVER** grab kettle by base, glass, or lid. Doing so can cause damage, injury, and will void your warranty.



25. To avoid burns or injury, **NEVER** place hands or face above pour spout.



26. **NEVER** exceed max fill lines marked on kettle.



27. The Mealthy Glass Kettle is for household use only. **NEVER** use kettle for anything other than its intended use. **DO NOT** use in moving vehicles or boats. **DO NOT** use outdoors. Doing so can cause damage, injury, and will void your warranty.



28. **DO NOT** use abrasive cleaners, steel wool, or scouring pads to clean kettle. Refer to Care and Cleaning for more information.



29. **ALWAYS** leave kettle lid closed when heating and pouring.



30. **ALWAYS** use kettle with provided base. **NEVER** use a third-party base with kettle. Doing so can cause damage, injury, and will void your warranty.



31. **ALWAYS** ensure that kettle is switched **OFF** before removing from base.

You made it through the important safeguards, congratulations! If you haven't read them yet and just skipped to this page, go back and read those safeguards right away.


Your Mealthy Glass Kettle is designed to get you perfectly boiled water for all your hot beverage needs. Because your safety and satisfaction are our #1 priority, we've built the Glass Kettle to the highest safety and functional standards.

	<b>MODEL</b>	MGK-100-US
	<b>POWER SUPPLY</b>	120V ~ 60Hz
	<b>RATED POWER</b>	1500W
	<b>VOLUME</b>	1.7 liters

## Setup and Use

Your Glass Kettle consists of the main glass kettle with LED light and the heating base with a power cord. The base and kettle are only designed for use with each other, and should not be used with third-party kettles or bases.

The main glass kettle consists of the lid, lid button, glass body, handle, bottom cover, switch, and power base.

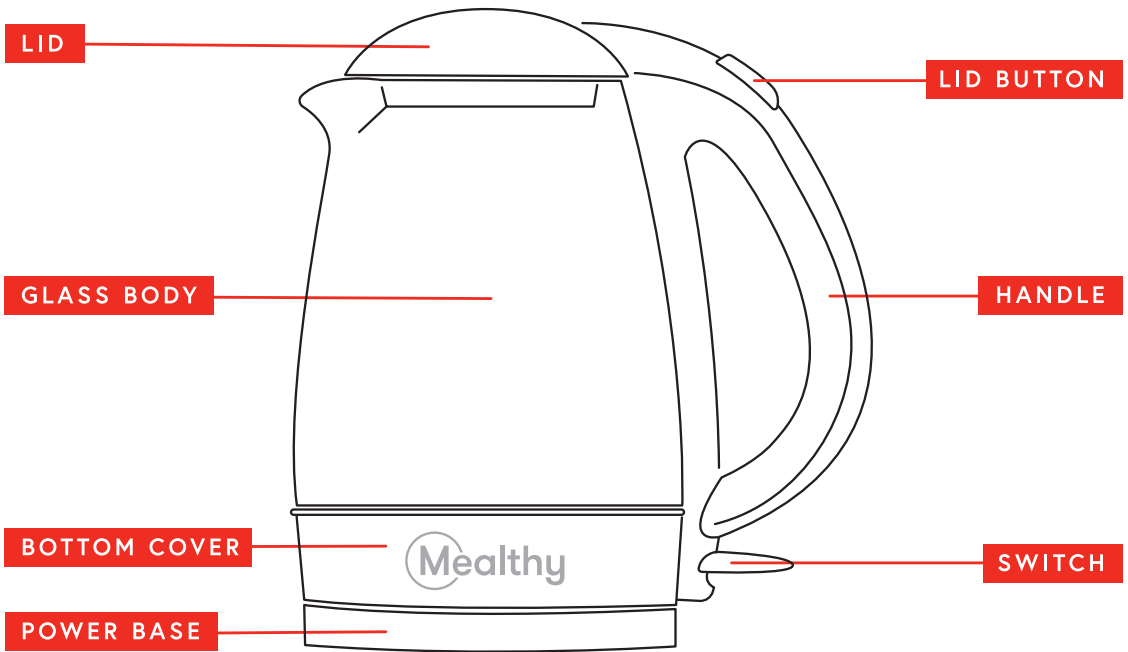


Getting started with your Glass Kettle is quick and convenient. Before using your kettle for the first time, ensure all parts are clean and free of debris.

Clean your kettle before first use by filling kettle to max line with water and bring to boiling. Run this cycle twice, replacing the water in between cycles. Now you're ready to go!

## OPERATION


1. Remove kettle from base and open lid by pressing down on the top of the lid button.

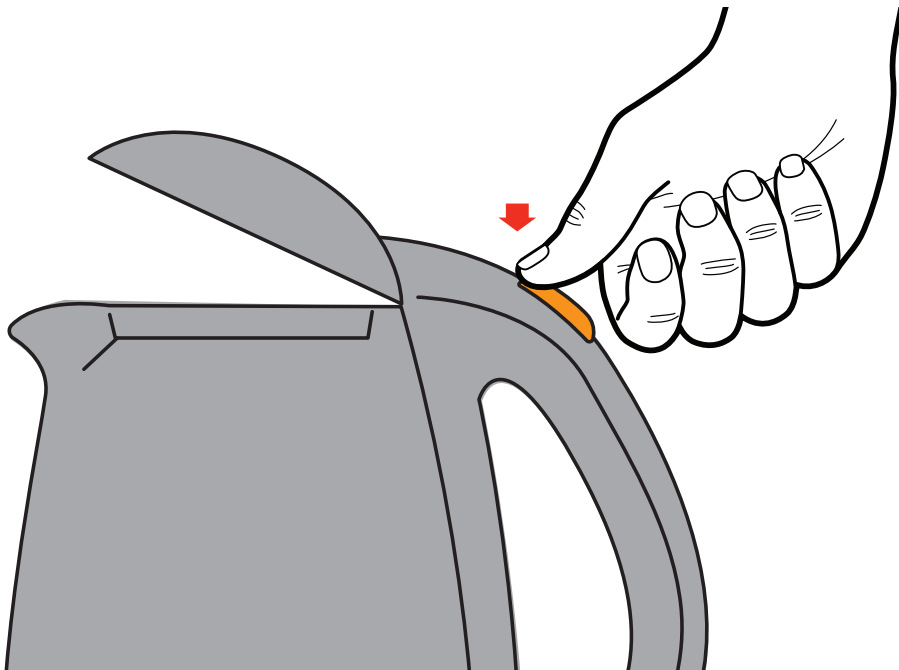


## Setup and Use

2. Fill with cold water to the desired level between the minimum (0.5 L) and maximum (1.7 L) lines. Press lid down to close.

**NOTE: NEVER** fill to exceed the max fill line. Overfilling can cause water to spill out of the spout when boiling and cause injury and damage.

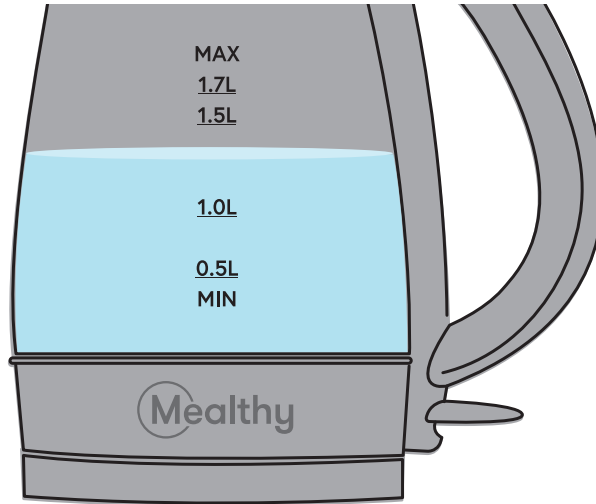


3. Position kettle on base, ensuring that the kettle sits on base firmly.

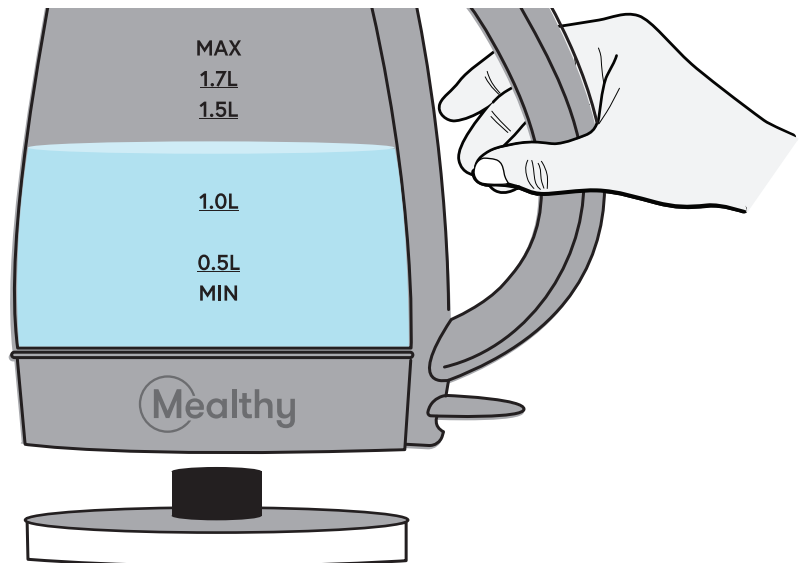

4. Plug in kettle base and press kettle switch down. The blue LED interior light will illuminate to let your know your water is heating.

**NOTE: ALWAYS** ensure the switch is clear of obstructions and the lid is firmly closed before pressing the switch into the on position. The kettle will not turn off if the switch is blocked or the lid is open.

**NOTE:** Your kettle comes equipped with boil-dry protection. If you accidentally allow the kettle to operate without water, this protection will automatically shut off the kettle. Allow the kettle to cool completely before filling with water.

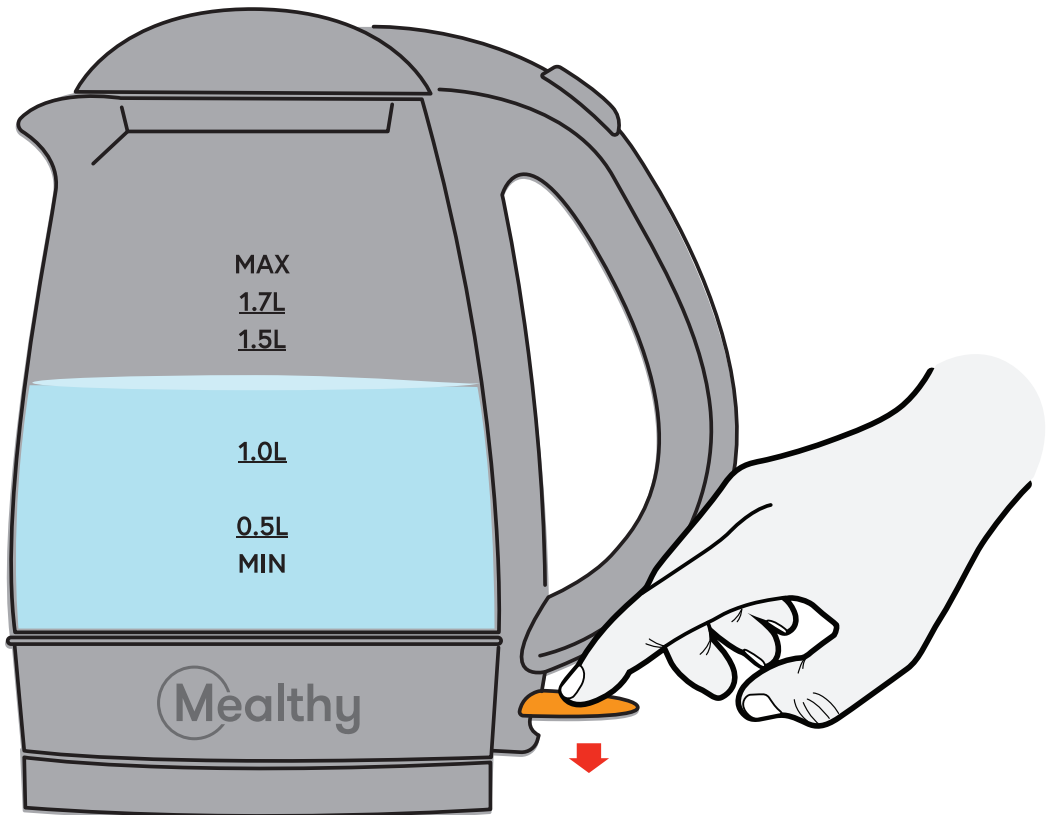

## Care and Cleaning

Wait until the unit has completely cooled before attempting to clean. Use a clean, damp cloth to wipe down the interior of the kettle, then dry with a cloth if desired. Use a soft brush to clean out the filter.

Wipe down the exterior of the kettle with a soft, damp cloth. **NEVER** use chemicals, steel, wood, or other abrasive cleaners to clean kettle.



## DESCALING YOUR GLASS KETTLE

Depending on the water quality in your area, lime deposits may build up on the heating element of your kettle. Remove these deposits regularly to keep your kettle in tip-top shape.

**NOTE:** Removing hard water and lime deposits regularly keeps your kettle running. Failure to remove these deposits can result in malfunctions. Malfunctions related to hard water and lime deposits are not covered by the warranty.

1. Stir 2½ cups water (.5 L) and ¼ cup vinegar together in kettle.
2. Place kettle on base and plug in. Press switch down to begin heating.
3. When water comes to a boil and unit switches off, let water-vinegar mixture sit in kettle for 1-3 minutes.
4. Pour water-vinegar mixture out of kettle and discard.
5. Rinse interior of kettle with clean water.



## Limited Warranty

Your satisfaction is very important to us at Mealthy, and we back that up with a 1-year warranty on your Glass Kettle.

When this appliance is operated and maintained in accordance with written instructions attached to or furnished with the product, Mealthy, Inc., will pay for either (i) repair labor to correct defects in materials or workmanship that existed when this appliance was purchased or (ii), at its sole and exclusive discretion, replace the appliance for a period of one (1) year from the date of purchase. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire at the original date (12 months from the original purchase date).

This Limited Warranty extends only to the original purchaser and use of the appliance in the United States of America. This warranty does not cover units that are used outside of the United States of America.

Any modification or attempted modification to your appliance may interfere with the safe operation of the appliance and will void this Limited Warranty. This Limited Warranty does not apply in respect of any appliance or any part thereof that has been altered or modified from its factory settings unless such alterations or modifications were expressly authorized by an Mealthy representative.

Mealthy is not responsible for shipping costs related to warranty service, save and except for shipping costs associated with the return of your appliance as provided herein.

### Limitation and Exclusions

The liability of Mealthy, if any, for any allegedly defective appliance or part shall in no circumstances exceed the purchase price of a comparable replacement appliance.

### This Limited Warranty does not cover:

1. Damage resulting from accident, alteration, misuse, abuse, neglect, unreasonable use, use contrary to the operating instructions, normal wear and tear, commercial use, improper assembly, disassembly, failure to provide reasonable and necessary maintenance, fire, flood, acts of God or repair by anyone other than an authorized Mealthy Representative.
2. Repairs where your appliance is used for other than normal, single-family household use or when it is used in a manner that is contrary to published user or operator instructions.

3. Use of unauthorized parts and accessories, or repairs to parts and systems resulting from unauthorized repairs or modifications made to this appliance. The cost of repair or replacement under these excluded circumstances shall be borne by you.

## Disclaimer of Implied Warranties

IMPLIED WARRANTIES, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. Some states do not allow limitations to the duration of implied warranties of merchantability or fitness, so this limitation may not apply to you.

## Disclaimer of Representations Outside of Warranty

Mealthy, Inc. makes no representation about the quality, durability, or need for service or repair of this appliance other than the representations contained in this warranty.

## Limitation of Remedies; Exclusion of Incidental and Consequential Damage

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. MEALTHY SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE APPLIANCE OR DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, PERSONAL INJURY, LOSS OF PROPERTY, LOSS OF REVENUES OR PROFITS, LOSS OF ENJOYMENT OR USE, COSTS OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES OF WHATSOEVER NATURE.

You the buyer may have other rights and remedies under your state's or province's applicable laws, which are in addition to any right or remedy which may be available under this limited warranty.

## Warranty Registration

Visit [www.mealthy.com/productreg](http://www.mealthy.com/productreg) (or scan this QR code) within 30 days of purchase to register your Mealthy Glass Kettle and validate your warranty. You will be asked to provide the store name and date of purchase, along with your name and address. Your registration will enable Mealthy to keep you up-to-date with product developments, recipes, and contact you (in the unlikely event of a product safety notification). By registering, you acknowledge to have read and understood the instructions for use and warnings set forth in the accompanying instructions.



Join the  
Mealthy  
Movement!

M

GOT QUESTIONS?  
WE'RE HERE FOR YOU!

1-800-281-0146  
support@mealthy.com



[www.mealthy.com](http://www.mealthy.com) • Get inspired on



Download the Mealthy® app or visit  
[www.mealthy.com](http://www.mealthy.com) for recipes, tips, tricks,  
and how-to videos!

Join the Mealthy Facebook Group today –  
just log into Facebook and search for **Mealthy!**  
Or scan this QR code for instant access.



Mealthy, Inc.  
USA, Earth 



**Mealthy**®

Copyright Mealthy® 2019 MGK-0301-01