 
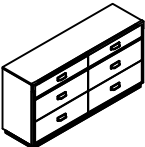 
 
 
 



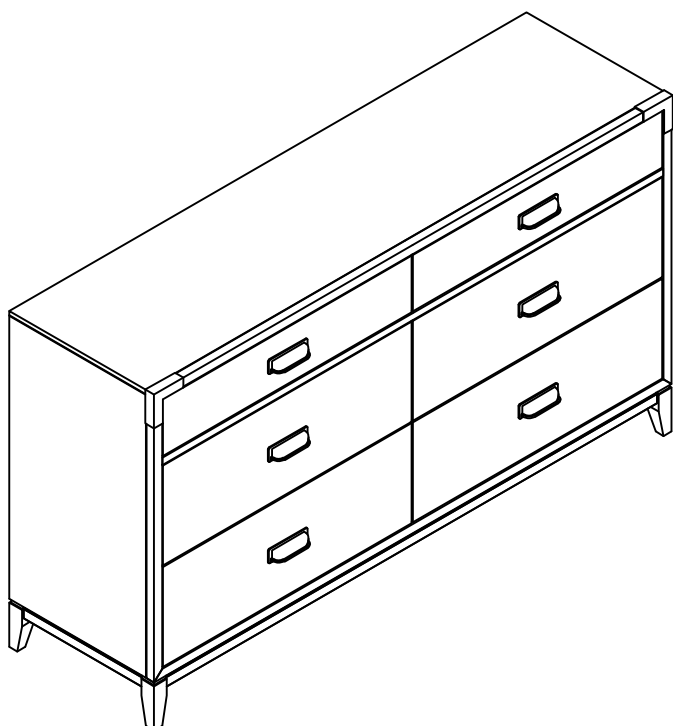 


ASSEMBLY INSTRUCTIONS

6-DRAWER DRESSER WITH 3 SETS OF MODULAR DRAWER DIVIDERS

A Dresser 	B Leg (In the bottom drawer) 	C Support Leg 	D JCBC Bolt 5/16" x 55mm 
1pc	4pcs	1pc	4pcs
E Spring Washer 5/16" x Ø12mm 	F Flat Washer 5/16" x Ø19mm 	G Allen Key M4 x 65mm 	H Anti-Tip Kit 
4pcs	4pcs	1pc	1set




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

IMPORTANT NOTE:


1. Do not tighten all screws / bolts until all completely assembled.
2. Keep all hardware parts out of reach of children.

1

Take out the box of the Leg (B) and the hardware pack from the bottom drawer of the Dresser (A).

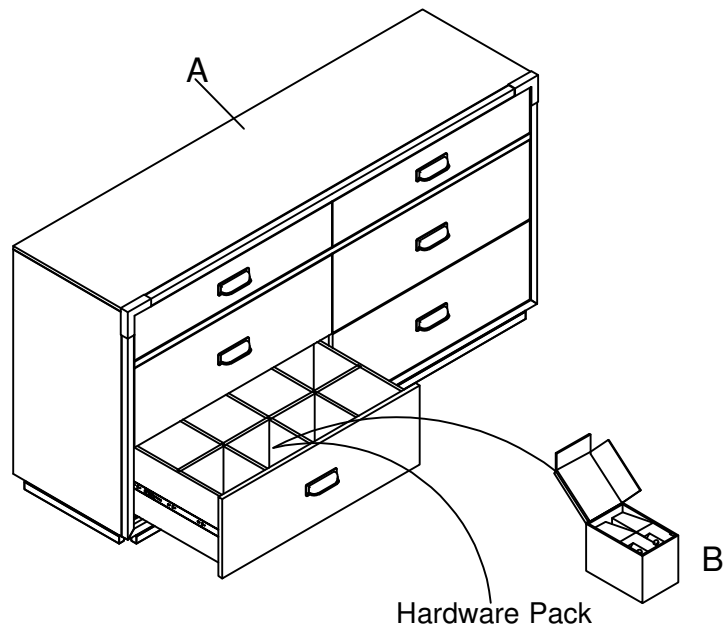**2**


Attach the Leg (B) to the Dresser (A) using JCBC Bolt (D), Spring Washer (E) and Flat Washer (F) with the Allen Key (G). Turn and fasten the Support Leg (C) to the Dresser (A).

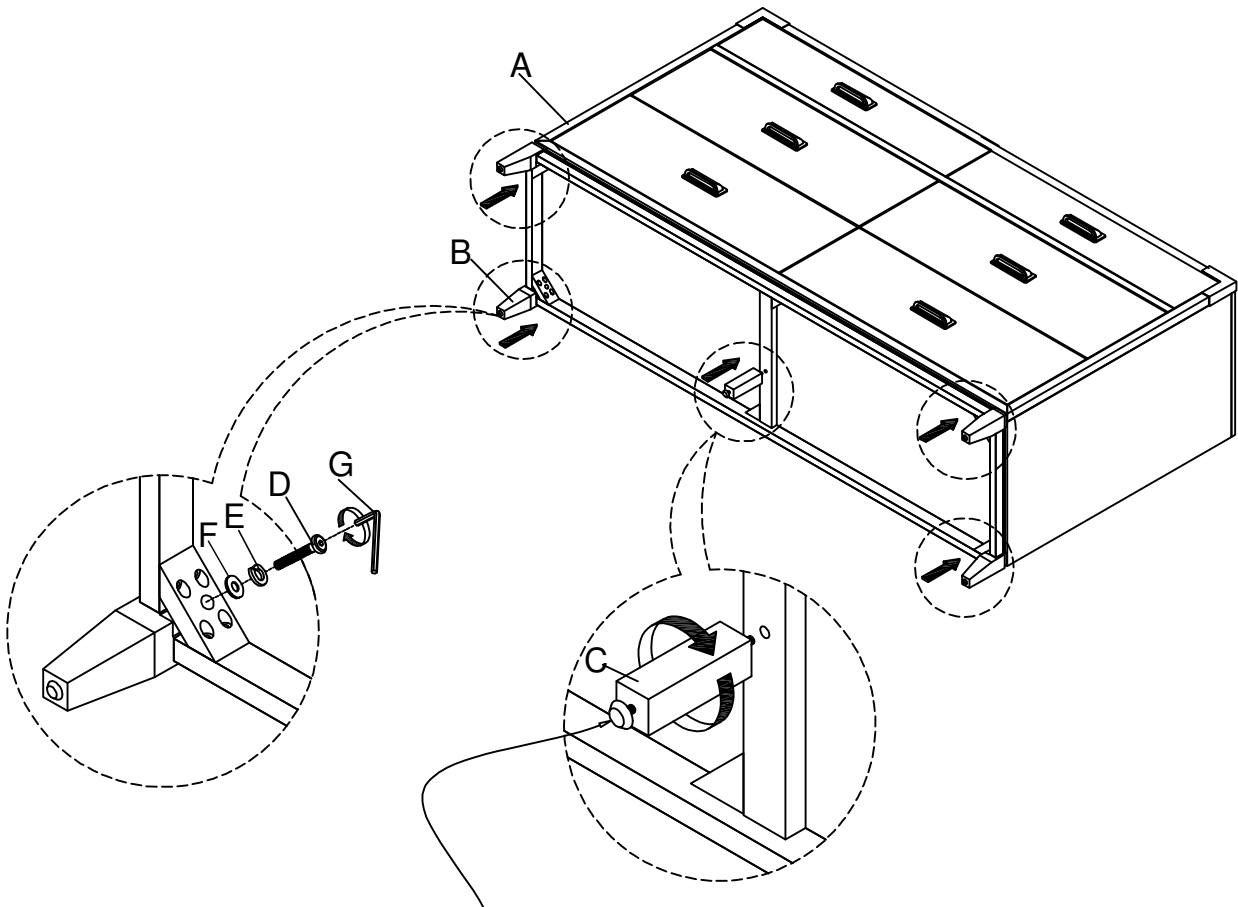


Adjust the Leveler if the Dresser is uneven.

3


Attach the Anti-Tip Kit (H) to the wall. Attach the bracket (vertically) to the wall using the long screw provided. Attach the bracket (vertically) to the back of the furniture with the short screw provided. Place the bracket as close to the center of the back of the furniture as possible in relation to the wall stud and the desired position in the room. Move the furniture to its final position. Thread the strap through each bracket and pull it tight.

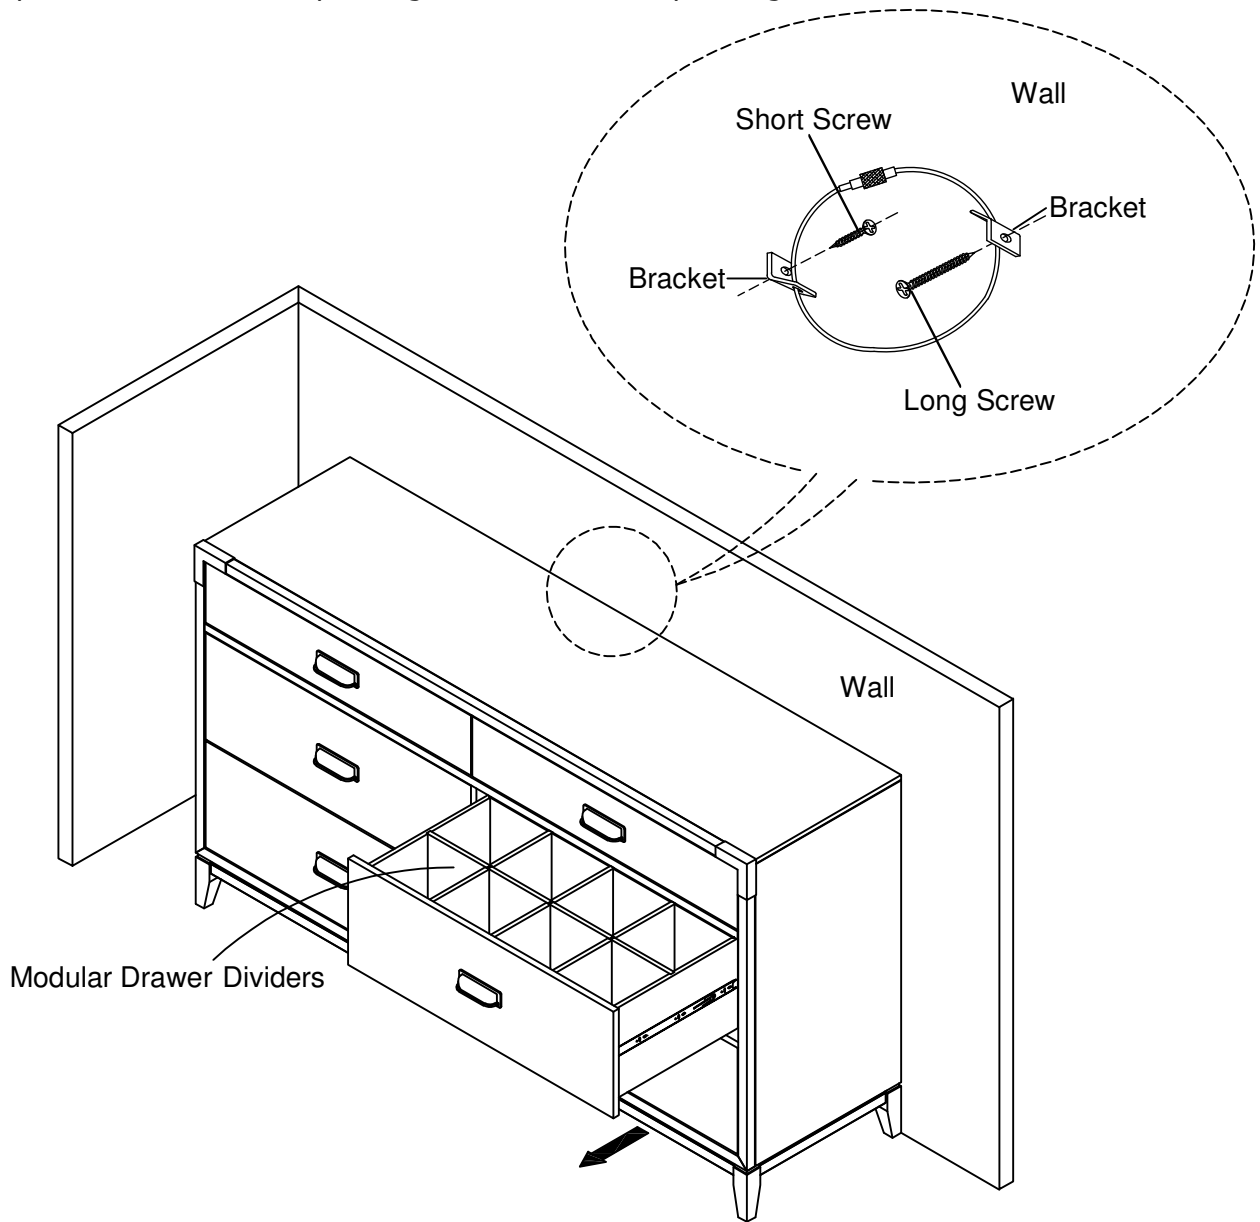


Drawer Divider Options

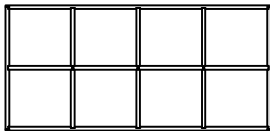


Option 1

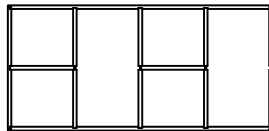


Option 2

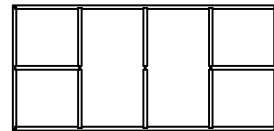 


Option 3

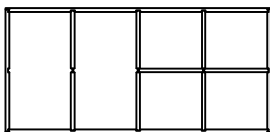 

Option 4

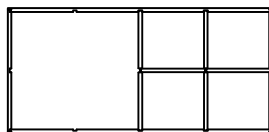 

Option 5

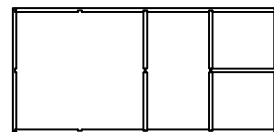 

Option 6

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.