 


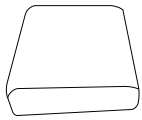



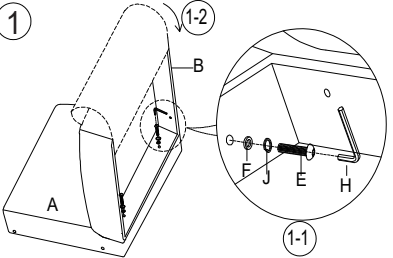



 


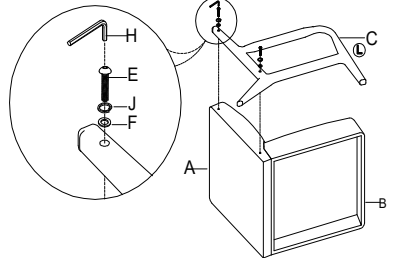


**Pre-assembly:**

Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware

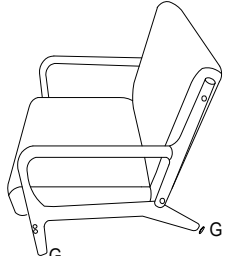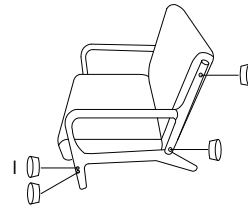(A)x1 	(B)x1 	<p>① </p> <p>Open the bottom cover, loosely attach the seat cushion(B) to the back cushion (A) use the bolt (E) , big flat washers (J) and lock washer (F) .Loosely tighten with an Allen key (H).</p>	<p>② </p> <p>Using bolt(E), big flat washers (J)and lock washer (F), connect arm(C) to back cushion(A). Loosely tighten with an Allen key (H)</p>
(C)x1Lx1R 	(D)x1 		
<b>Hardware Pack</b>		<p>⑤ </p> <p>Attach the wool spacer to the bottom of the chair leg</p>	<p>⑥ </p> <p>Securely tighten all bolts by Allen wrench (H). Attach wooden plugs (g) to each bolt hole, tighten with rubber hammer to knock the wooden plug till its tighten. Note: use a soft cloth between the wooden plug and hammer to prevent damage to wooden plug finish. ent damage to the surface of the cork. The assembly is complete.</p>
(E)x10 	(F)x10 		
(G)x4 	(H)x1 		
(I)x8 	(J)x10 		

**WARNING:**

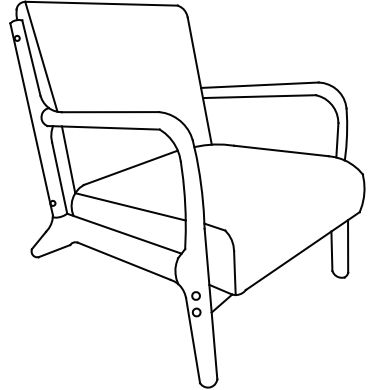Beware of Small parts and sharp edges.

**Care Instructions**

Lightly wipe or dust the surface with a dry soft cloth. Window cleaners, scrub cleaners, cleaning abrasives and alcohol solvent could damage the protective coating and paint of the product.

**Customer Service**

Questions regarding the product, please contact customer service and have the model number ready.

# Accent Chair