

ASSEMBLY INSTRUCTION


DINING CHAIR

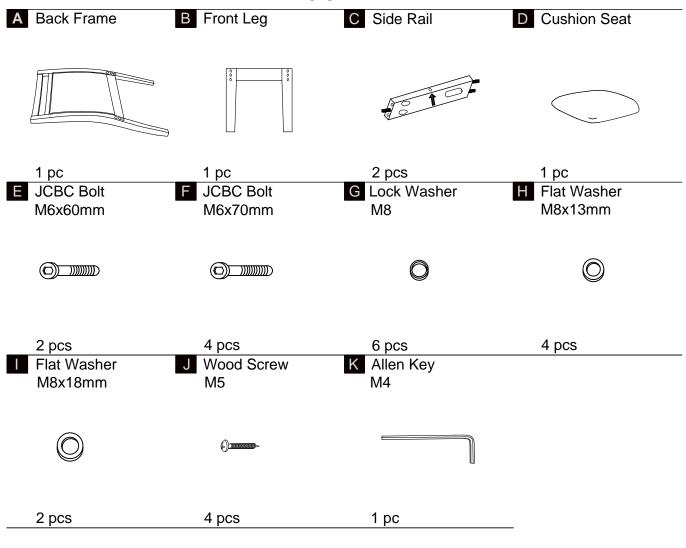

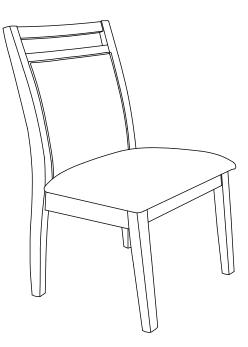


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Place the Front Leg (B) on the protective surface. Tighten the Front Leg (B) and Side Rail (C) by JCBC Bolt (E), Lock Washer (G), Flat Washer (I) and Allen Key (K).

**Do not fully tighten the bolt until all bolts are attached.

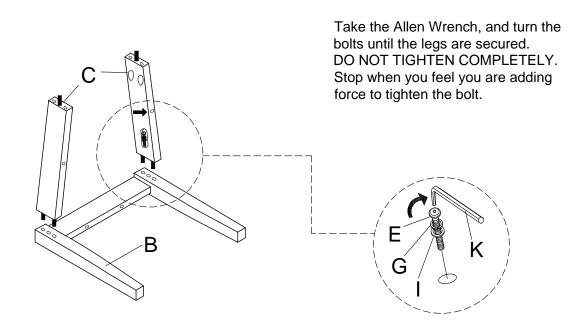


Place the Side Rail (C) on the Back Frame (A). Tighten the Side Rail (C) and the Back Frame (A) by JCBC Bolt (F), Lock Washer (G), Flat Washer (H) and Allen Key (K).

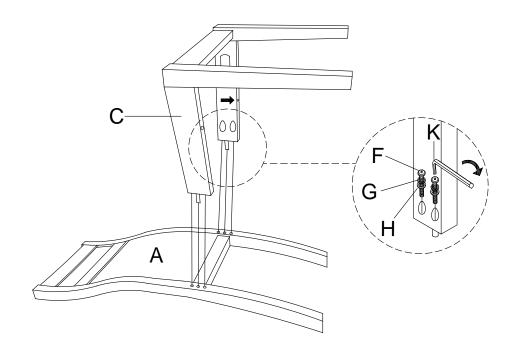

Place the Cushion Seat (D) on the Front Leg (B) and the Side Rail (C). Tighten the Cushion Seat (D), the Front Leg (B) and the Side Rail (C) by Wood Screw (J) and Screwdriver (not provided).

Stand chair up on an even surface and Helpful Tip: check that is is balanced. If there is a slight -Instead of applying downward pressure while reaching wobble, apply downward pressure in the corner where a leg is uneven. Keeping under to tighten bolts, pressure in that corner, tighten all bolts. have someone sit in the If balanced, apply downward pressure chair while you tighten the bolts. evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth. В Screwdriver (Not provided)

Stand chair up on an even surface and check that it is balanced.

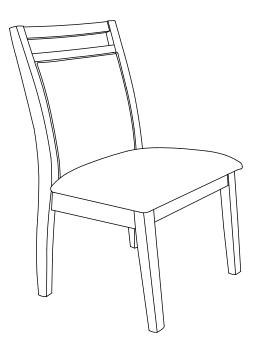

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.