

ASSEMBLY INSTRUCTIONS

CROSSBACK DINING CHAIR

IMPORTANT NOTE:


Please read and follow the Assembly Instructions carefully.

- Identify and separate all parts before discarding packaging.
- Place wooden parts on clean soft surface to avoid scratching.
- Do not completely tighten screws until, after final assembly.
- Do not use a power tool for assembly.
- As with all assembled furniture, occasionally check to insure hardware is tight.

TOOL REQUIRED (NOT PROVIDED) PHILIPS SCREWDRIVER

NO	PART LIST	QTY
1	CHAIR BACK	1PC
2	SIDE RAIL (L/R)	2PCS
3	STRETCHER (L/R)	2PCS
4	FRONT LEG	1PC
5	WOODEN SEAT	1PC


NO	HARDWARE LIST	QTY
A	CSK SCREW M4 x 32mm 	3PCS
B	CSK SCREW M4 x 38mm 	4PCS
C	JCBC SCREW M6 x 50mm 	8PCS
D	SPRING WASHER 	8PCS
E	ALLEN KEY 	1PC

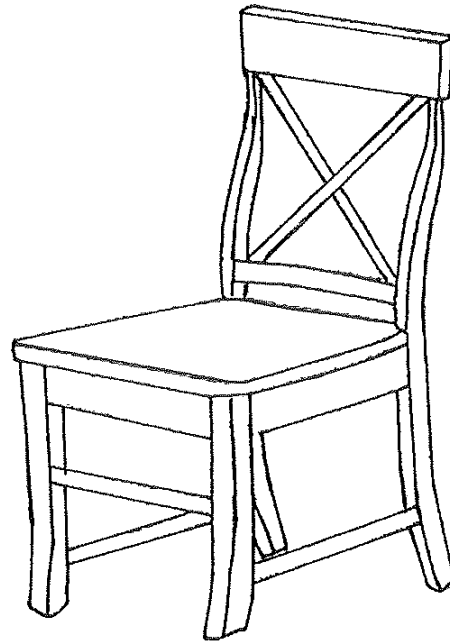

Thank you for purchasing our product!


STEP 1

LOOSELY ATTACH (L/R) SIDE RAIL TO FRONT LEG USING BOLT (C) AND SPRING WASHER (D).

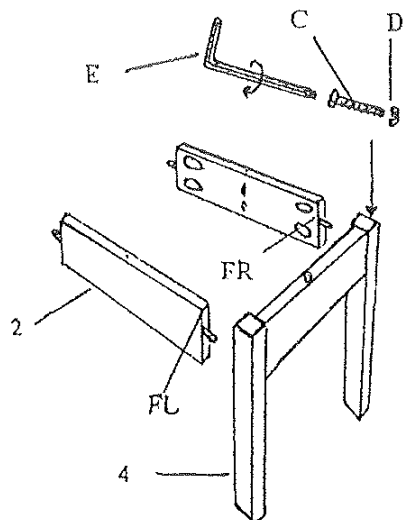


STEP 2

LAY CHAIR BACK OF FLAT SURFACE AND LOOSELY ATTACH (L/R) SIDE RAIL TO CHAIR BACK USING BOLT (C) AND SPRING WASHER (D)

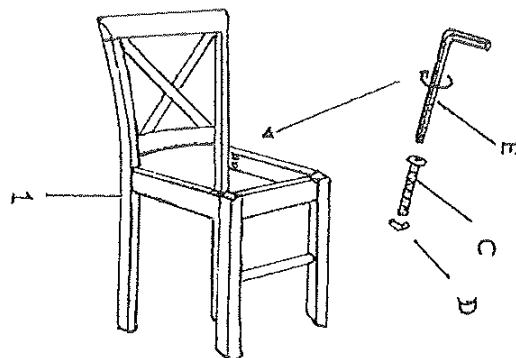


STEP 3

PLACE TWO STRETCHERS IN THE HOLES IN CHAIR BACK ALIGN AND FRAME UP CHAIR USING HAND PRESSURE TO GET STRETCHERS IN PLACE. COMPLETELY TIGHTEN ALL SCREWS

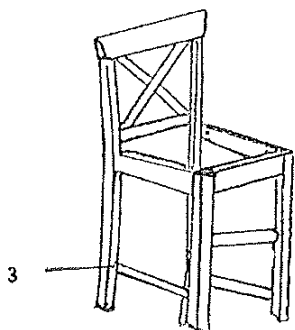

STEP 4

TURN STRETCHERS SO THE PREDRILLED HOLES FACE DOWNWARD AND SECURE USING 38mm SCREWS (B). ATTACH WOODEN SEAT USING 32mm SCREWS (A).

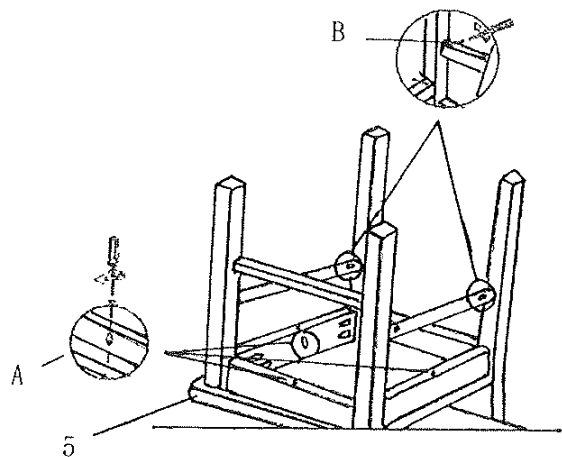

There are no pre-drilled holes to attach the seat