

# Utility Shopping Cart User Manual

## Shopping Cart Model TH110211-S



## Parts list



A: Cart Frame (1 pcs)



B: Spring (2 pcs)



C: Wrench (1 pcs)



D: Long Axle (1 pcs)



E: Front Wheel (2 pcs)



F: Screw (2 pcs)



G: Washer (2 pcs)



H: Small Washers (4 pcs)




I: Rear Wheel (2 pcs)

**NOTE:** There are spare assembly kits in package.  
You don't need to worry about missing those parts(B+C+D+E+F+G+H+I)

## How to assemble the front wheels



Step 1: Push the front wheel E into the front leg. When pushing in please align the angle of the connecting part so that the hex head screw on the axis of front wheel E can be accurately pushed into the front leg.

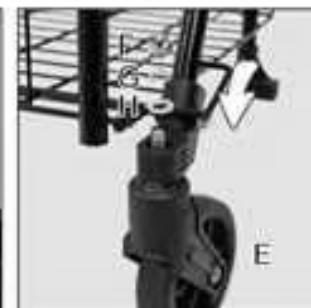


Step 2: Put the small washer H and Washer G on the short shaft of the front wheel E in turn, and then put the screw F in.



Step 3: Finally, tighten the screw F with wrench C.

## How to assemble the rear wheels

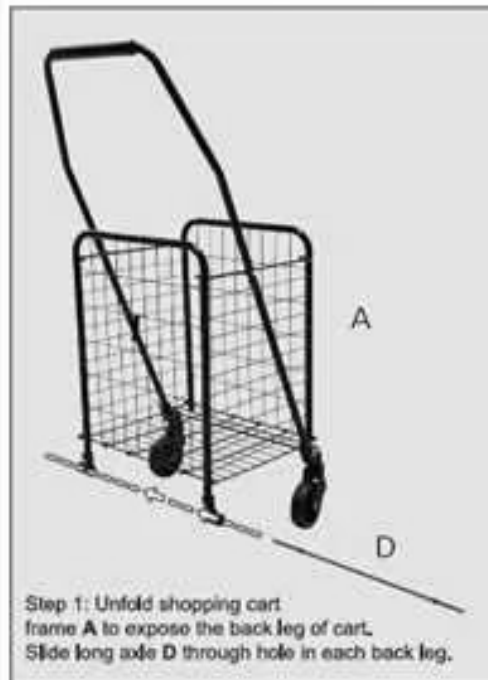

Step 1: Unfold shopping cart frame A to expose the back leg of cart. Slide long axle D through hole in each back leg.



Step 2: Place both sides of the back wheel into spring B and Washer H insert the parts D directly into the center of the wheel. Make sure it is fixed and cannot be pulled out. Completing the installation.



**How to remove the wheel**  
Locate the black button in the center of the outside of the wheel and press it inward to separate the wheel from the iron pipe.