 


ASSEMBLY INSTRUCTIONS

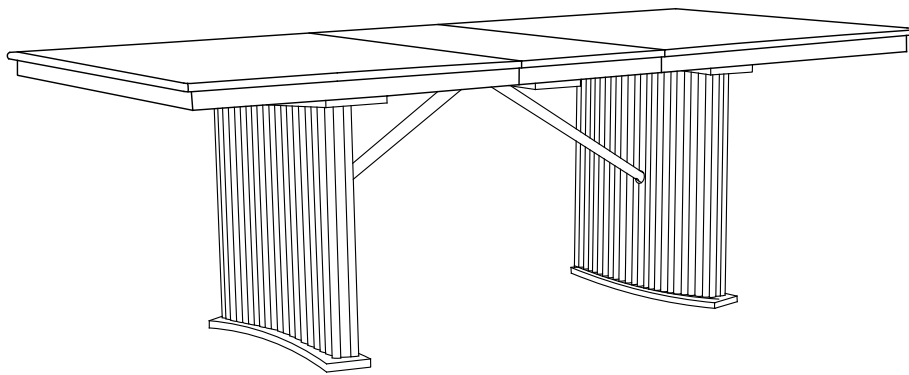

 
TOOLS REQUIRED



Screwdriver
(Not included)



Allen Wrench



Wrench



2 - People

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

 
PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

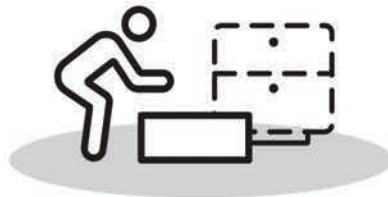

Suitable Location

Assembling near the area of the intended location is highly recommended.



 
 
Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.

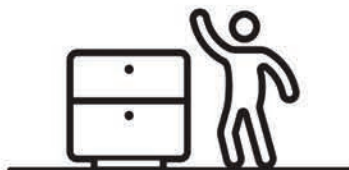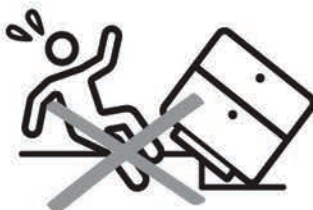

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

 
ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

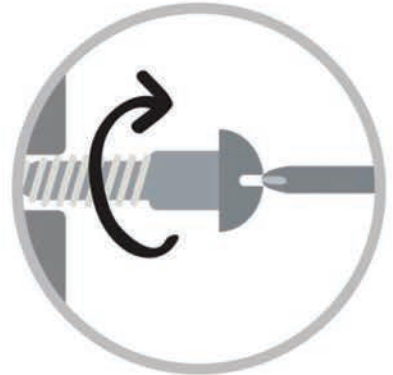

Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Save the instructions and store
any supplied tools for later
maintenance.

Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.



 
After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

DINING TABLE



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

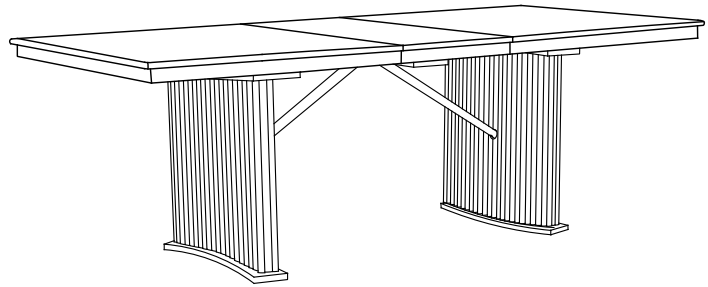

PARTS

① 1pc


 



TABLE TOP

 ② 2pcs



CENTER SUPPORT

 ③ 2pcs

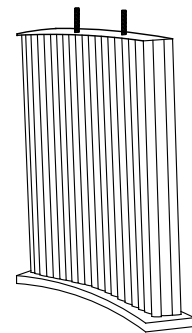

COLUMN

HARDWARE

HARDWARE INSIDE TABLE TOP

Ⓐ 4pcs



Jcbc Bolt
M6X40mm

Ⓑ 4pcs



Lock Washer
M6X12mm

Ⓒ 4pcs



Flat Washer
M6X13mm

Ⓓ 4pcs



Hex Nut
M10

Ⓔ 4pcs



Lock Washer
M10X16mm

Ⓕ 4pcs



Flat Washer
M10X25mm

Ⓖ 1pc



 
 
 
 
Allen Key
M4

Ⓗ 1pc




Wrench

Packed in 2 cartons

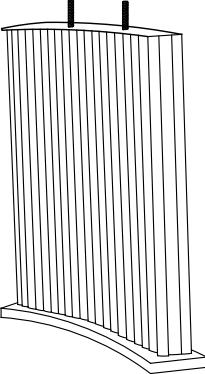
CARTON	DESCRIPTION	PART	HARDWARE
FM3230-T-1	TABLE TOP	① x1 	 ① A x4pcs  ② B x4pcs  ③ C x4pcs  ④ D x4pcs  ⑤ E x4pcs
	CENTER SUPPORT	② x2 	 ⑥ F x4pcs  ⑦ G x1pc  ⑧ H x1pc
FM3230-T-2	COLUMN	③ x2 	

ASSEMBLY INSTRUCTIONS

 1. IMPORTANT NOTE: Take Out The Extension Leaf

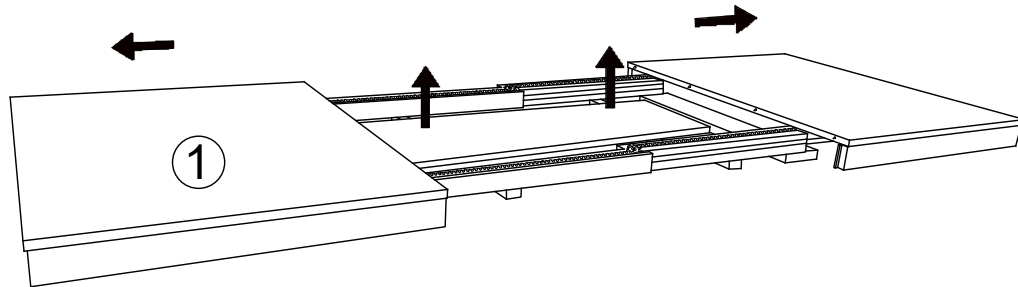


 2. Do not fully tighten the bolt and Nut until all bolts are attached.

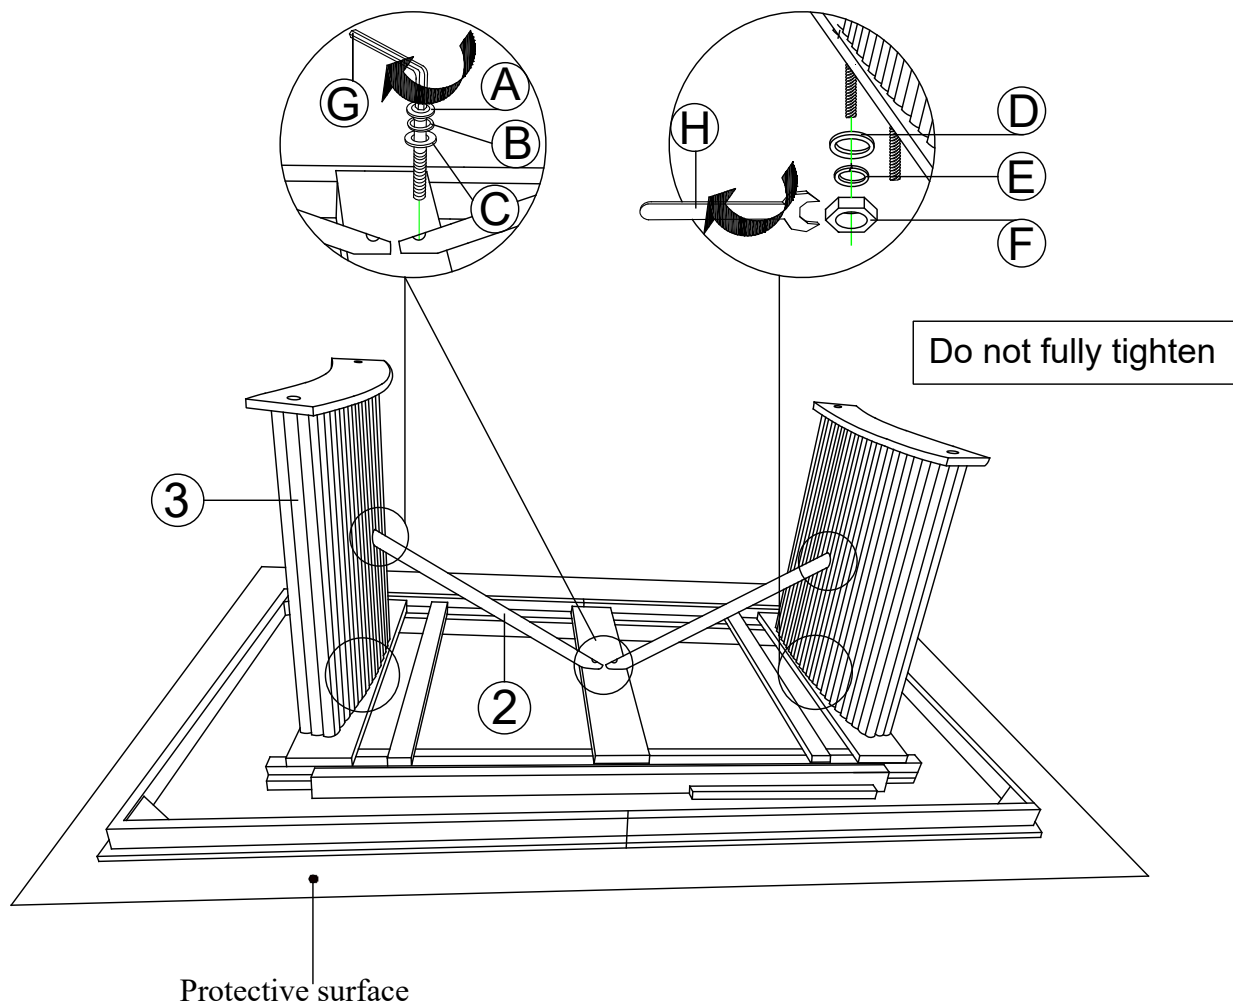


ASSEMBLY INSTRUCTIONS

 3. Fully tighten the bolt and Nut on this Step.

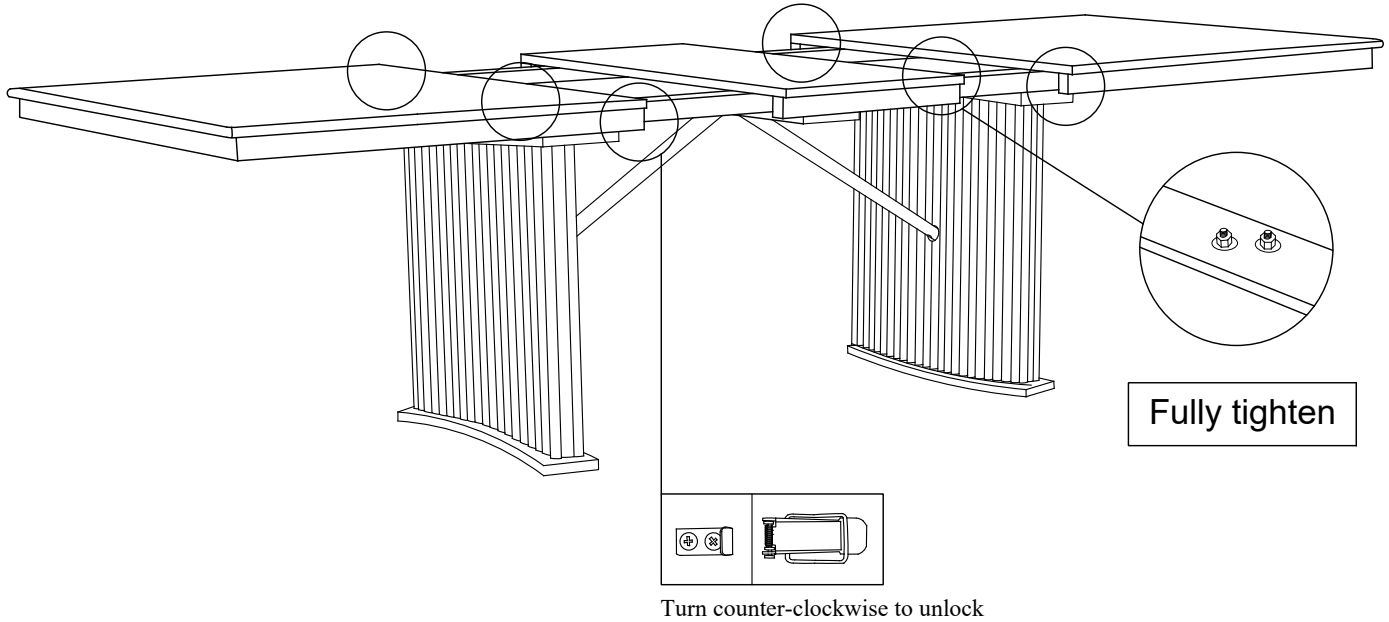

4

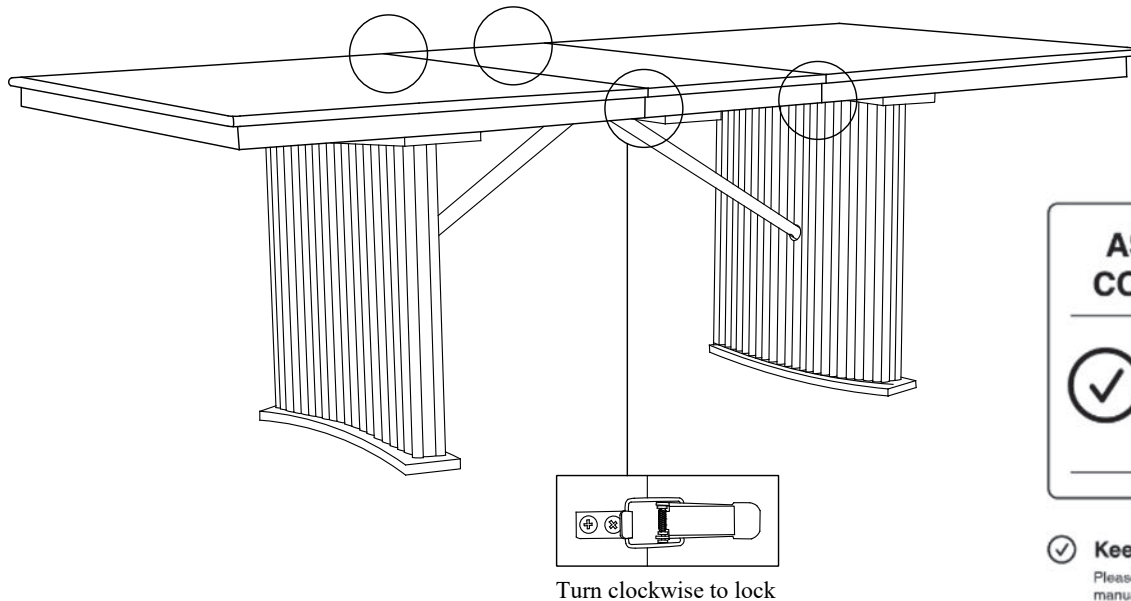 

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.