
# Thank you for choosing and using our product.


# INSTALLATION MANUAL

# WALL-MOUNTED FAN WITH LIGHTS


Model No.: CFL-1169-01

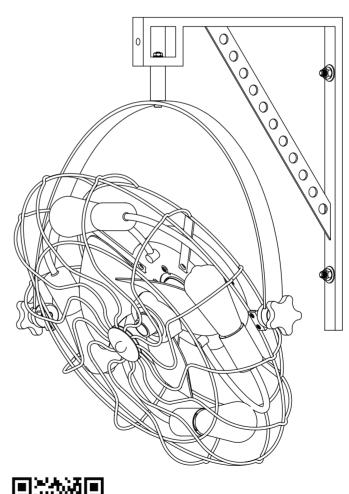



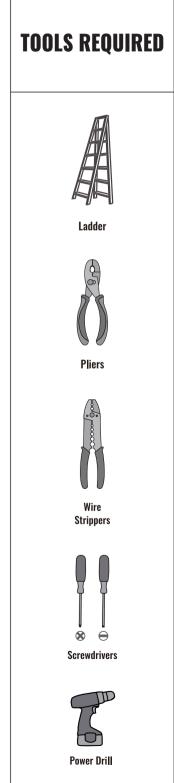

## **PACKING LIST**

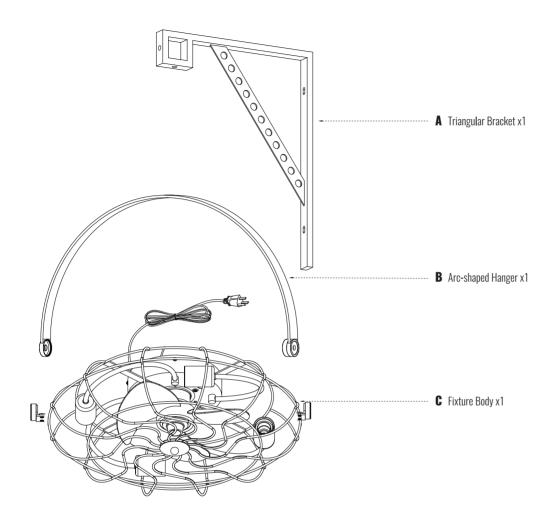

### **INSTALLATION KIT**

AA		2×	ВВ		1×	CC		1×	DD		1×
		Plum blossom lock			Sleeve			Hex bolt			Hex Nut
EE		2×	FF		1×	GG		2×	НН	ß	1×
		Wood Screw			Flat Washer (large)			Flat Washer (small)		8	Safety clevis pin
II	F	2×	IJ	Ĥ	2×	KK	AIIIII	2×	LL	F G	1×
		Anchor Bolt			Remote Holder Anchor		*mmmmm (#)	Remote Holder Screw			Remote Holder
MM					1×	NN				1×	
		•••			Remote Control		/a				Glove


### NOTE:

Some extra hardware may be included. The quantity listed above is the number required for installation.

## **INSTALLATION**

### 1. Install Arc-shaped Hanger


Align the holes of fixture body (C) with arc-shaped hanger (B) and close them together, then secure with plum blossom lock (AA).

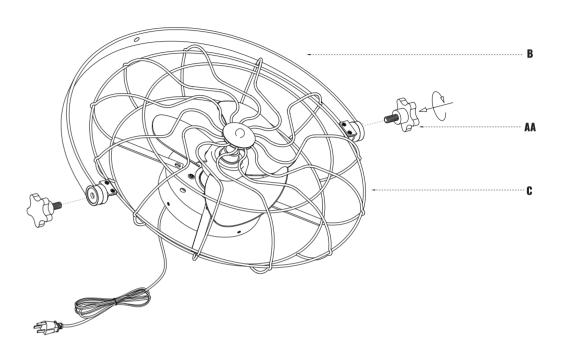


### 2. Installation Diagram for Solid Wood Wall Paneling


**Step 1:** Adhere triangular bracket (A) to the corresponding wooden wall.

Step 2: Thread wood screw (EE) through flat washer (small) (GG) and tighten triangular bracket (A).

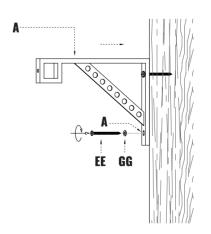


### 3. Installation Diagram for Cement Wall Surface

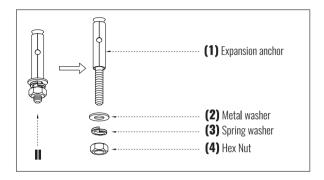


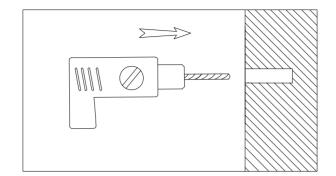


**Step 1:** First fix the bracket position, then drill the holes.

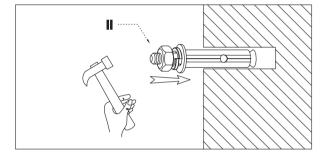


**Step 2:** Insert expansion anchor (1) into the hole. Note: Do not remove hex nut (4), spring washer (3), and metal washer (2).

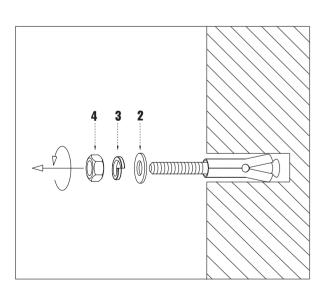

**Step 4:** Remove hex nut (4), spring washer (3), metal washer (2) for use in the next step.

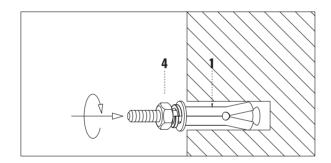


**Step 3:** Tighten hex nut (4) until expansion anchor (1) feels secure and no longer loose.

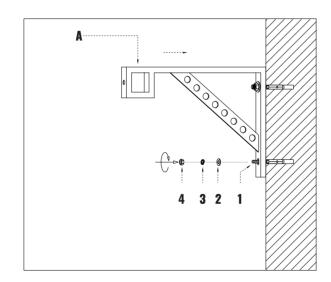

**Step 5:** At last insert the hole on triangular bracket (A) into expansion anchor (1); Successively fit in metal washer (2), spring washer (3), and tighten with jex nut (4).


### 4. Installation Body

Secure hex bolt (CC) through arc-shaped hanger (B), sleeve (BB), triangular bracket (A), flat washer (large) (FF) using hex nut (DD).

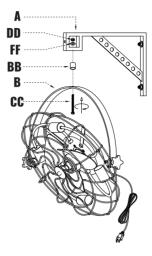


### 5. Fix Main Body

Insert safety clevis pin (HH) into the hole of hex bolt (CC).

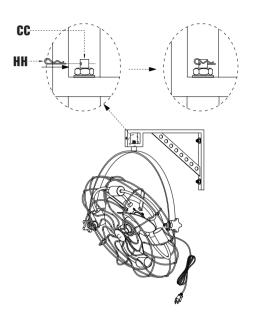

### 6. Install Bulb


E26 Bulbs X 4 (Max 60W each, not included)

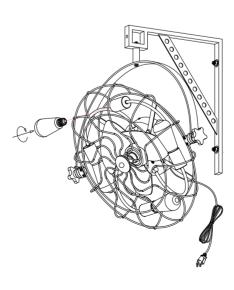

### 7. Adjustable from Multiple Angles


**Step 1:** Loosen plum blossom lock (AA) to adjust fixture body (C) up and down, align it to the desired angle, and then tighten plum blossom lock (AA).

**Step 2:** Adjust to the desired position by moving arc-shaped hanger (B) left or right.

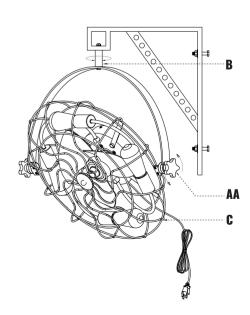


### 8. Adjustable from Multiple Angles


Adjust the view

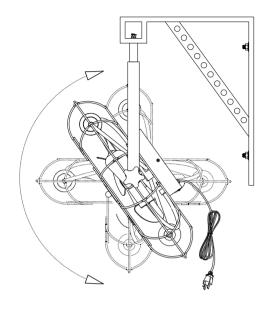



### 9. Power On and Use

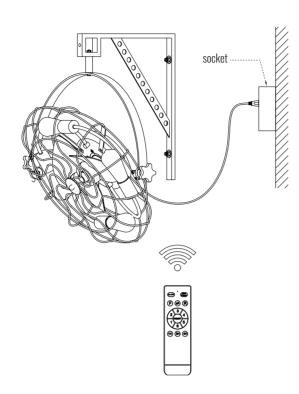


### **10. DIY Installation**

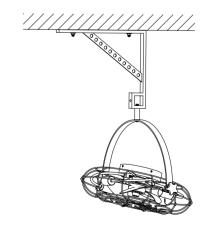

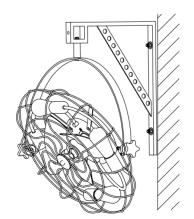

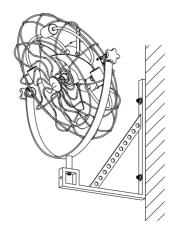

### **REMOTE CONTROL INSTRUCTIONS**

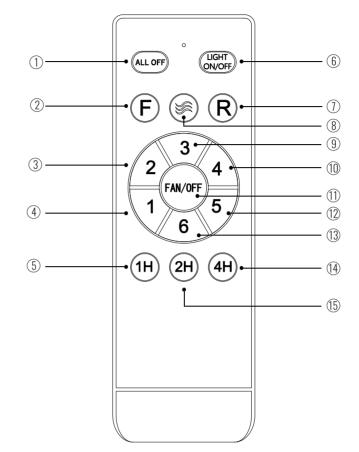

### NOTE:

Please insert 2 batteries before using.


AAA 1.5V battery x 2pcs (not included)

- 1 : Turn off the fan and lights.
- ②①: "F" refers forward fan direction."R" refers reverse the fan.
- 3 4 9 10 12 13 : 1/2/3/4/5/6 for fan speeds.
- (5)(14)(15): 1H/2H/4H for timing the fan.
- 6 : Turn on/off the lights.
- (8) : Natural wind of the fan, fan speed will change automatically when using this function.
- (1) : Turn off the fan.

### REMOTE SIGNAL PAIRING:

If the remote control loses the signal of the

fan, turn off the power from wall switch, then turn it on, press ① immediately for around 3 seconds, after the fixture beeps or flashes, then it's down.

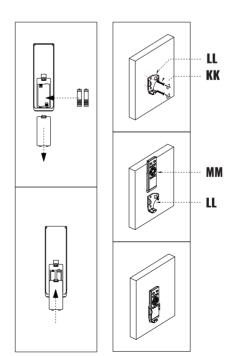

**Step 1:** Insert 2 batteries before using: AAA 1.5V battery x 2pcs (not included)

**Step 2:** Install the remote holder onto the wall with screws.

 $\mathbf{5}$