 


BROOKLYN 3-DRAWER DRESSER

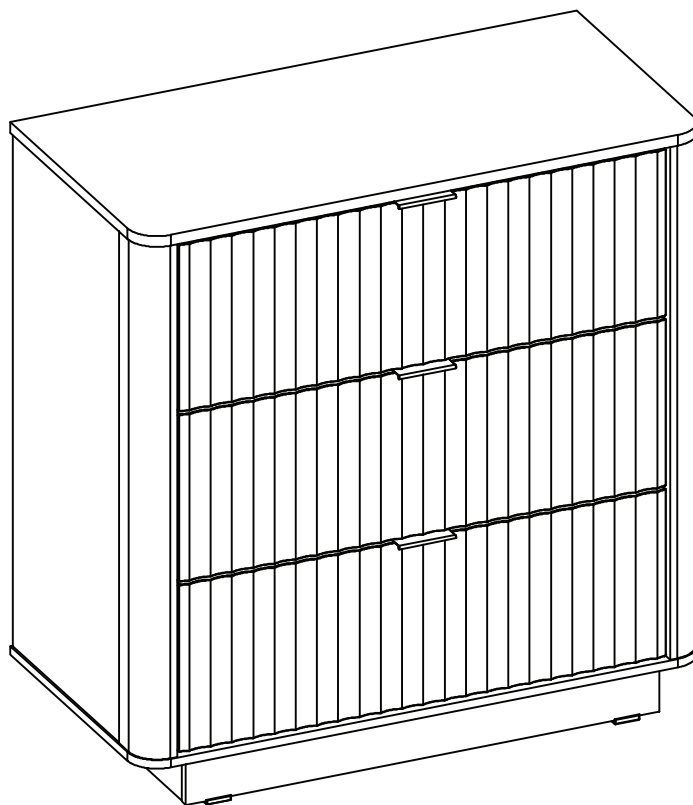

 
ASSEMBLY INSTRUCTIONS

Join Our Club and enjoy your 1-Year Warranty


We've got more for you. Be part of **Our Club** and enjoy:

- Privileged Customer Care
- 10% Off Your Next Purchase (no min spend)
- 1-Year Free Warranty
- Early Access To Upcoming Launches


Before you start...

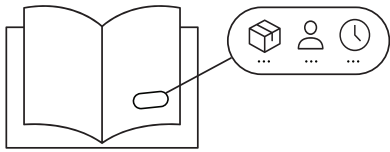

 
Ensure you have received all cartons and familiarize yourself with the workload. Make sure there are enough helping hands to assist you, and that you have allocated the time required to assemble your new product.

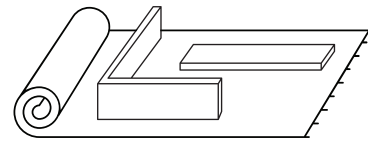

 
Make sure you have cleared enough space in your home for the assembly. We recommend protecting your floor with a mat or cardboard to avoid scratches during the assembly process.

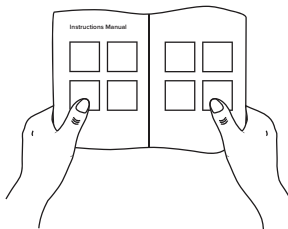

 
Read instructions carefully and check no parts are missing.

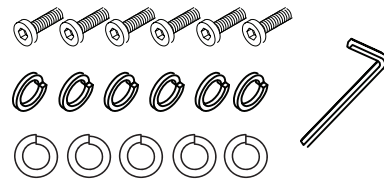

 
Lay out all hardware on a soft surface so you can easily identify them.

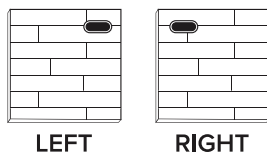

 Carefully identify all components in order to differentiate which pieces are left and right.

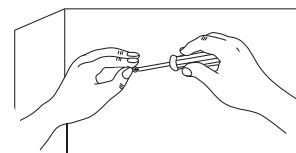

 Install your new product carefully following the instructions. Don't skip ahead!

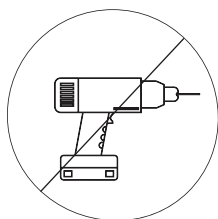


DO NOT over tighten screws or use a drill. It will damage the product.

Parts

- | | | |
|--------|--------|--------|
| □ ① x1 | □ ⑦ x2 | □ ⑬ x3 |
| □ ② x1 | □ ⑧ x2 | □ ⑭ x3 |
| □ ③ x1 | □ ⑨ x1 | □ ⑮ x3 |
| □ ④ x1 | □ ⑩ x1 | □ ⑯ x3 |
| □ ⑤ x1 | □ ⑪ x3 | |
| □ ⑥ x2 | □ ⑫ x3 | |


Attention:

  Before you start, we suggest you identify and separate the components into 2 groups:

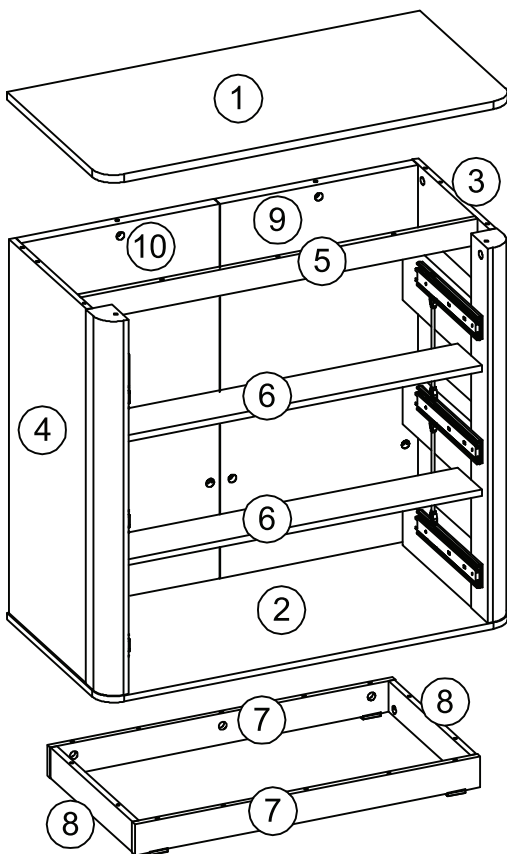

 


 
 
 

 

 

 
 
 
Component No.1 – 10:
for assembly steps 1 – 12

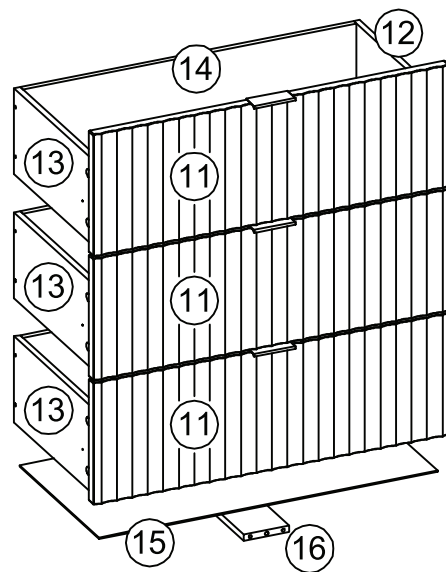
Attention:
Product comes with interlock drawer feature,
only one drawer can be pulled at a time.





Component No.11 – 16:
for assembly steps 13 – 27


Hardware


- | | | | | | | | | |
|--------------------------|---|--------------------------------|--------------------------|---|---------------------------|--------------------------|---|----------------------|
| <input type="checkbox"/> |  | Cambolt
Ø 6 x 35 mm | <input type="checkbox"/> |  | Barrel Nut
Ø15 x 10 mm | <input type="checkbox"/> |  | Wall Tipping |
| | (A) | x44 | | (G) | x2 | | (N) | x2 |
| <input type="checkbox"/> |  | Camlock
Ø 15 mm | <input type="checkbox"/> |  | Handle
80 mm | <input type="checkbox"/> |  | Screw
Ø 6 x 12 mm |
| | (B) | x46 | | (H) | x3 | | (O) | x20 |
| <input type="checkbox"/> |  | Sticker
Ø 25 mm | <input type="checkbox"/> |  | Screw
Ø 6 x 12 mm | | | |
| | (C) | x14 | | (I) | x10 | | | |
| <input type="checkbox"/> |  | Dowel
Ø 6 x 30 mm | <input type="checkbox"/> |  | Foot Mate | | | |
| | (D) | x54 | | (J) | x4 | | | |
| <input type="checkbox"/> |  | Screw
Ø 6 x 52 mm | <input type="checkbox"/> |  | Wedge | | | |
| | (E) | x18 | | (L) | x6 | | | |
| <input type="checkbox"/> |  | Connecting bolt
Ø 7 x 32 mm | <input type="checkbox"/> |  | Screw
Ø 6 x 19 mm | | | |
| | (F) | x2 | | (M) | x6 | | | |


 This product will require 2.5hrs for assembly. We hope that you will enjoy the assembly process and hang in there!


 There are inner box(es) that include components required to complete this assembly.

 Please do not completely tighten all the hardware, until each assembly step is complete.

 Before discarding the packaging, please use the checklist to ensure that you have all the parts required to assemble your product. Please kindly note you will need the original package if you want to return the product later.


x1


x2


2.5 hours

Pre-Assembly

Panels and boards are not packed in accordance to assembly step. Suggestion to unpack everything before starting.

 
A string is attached to hardware box for easy access.

This current version has the Interlocking Mechanism pre-installed on Panels (3) and (4).


Step 1

Ensure that your floor is properly protected

We recommend using cardboard or foam to lift the panels in order to prevent scratches.




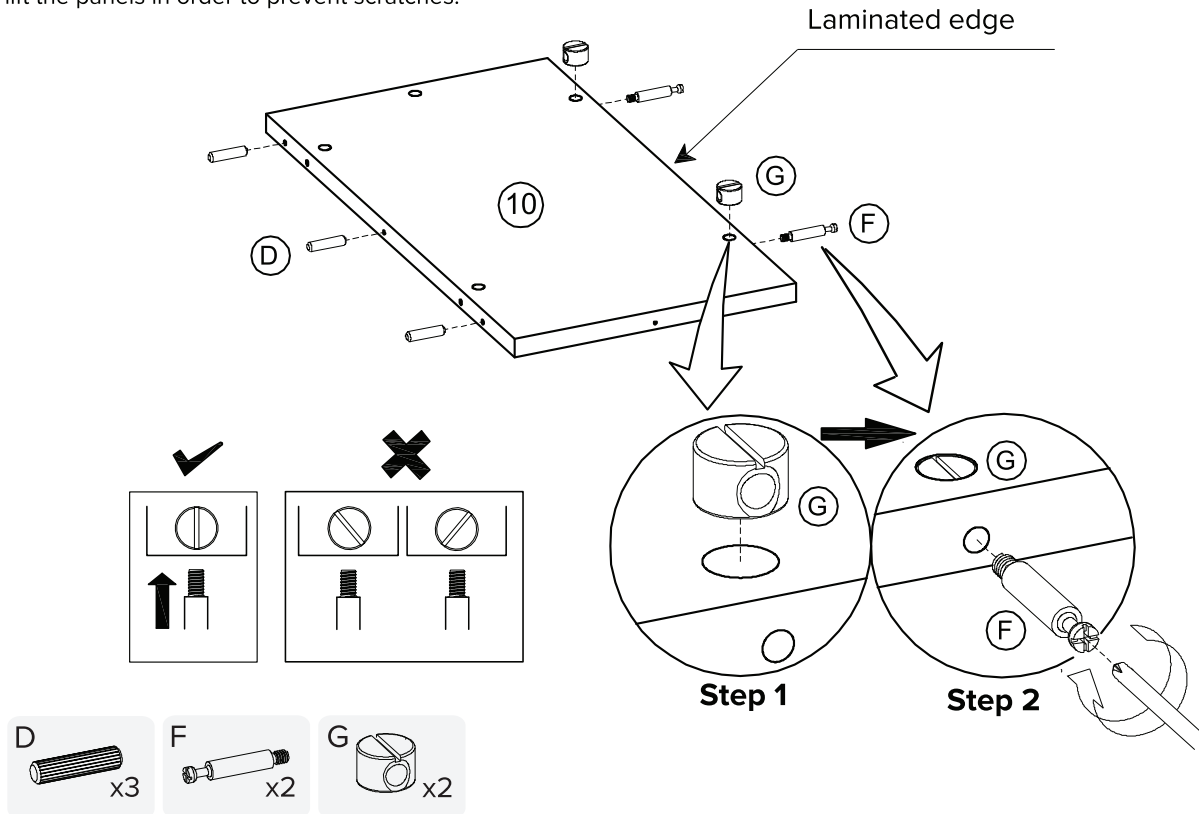


 Step 2

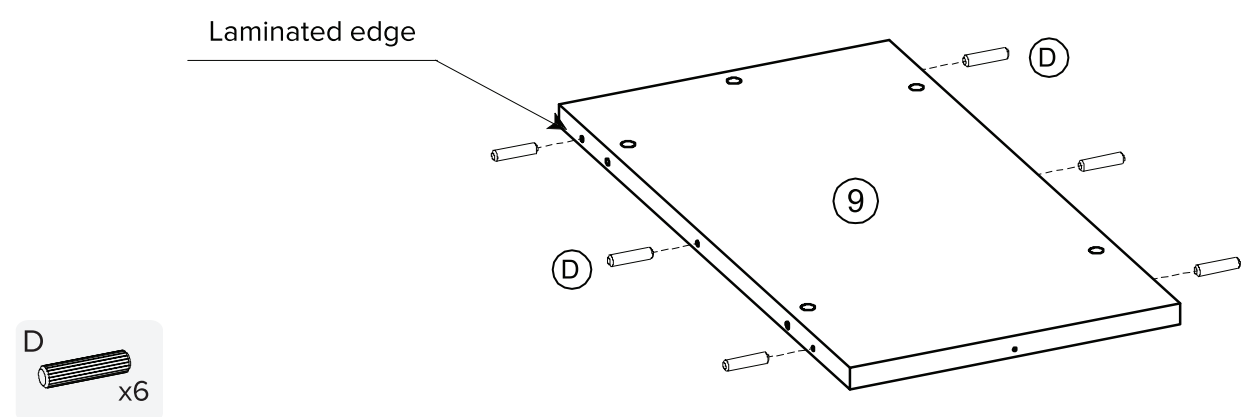





Step 3

    Please ensure that camlock is facing the correct orientation. Check the illustration carefully.

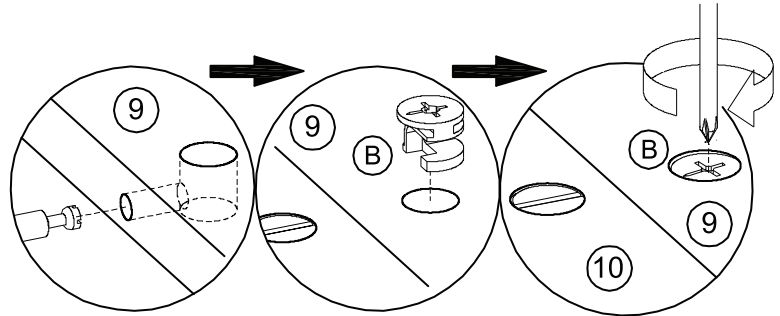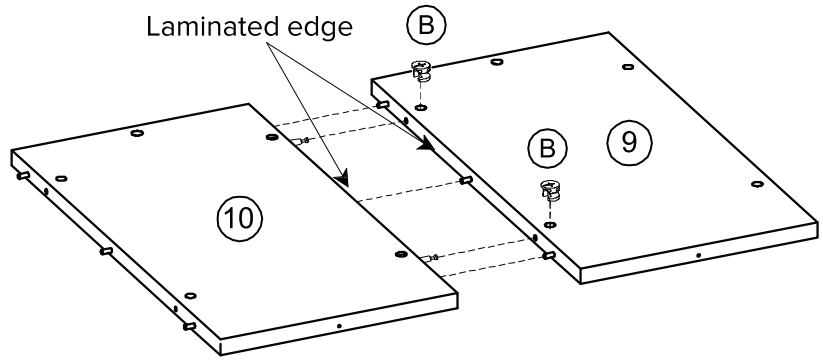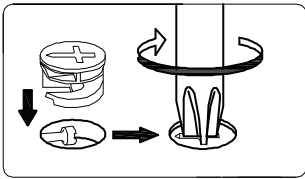
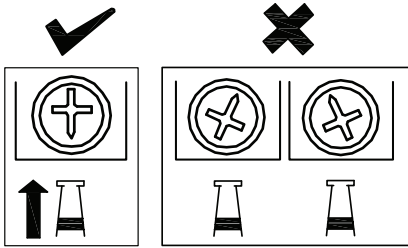


Step 4

    Important:
Product comes with interlock drawer feature, only one drawer can be pulled at a time.
Keep all drawer runners in fully closed position throughout the entire assembly process

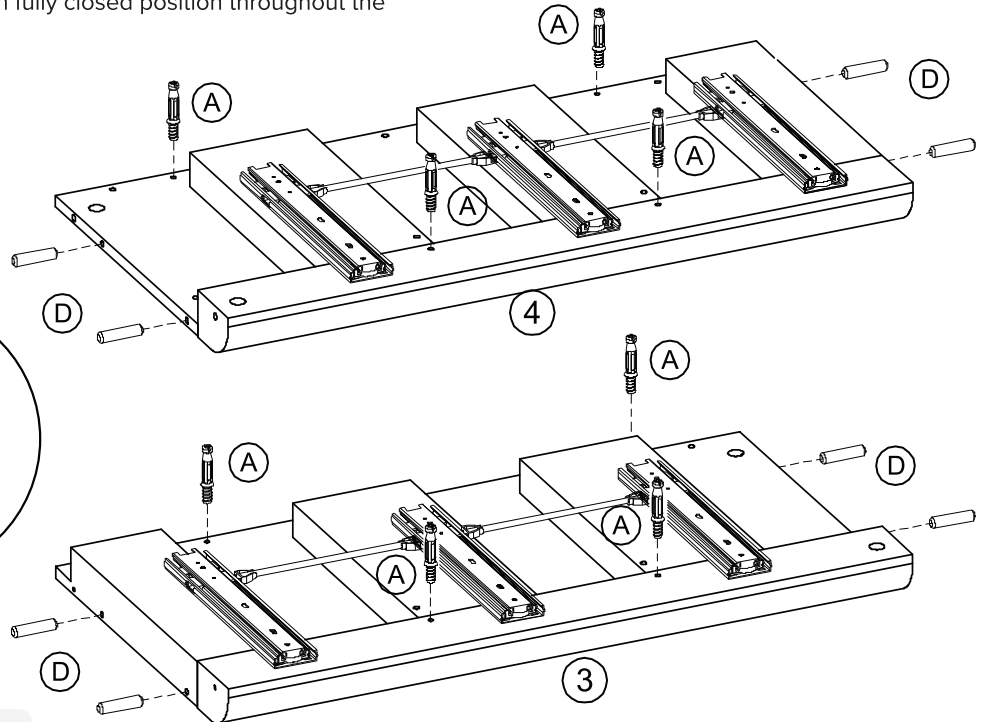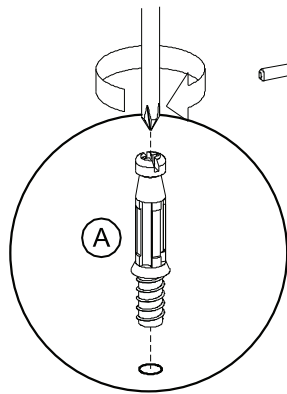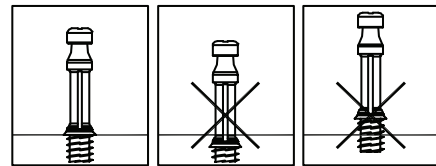


 
 
Step 5

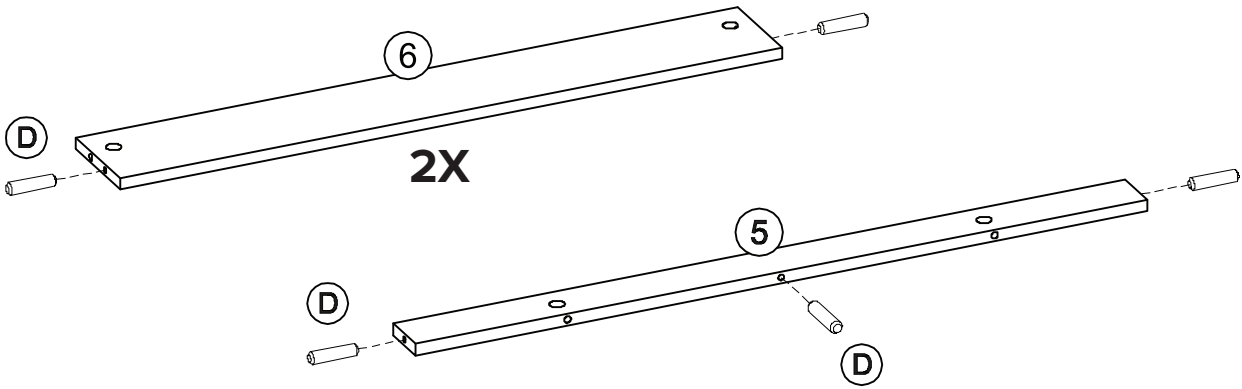


Step 6

Attach panel (3) onto panel (9) before securing both panels through inserting and tightening of camlock (B).

   
2 Pax will be needed to carry the weight of the parts.

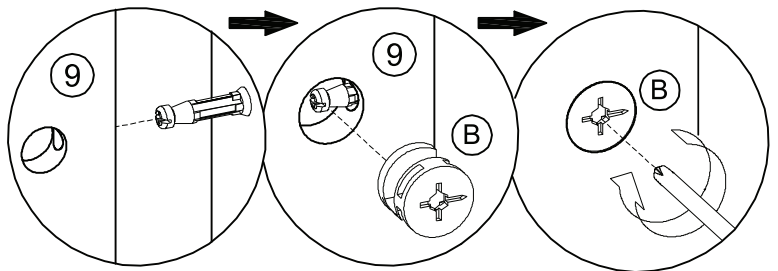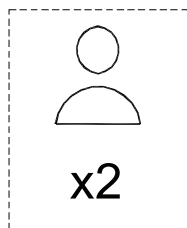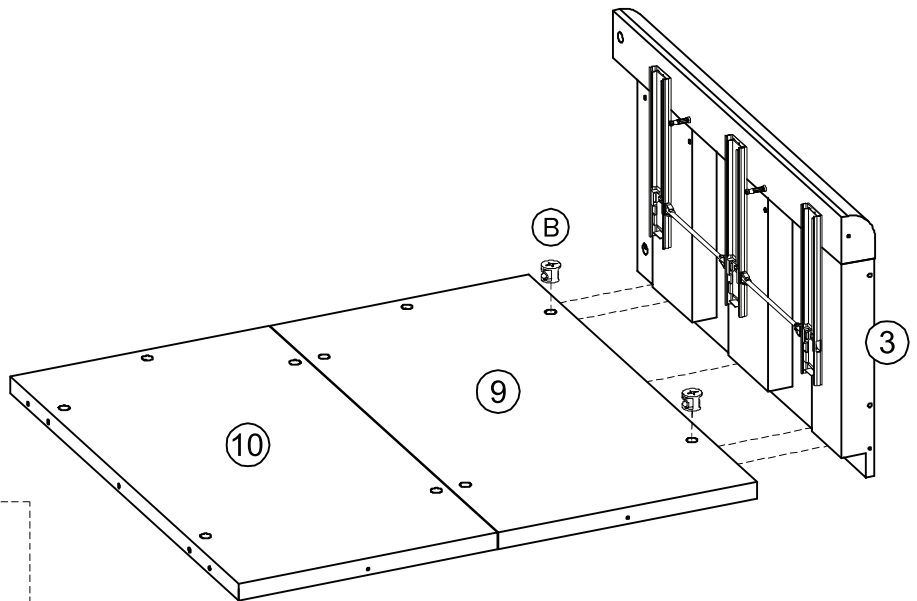


 
Step 7

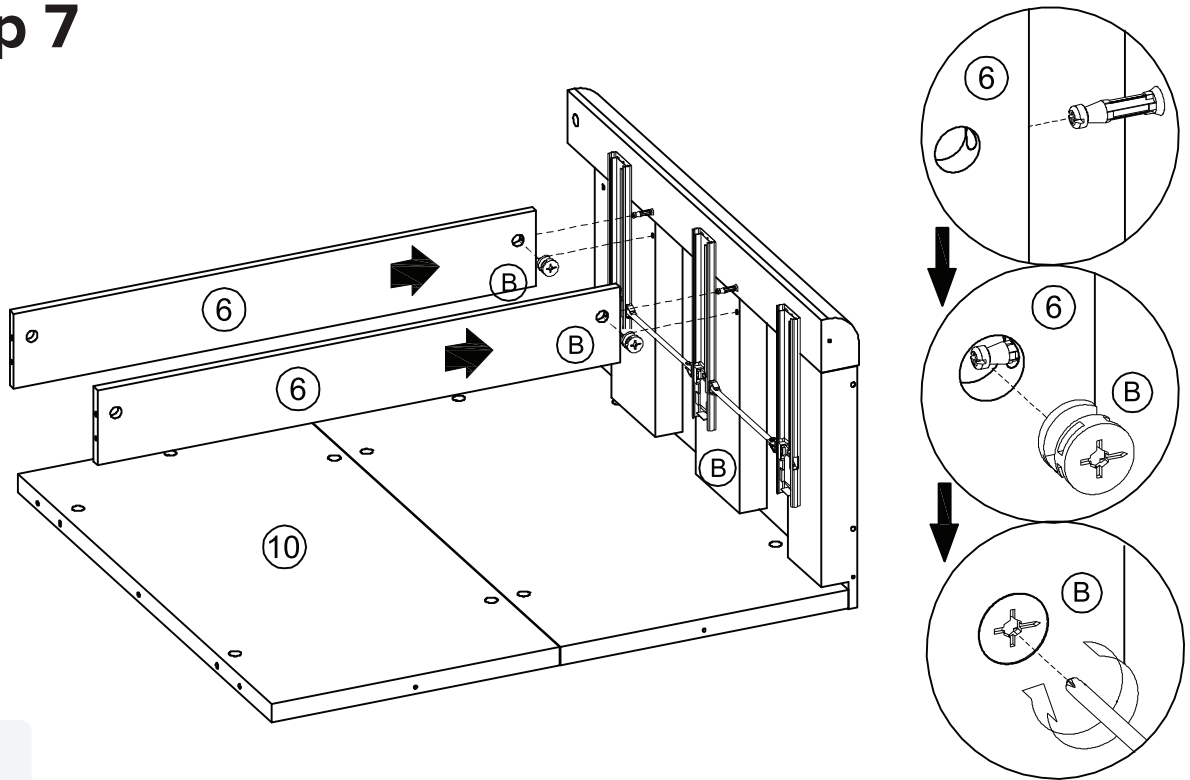


 
Step 8

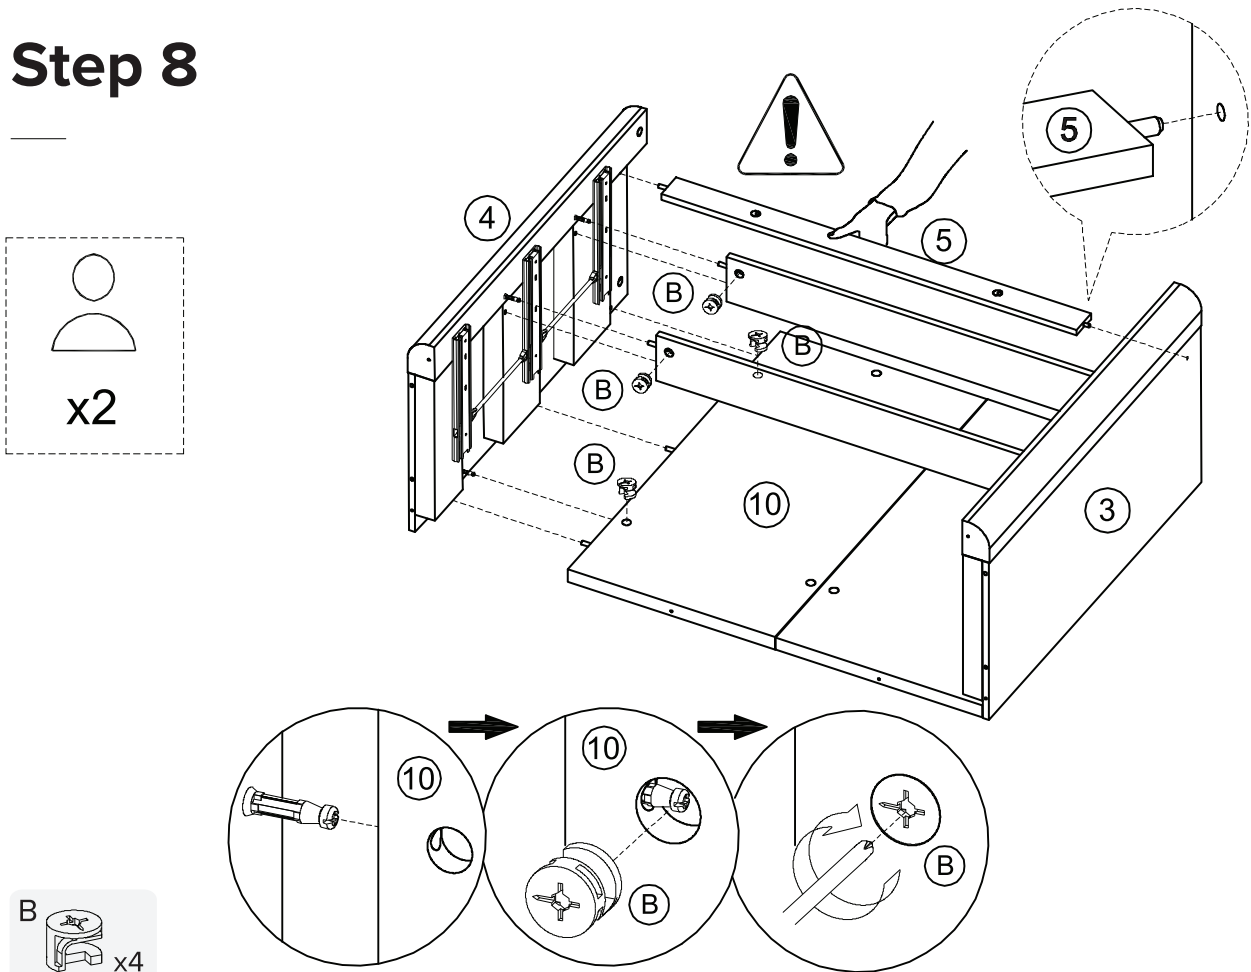

 
 
Step 9

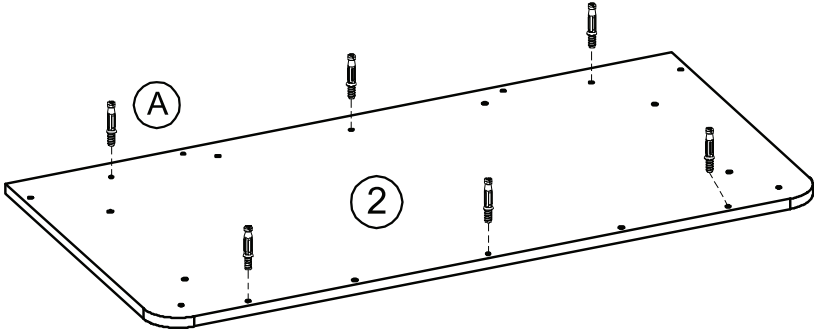

  
Step 10

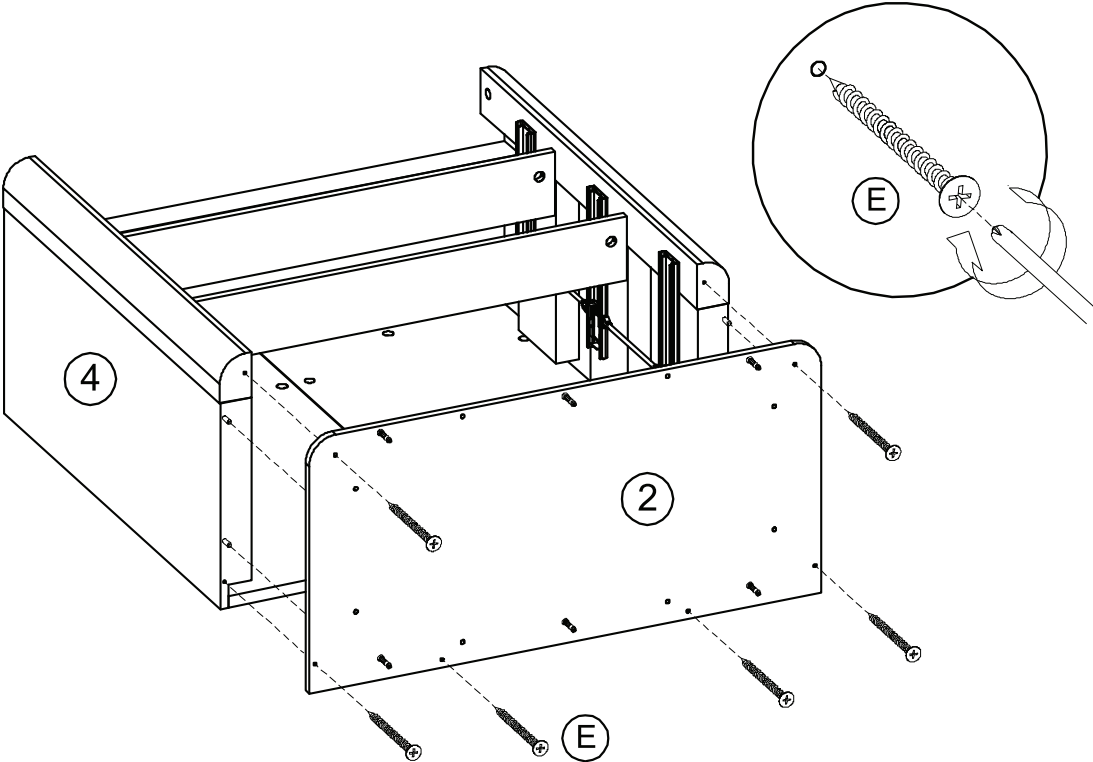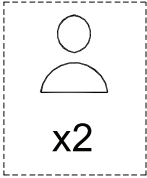

 
 
Step 11

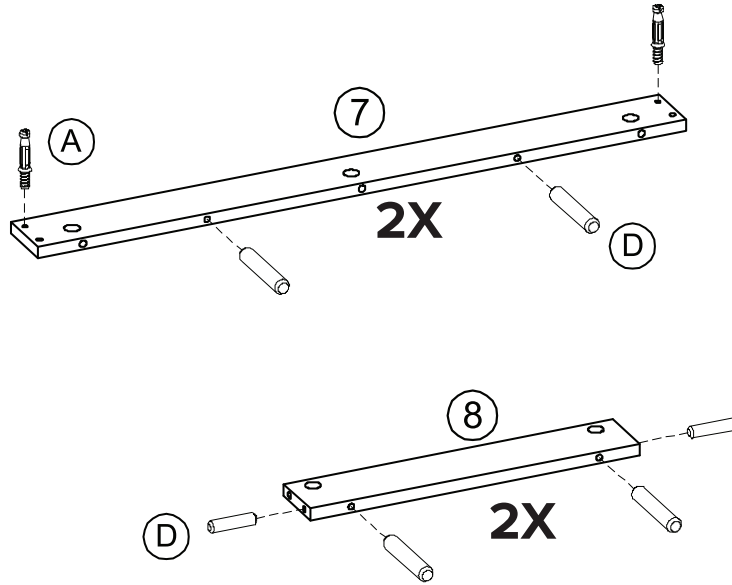



 
Step 12

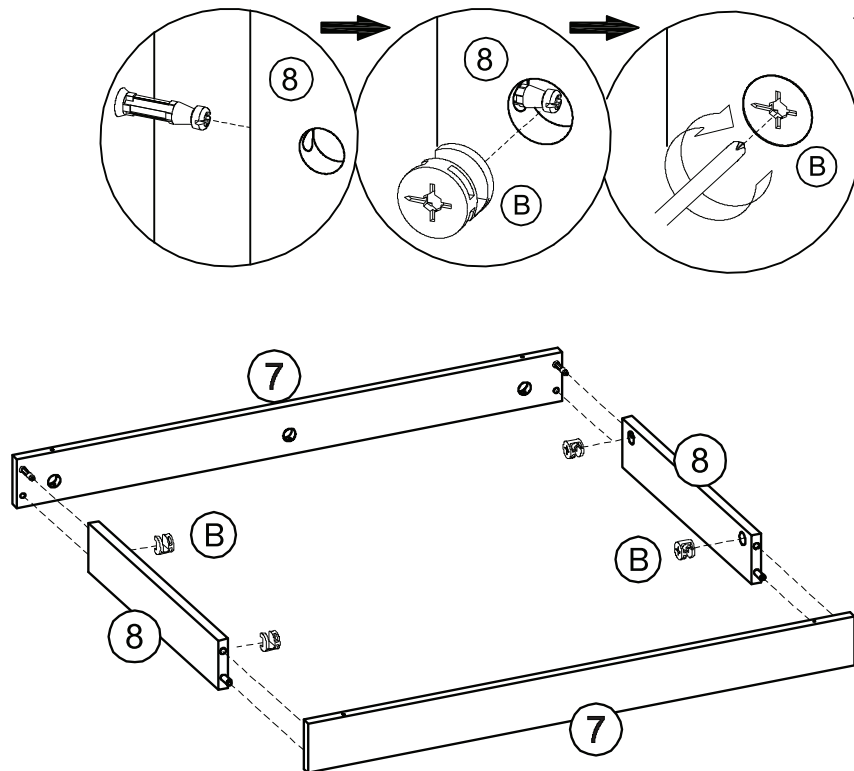

 
 
Step 13

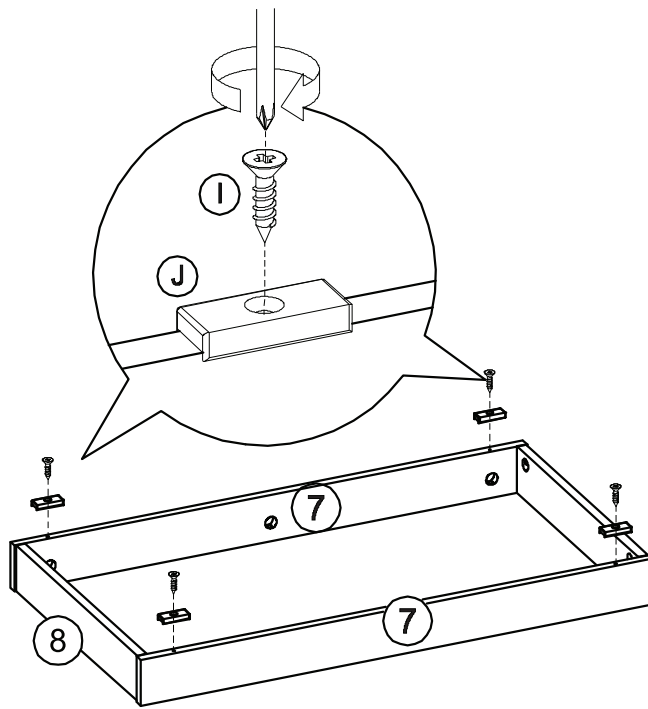

   
Step 14

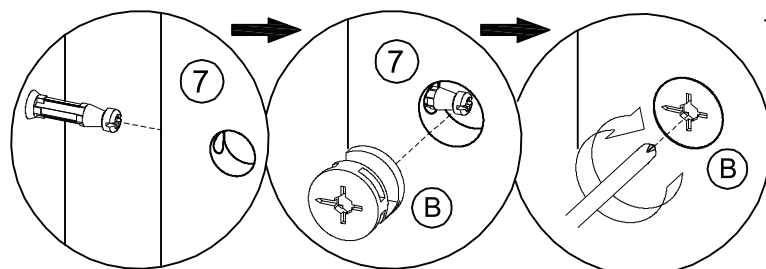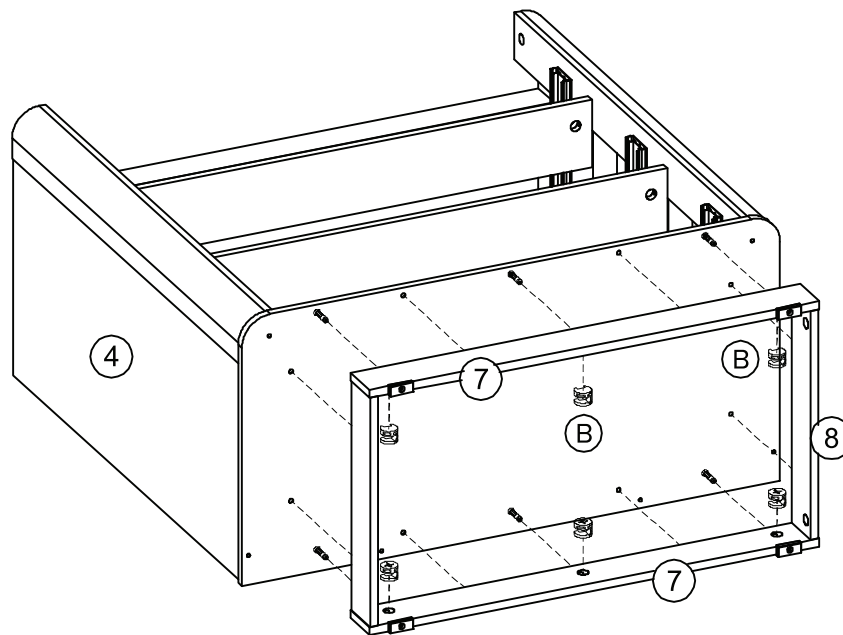

  Step 15

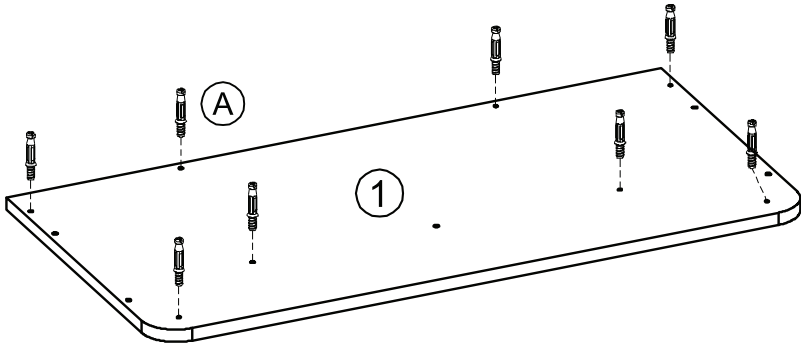

 Step 16

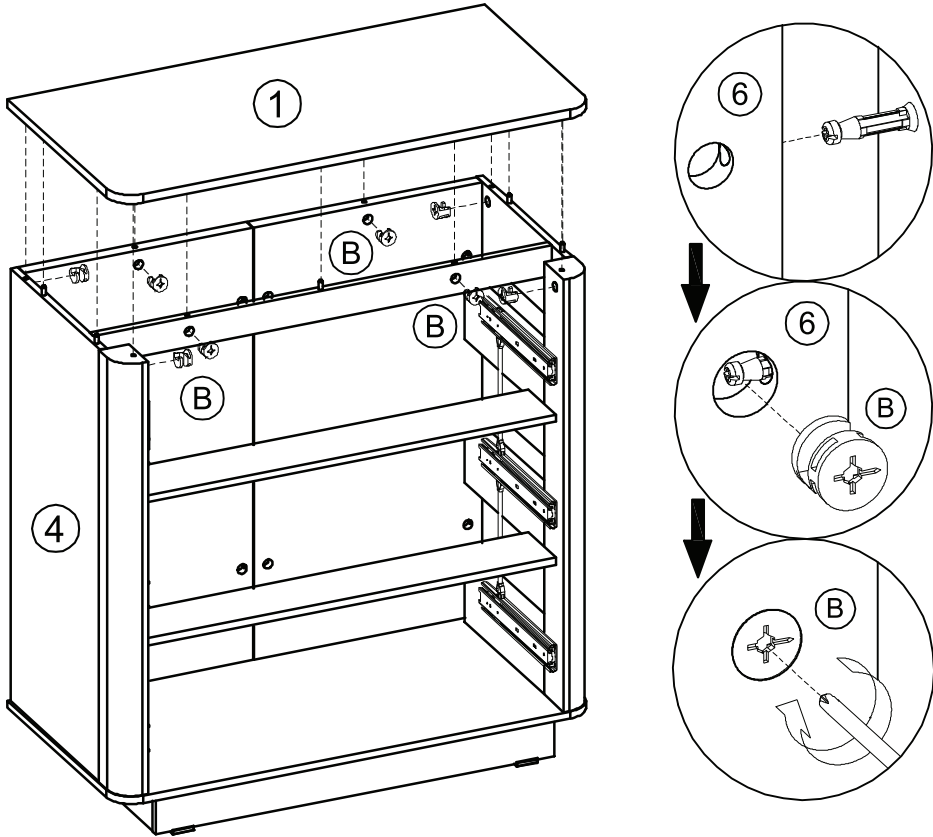

Step 17

3X

Illustration 1

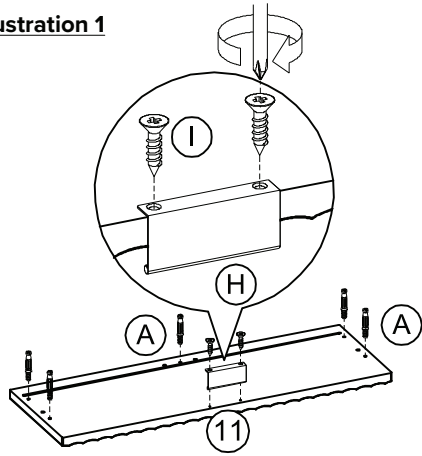 


Illustration 2



 
 
 
 
 
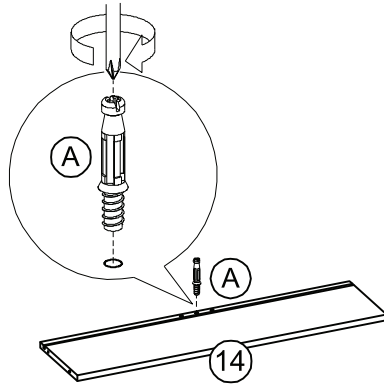 


Illustration 3

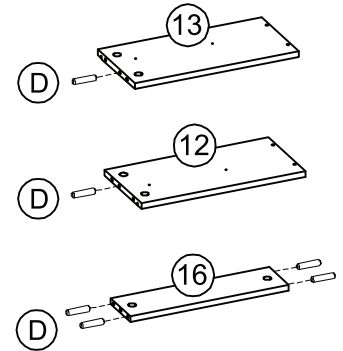
 


Step 18

 3X

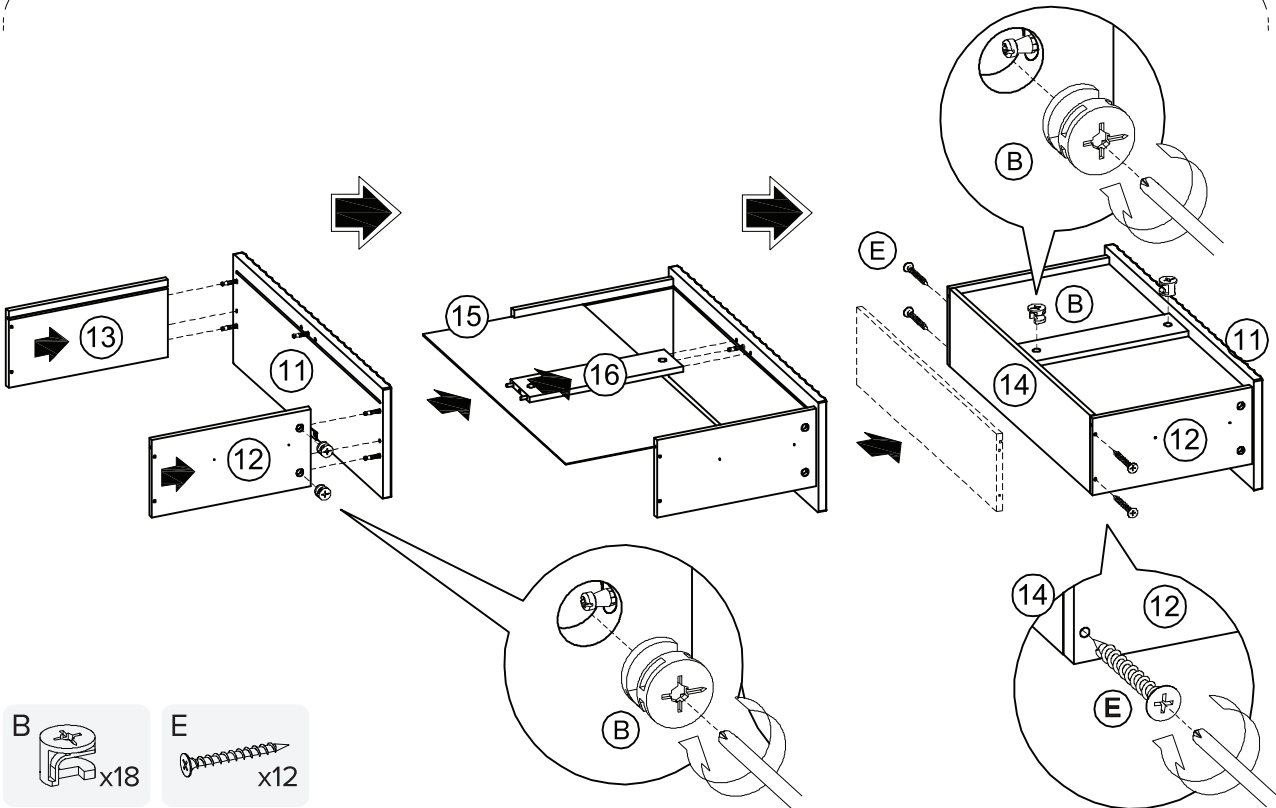

 
 
Step 19

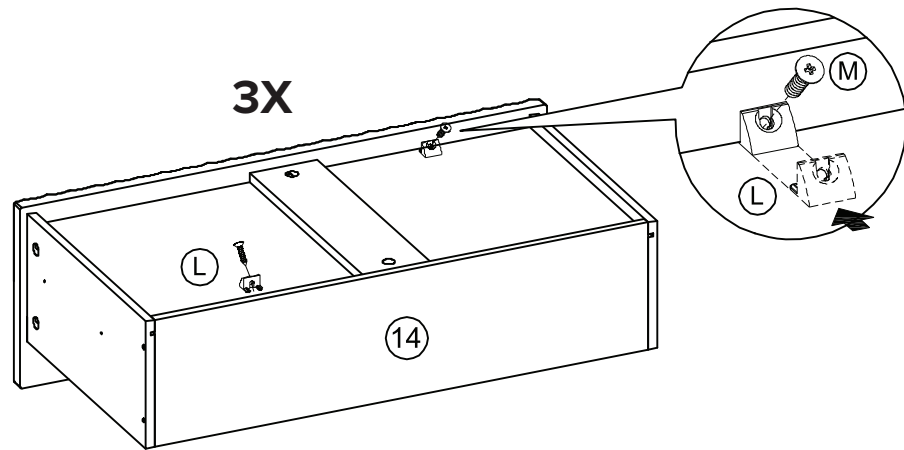


Step 21

Make sure the Drawer runners position is level.

  
Important:
Product comes with interlock drawer feature, only one drawer can be pulled at a time.
Keep all drawer runners in fully closed position throughout the entire assembly process

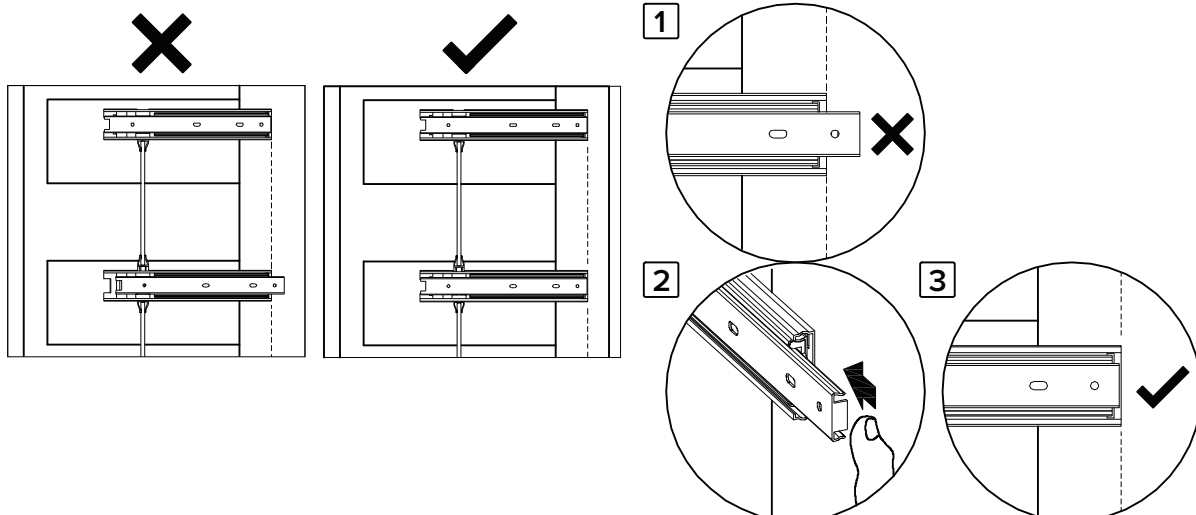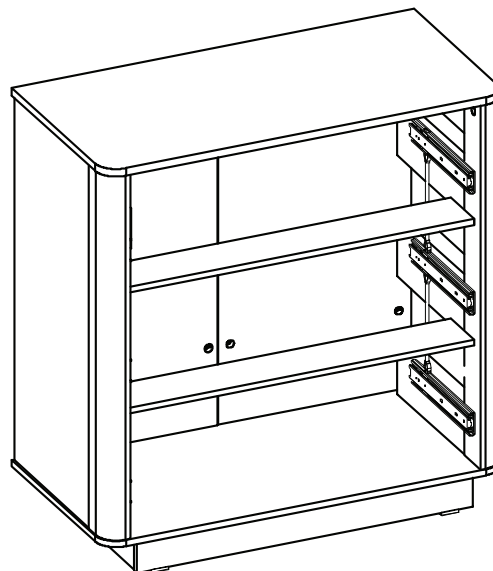

Before the next step

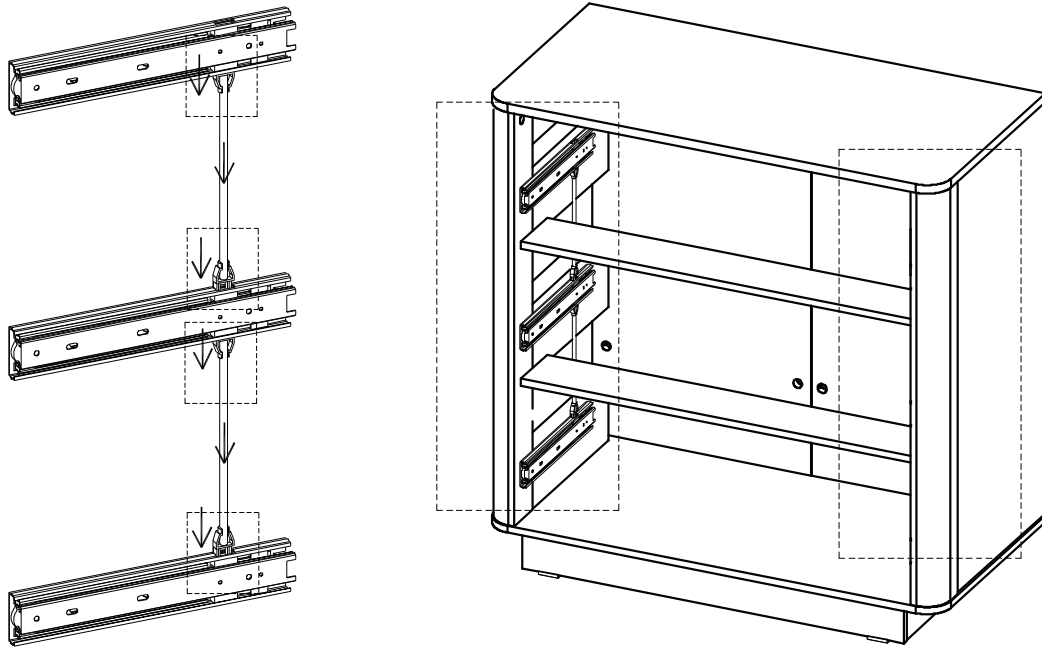 

 Ensure all rod and plastic are in lower position as illustrated below.

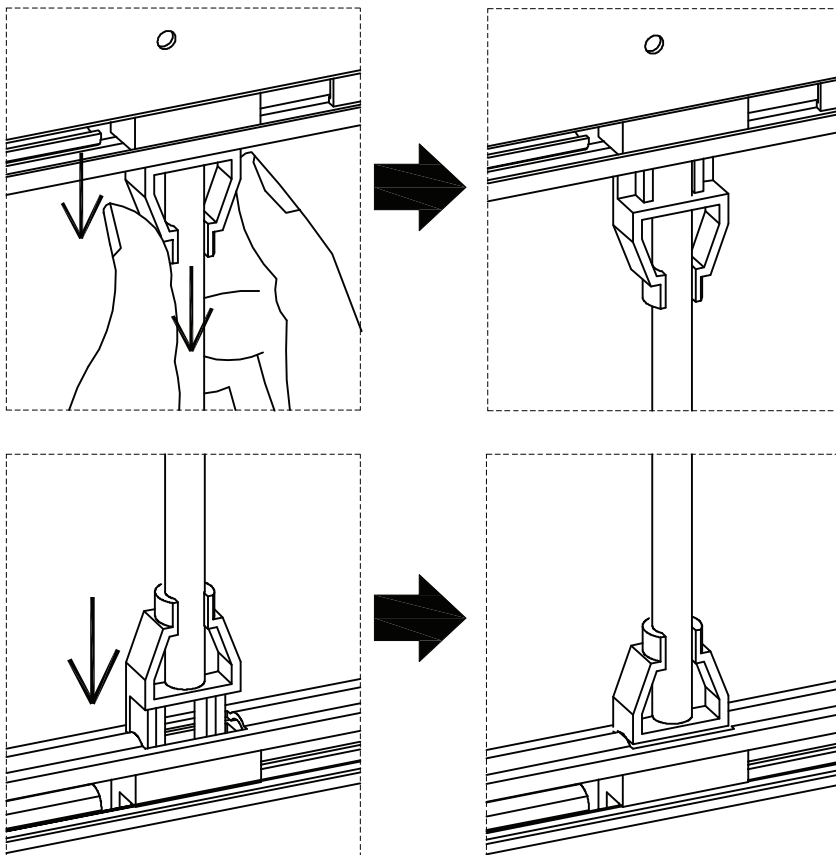

Step 21

 
Do note that due to safety reason only one drawer runner can be pulled open at any time.

Please disconnect / release runner.




After removing drawer runner, fasten them onto the drawer's side with Screws (O).

Start with bottom drawer first.

A LEFT


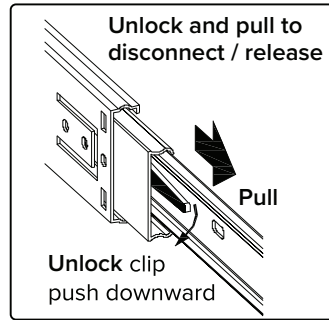


B RIGHT

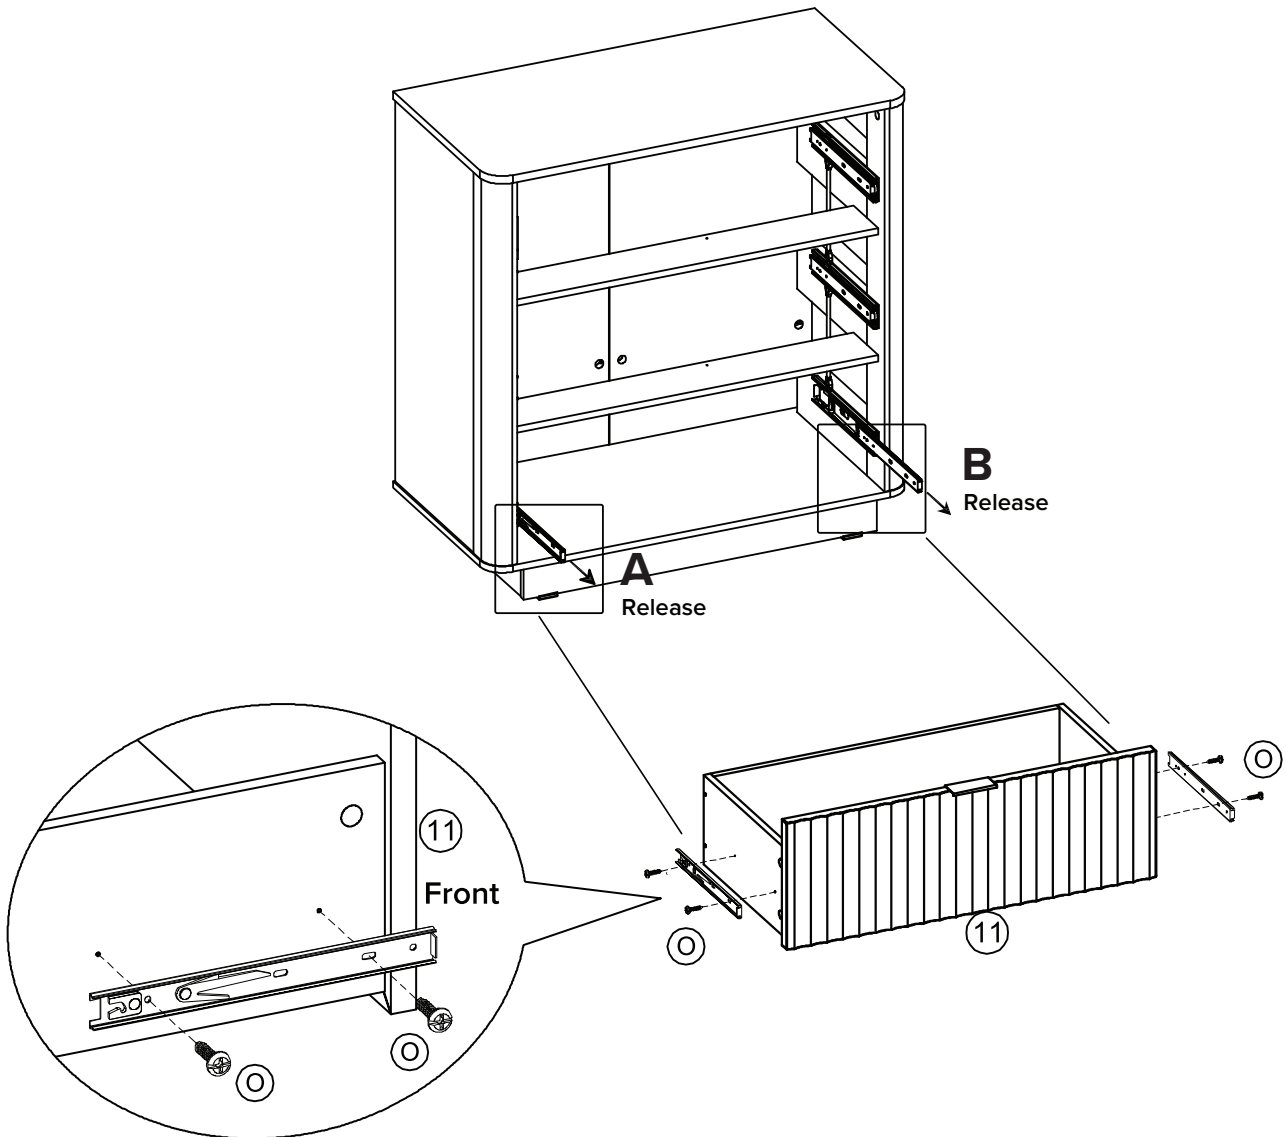  
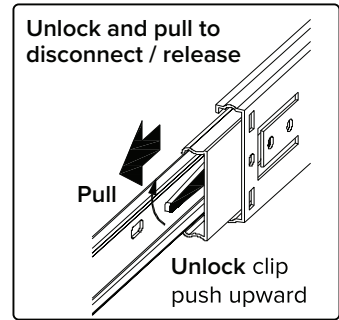 


Step 22

 
 
Reconnect the drawer runners to install the drawers to the dresser.

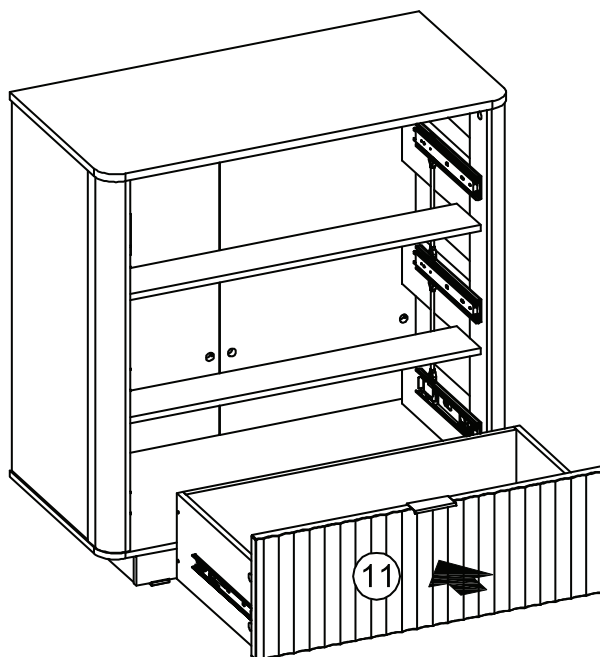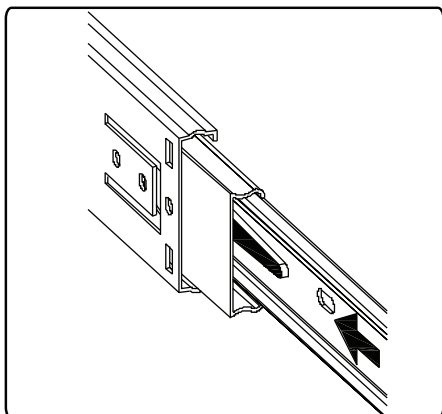

  
Troubleshoot:
If the drawer cannot be push in,
please check the correct position of
endlock plastics as illustrated below.

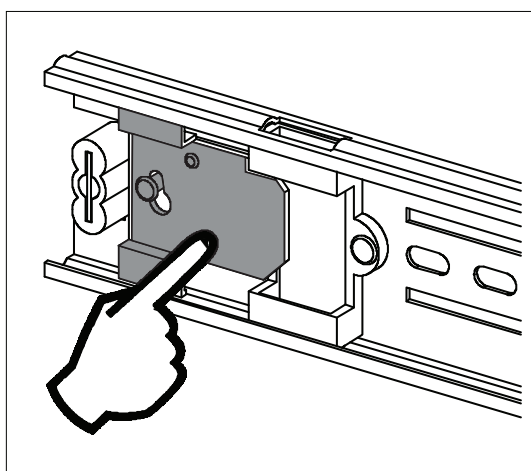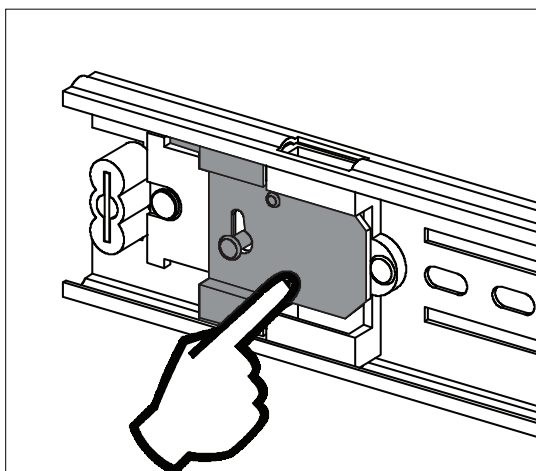



Repeat Step 21

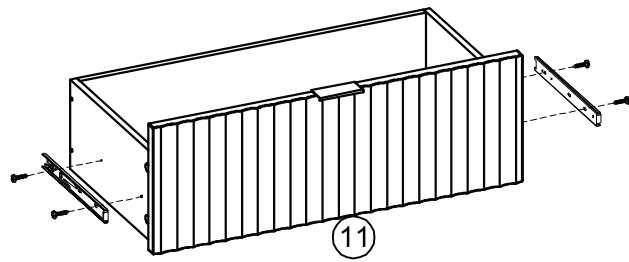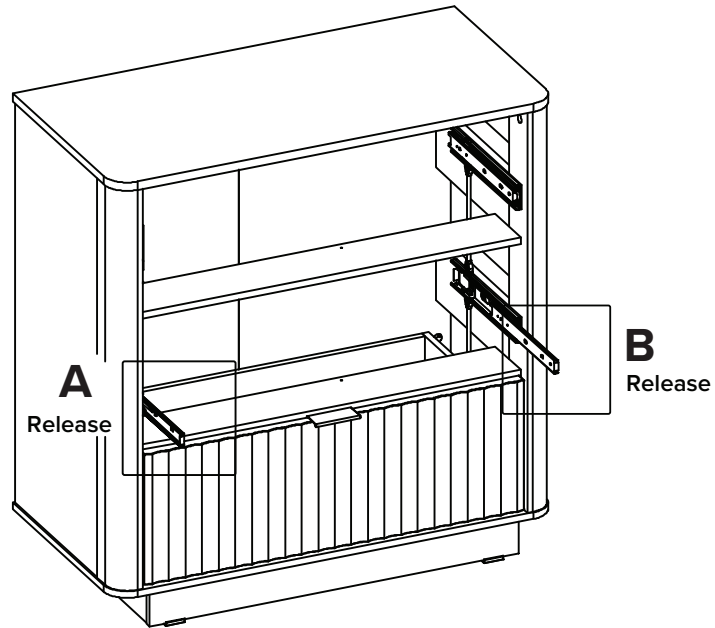  


Repeat Step 22

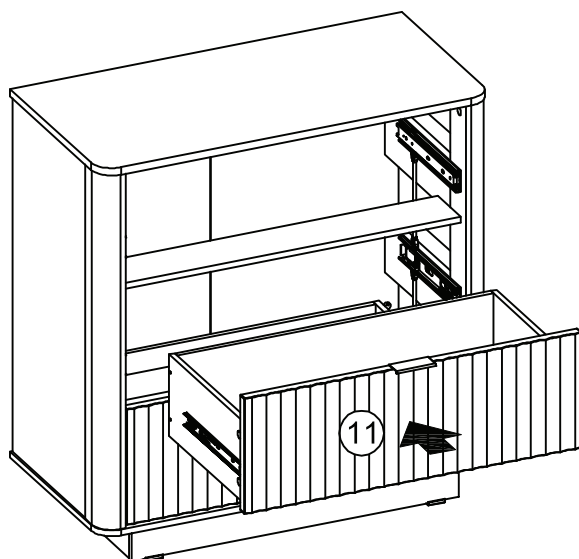 

Repeat Step 21

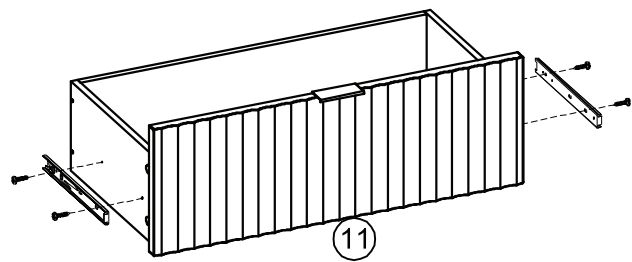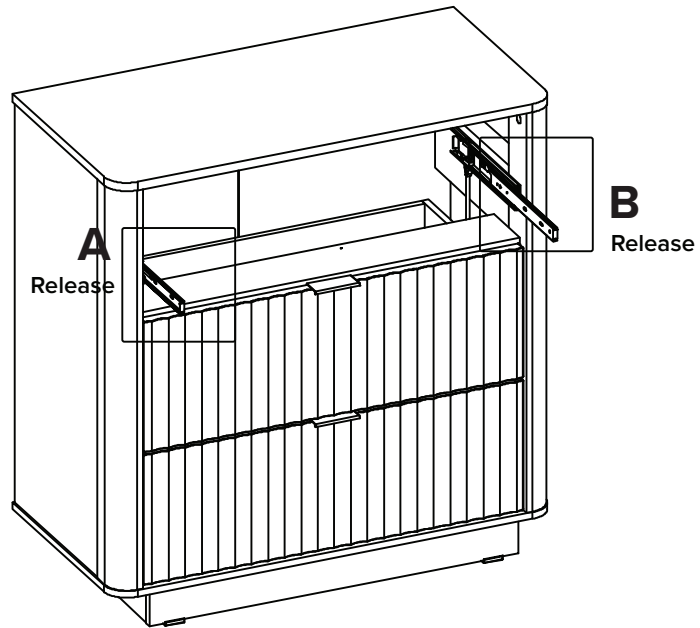  

Repeat Step 22

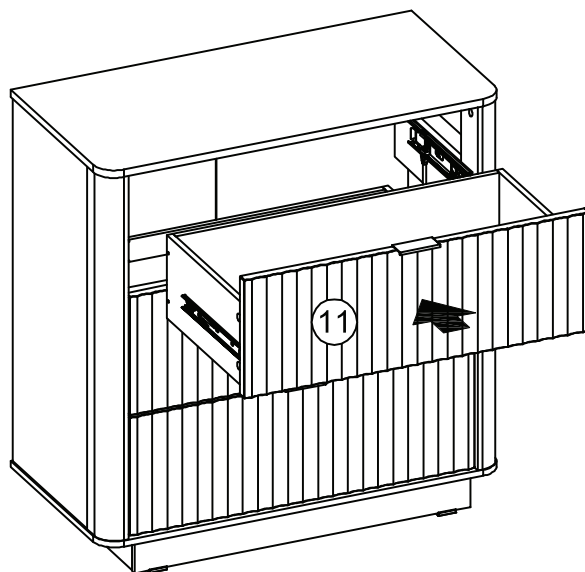 

Step 23


Adjust the drawer runners, if required.

Detail 1:


In the event of misaligned Drawer or Drawer hit the bottom panel. To adjust gaps around the Drawer, first pull out the Drawer, do not remove. Loosen screws (O) on the drawer runners and adjust. Drawer Runners in an up or down direction.

Detail 2:

 
When the drawer front (11) are correctly aligned, re-tighten screws on the runners. Lock the runners in place by fastening additional Screw (O) to each runner as shown.

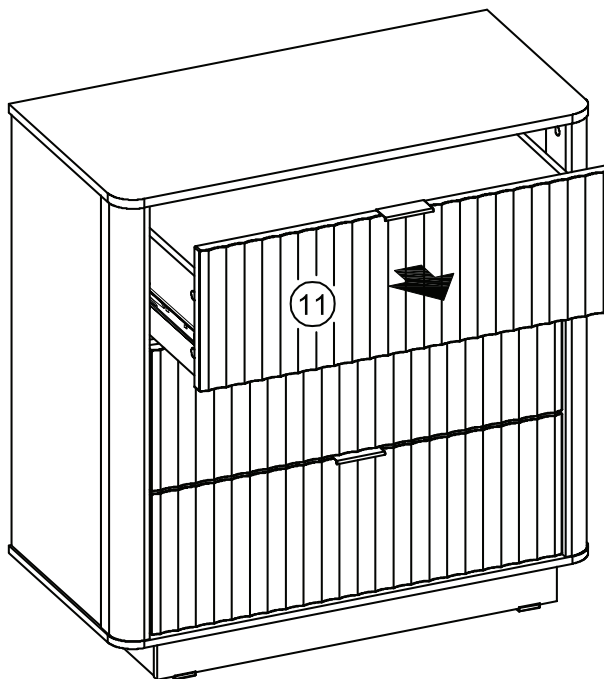

Detail 1

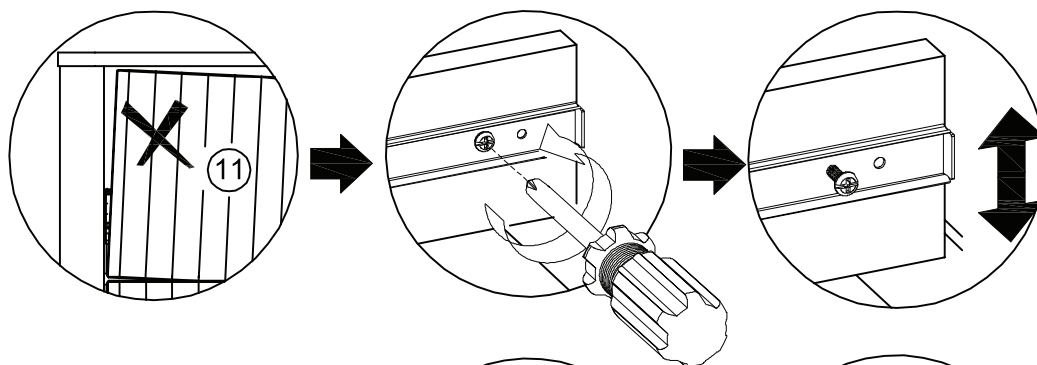 

Detail 2

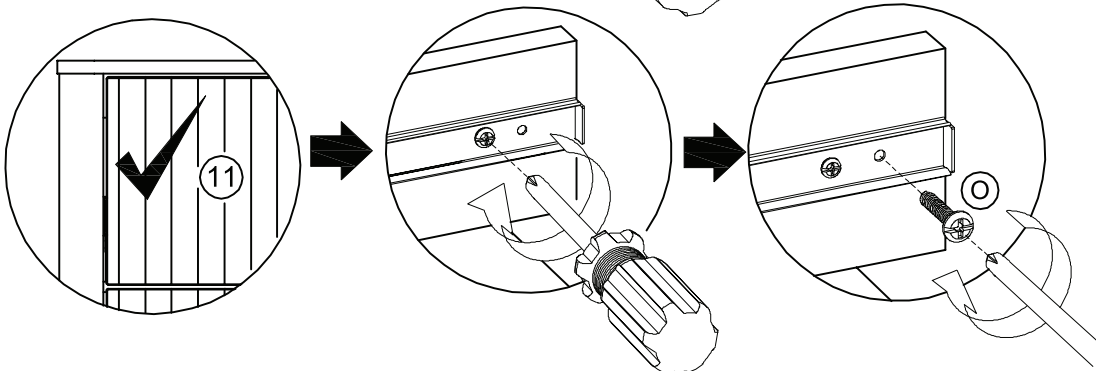 

Step 24

Anti-tip Kit

To prevent injury and property damage from unexpected tipping of furniture, we highly recommend installation of the anti-tip kit included with this product. Check periodically the screw and change the screw position if it start to lose.

Fasten Wall Tipping (N) to Top Panel with Screws (O). With help, move the product into position.

Mark fixing hole on wall and remove product. Where necessary, drill holes and mount hardware. Reposition product and fix using hardware recommended.



Please seek professional advice if unsure of wall constructions.

Properly fixing furniture to your wall will depend on the wall material: concrete, drywall, masonry, or wood will require the appropriate hardware.

Wall anchor is not provided, please source the right wall anchor according to the wall type.

Please consult with your local hardware store to ensure you are using the correct hardware for your wall type.

 
 
 


This anti-tip kit is not a substitute for proper adult supervision. This anti-tip kit may provide protection against tipping furniture.


Teach and do not allow children to climb on furniture or drawers. Always keep the heavy load at the bottom of the drawer. Do not put toys or objects on the top of dresser that can attract children to climb.

By installing anti-tip kit, you acknowledge that you are fully aware of the safety requirement and accept to adhere to it. Illustrations in this guide are for reference only and may be slightly different from the actual object.

Place Sticker Cam (C) over the camlocks (B).

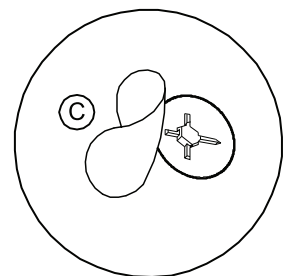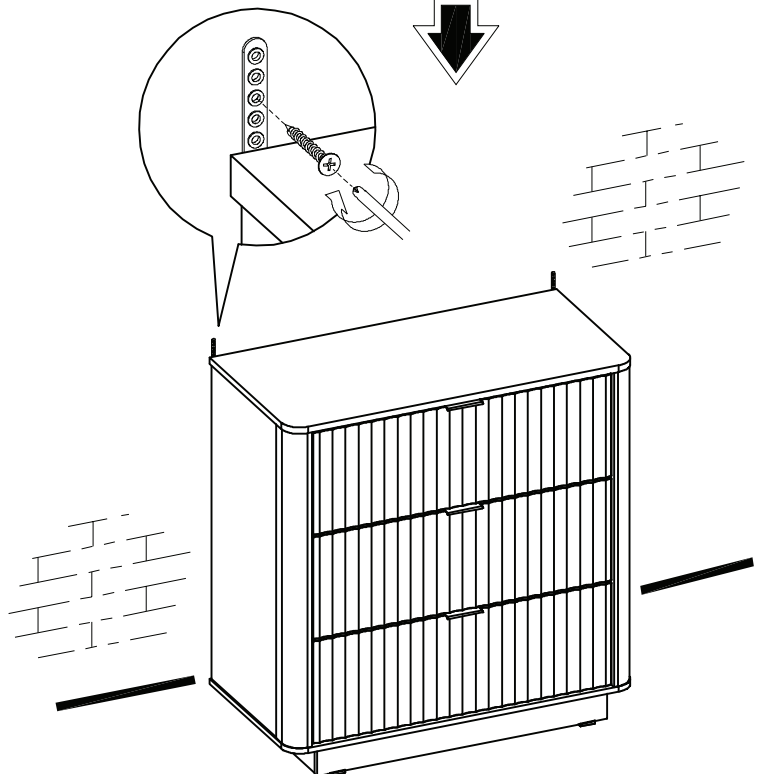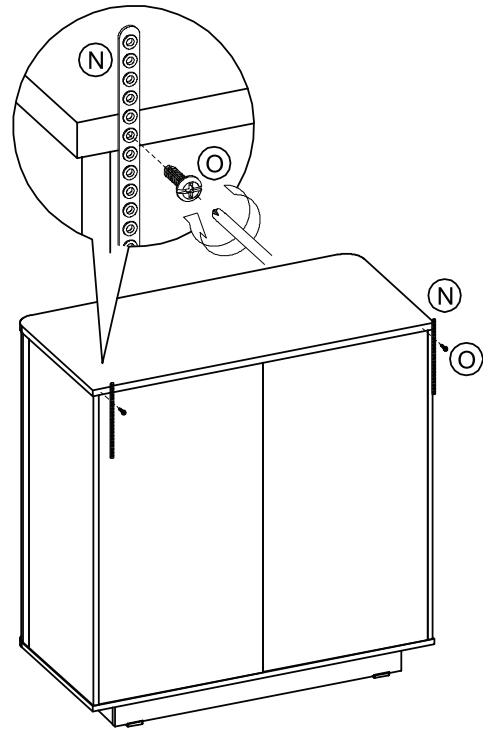

Finished!

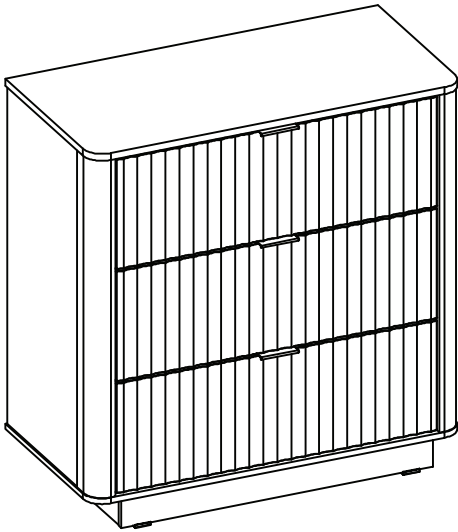 

Congratulations, you have made it through the assembly process! We're almost there!☆

Please perform following checks to ensure assembly is properly done.

- Ensure all legs frame are fully tightened, please refer to Step 11.
- If the drawer gap is misaligned, please refer to Step 23.
- Due to safety reason, only one drawer can be opened at any time. This is to prevent the dresser from tipping over.

Move your product carefully, with 2 people lifting it to the preferred location. Clean the product with a dry cloth. You are all set!

Enjoy your fresh and updated living space thanks to the addition of your new product!

Care

Instructions

Your furniture, if treated with respect and love, will last you a long time. Each piece requires light maintenance to maximize its longevity.

Few quick tips before using this product:

1. Recommended weight limit for the top is 40 lbs and 15 lbs for each of the shelf compartment.
2. Avoid uneven weight distribution for long time as it may cause damage to the product shape.
3. Drawers might not slide smoothly when dresser is overloaded by weight.
4. Check and tighten the camlock and screw periodically as it may loose over the time.
5. Check anti tipping screw periodically, change the screw position if it start to lose.

How to take care of it?

1. Avoid direct sunlight or use curtains or blinds to limit the sun exposure to the product.
2. Clean the product regularly with a dry, soft cloth.
3. Avoid using abrasive or liquid cleanser.
4. Avoid placing hot objects onto the top surface.
5. Spillage may damage the surface. Clean immediately with a dry cloth.
6. We recommend using placemats or coasters underneath glasses, cups, bowls or plates to prevent scratches to the table surface.

Follow the care instructions and look after your furniture, in return, your furniture will look after you.

We hope to see you soon!

Frequently Asked Questions

1. What should I do if my product received is incomplete?

Our products are flat packed and come in separate boxes. Once your order has dispatched and been sent with Fedex, you will receive an email with tracking information. Please note that Fedex may deliver your boxes in separate deliveries. Kindly follow the tracking information, allowing all boxes to be received before starting assembly.

2. What should I do if my shipment is damaged or products received are defective?

We're sorry to hear that! Please email us or chat with us and provide a detailed description of the damage, as well as photos (or videos, where appropriate) showing the damage. We will do our best to resolve the issue as soon as possible.

3. Who do I contact for repair queries?

You may write to us specifying your queries and we will be able to assist you further.

4. What warranty do you offer for your products?

You'll just need to submit your warranty registration upon receiving product. More details can be found in **Warranty section**.

5. How do I claim my warranty?

Easy! Just email us and provide a detailed description of the fault as well as photos.

6. What should I do if I want to return the product?

We offer 30-day return policy upon product received. To initiate a return request, please message us through Amazon or contact our customer service team with your reason of returning so we can facilitate the request and assist you further. For more details on the return policy, please refer to **Return section**.

1-Year Limited Warranty Information

Please read this limited warranty carefully. To ensure your warranty remains valid, you must comply with the following conditions. This warranty covers only manufacturing defects and does not include damages caused by misuse of the product.

Activate within 30 Days

Warranty against manufacturing defects, starts from the date of receipt. A valid proof of purchase is required for warranty claims. The manufacturer's warranty and financial responsibility are applicable only to the products.

Proper Use Definition

Proper use means that the product was not abused by the User, according to the manufacturer's definition.

Inspection and Costs

The manufacturer requires inspection of the product to determine the warranty claim. Transportation or removal costs are the responsibility of the consumer.

Usage Conditions

The product should be used on a level surface where all legs touch the floor evenly, allowing even weight distribution. This warranty only covers replacement of legs and not any other parts.

Resolution of Claims

If a manufacturing defect occurs, the manufacturer will repair or replace the product at its discretion. The manufacturer reserves the right to substitute materials or models and cannot guarantee that replacement parts will match existing ones.