 
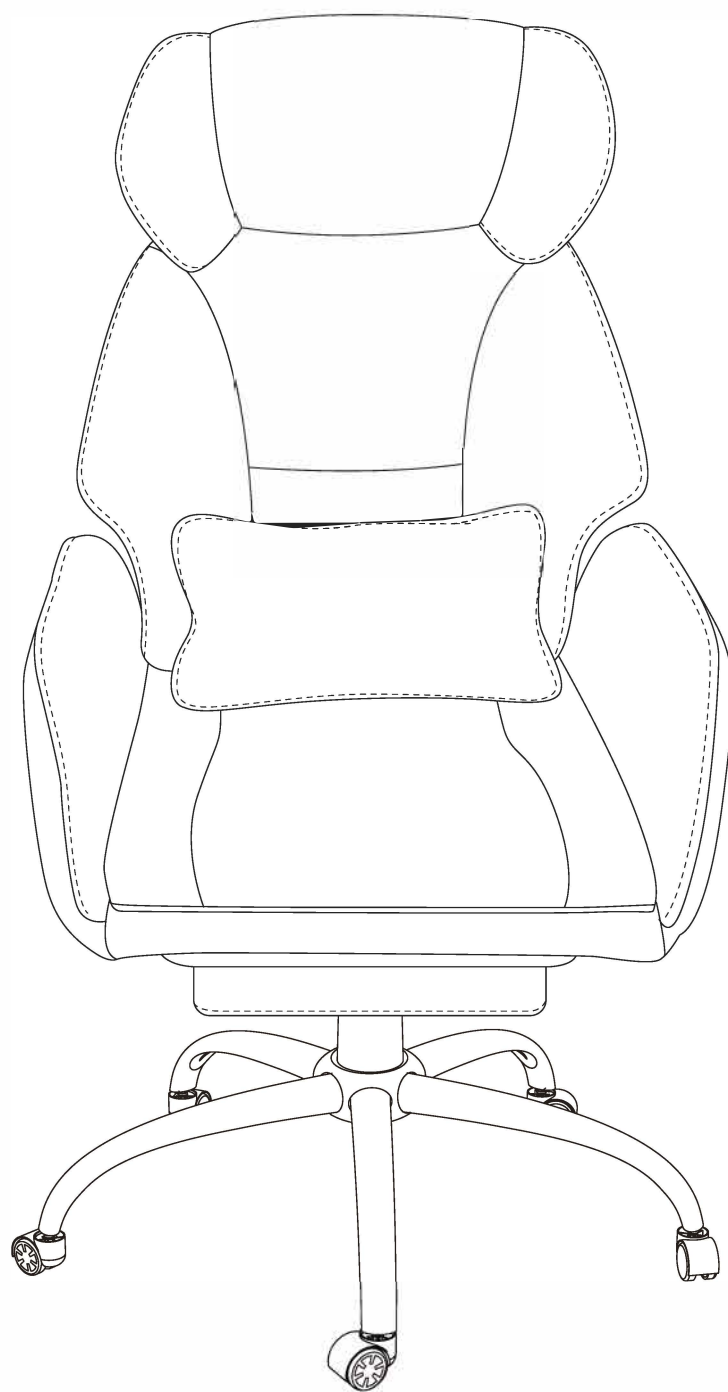 
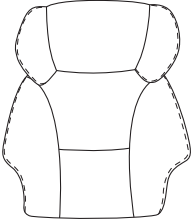 
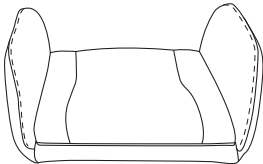 
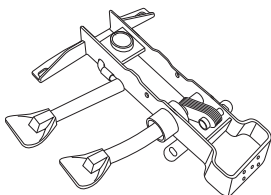 
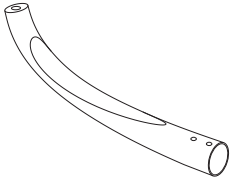 
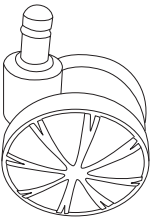 
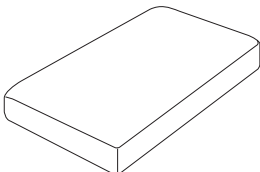 
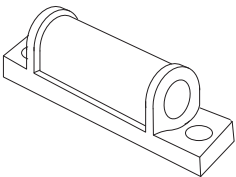 
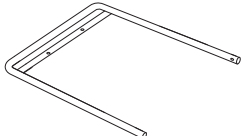 
 
 
 
 
 
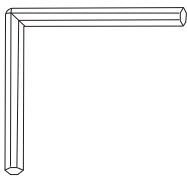 
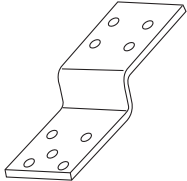 
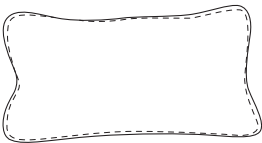 


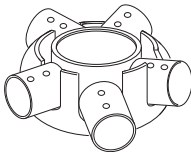

OFFICE CHAIR


USER MANUAL

PACKING LIST


A*1 	B*1 	D*1 	E*1 
F*5 	G*5 	R*1 	Y*2 
T*1 	H*4  6*25mm	P*10  6*16mm	J*4  8*20mm
X*10  6*30mm	W*1  5*10mm	L*1 	K*1 
N*1 	O*1 	M*4 	

INSTALLATION

 1

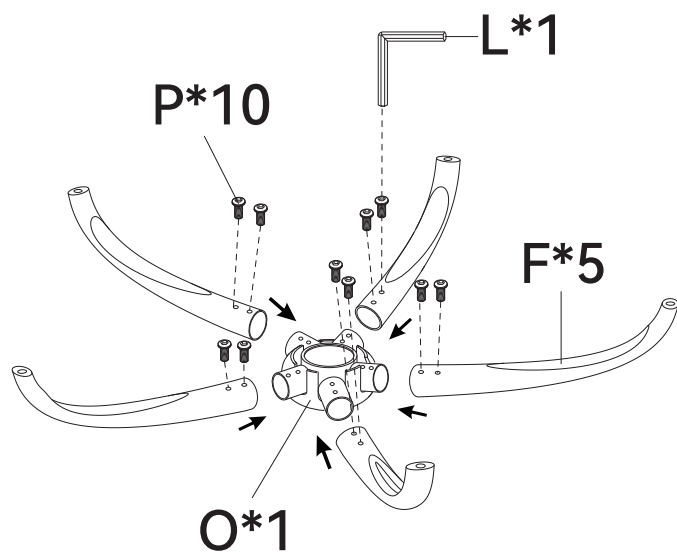


2

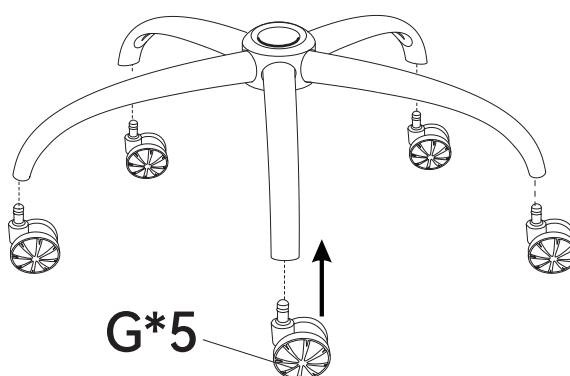 

3




 4

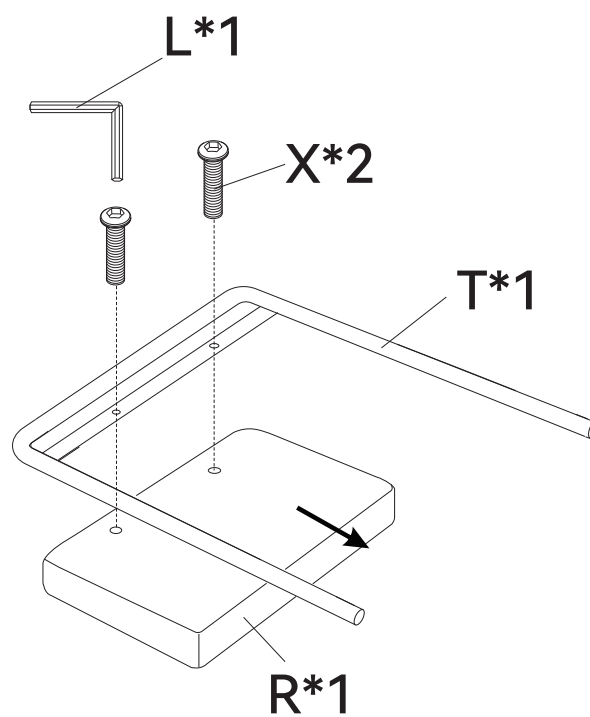


INSTALLATION

 
5

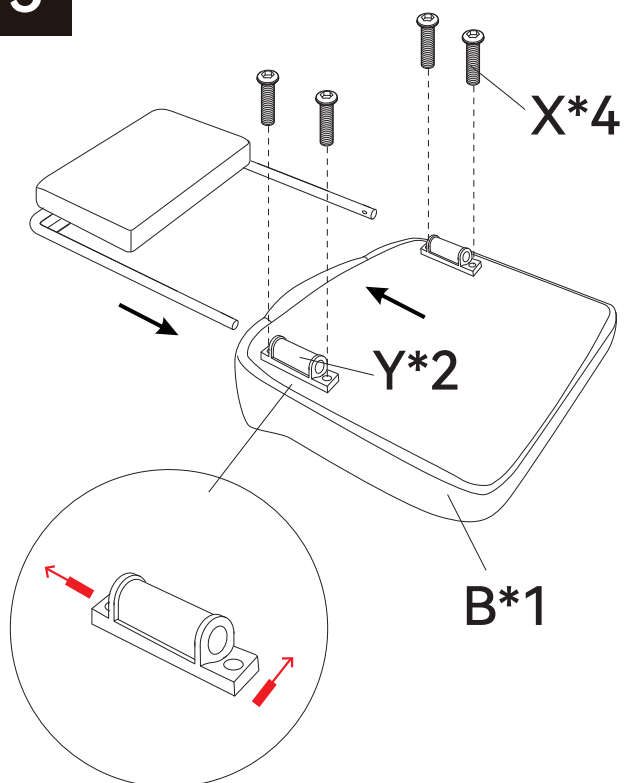


6

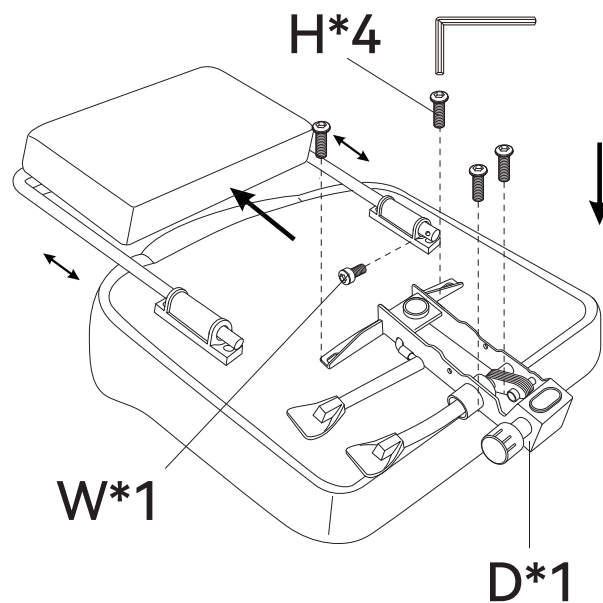 

7

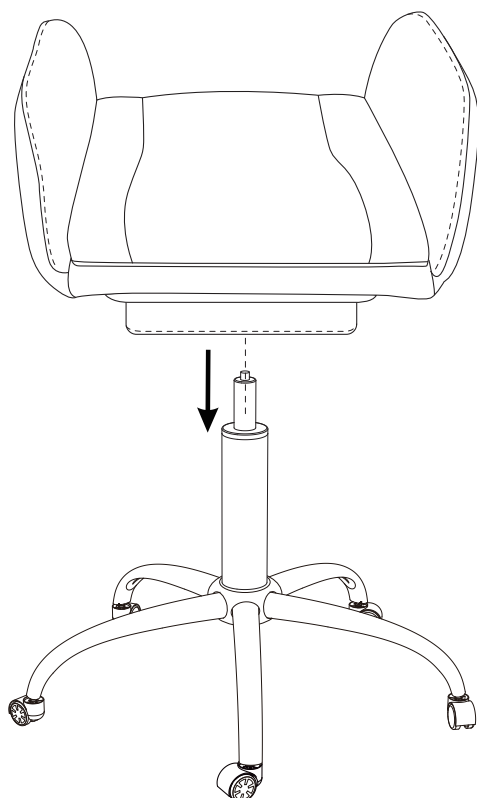 


8

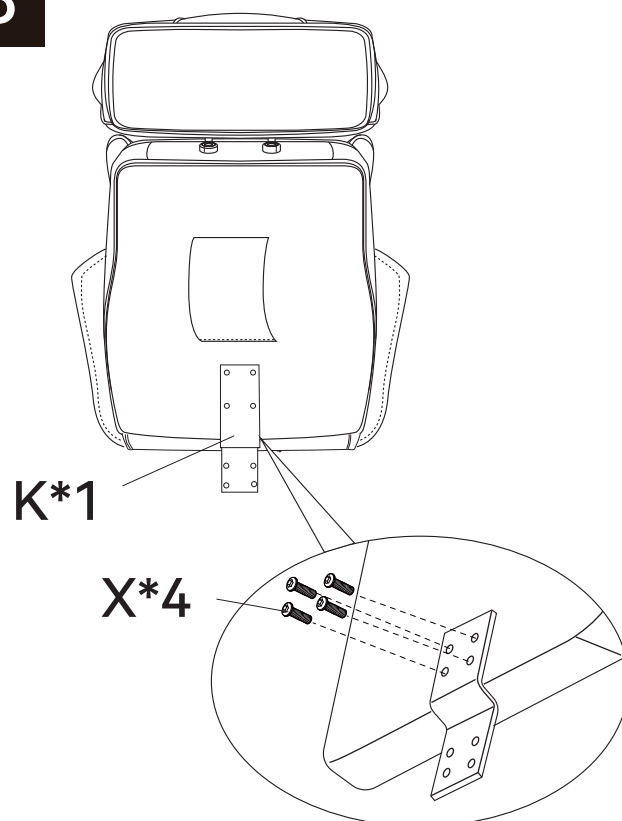 


INSTALLATION

 9

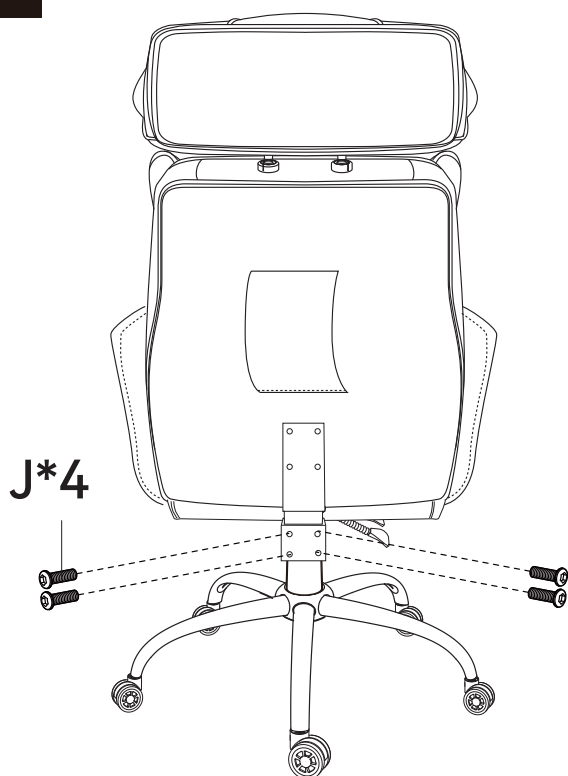


10


 
N*1

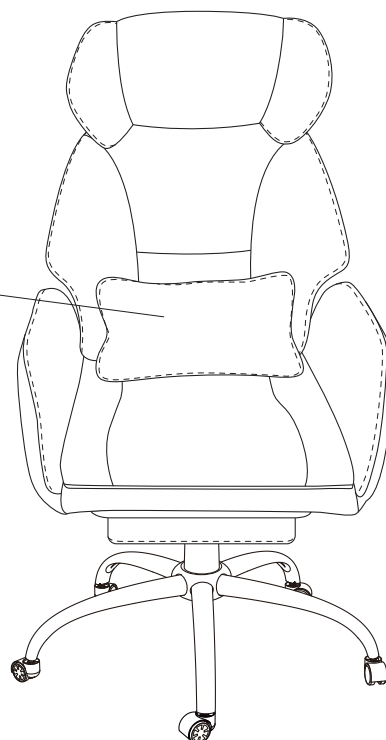

 Headrest up and down adjustment function

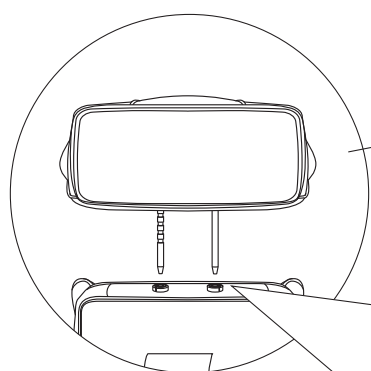

  
Press and hold buttons while pulling upwards to release the headrest.

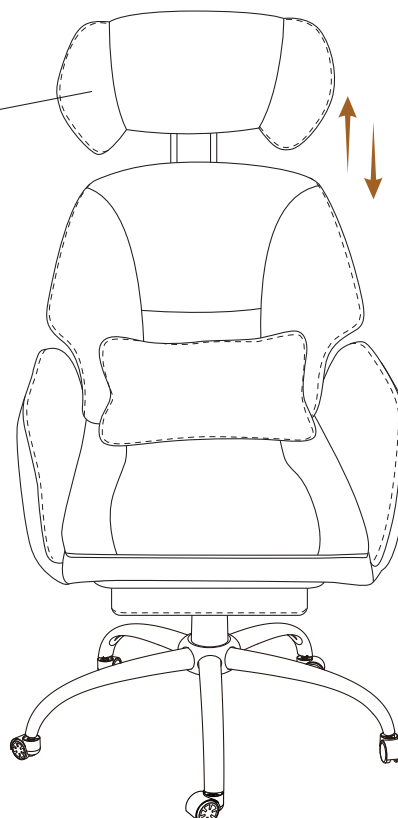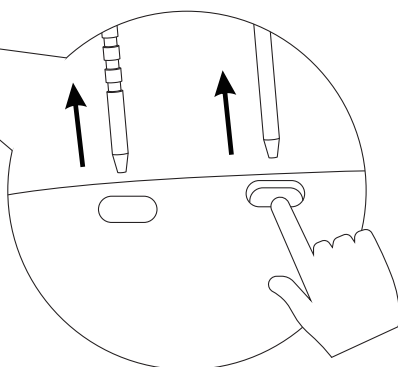


INSTALLATION

Armrest with five gear adjustment functions

 
You can press in to unlock, and press down & hear a "click" into lock mode. When the armrest enters the locked mode, you can adjust it in five gears

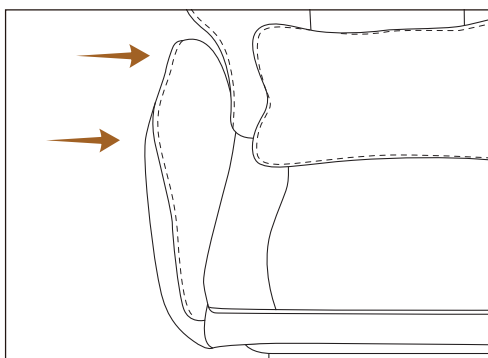

Press in to unlock

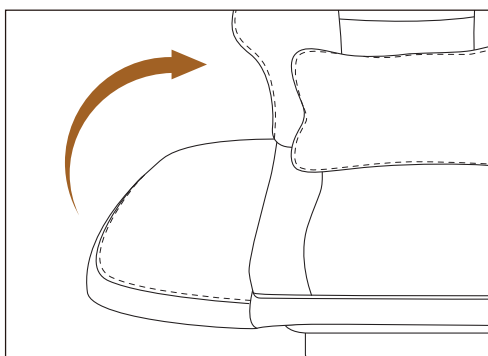 

 Press down & hear a
"Click" into lock mode

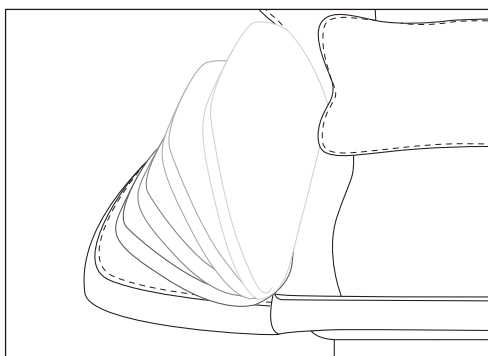

When the armrest is adjusted
to 90 degrees, you need to
press it again to unlock it

