 


# senelux

## INSTRUCTION MANUAL

### 36" Tower Fan

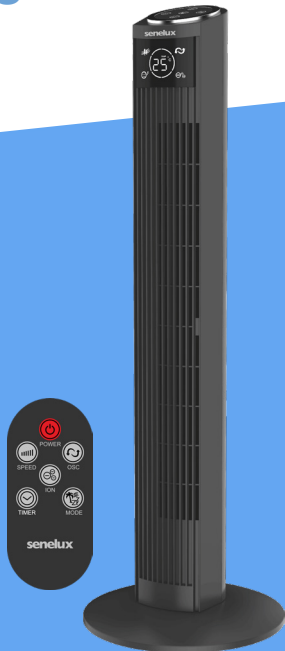

Model: SE-188

**ENGLISH**



# TABLE OF CONTENTS

i.	Introduction	02
ii.	Safety Instructions	03
iii.	Warnings	04
iv.	Product Structure	05
v.	Installation	06
vi.	Instruction For Use	07
vii.	Digital Display Screen	08
viii.	Maintenance	08
ix.	Warranty	09
x.	Information	09

## 1. INTRODUCTION

**Dear customer,**

Thank you for choosing our Senelux Tower Fan. This introduction will help you to properly install and use your new fan. Please read these instructions carefully before using your item and keep these safe for future reference. If you require further assistance, please contact our online customer service team - *support@senelux.co.uk*

We wish you a lot of fun with your new fan!

### **Package contents**

- 1x Senelux Tower fan
- 1x Remote Control
- 1x User Manual

## 2. SAFETY INSTRUCTIONS


1. Read all instructions carefully before using the fan.
2. Use this fan only as described in this manual. Any other uses are not recommended by the manufacturer may cause a fire, electric shock, or injury to persons.
3. Remove the packaging and ensure that the fan is undamaged.
4. Do not allow children to play with the small parts of this package.
5. Before using the fan, check if the voltage marked on the rating label corresponds to the mains voltage in your home.
6. Extreme caution is necessary when the fan is used near small children.
7. Avoid using an extension lead, as the extension cord may overheat and pose a fire hazard.
8. Do not pull the power cord out by the lead/cable when disconnecting power. Always firmly grasp the power plug and remove it gently from the power source.
9. Do not insert any objects into the fan as it may cause an electric shock, injury or damage to the fan. Do not block or tamper with the fan in any manner while it is operating.
10. Do not leave the fan unattended. Always unplug the fan when not in use.
11. This fan is not intended for use in wet or damp locations. Never place a fan where it may fall into a bathtub, or other bodies of water.
12. Do not use the fan outdoors.
13. Disconnect the fan from the mains power when not in use and before servicing, or performing any maintenance.
14. Always disconnect the fan from the power supply when moving it from one location to another.
15. Keep the fan clean and maintain it in good condition.

16. Only use genuine recommended parts (non-genuine parts may be dangerous, and will invalidate your warranty).
17. When not in use, please store in a safe, dry, childproof location.

### 3. WARNINGS

1. Never touch the fan with wet hands.
2. Never dismantle your appliance. An incorrectly repaired appliance may be dangerous to the user. If you encounter any problems, please take it to one of the approved service centers in our customer service network.
3. The Main Power Switch and the On/Off switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.
4. To avoid the risk of electric shock, unplug the fan from the outlet when not in use and before cleaning. If the supply cord is damaged, it must be replaced by the manufacturer or their service agent or a similarly qualified person in order to avoid a hazard.
5. If you have any questions about using the fan, please contact us directly. We are ready to help you and resolve your issue promptly.

## 4. PRODUCT STRUCTURE

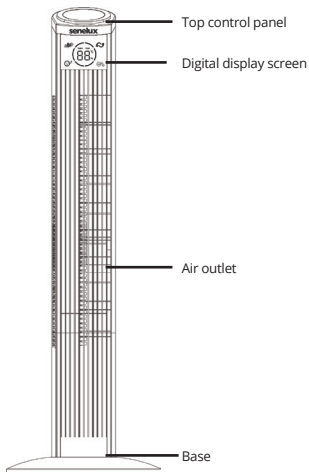

Model	SE-188
Wattage	45W
Noise Rating	<50db
Wind Speed	Low, Medium, High
Mode	Normal, Natural, Sleep
Oscillation	yes (0° - 70° )
Timer	From 1 to 12 hours
Control	Touch panel and remote control
Input Voltage	AC220-240V 50Hz
Product Size	315*315*955mm
Weight	3.3kg

## 5. INSTALLATION

### Installation steps

1. Snap the two parts of the base together.
2. Pass the power cord through the centre hole of the base, after snapping the two pieces together (The back piece is the one with the power cord securing channel).
3. Line up the Tower fan on the base. Fix with the 4 long screws, shown in FIGURE 1.

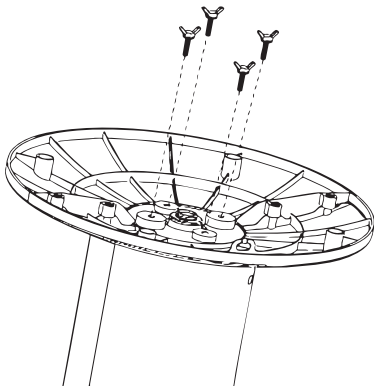


Figure 1

## 6. INSTRUCTION FOR USE

The Fan can be operated by the Touch panel located on the top (FIGURE 2) or by using your remote control (FIGURE 3).

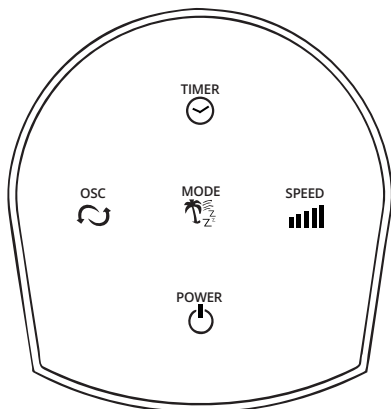


Figure 2



Figure 3

**POWER:** Turn ON the fan by pressing the 'POWER' button. Turn OFF the fan by pressing the 'POWER' button again.

**SPEED:** You can adjust the fan speed by pressing the 'SPEED' button. Low, Medium, or High.


**MODE:** Touch the "MODE" button will alternate the mode between "Normal, Natural and Sleep" mode. There is no mode display icon when it's set at Normal mode.

**TIMER:** Touch the Timer button to set the timer from 1 hour to 12 hours. Each press increases the time by one hour. Pressing the button again after 12 hours will cancel the timer setting

**OSC:** The 'OSC' button will start and stop the fans oscillation functions.

**ION:** The fan is equipped with an ionizer. Touching the 'MODE' button for 3 seconds or pressing the 'ION' button on the remote control will start the ionizer function. Conversely, touching the 'MODE' button again for 3 seconds or pressing the 'ION' button on the remote control will stop the ionizer function.

## 7. DIGITAL DISPLAY SCREEN

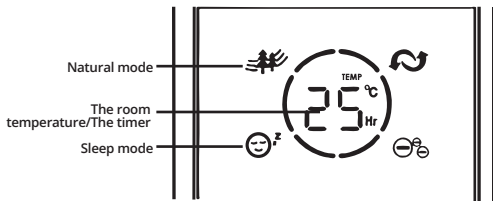

**Temperature Display:** Once the device is plugged into a power socket, the digital screen will display the room temperature. When a timer is set, the temperature display will change to the timer display.

**Power Saving:** The illuminated display screen will dim after 30 seconds of inactivity. Touch any button to turn it back on.

## 8. MAINTENANCE

1. Maintenance can only be done by an authorized service agent such as your local dealer or any agent qualified to undertake electrical repairs.
2. If the unit requires external cleaning, make sure it is switched off and unplugged from the main supply. Use a soft tissue or cloth for general cleaning. To remove more persistent dirt or grime wipe down with a cloth that has been dampened with warm, soapy water. Do not use any solvents (such as thinners) as these may damage the plastic casing.

## 9. WARRANTY

All Senelux products come with an 18-month warranty from the original date of purchase. To activate your warranty and secure protection for your products, please register by visiting [www.senelux.co.uk](http://www.senelux.co.uk). For extended coverage, additional protection plans are also available on our website.

If you encounter any manufacturing defects, please contact our customer service team at [support@senelux.co.uk](mailto:support@senelux.co.uk). Be sure to include your order number, product serial number, and any relevant details regarding your issue. For further assistance, FAQs and helpful guides for all our products are available on our website and YouTube channel.

Please note: Any unauthorised repairs will void the warranty.


## 10. INFORMATION

For further information about using this product or any of our other products, please feel free to contact us using the details provided below.

Senelux U.K. Limited  
Unit 9 Wareing Road  
Liverpool, L9 7AU  
United Kingdom  
Email - info@senelux.co.uk  
Website - www.senelux.co.uk



Be sure to tag us in your photos on social media using #seneluxathome to be featured

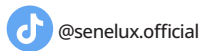

Thank you very much for using our products.  
Please read the user manual carefully before use and keep it for future reference.