 


INSTALLATION INSTRUCTIONS

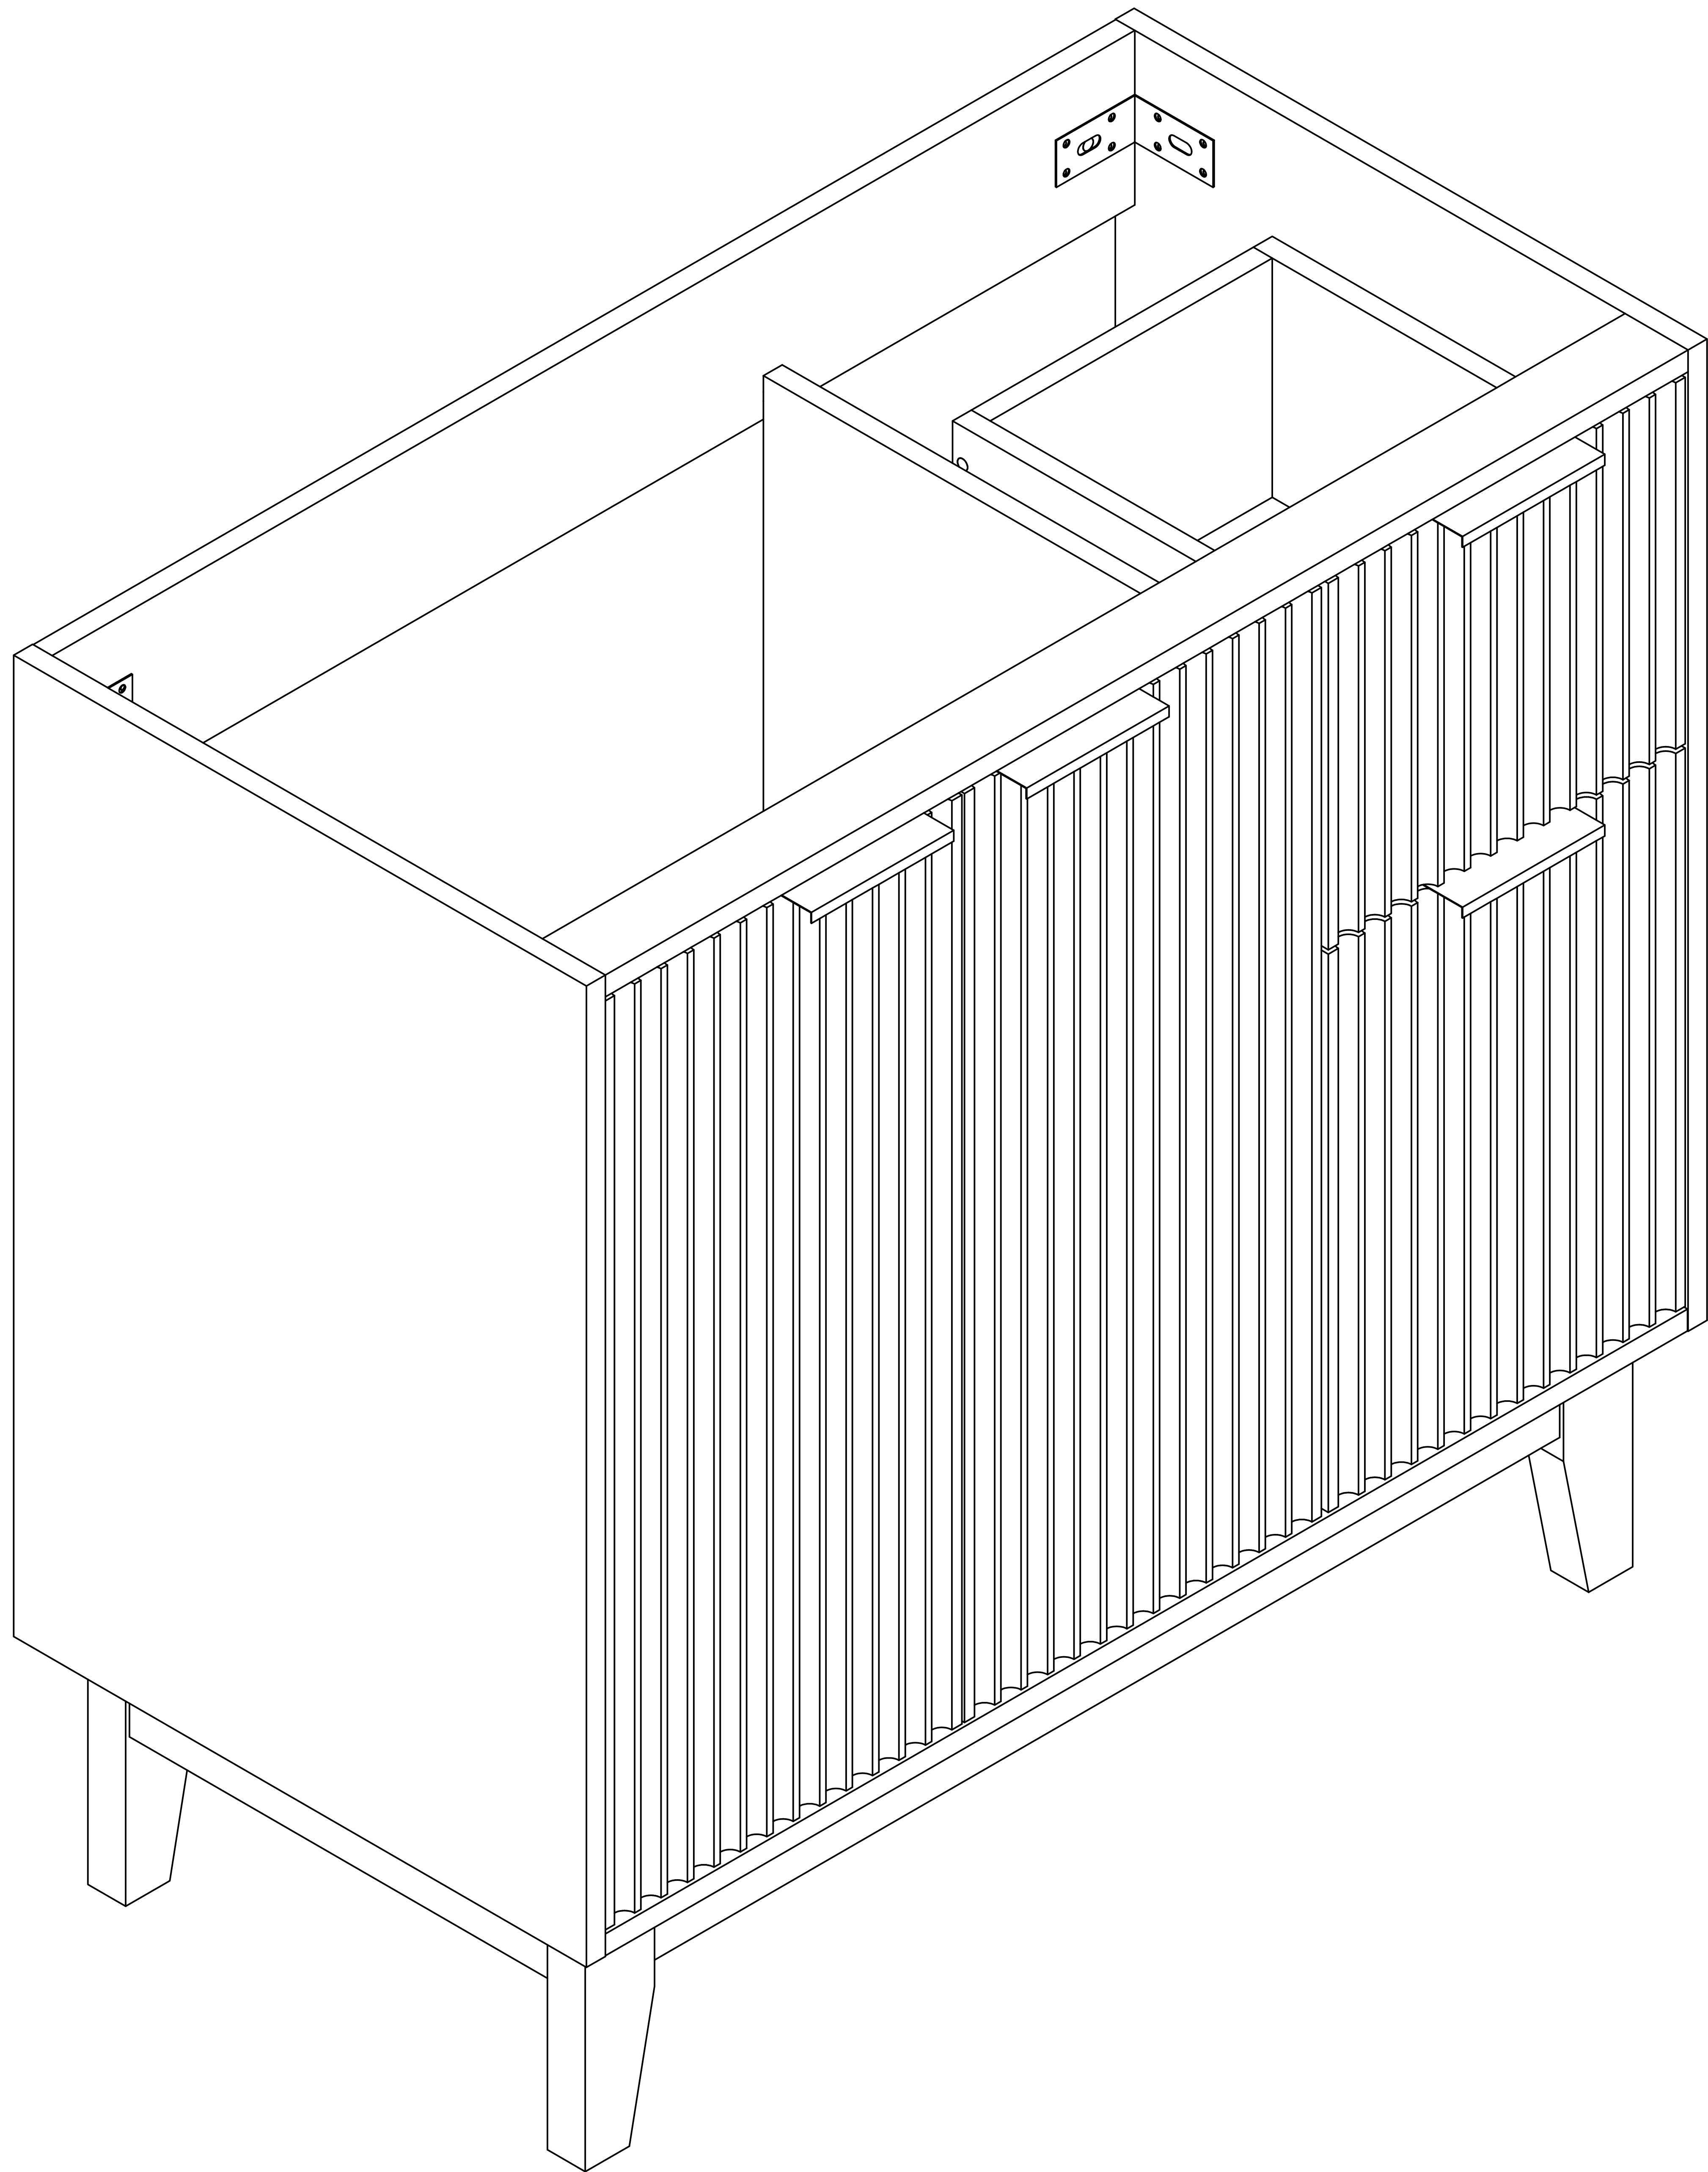

 
EN: This product does not contain batteries.
Legal Disclaimer: We cannot be held responsible for any injury, accident or damage that is caused by improper use or by improper repair or modification of the product.

 
WARNING:
CHOKING HAZARD -- Small parts.
Not for children under 3 years old.

Warnings

- Tipping over the product may cause serious or fatal injuries.
- Stop using the product if any parts are missing or damaged.
- Children should only use the product under adult supervision. Do not allow children to climb or play on the product to prevent injury from tipping or breaking of the furniture.
- During assembly, keep all small parts out of the reach of children to avoid the risk of choking or suffocation.
- Keep all packaging materials (such as plastic film, bags, foam boards, etc.) out of the reach of children, especially toddlers and infants, to avoid potential hazards such as suffocation.

EXPLOSION FIGURE

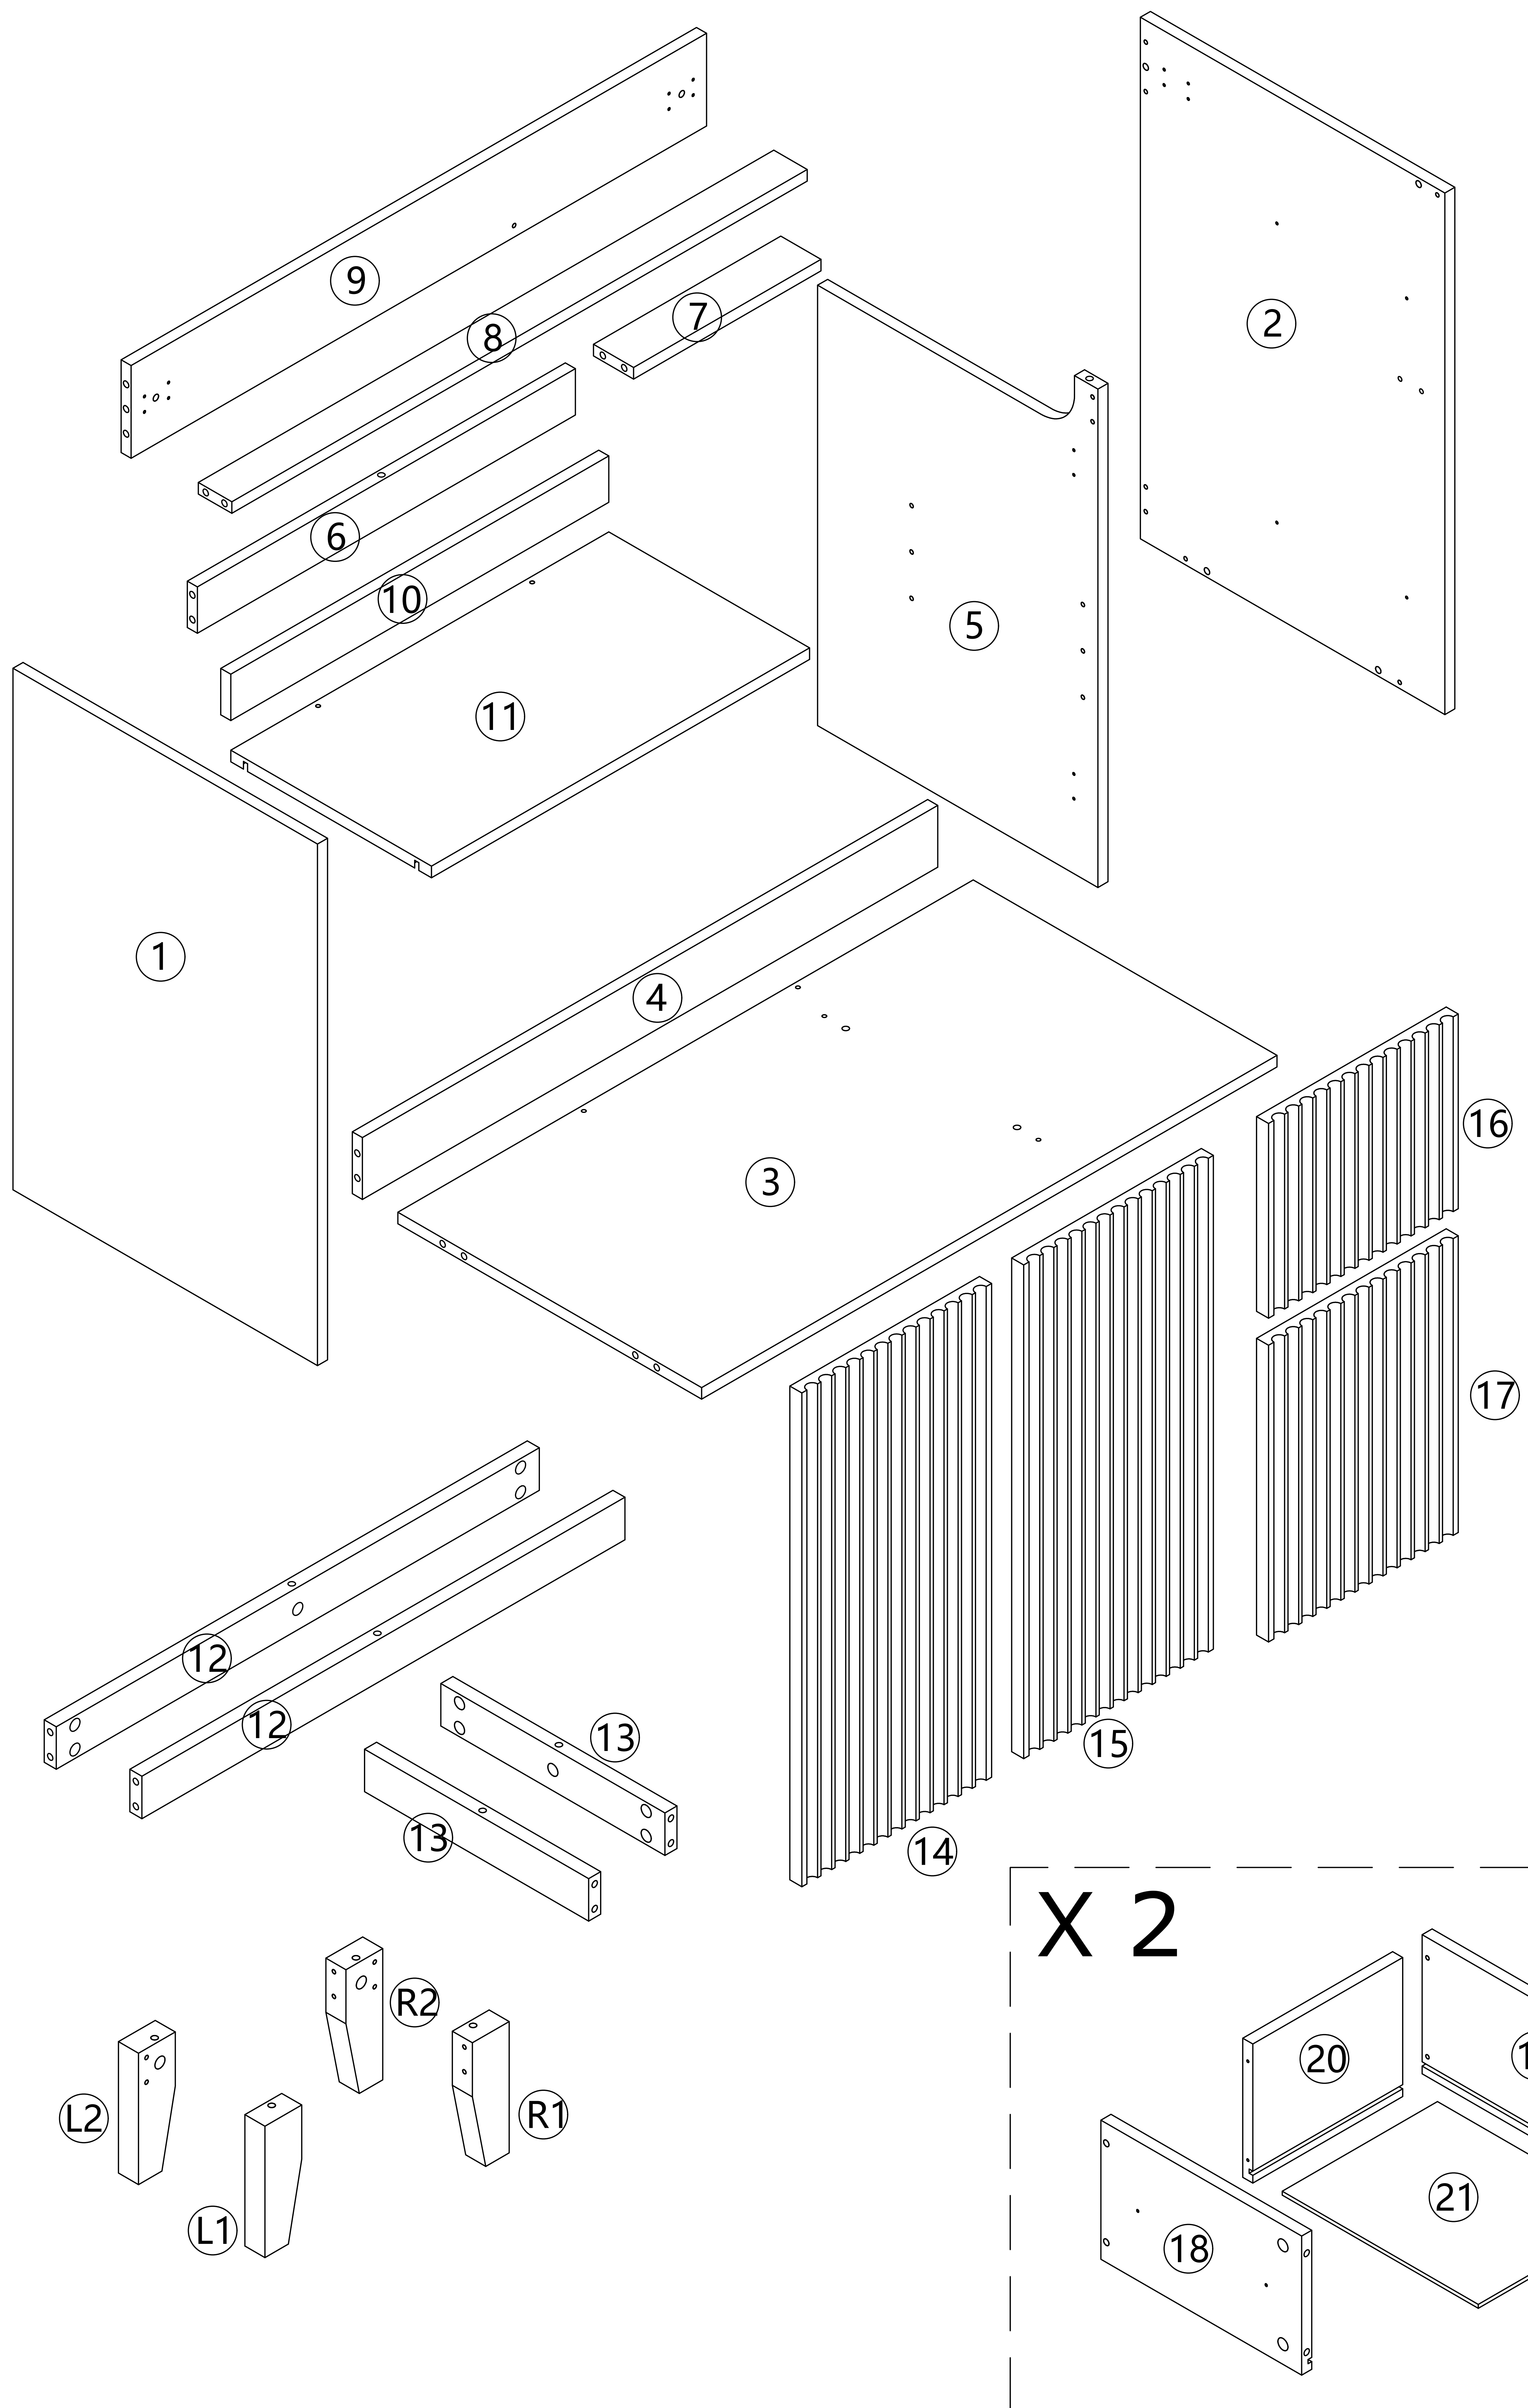


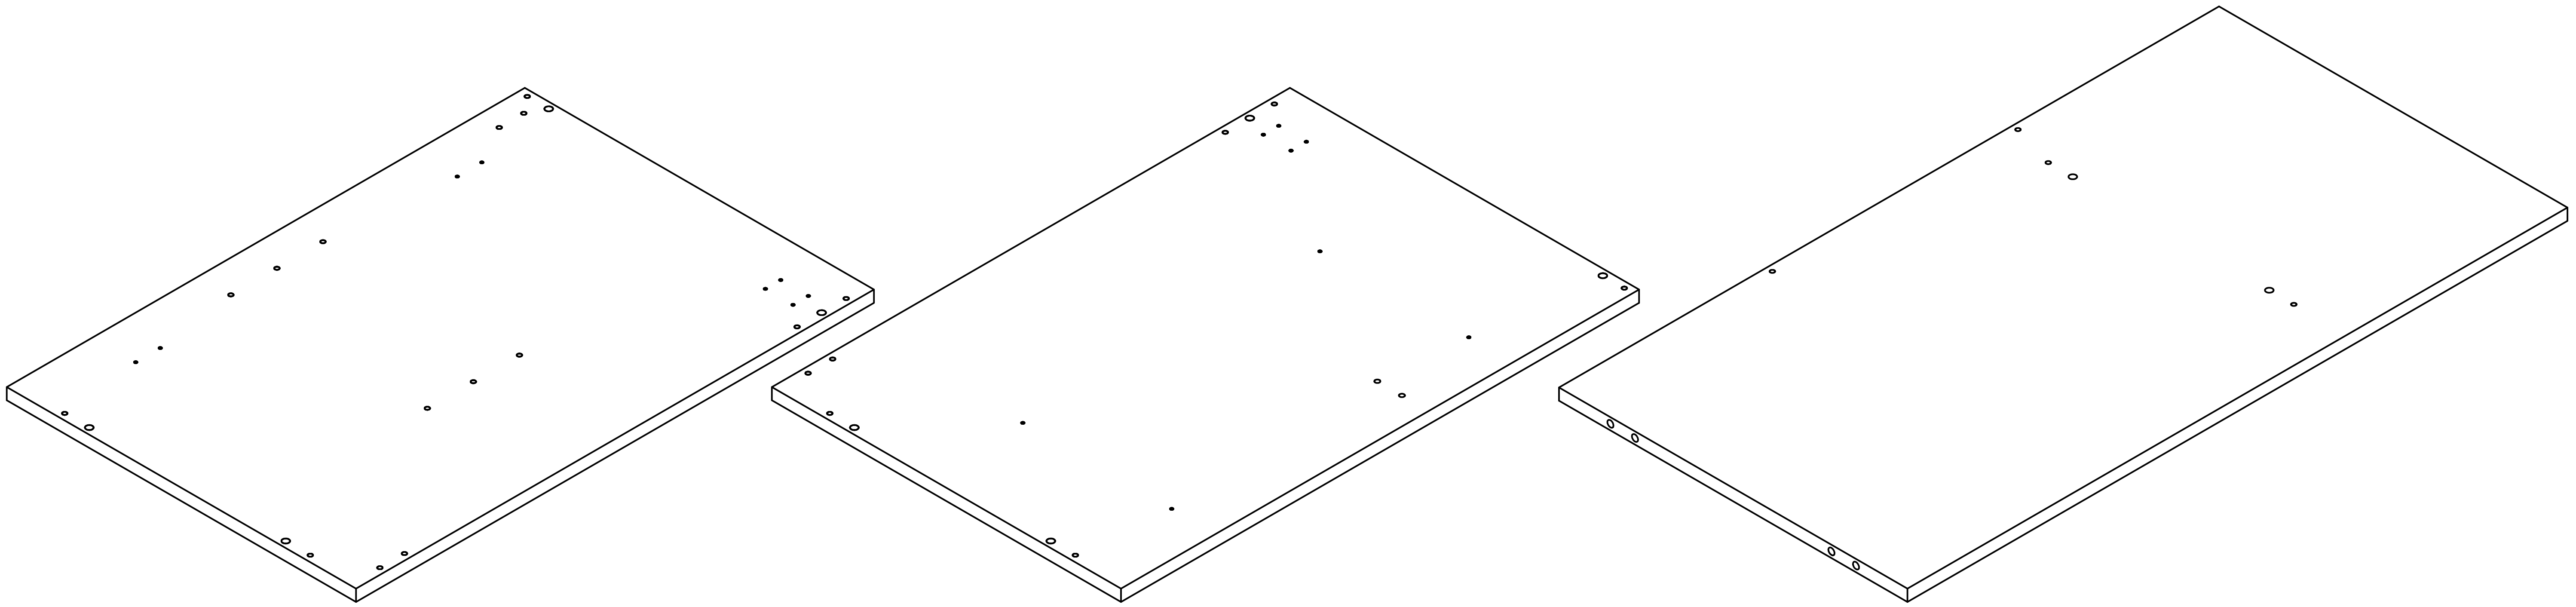

① x1

② x1

 ③ x1

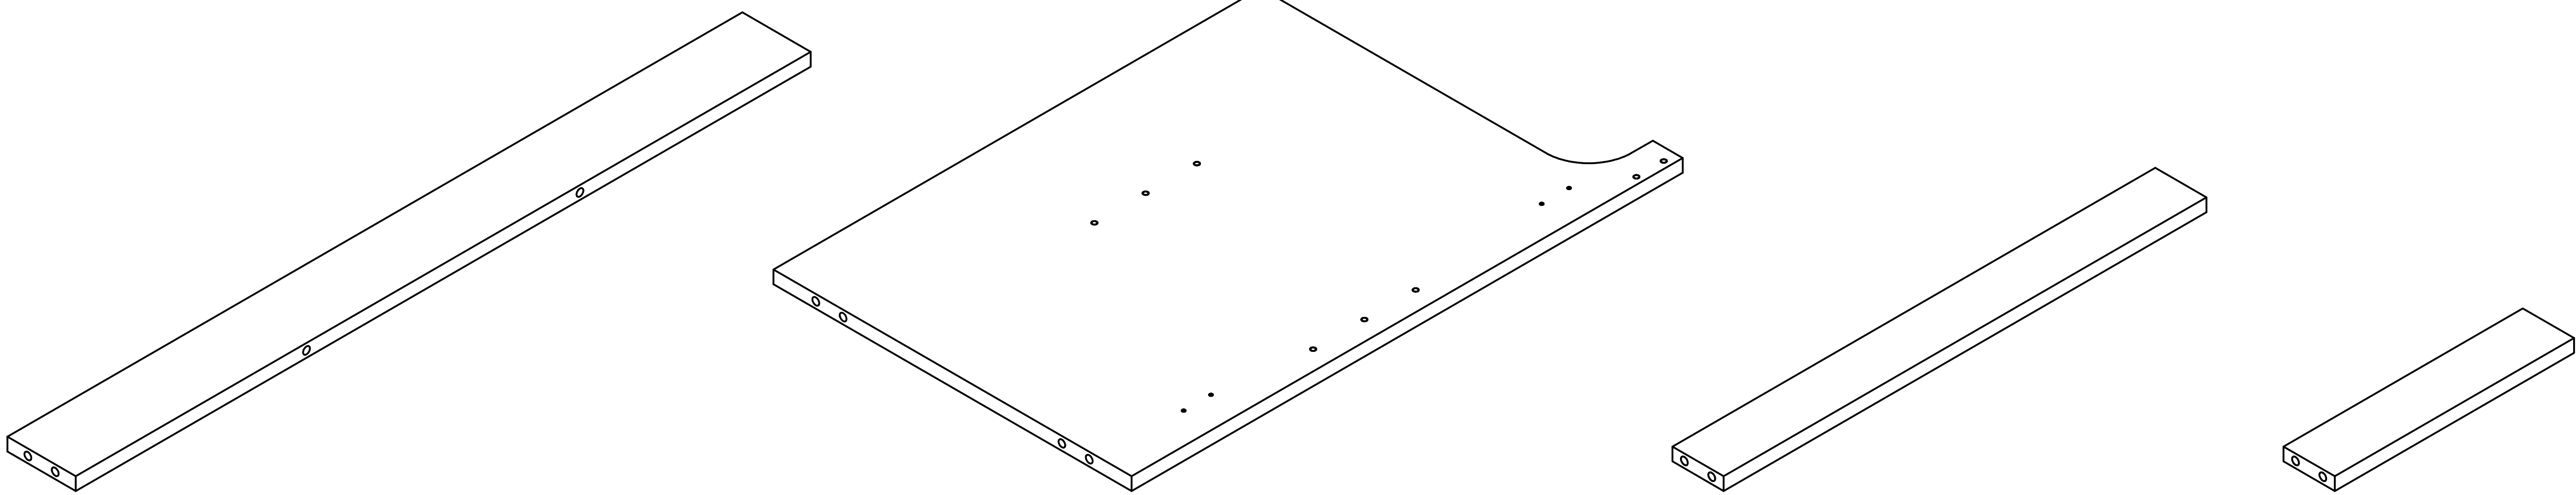


④ x1

⑤ x1

⑥ x1

 ⑦ x1

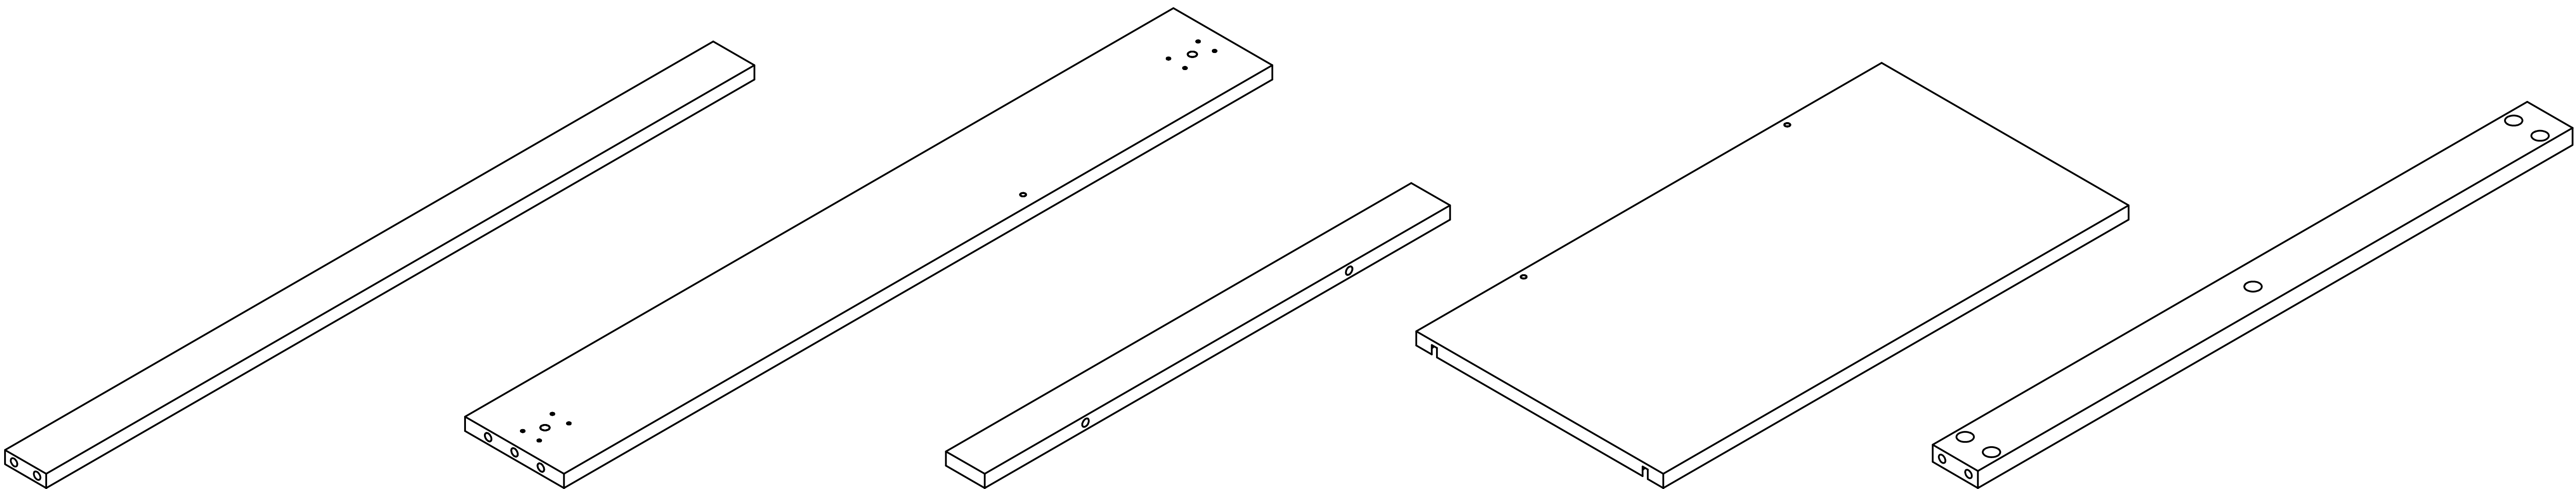


⑧ x1

⑨ x1

⑩ x1

⑪ x1

 ⑫ x2

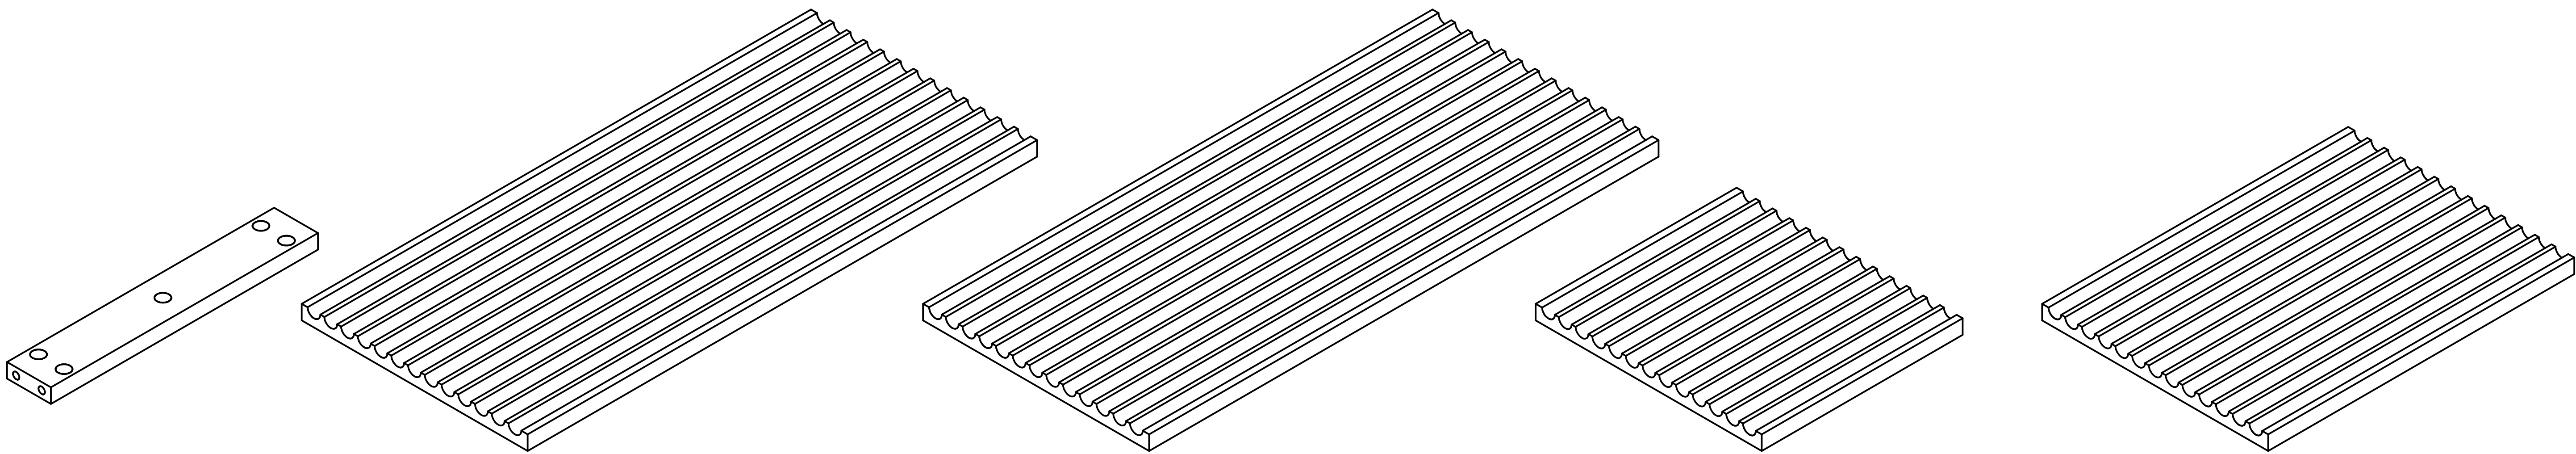


⑬ x2

⑭ x1

⑮ x1

⑯ x1

 ⑰ x1

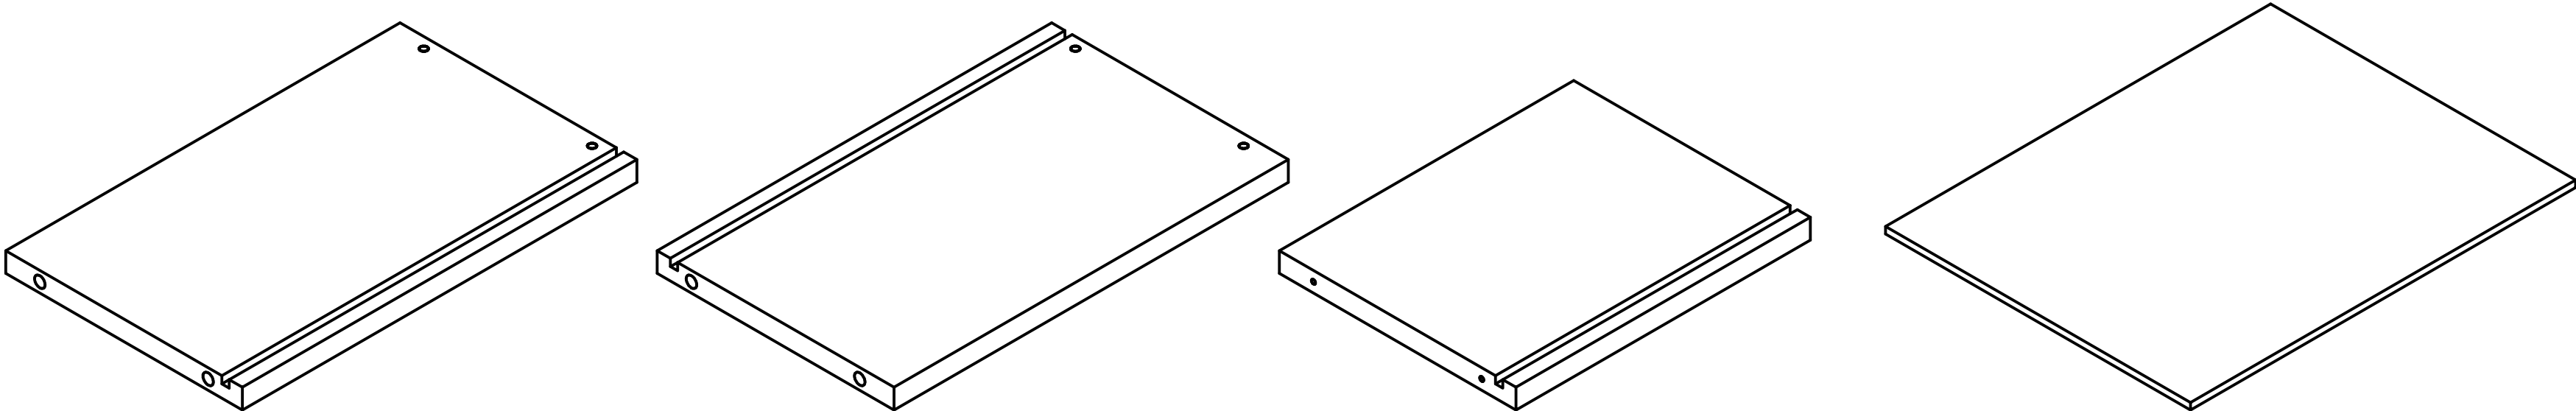


⑱ x2

⑲ x2

⑳ x2

 ㉑ x2













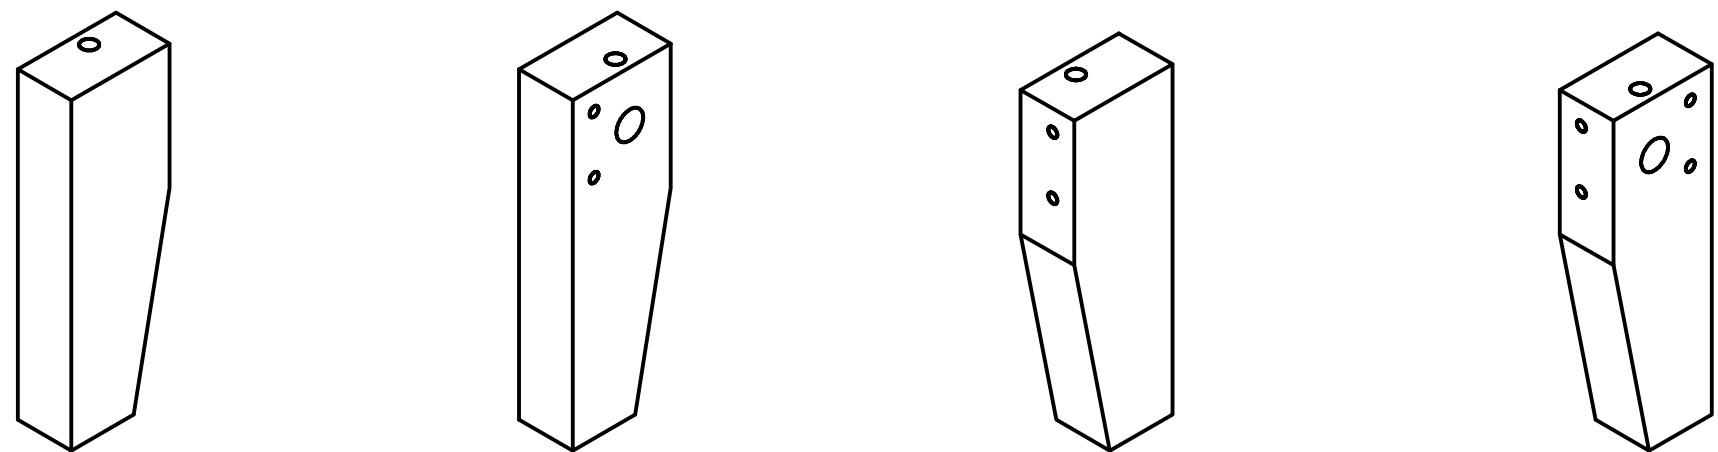


L1 x1

L2 x1



R1 x1

             R2 x1

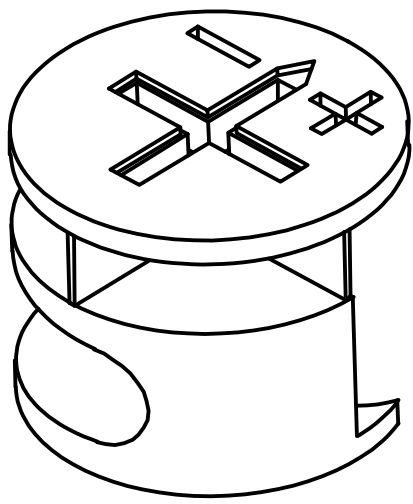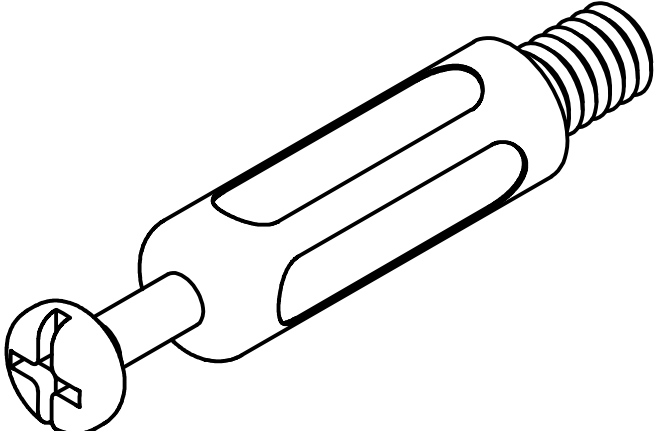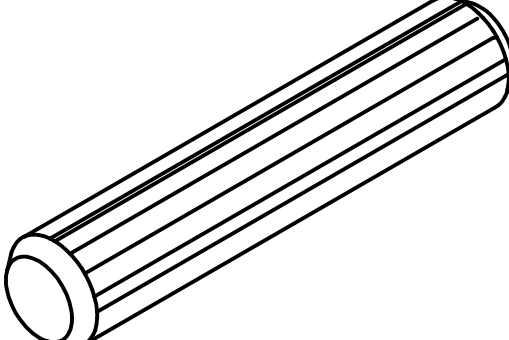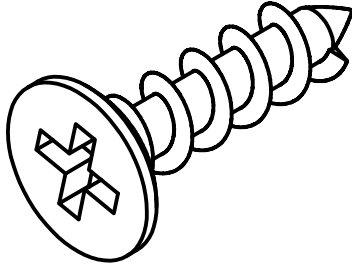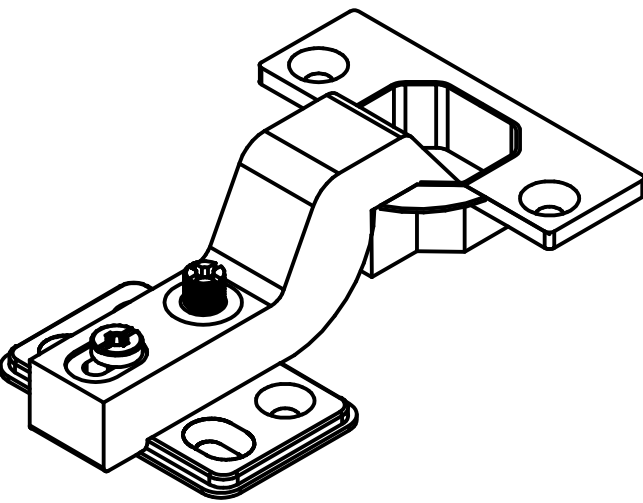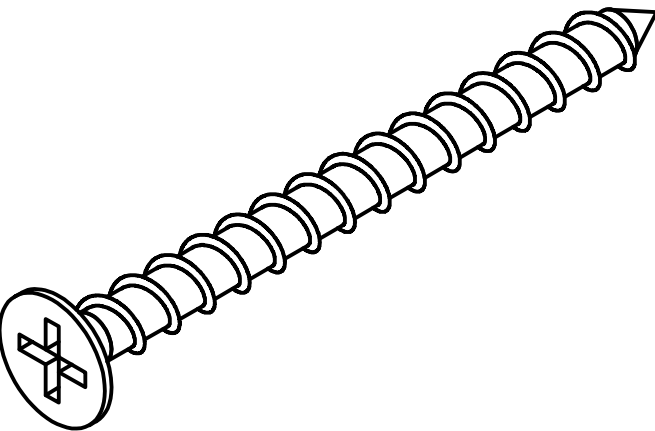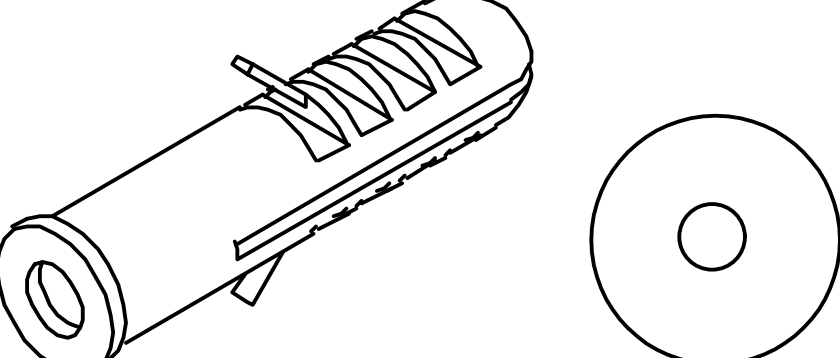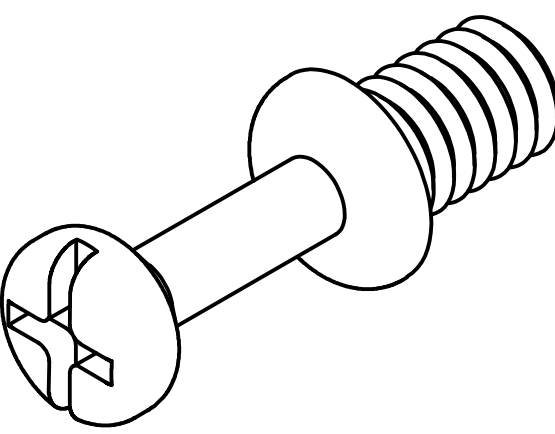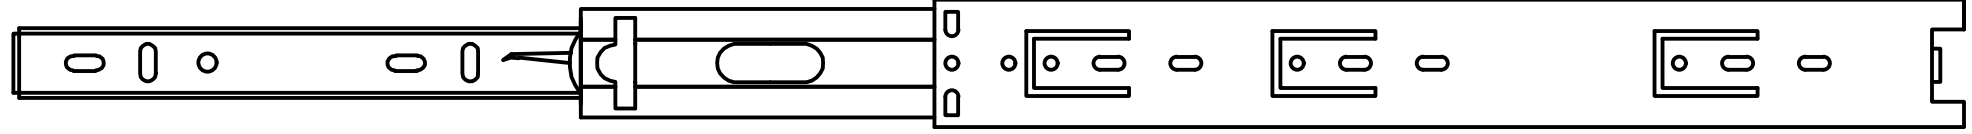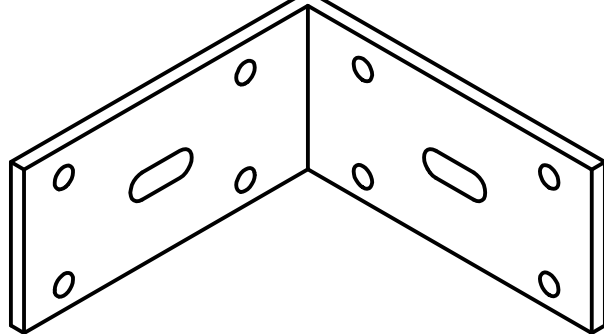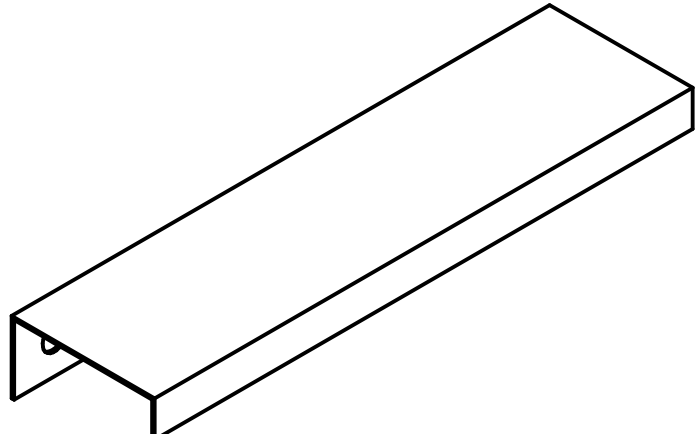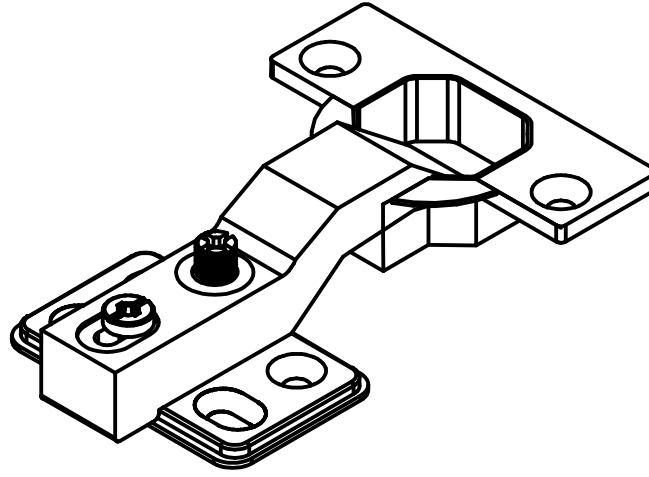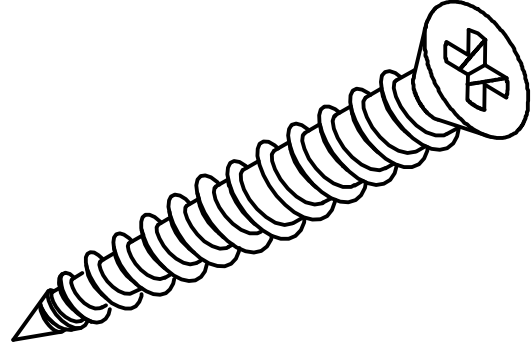A x 63  Ø 15 x 12 mm	B x 63  Ø 6 x 35 mm	C x 10  Ø 8 x 30 mm	D x 64  Ø 4 x 14 mm
E x 2 	F x 2  Ø 4 x 40 mm	G x 2  G-1 G-2	H x 4 
L x 4  L1 L2	J x 2 	K x 4 	
M x 2 	N x 8  Ø 4 x 35 mm		


Cam Lock Fastening System

  This Cam Lock Fastening System will be used throughout the assembly process

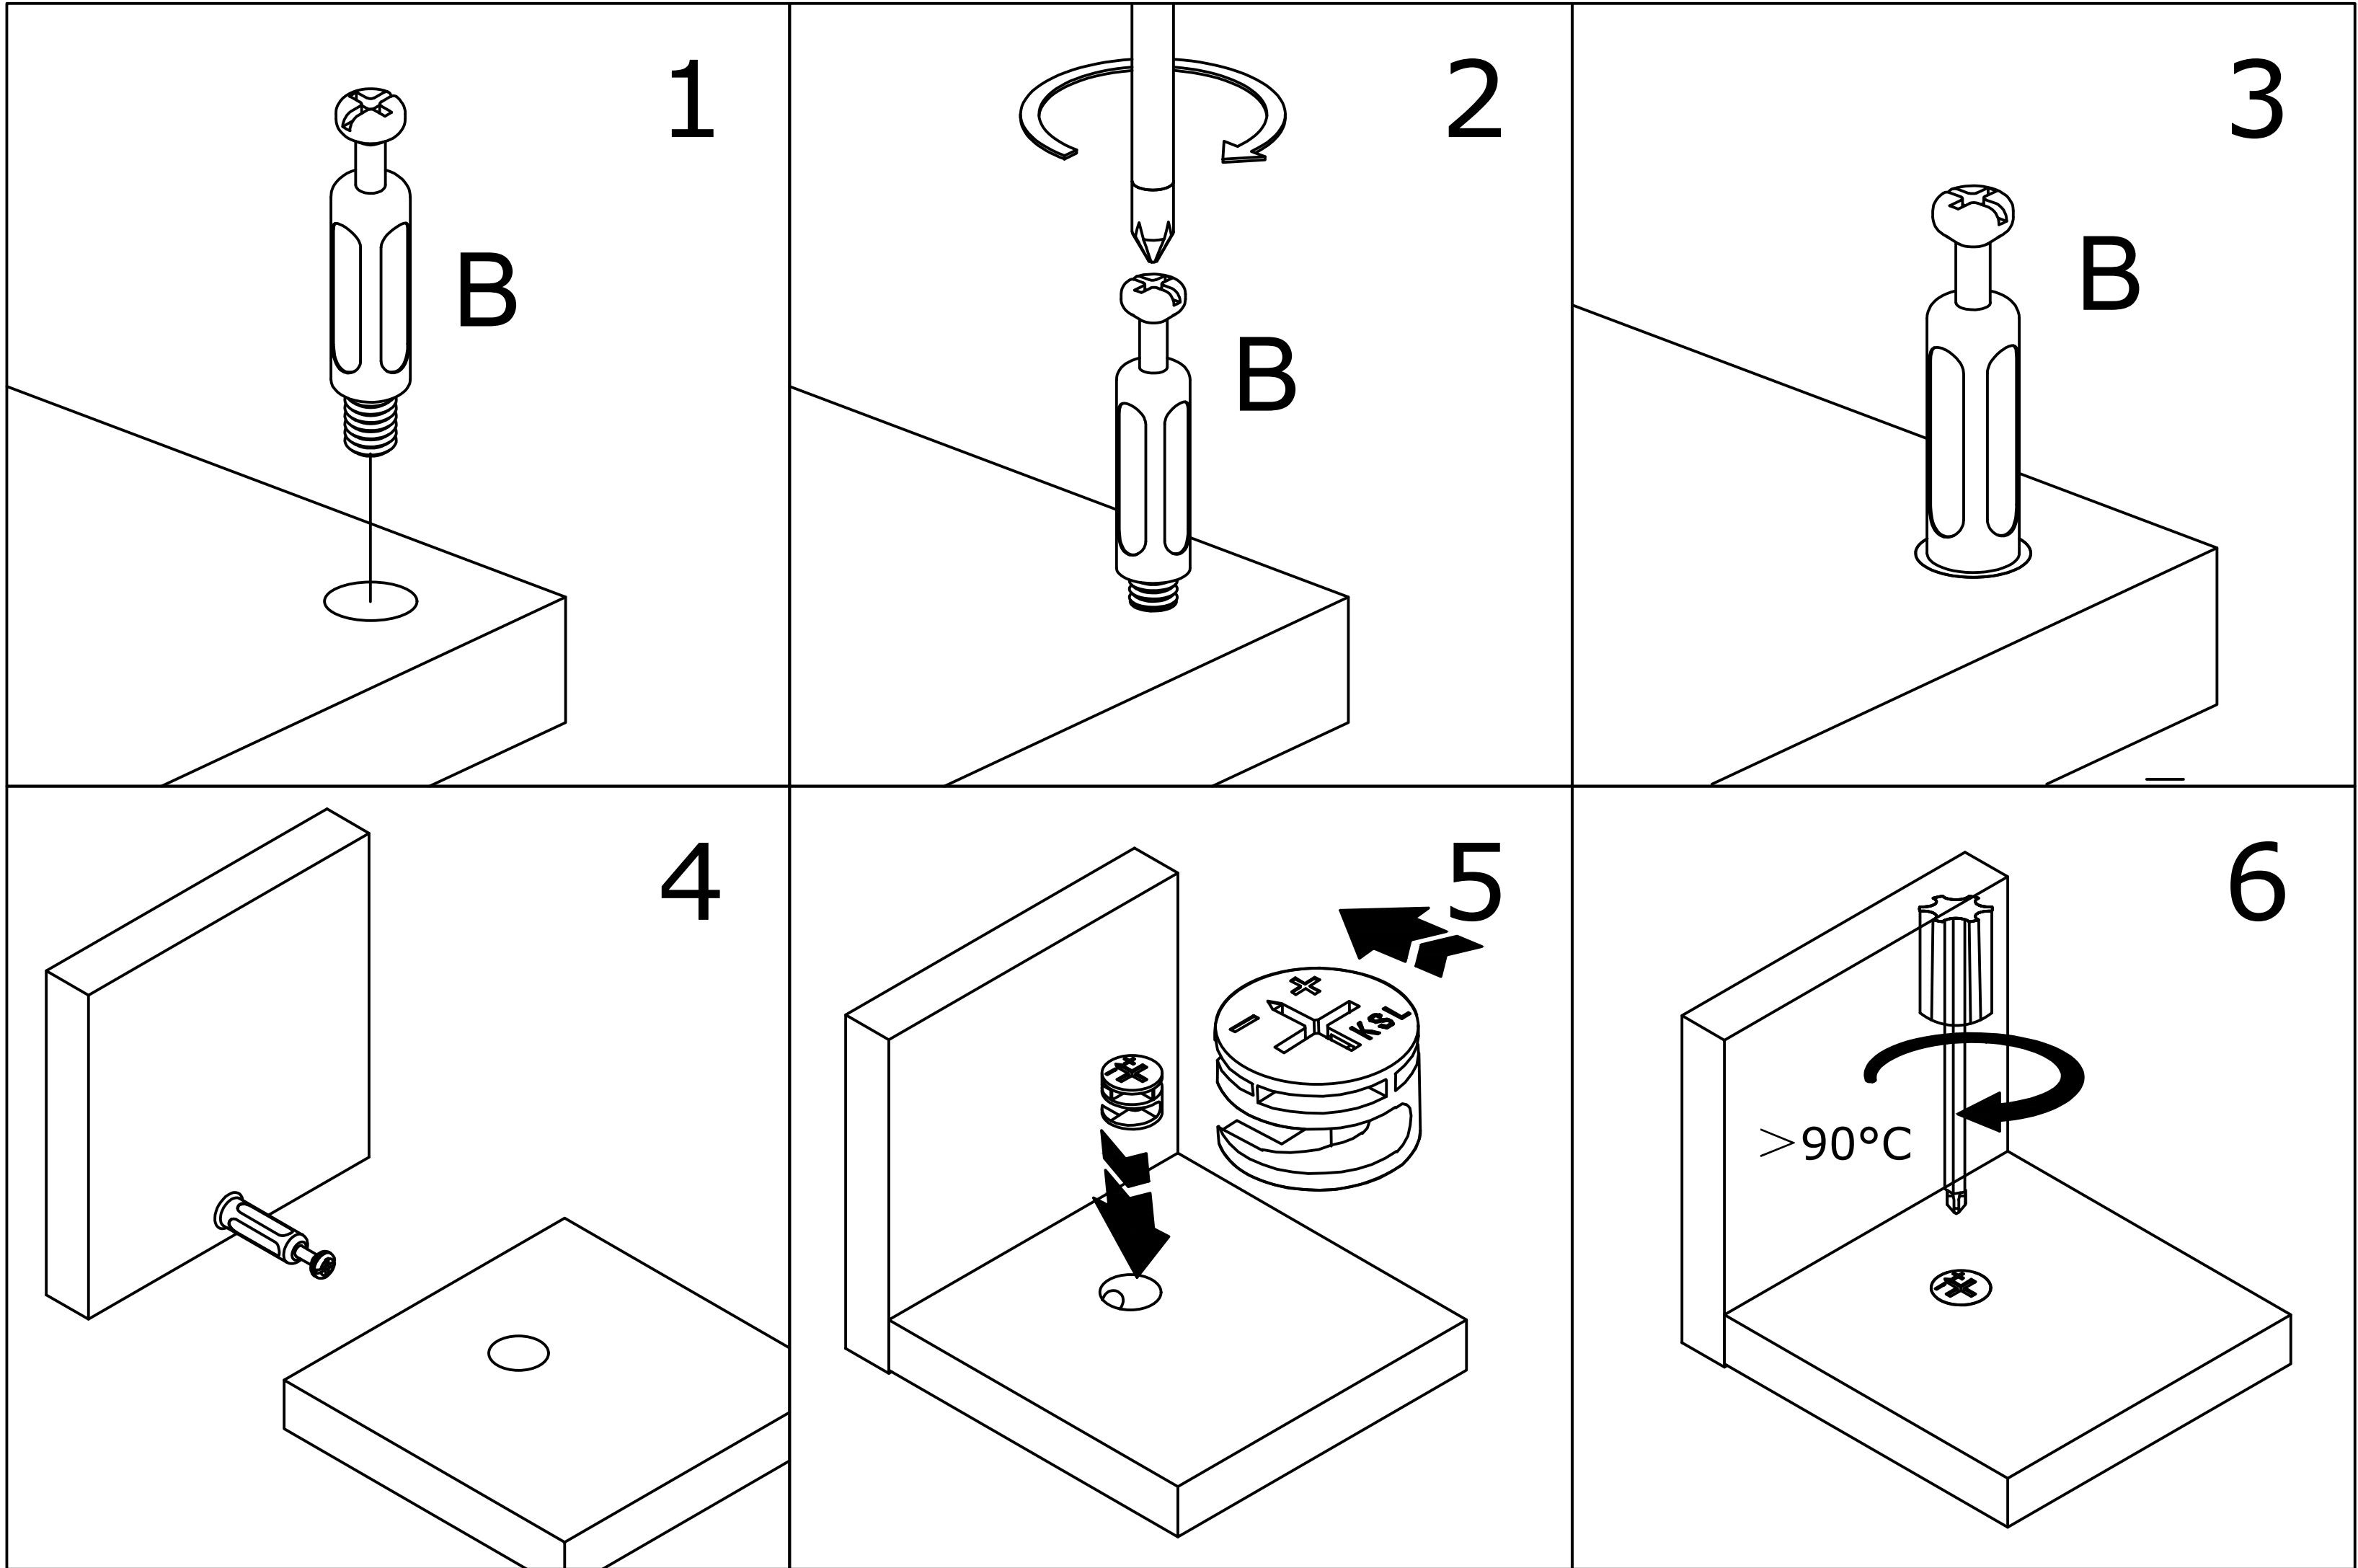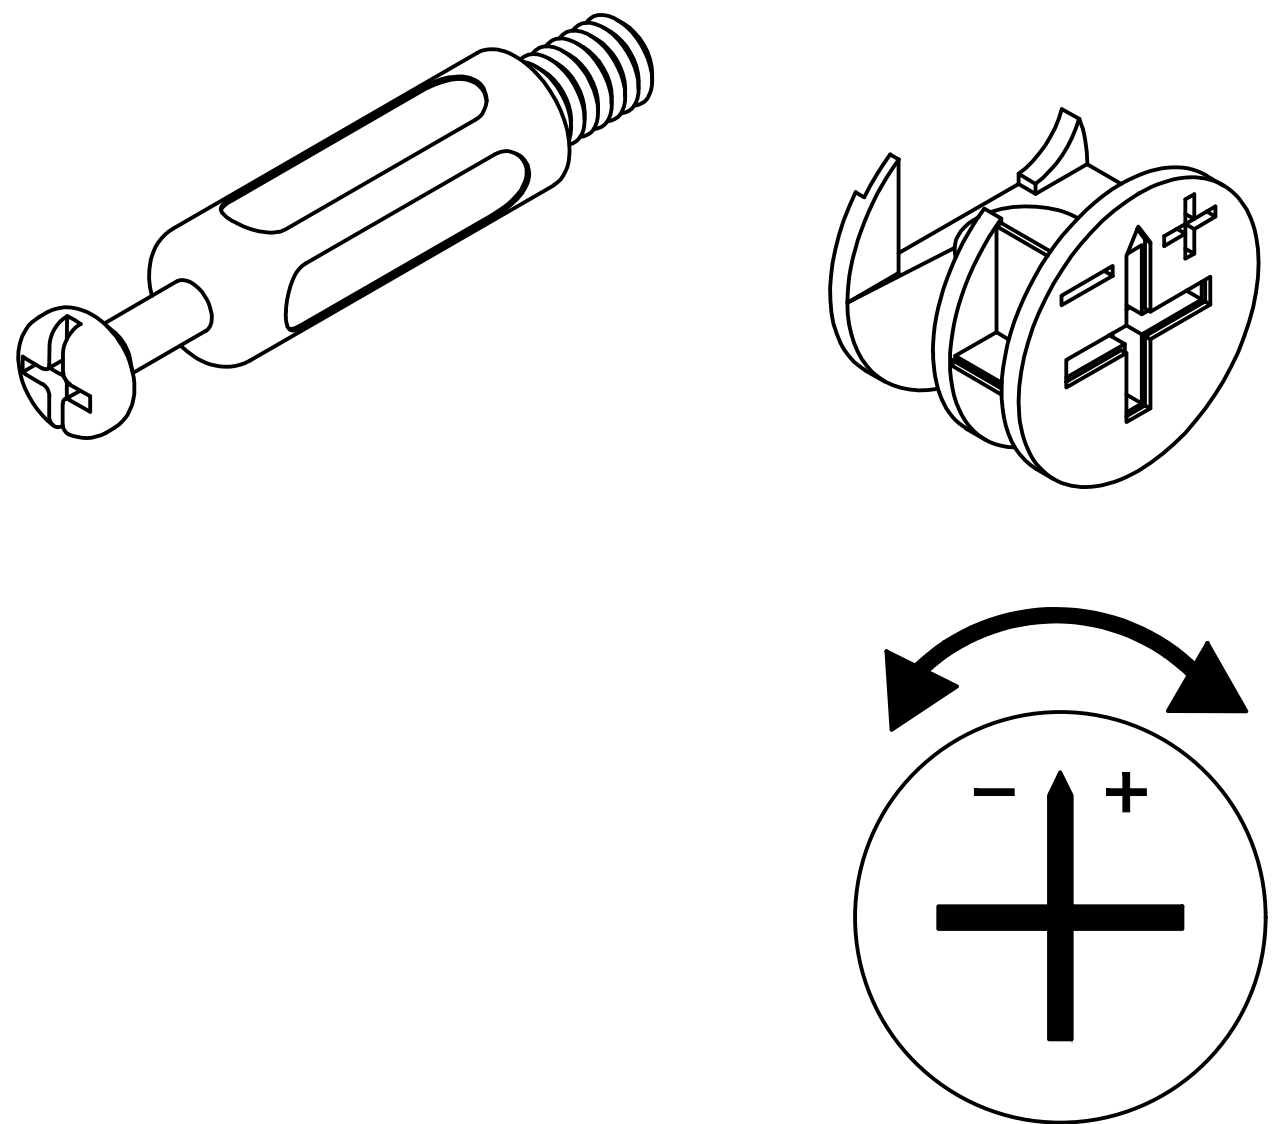

Point the opening towards the edge of the board.

 
1

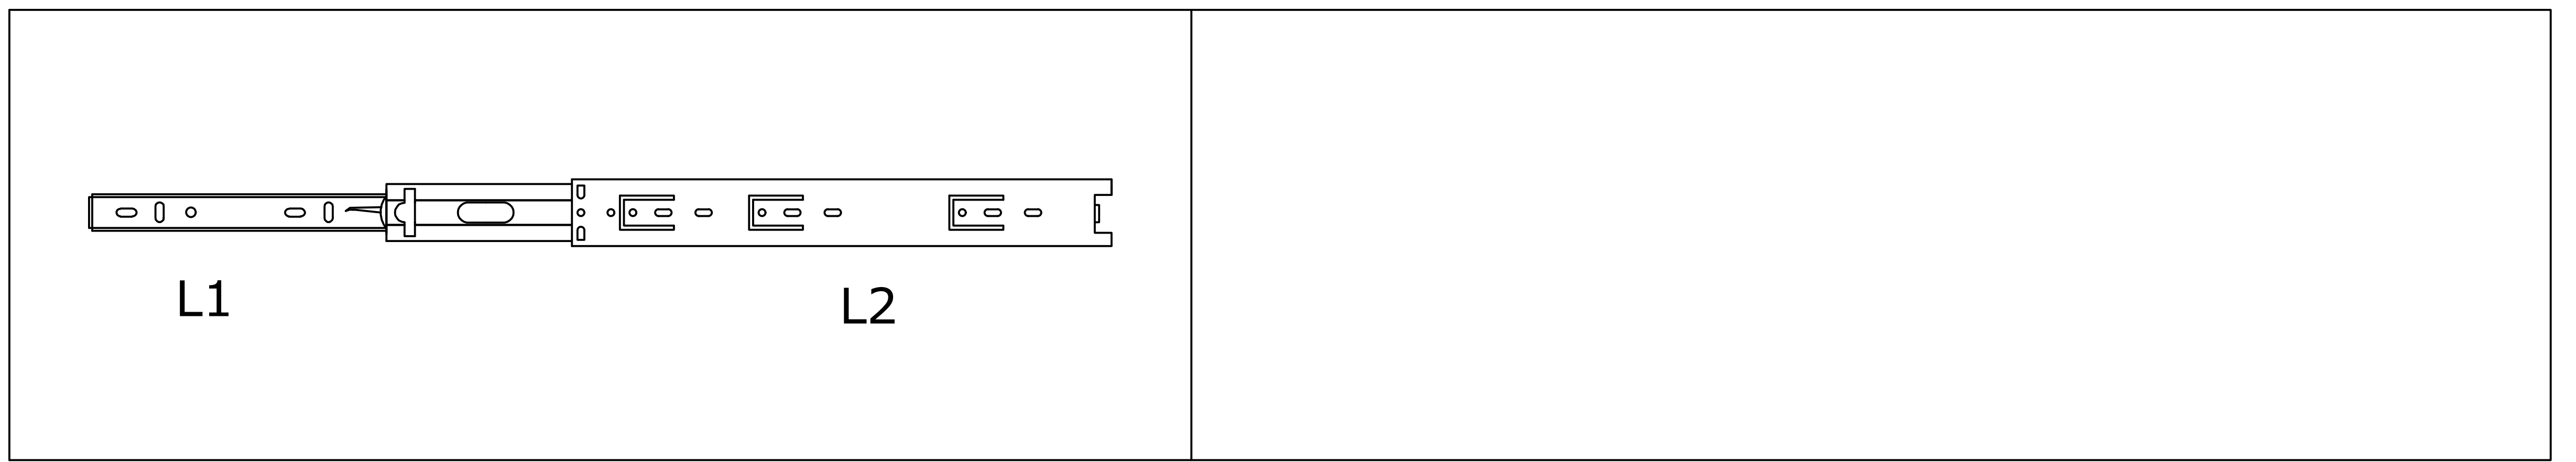


TIPS

How To Separate A Ball Bearing Slider


 
1) Pull toward arrow to open the slider until it's stops and then flip it over

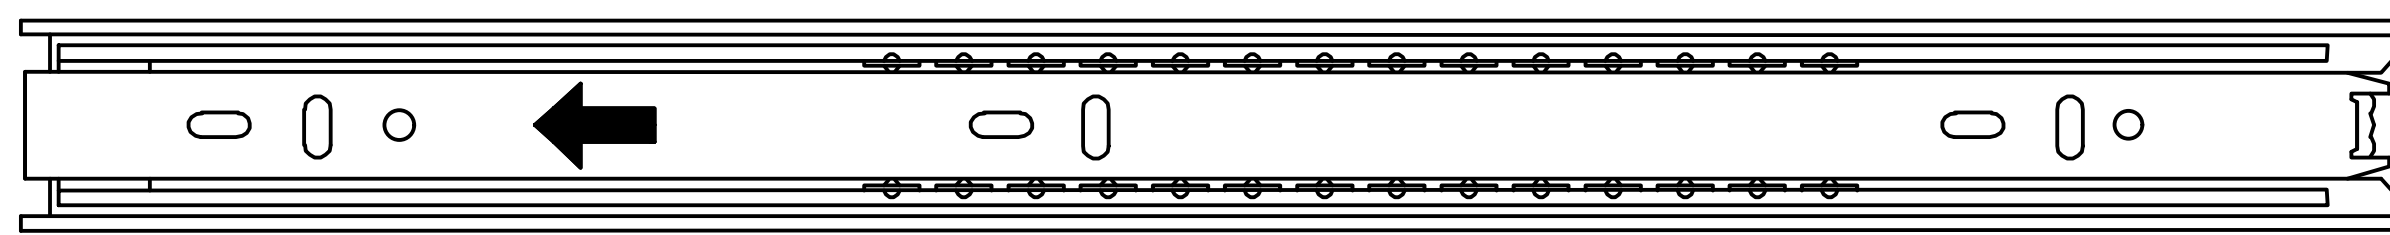

 
2) Push plastic lever down and pull apart the slider at the same time

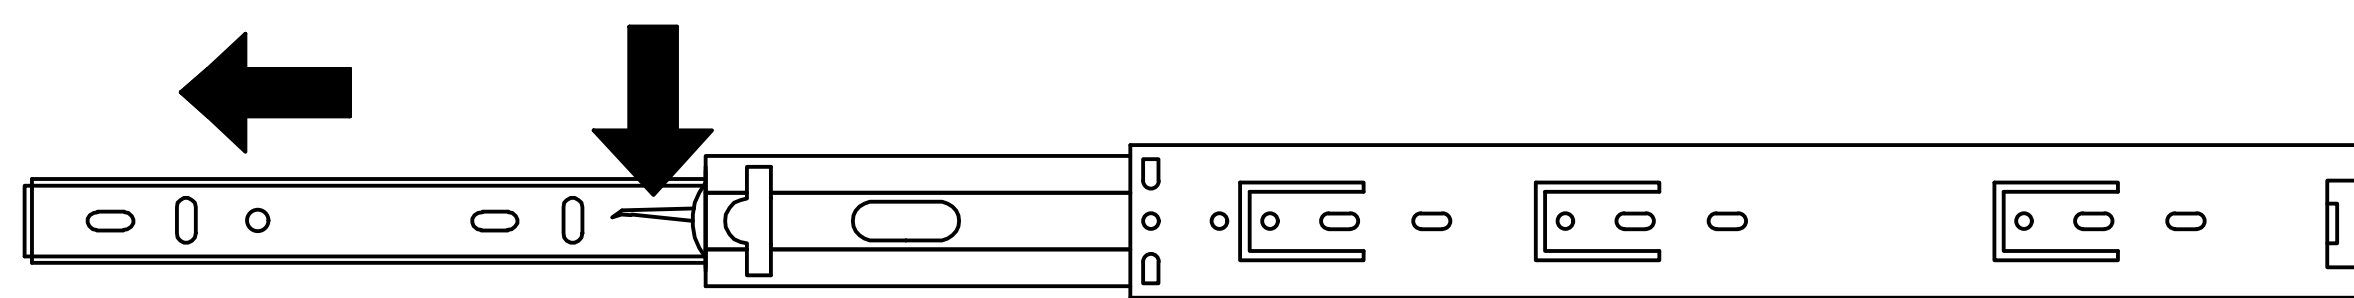

  
3) After disassembly

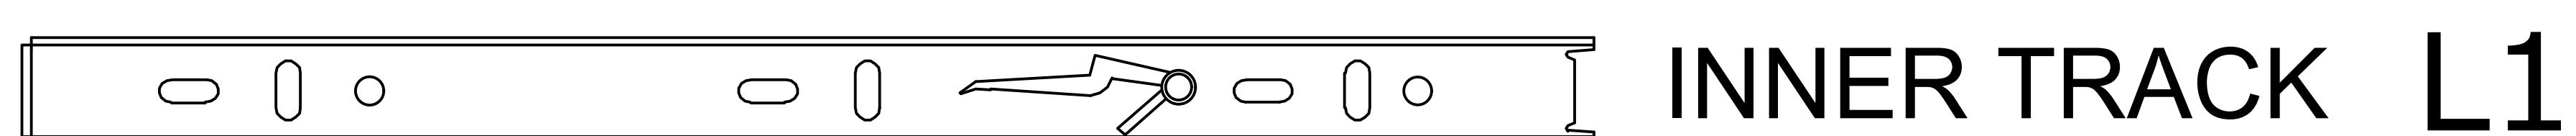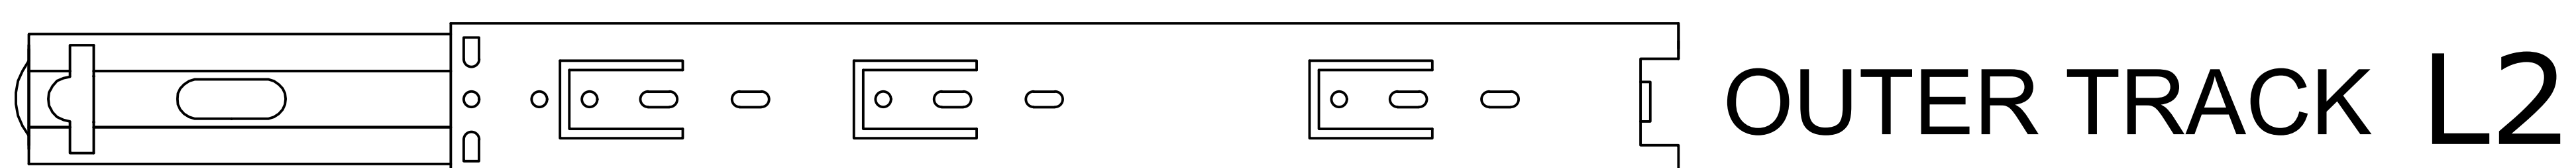



How to Assemble the Slider

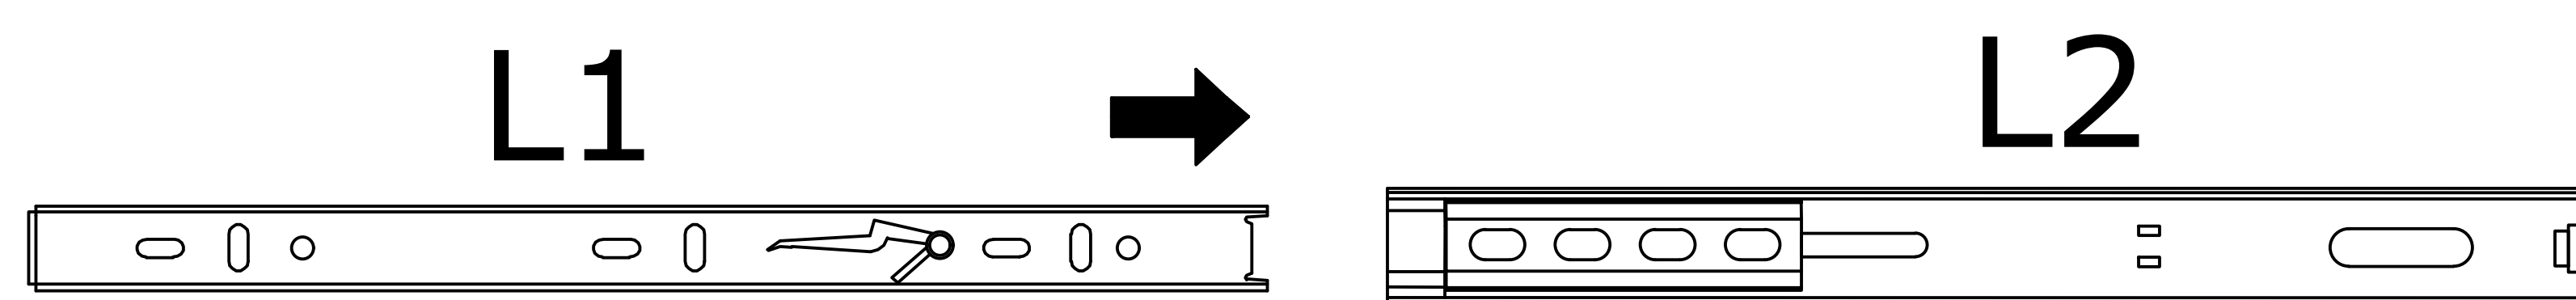 

 
Align the outer track(L2) with the center of the inner track(L1) and push in.

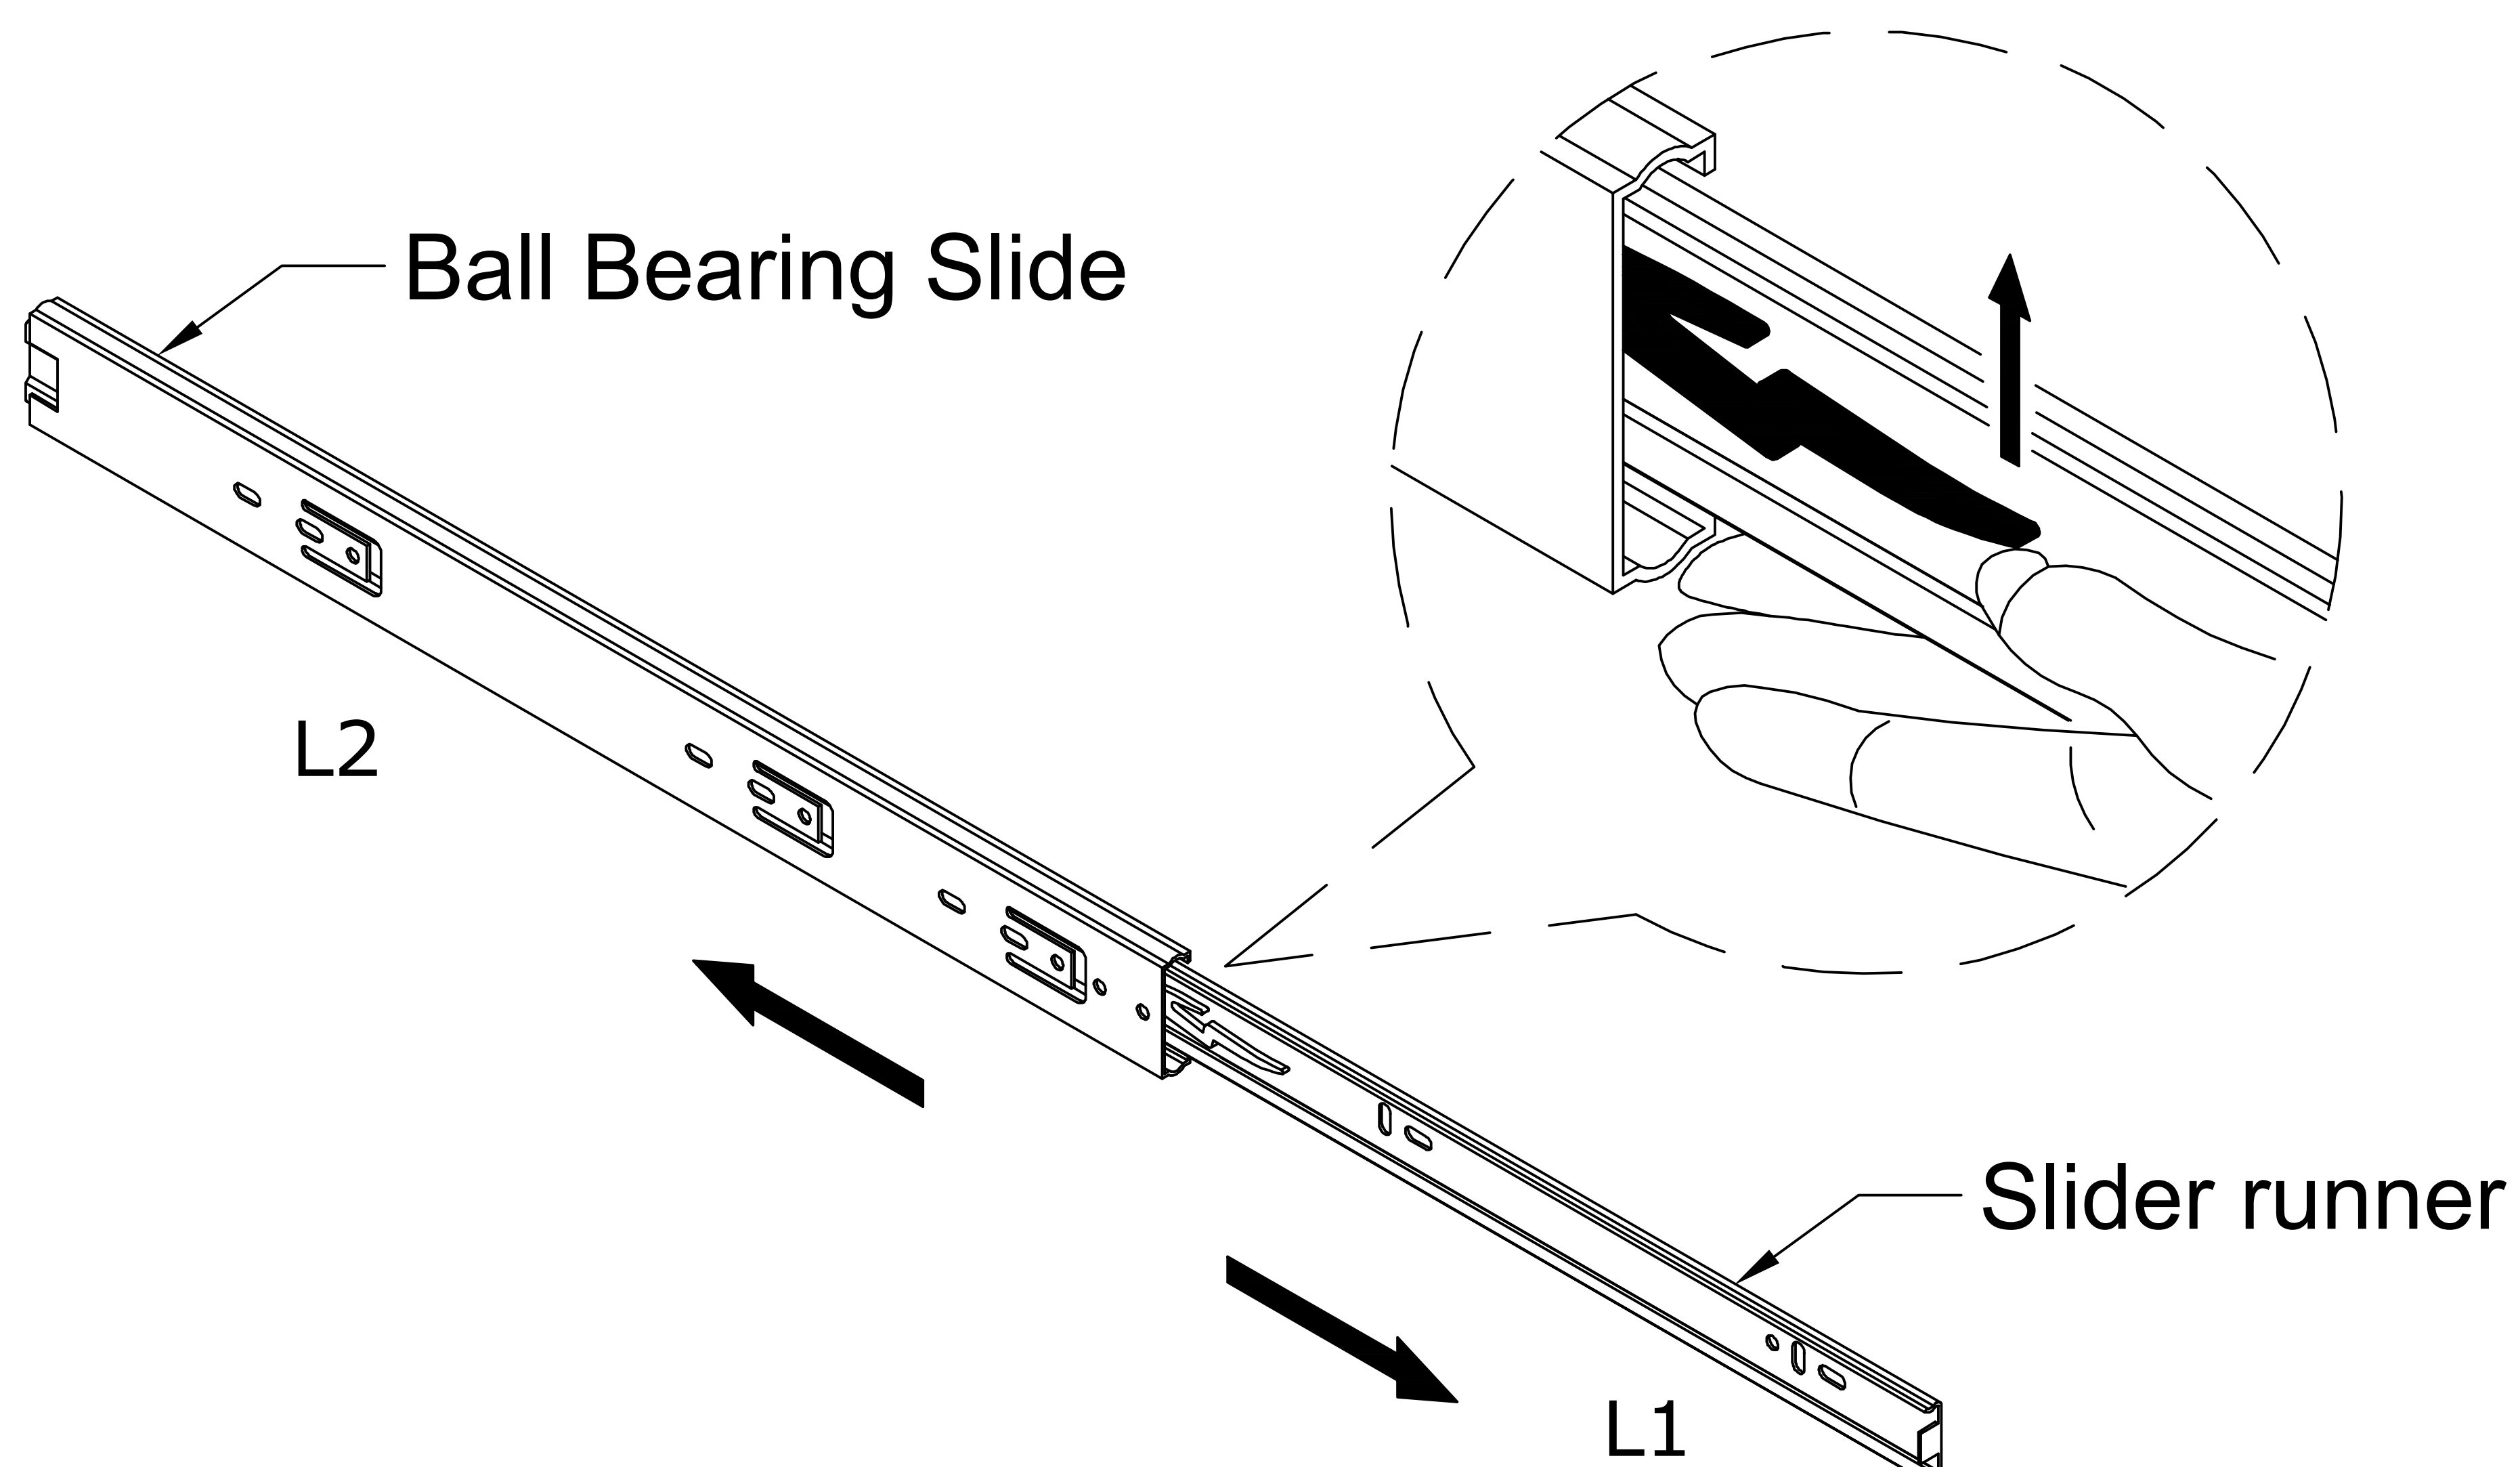


2

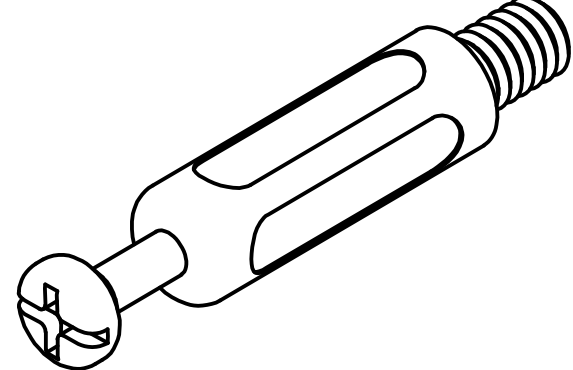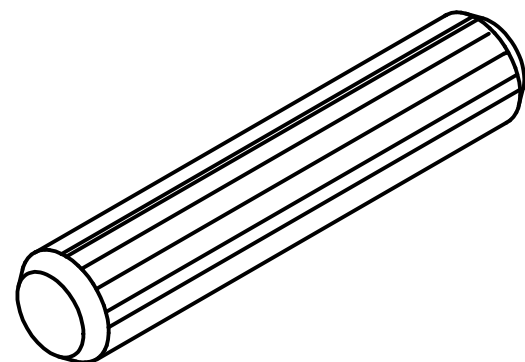  B x 47  Ø 6 x 35 mm	C x 4  Ø 8 x 30 mm	
--	---	--




 
- Refer to the illustration.
Screw in Screw (B) into the board and tighten it carefully.
Insert Wooden Rod (C) into the board.

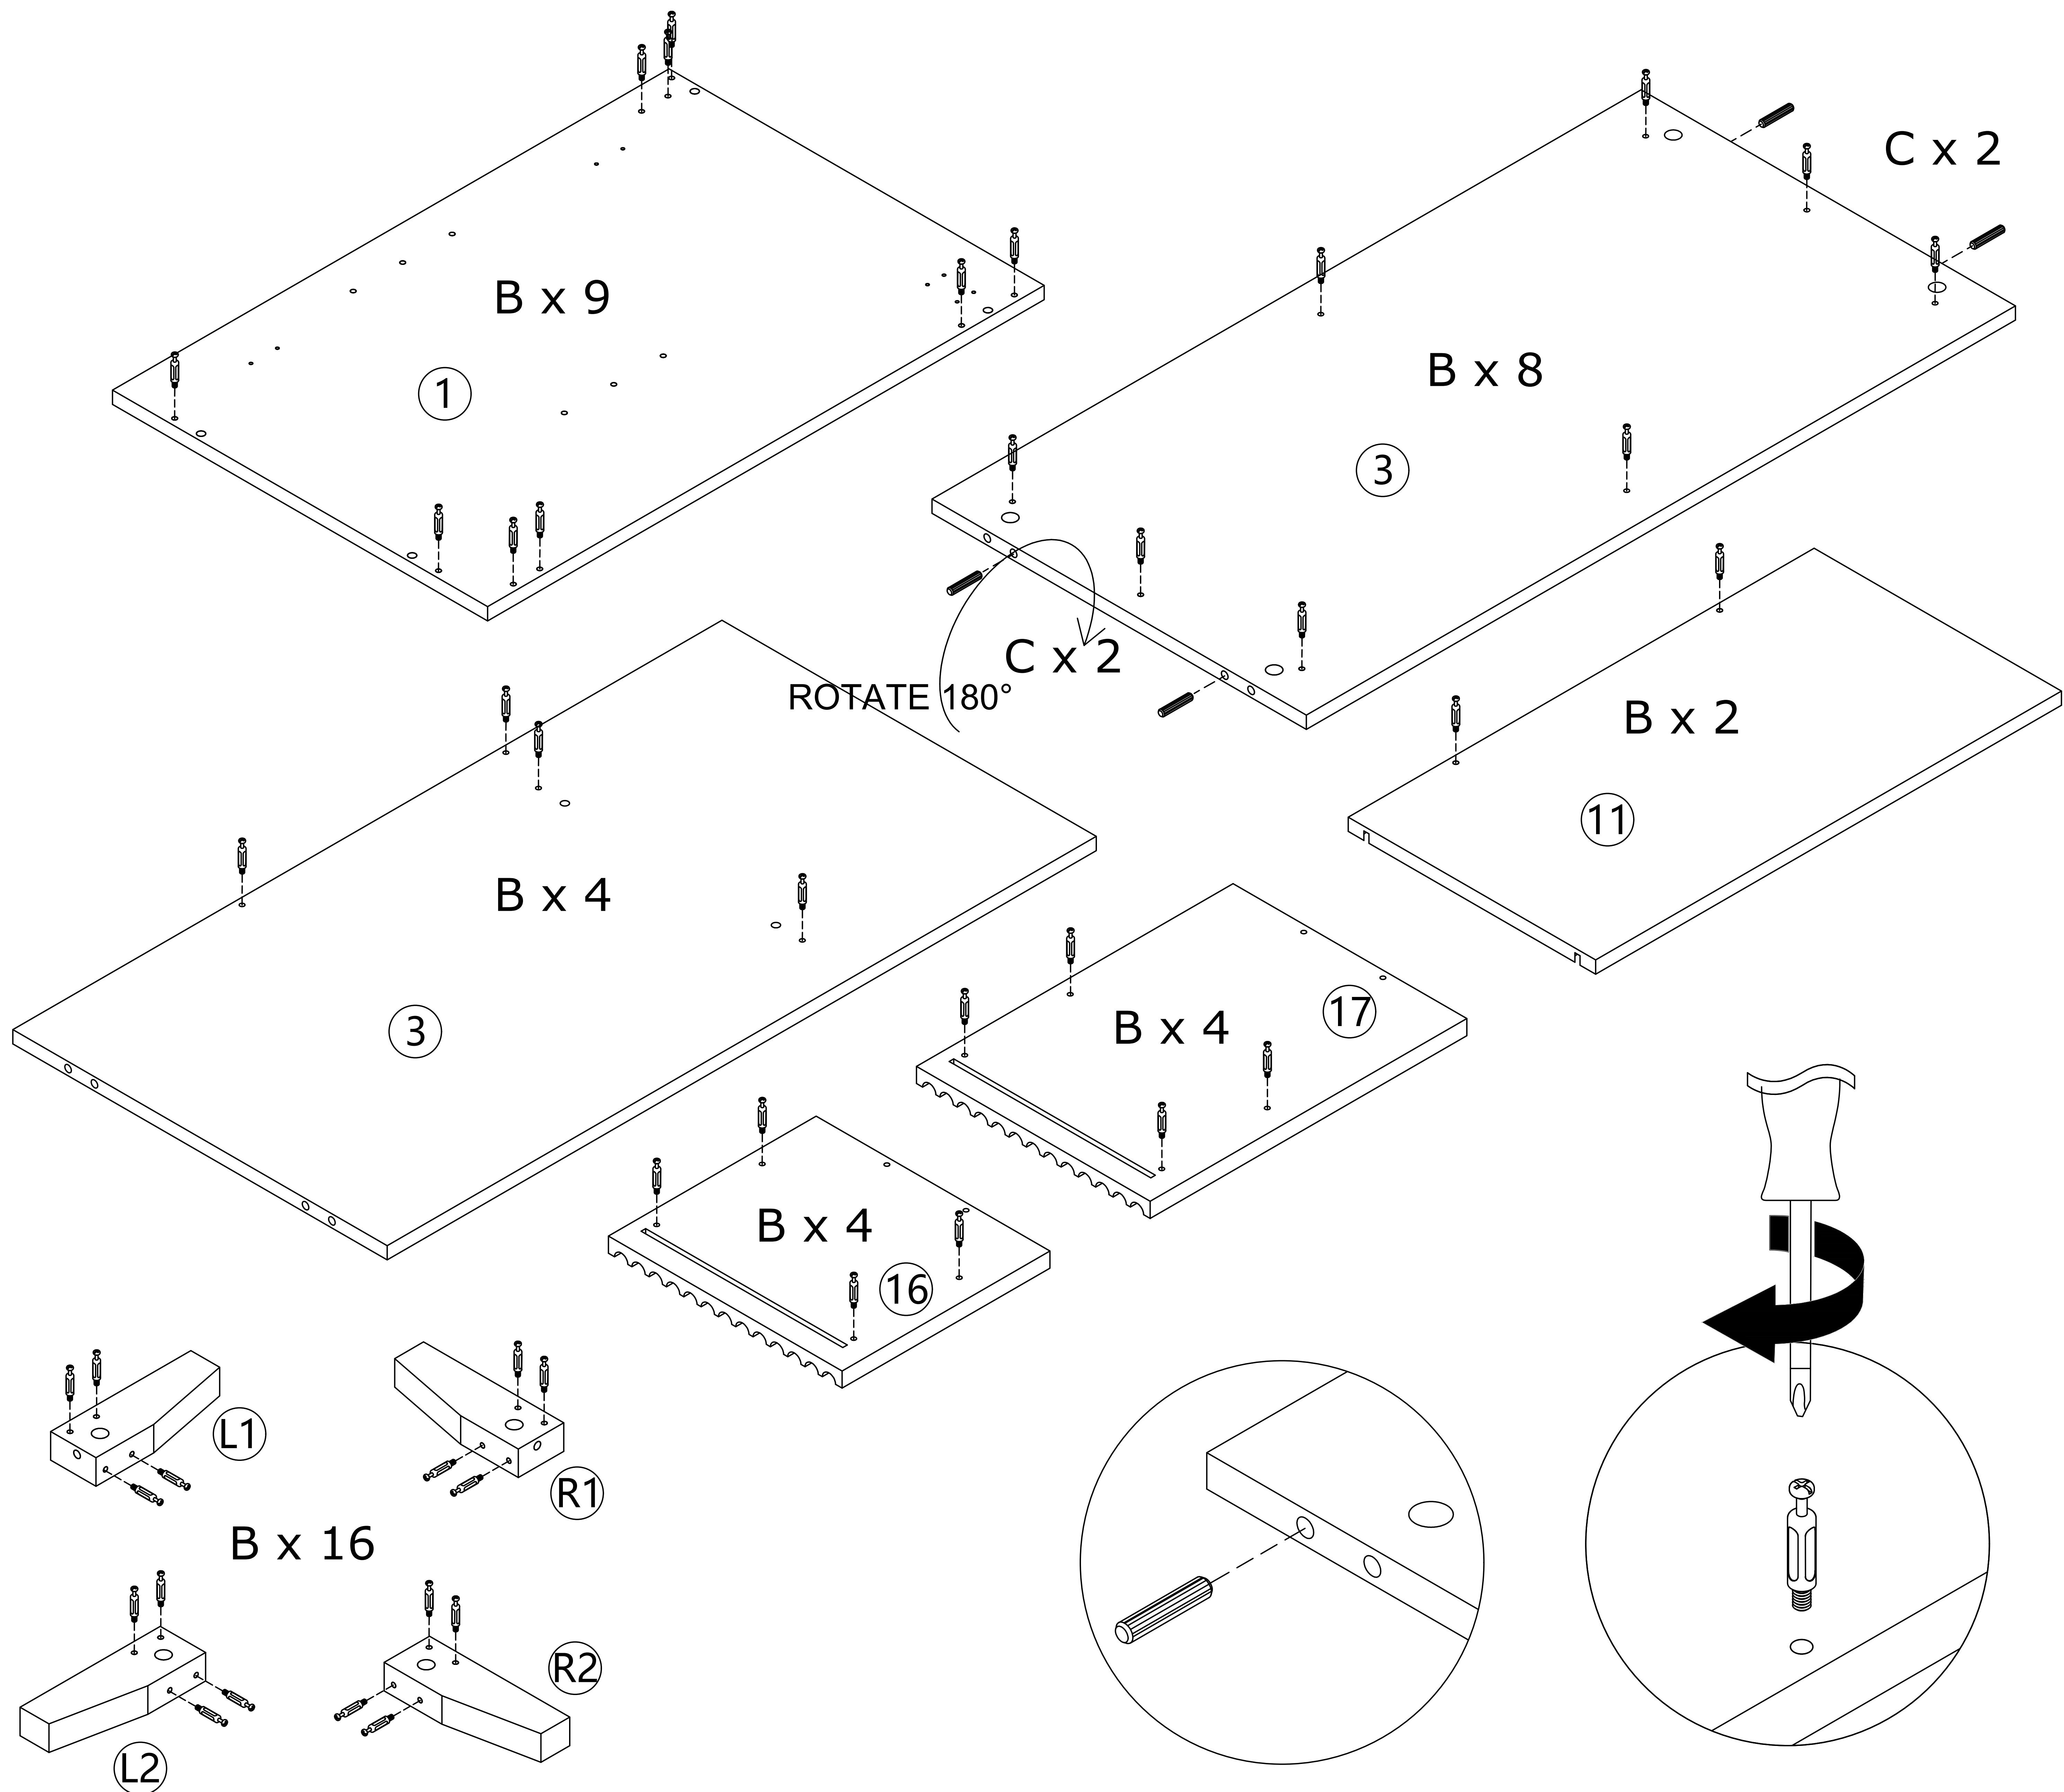


Reference case images

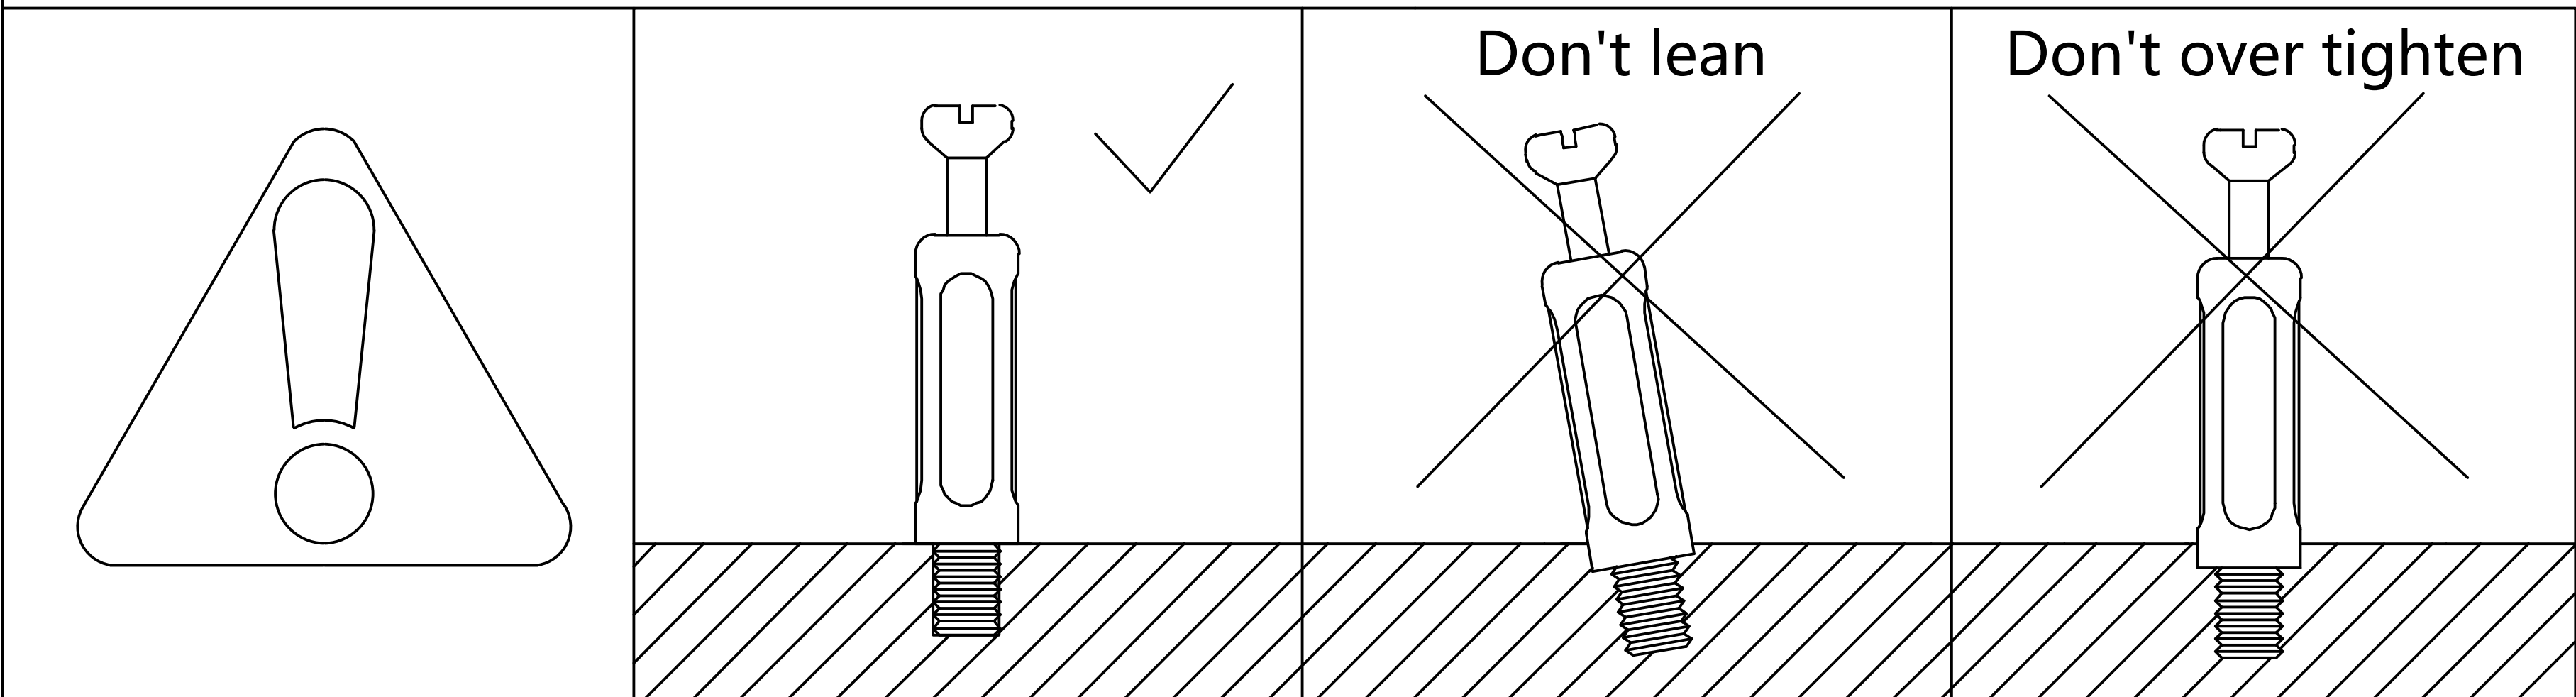 


3

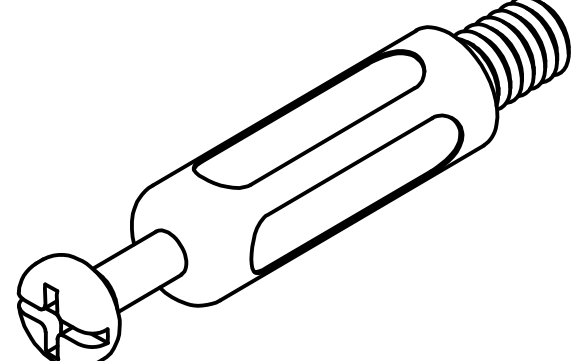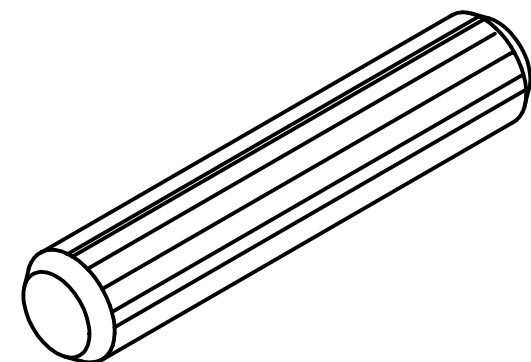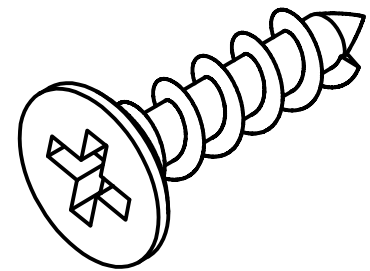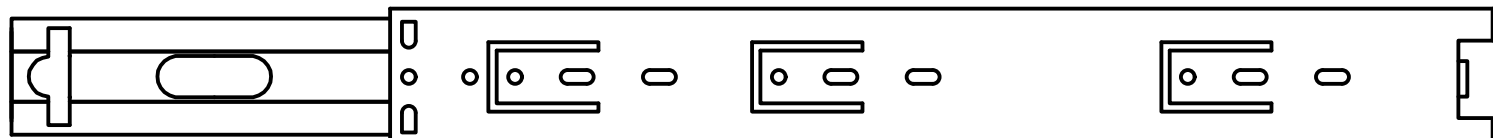    B x 16	C x 6	D x 8	L2 x 4
			
Ø 6 x 35 mm	Ø 8 x 30 mm	Ø 4 x 14 mm	

 
- Refer to the illustration.
Screw Screw (B) into the board and tighten it carefully.
Insert Wooden Rod (C) into the board.
Secure Slide Rail (L2) with Screw (D).

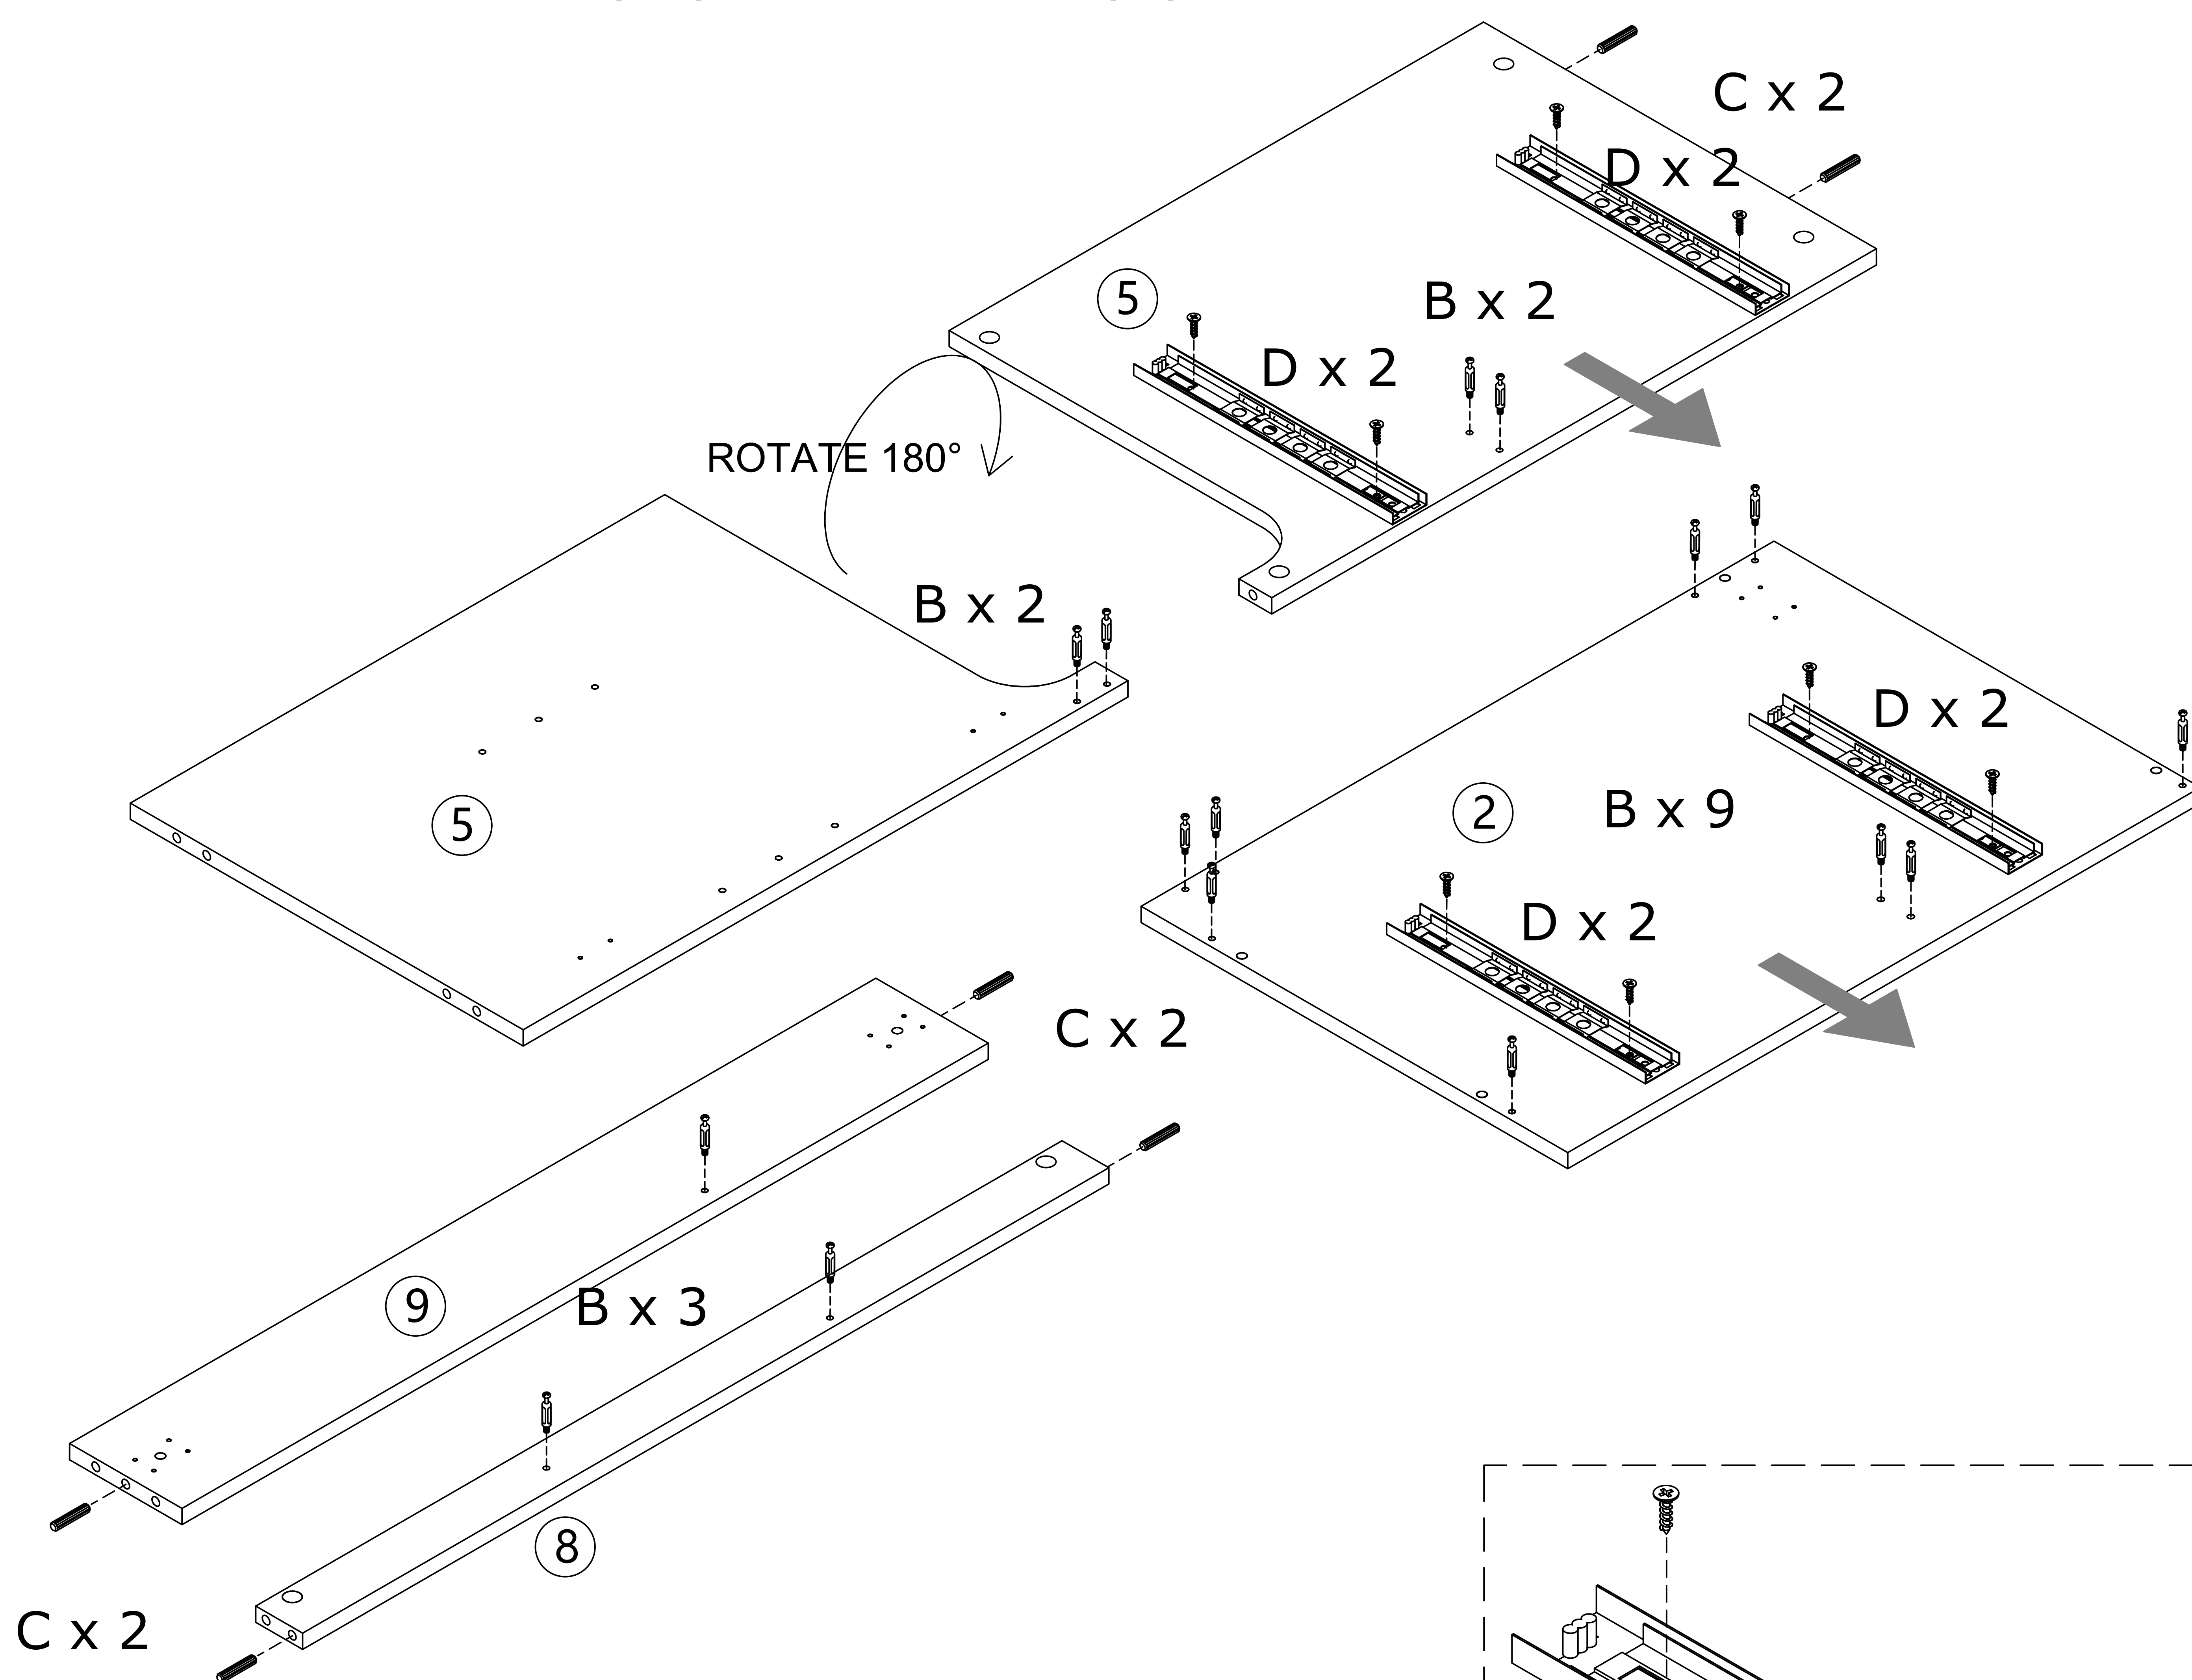

 
First, fix the first hole position with a screw, then move the track to fix the second hole position.

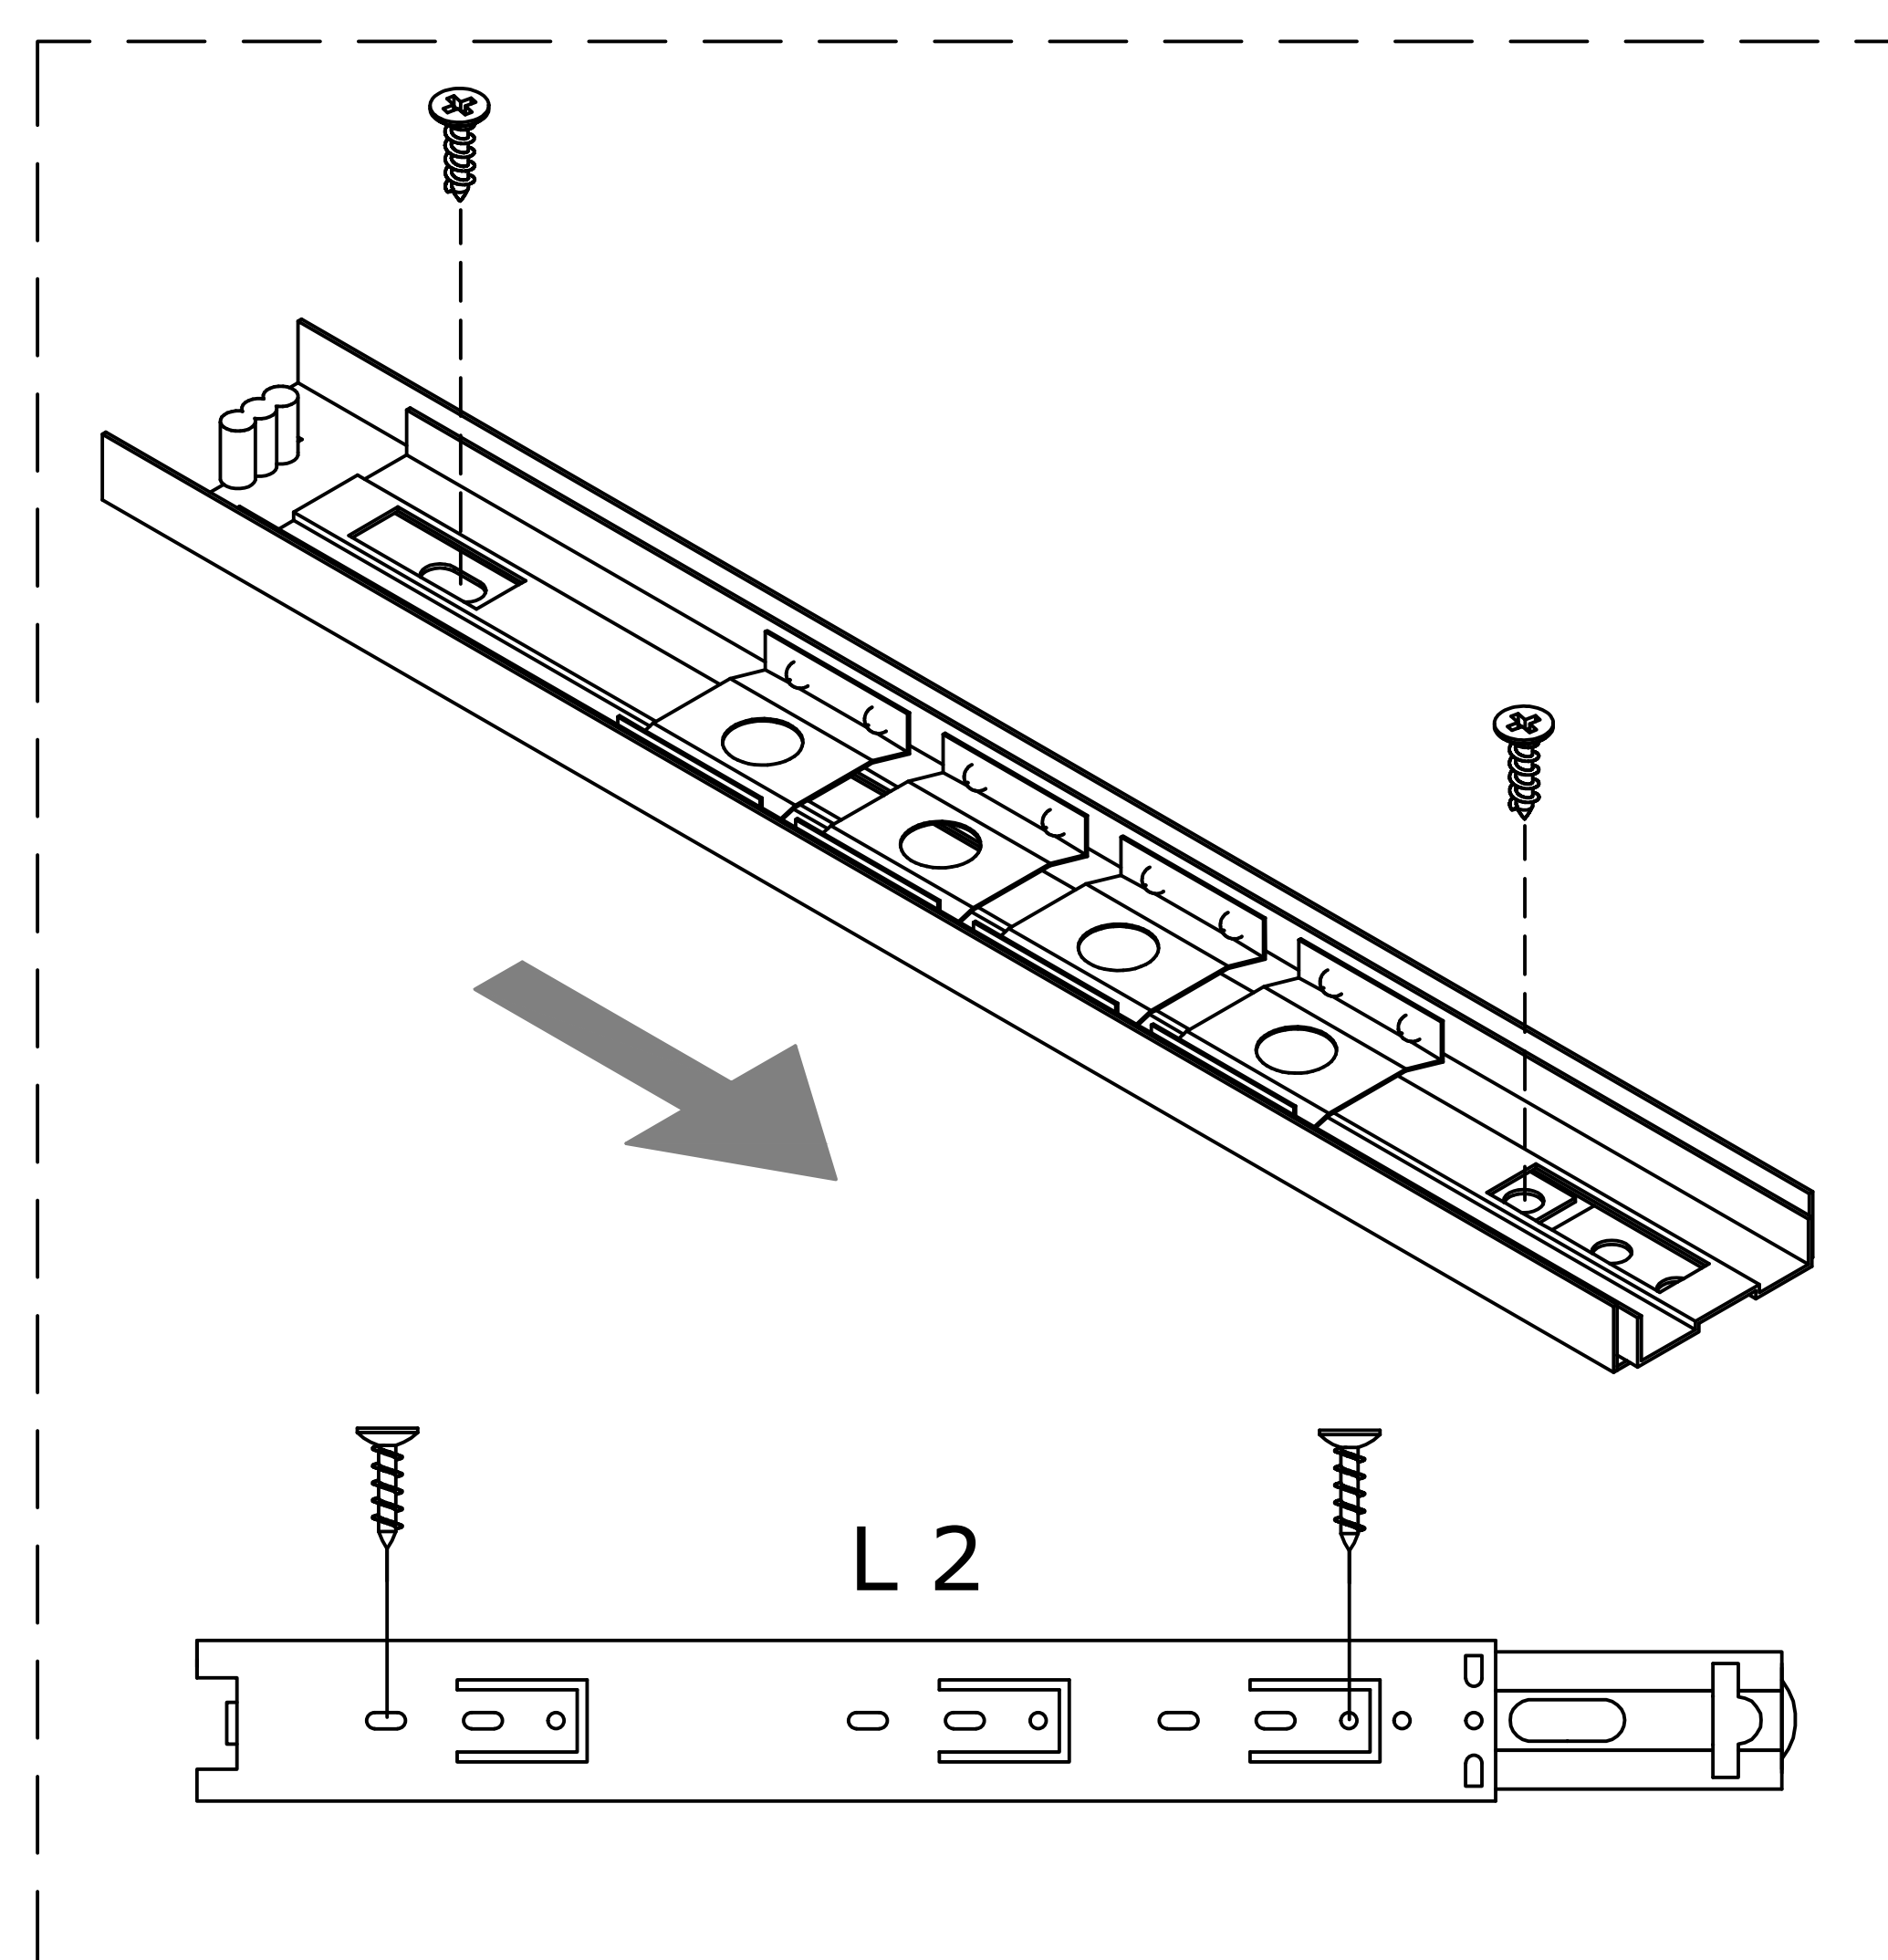


4

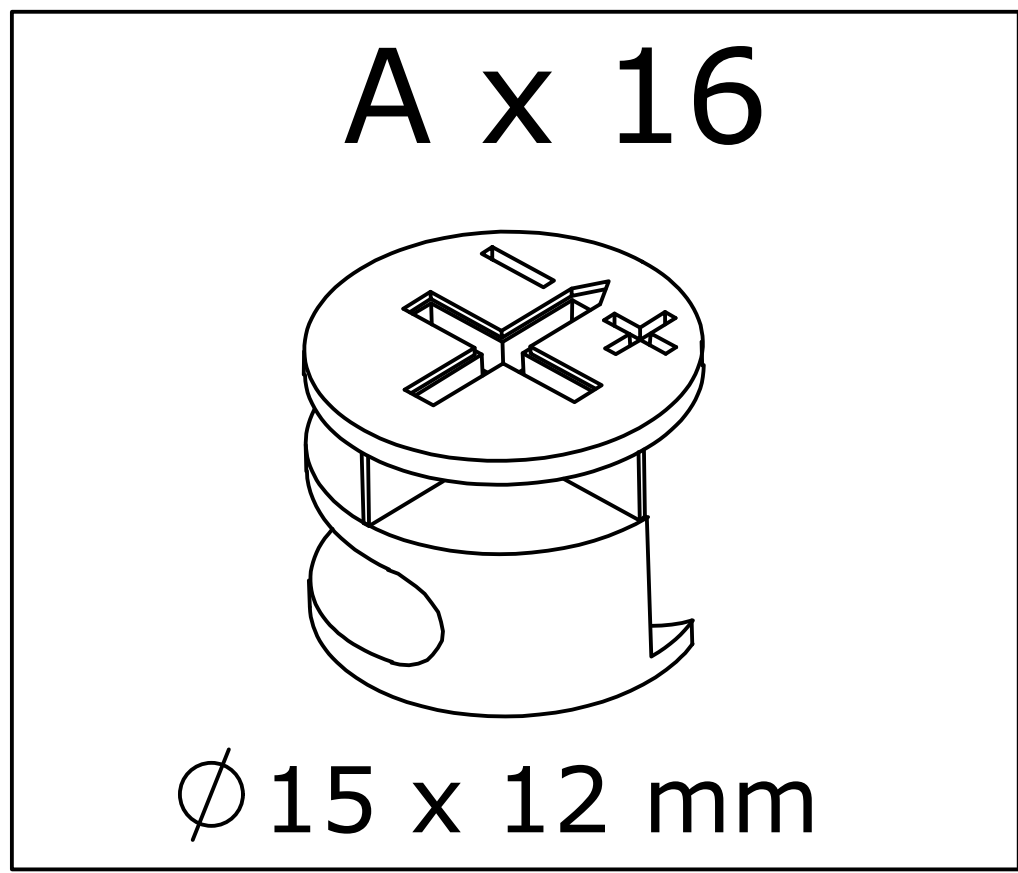 

 
- Refer to the illustration.
Connect the boards and fasten the Latch (A) tightly.

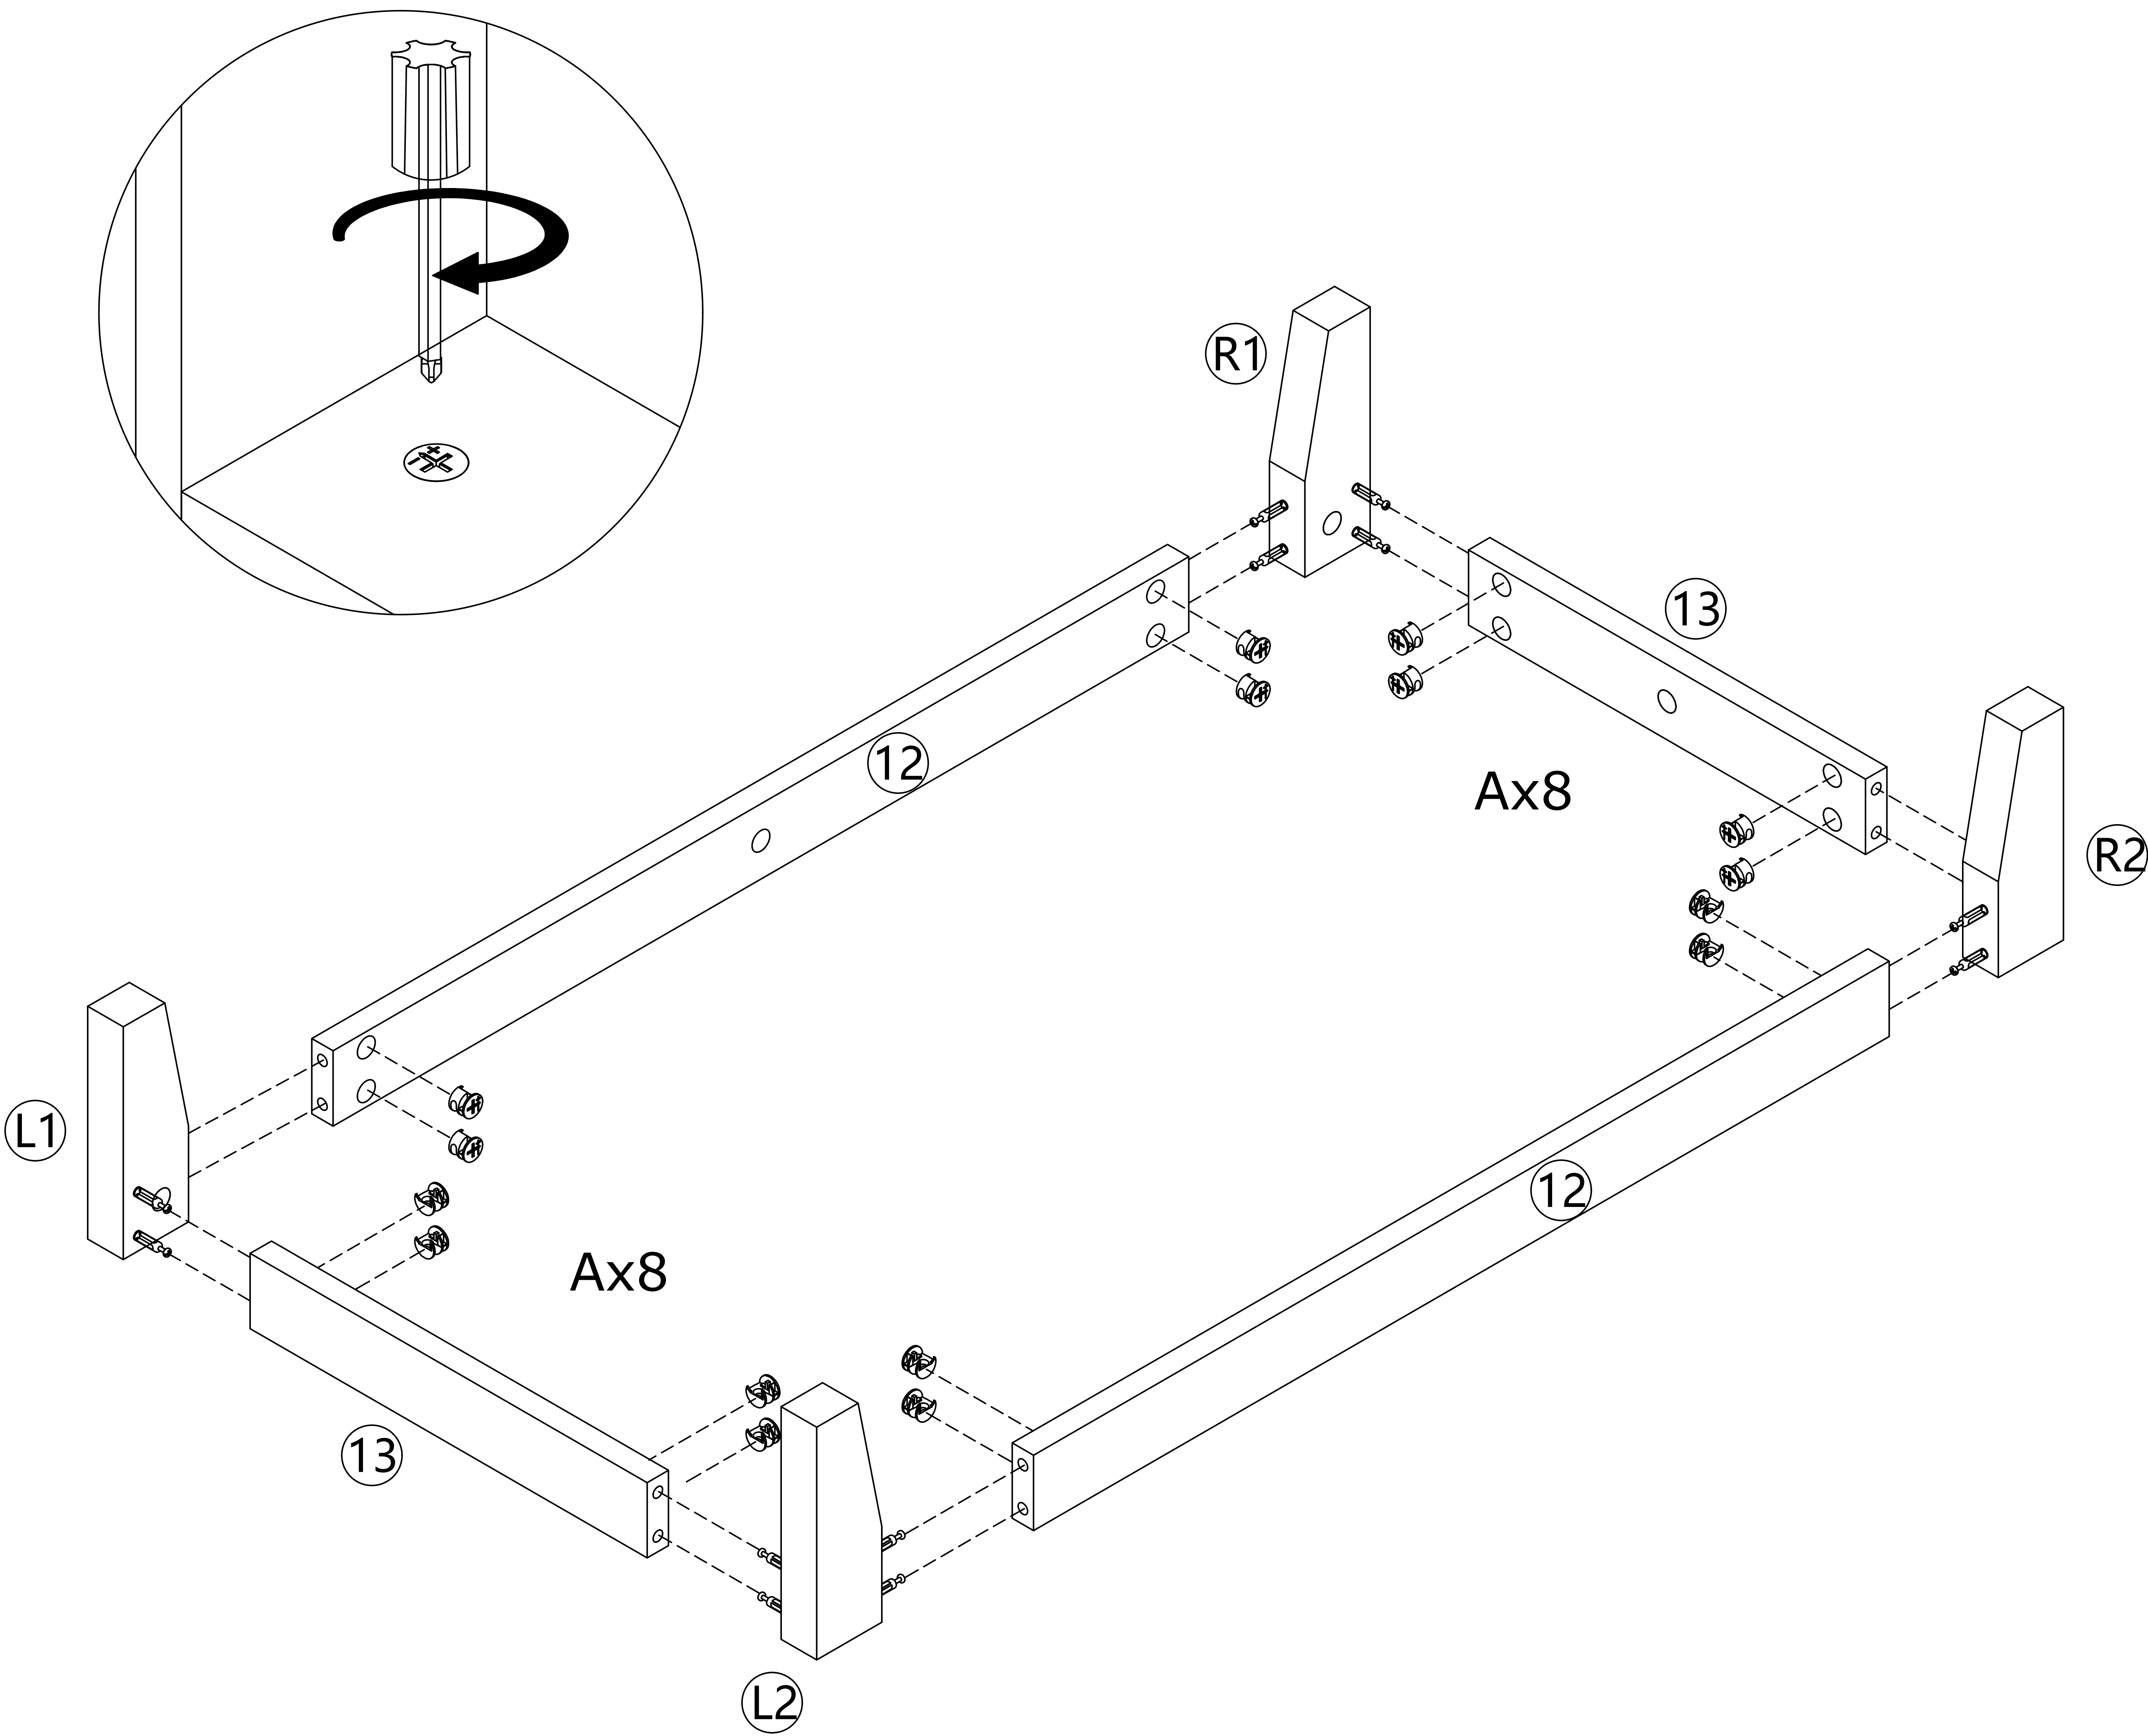



Reference case images

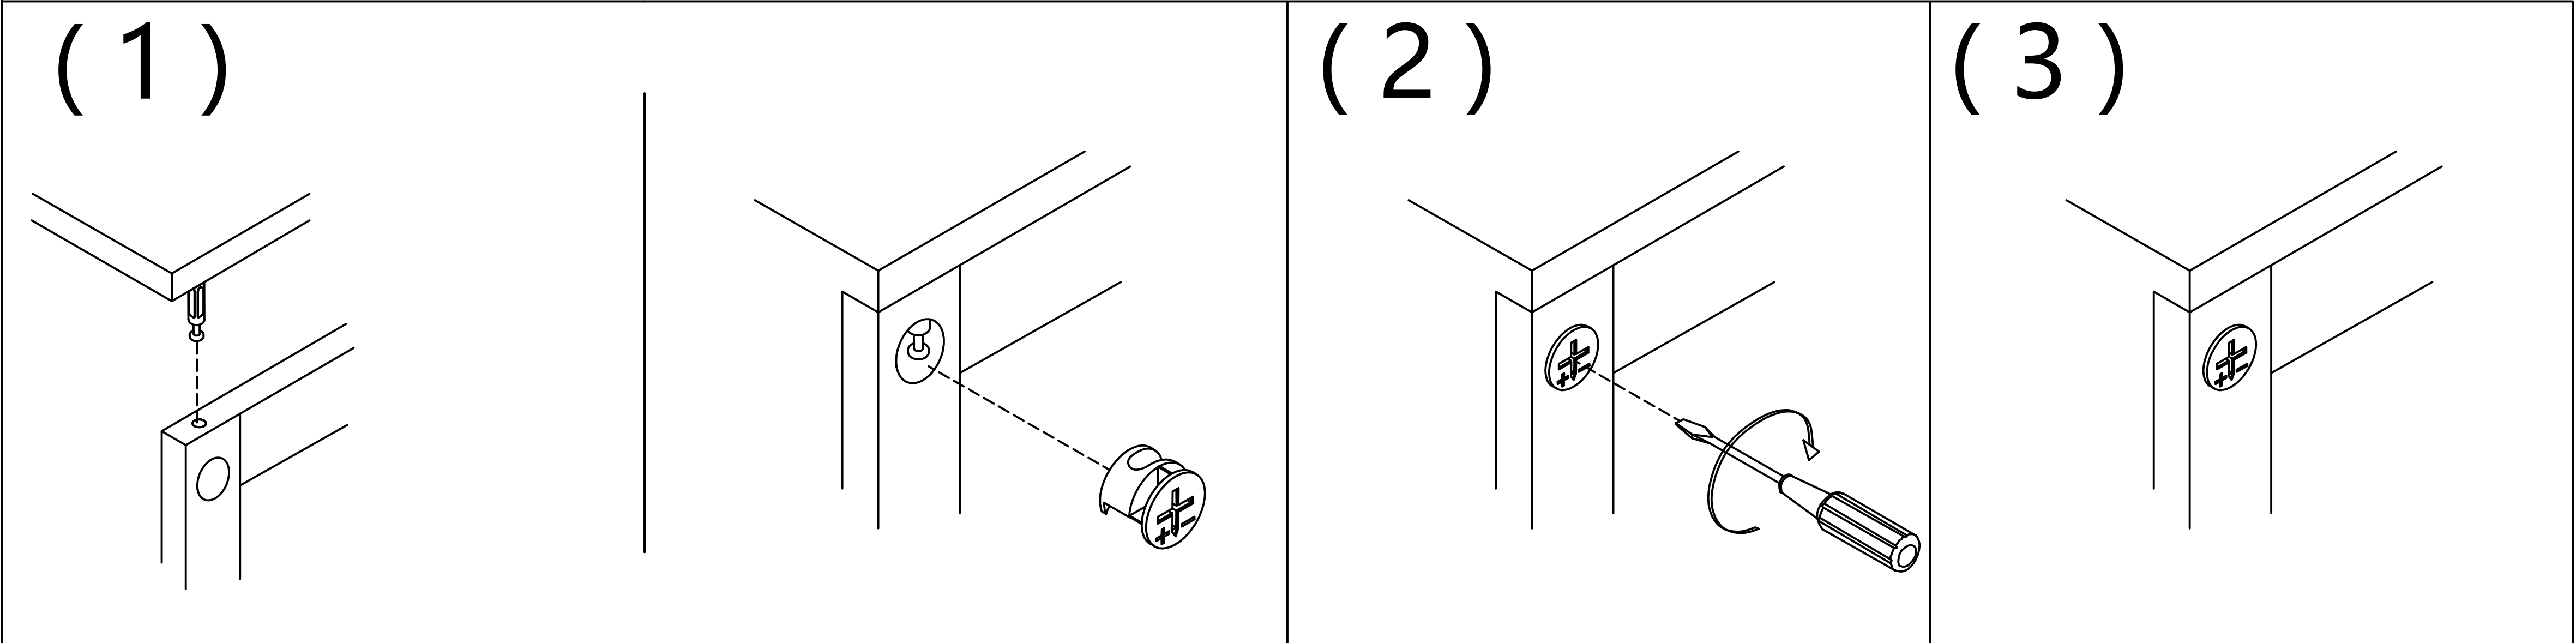 


5

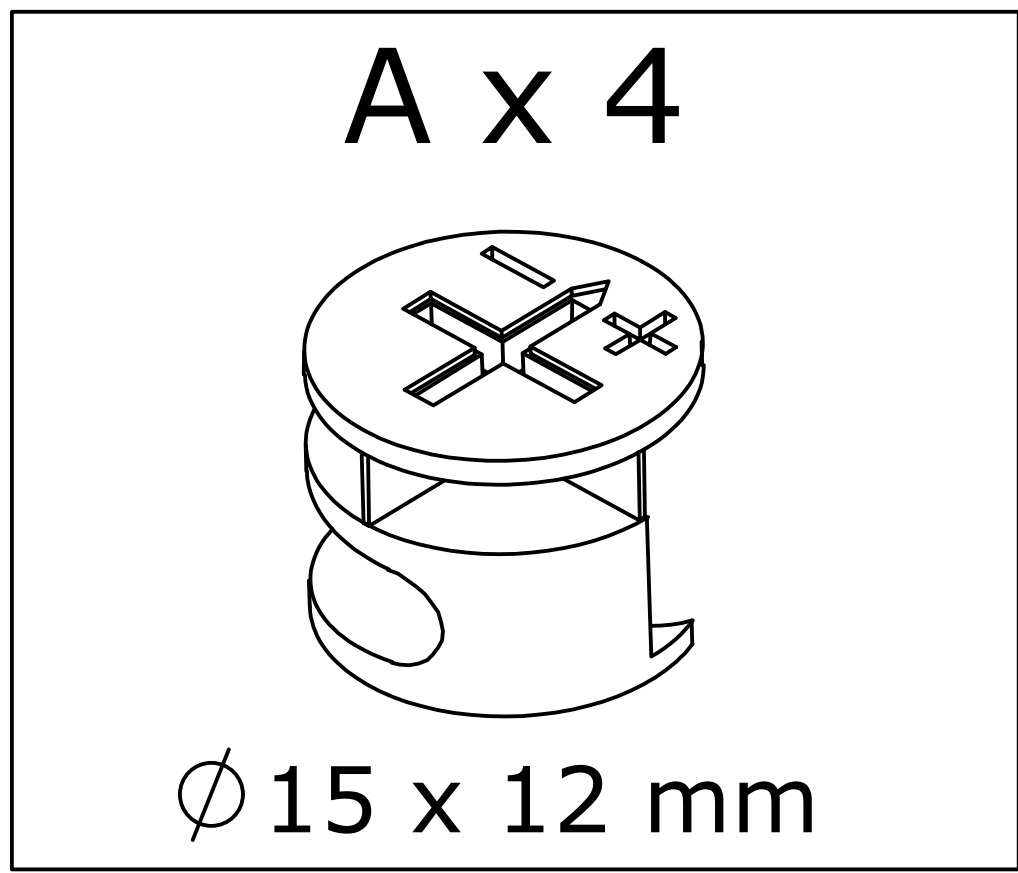 

  
- Refer to the illustration.
Connect the boards and fasten the Latch (A) tightly.

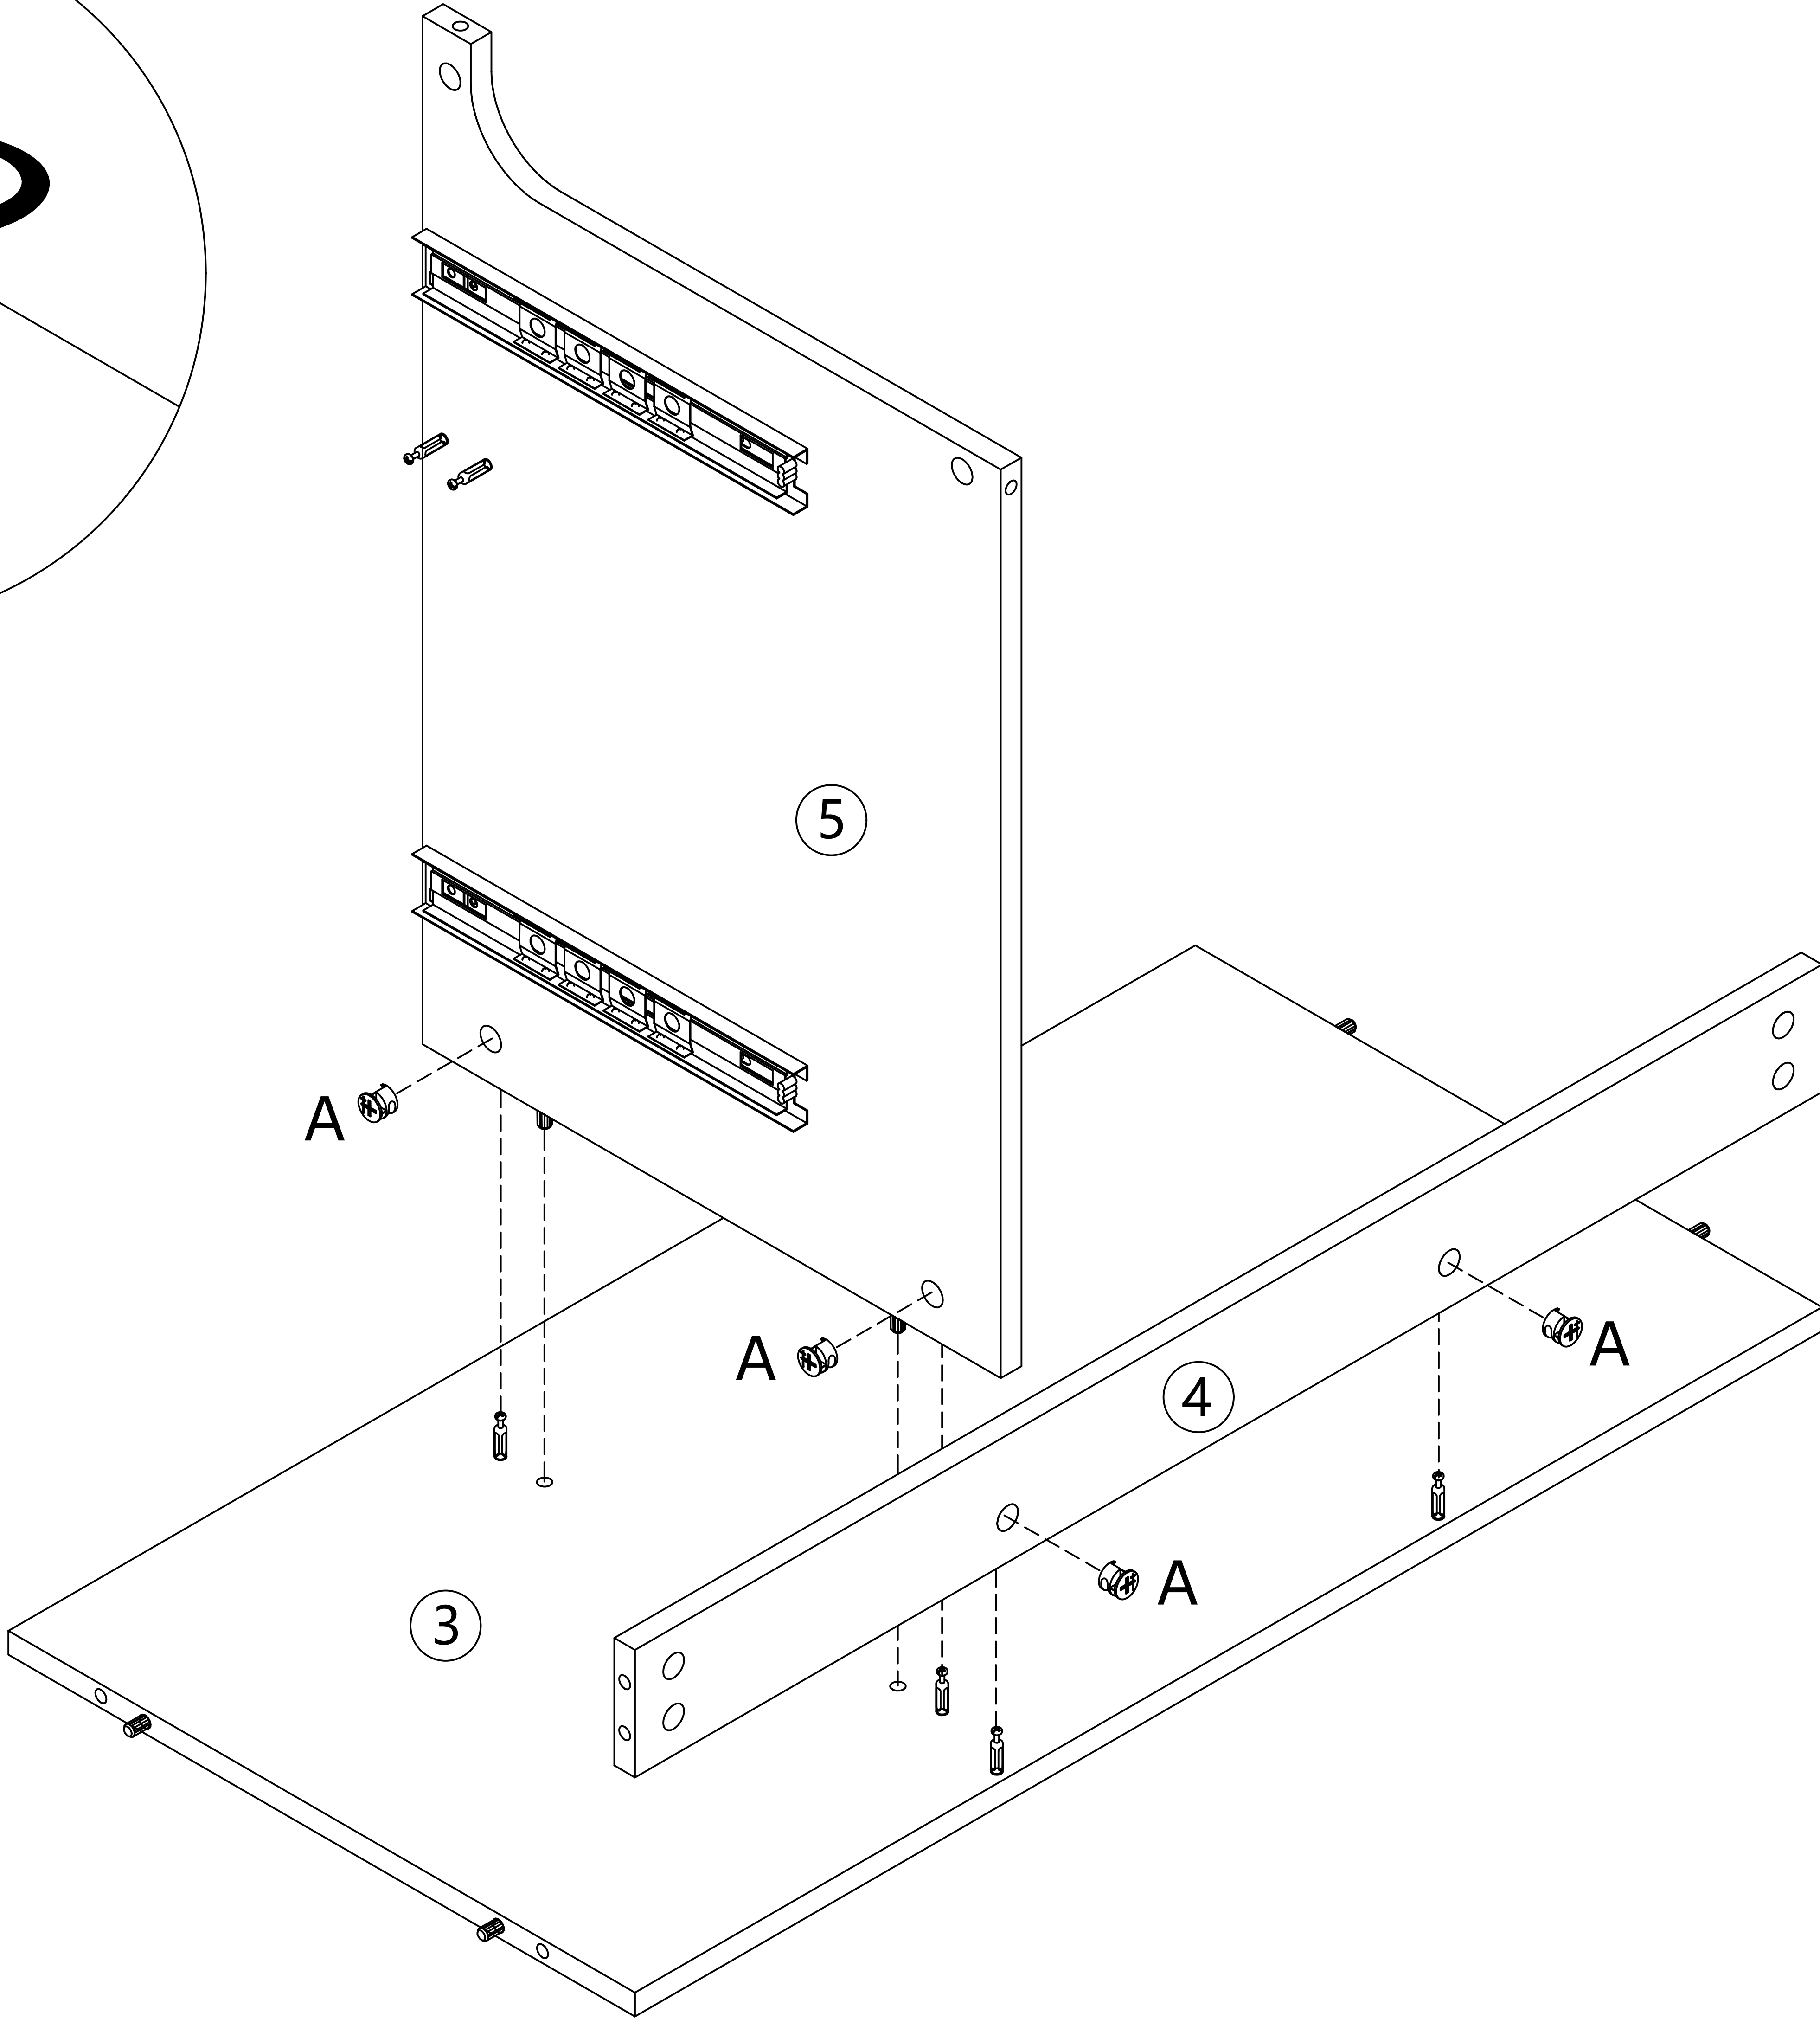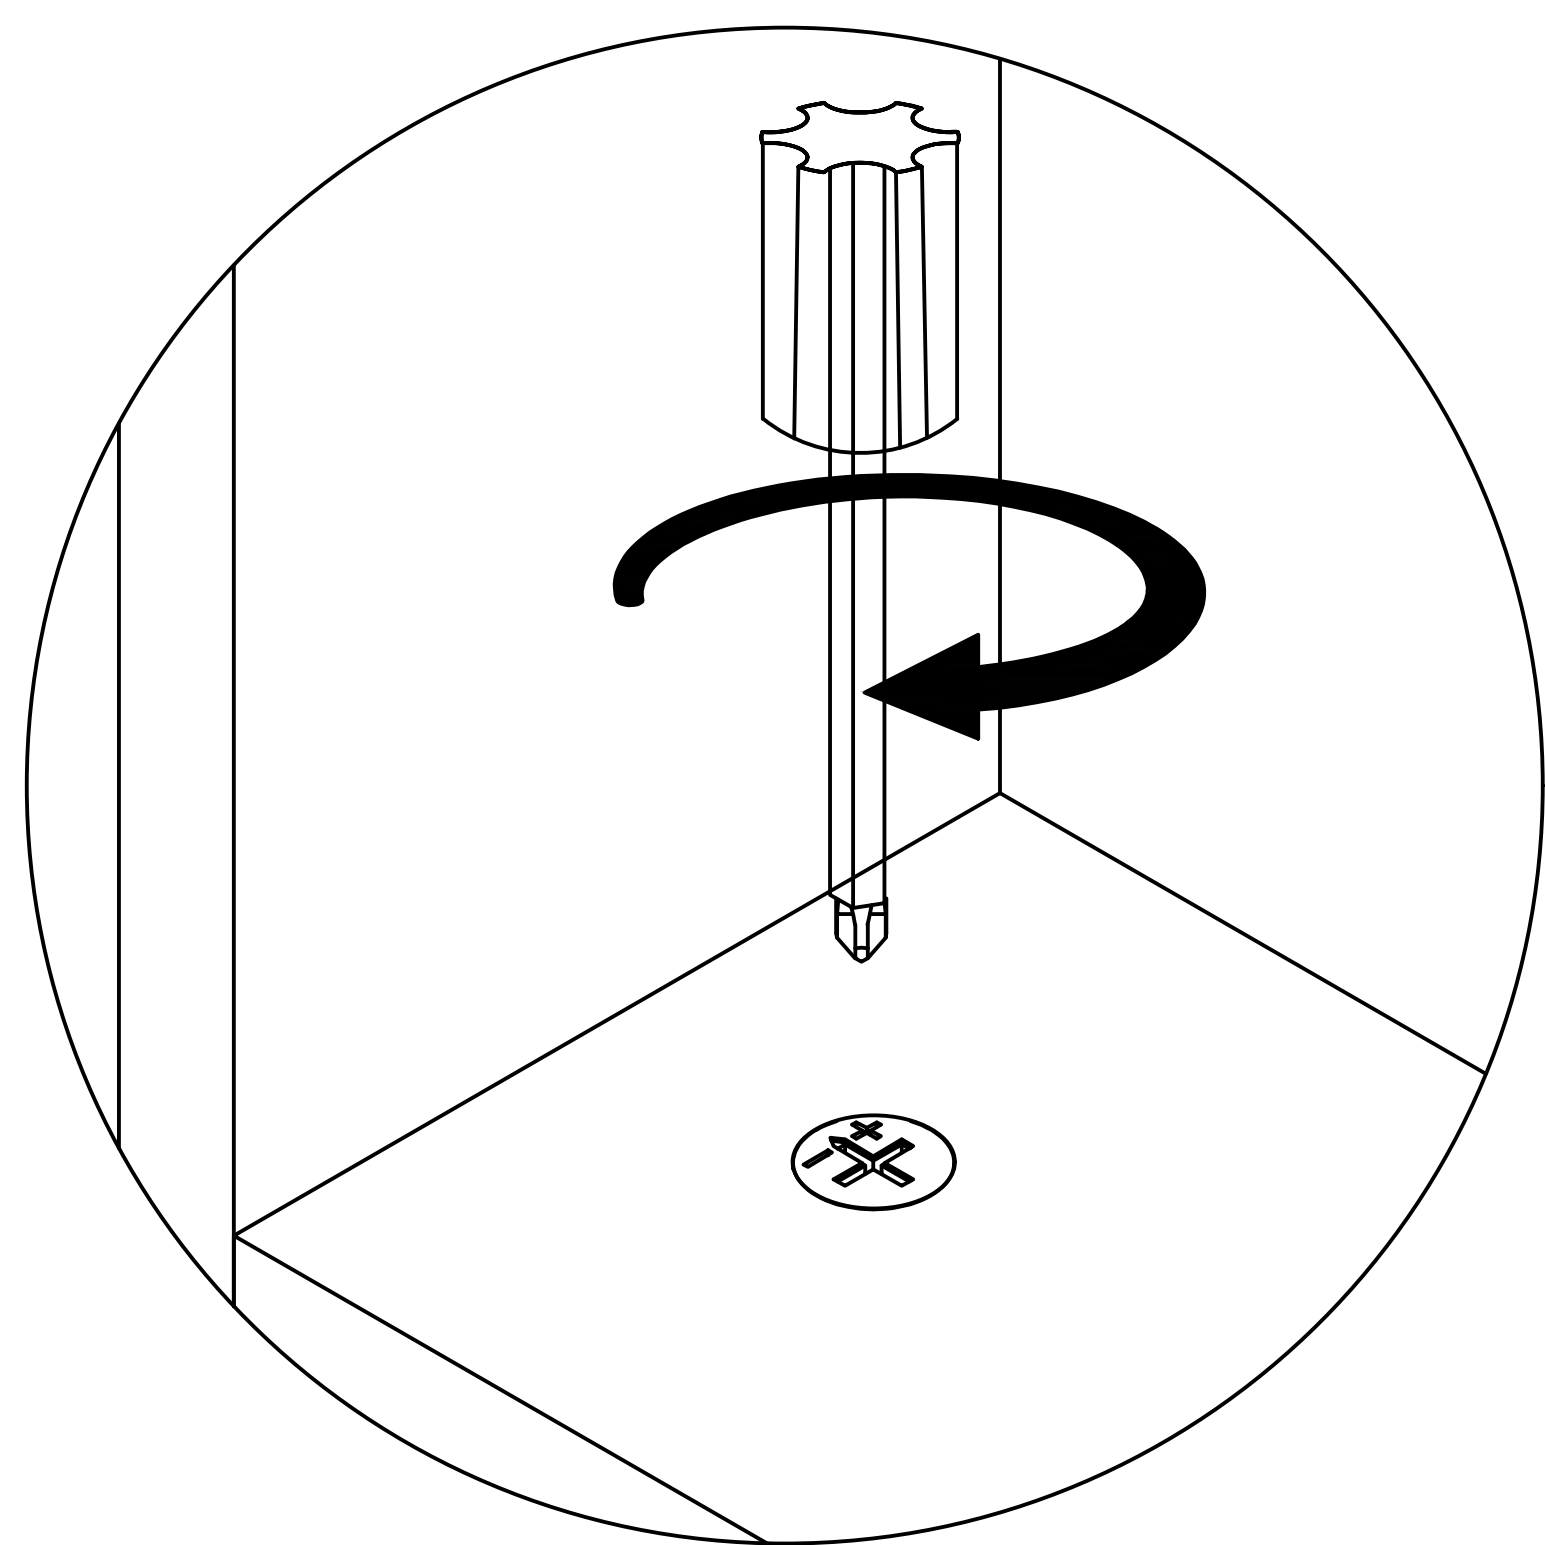



Reference case images

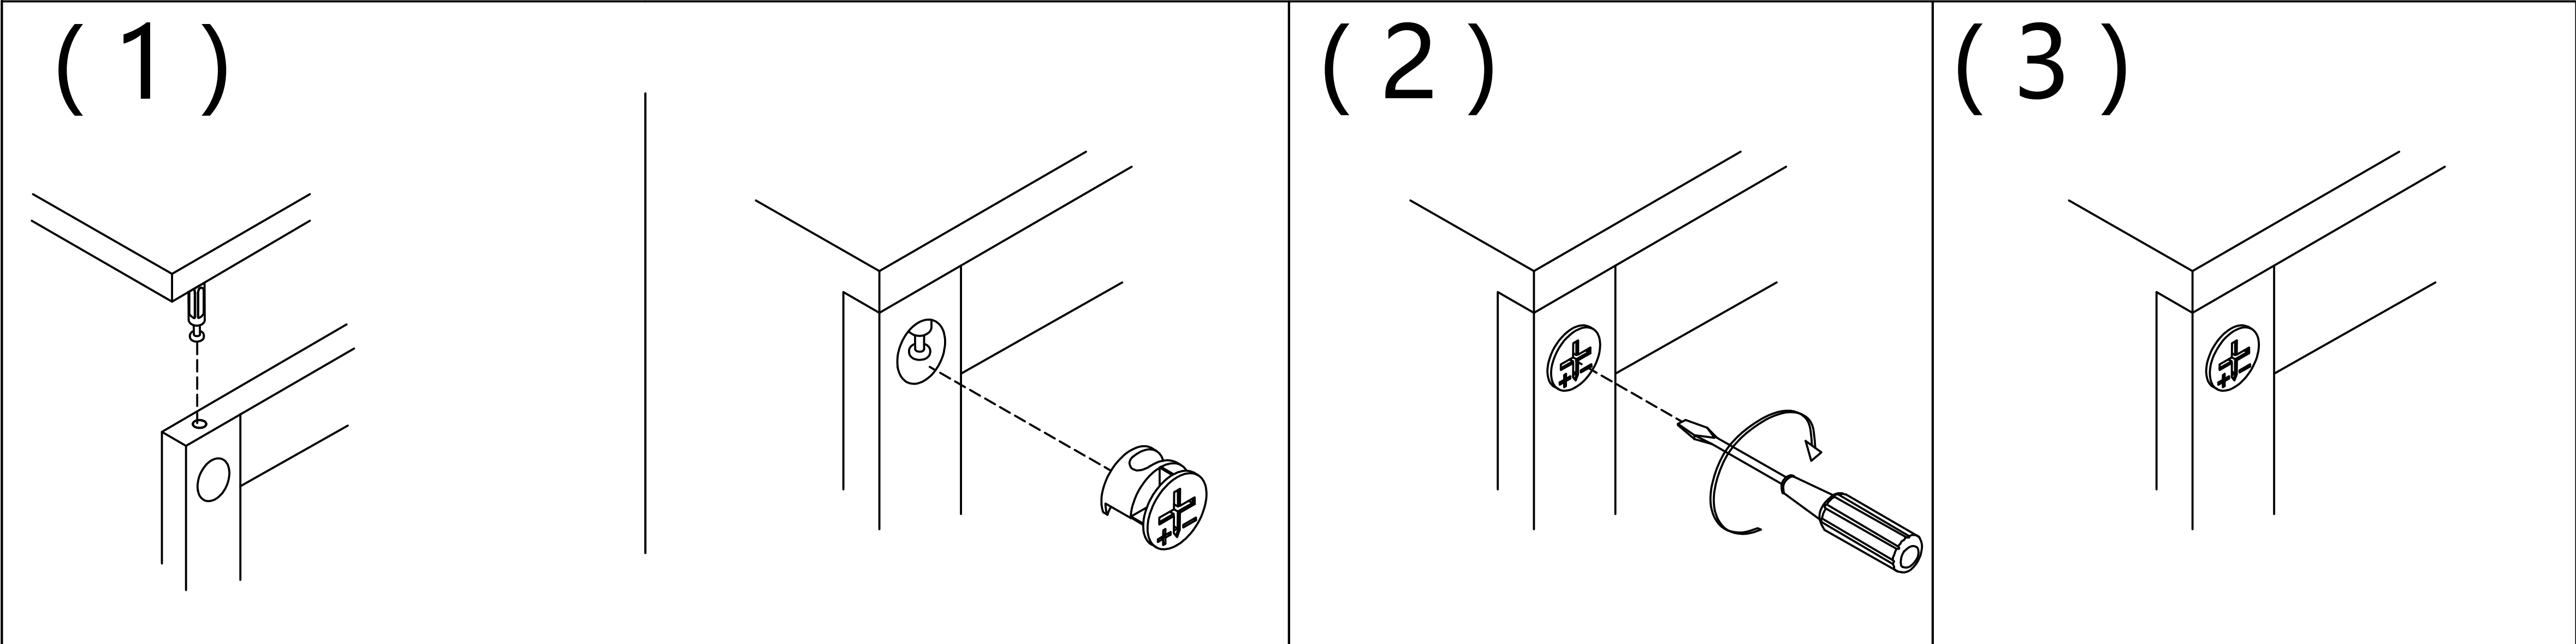 


6

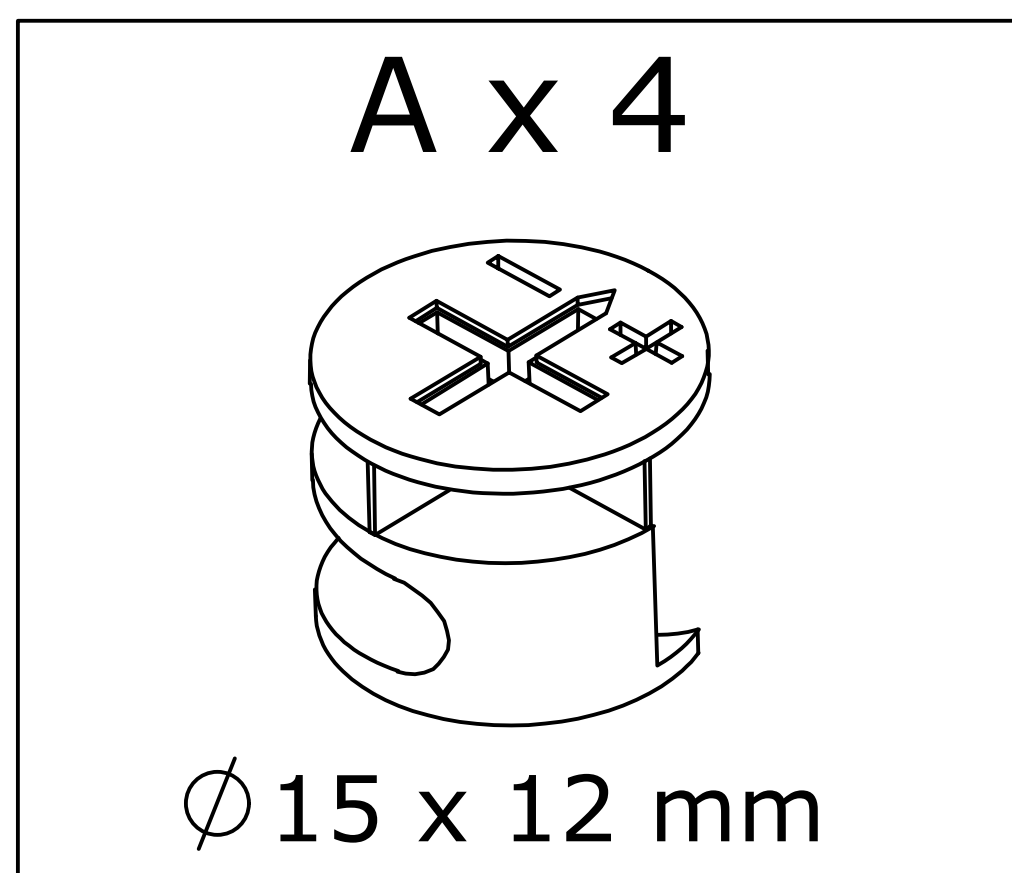 

  
- Refer to the illustration.
Connect the boards and fasten the Latch (A) tightly.

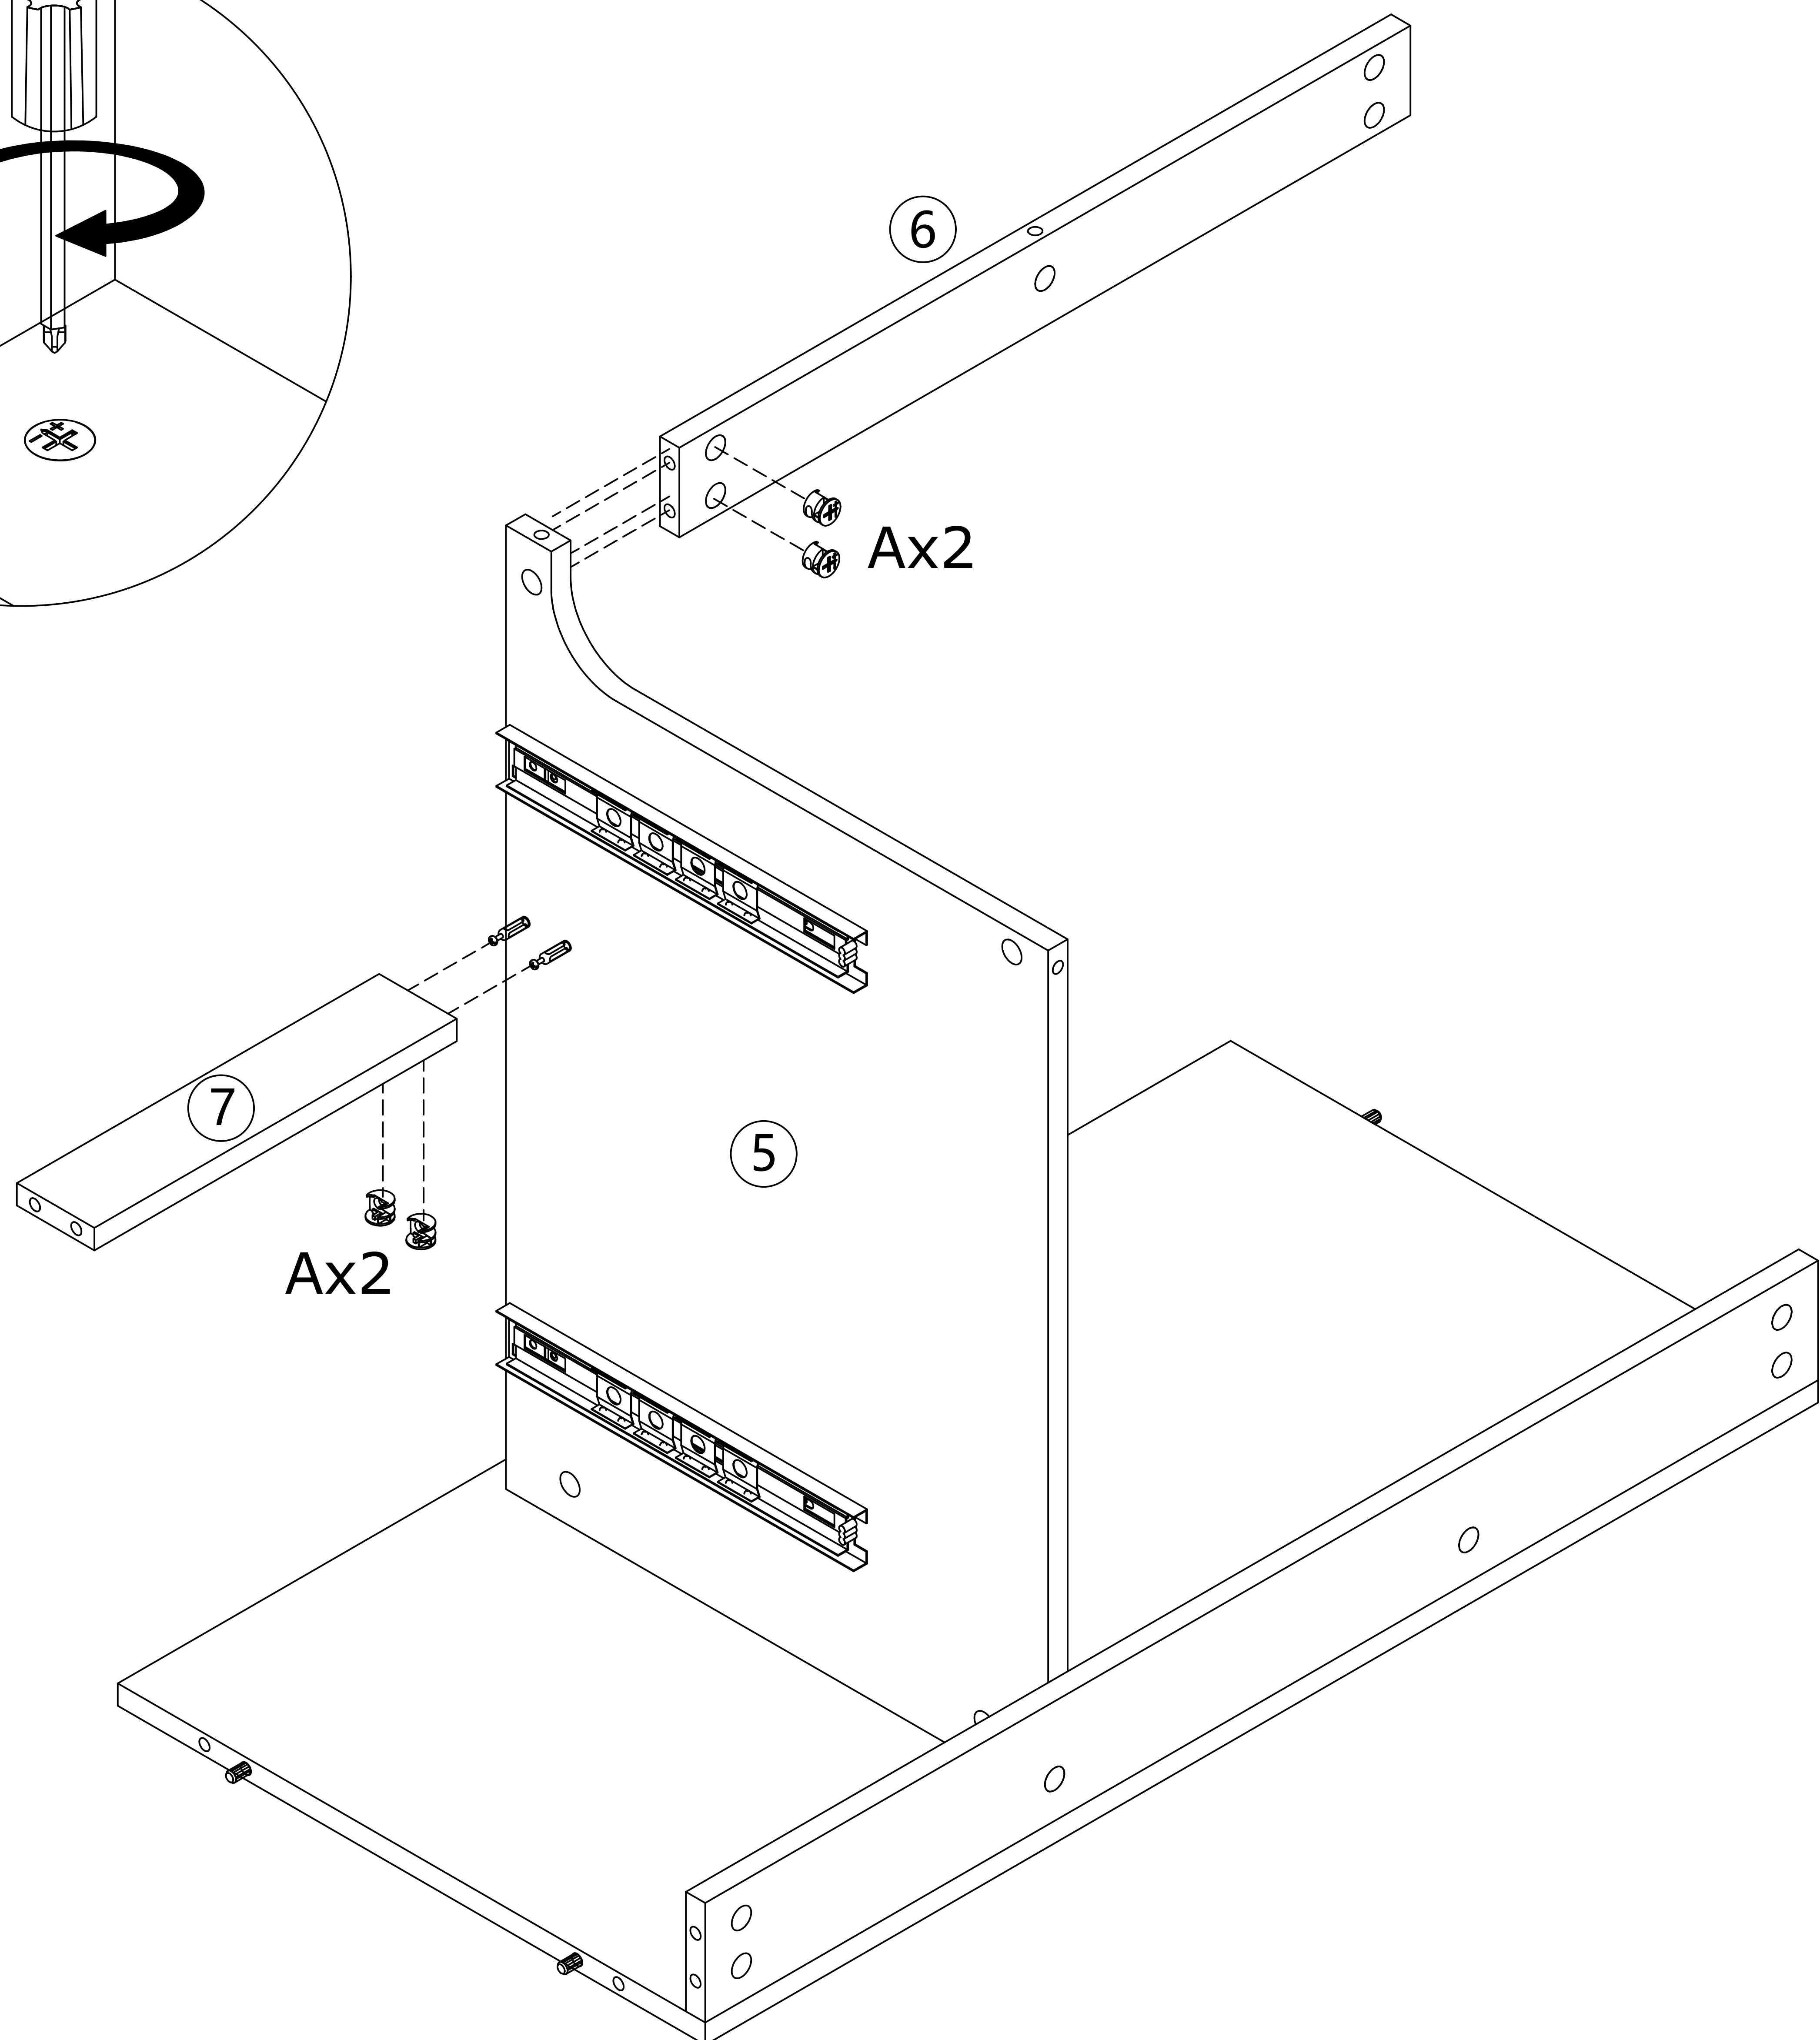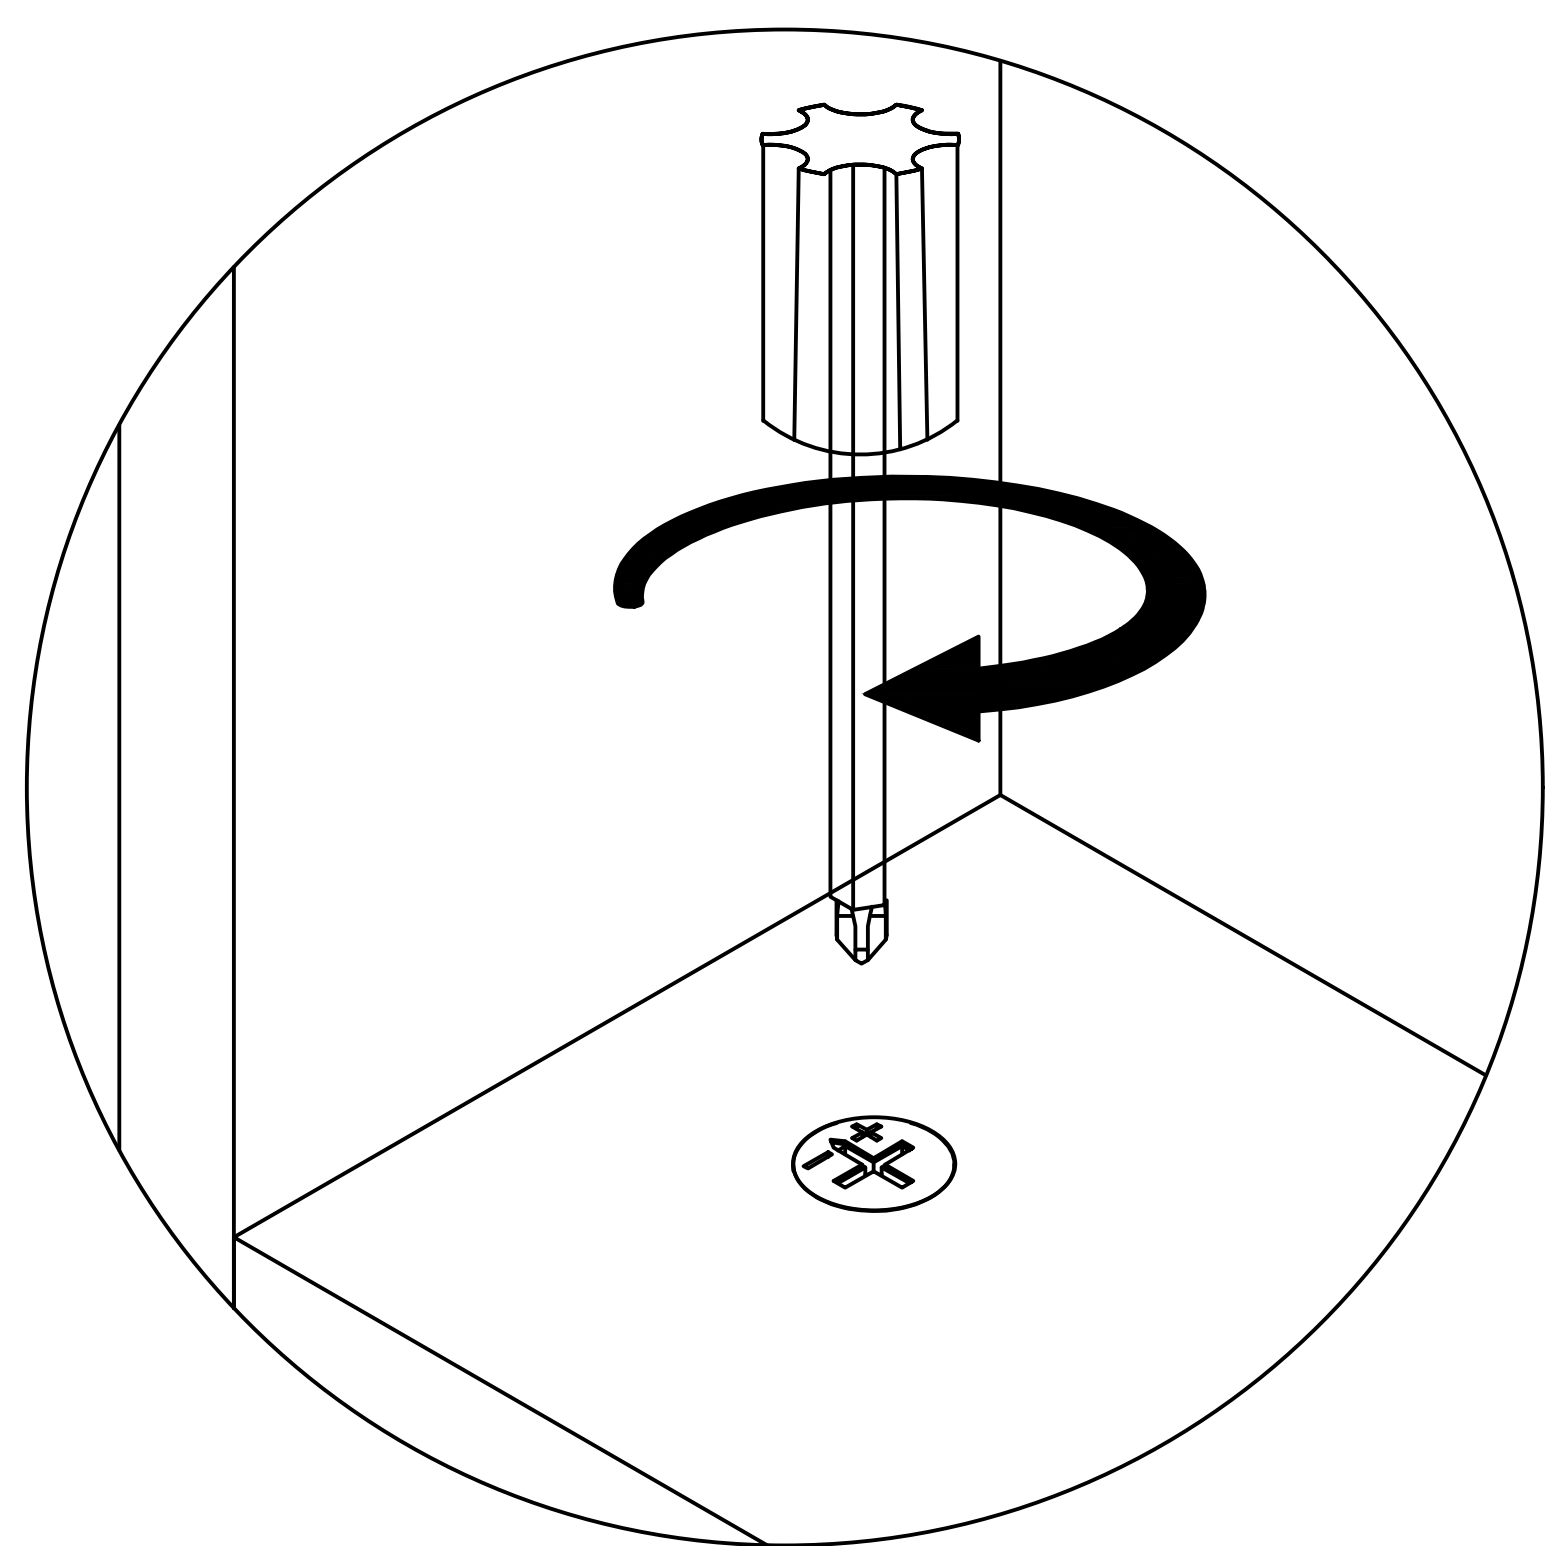


7

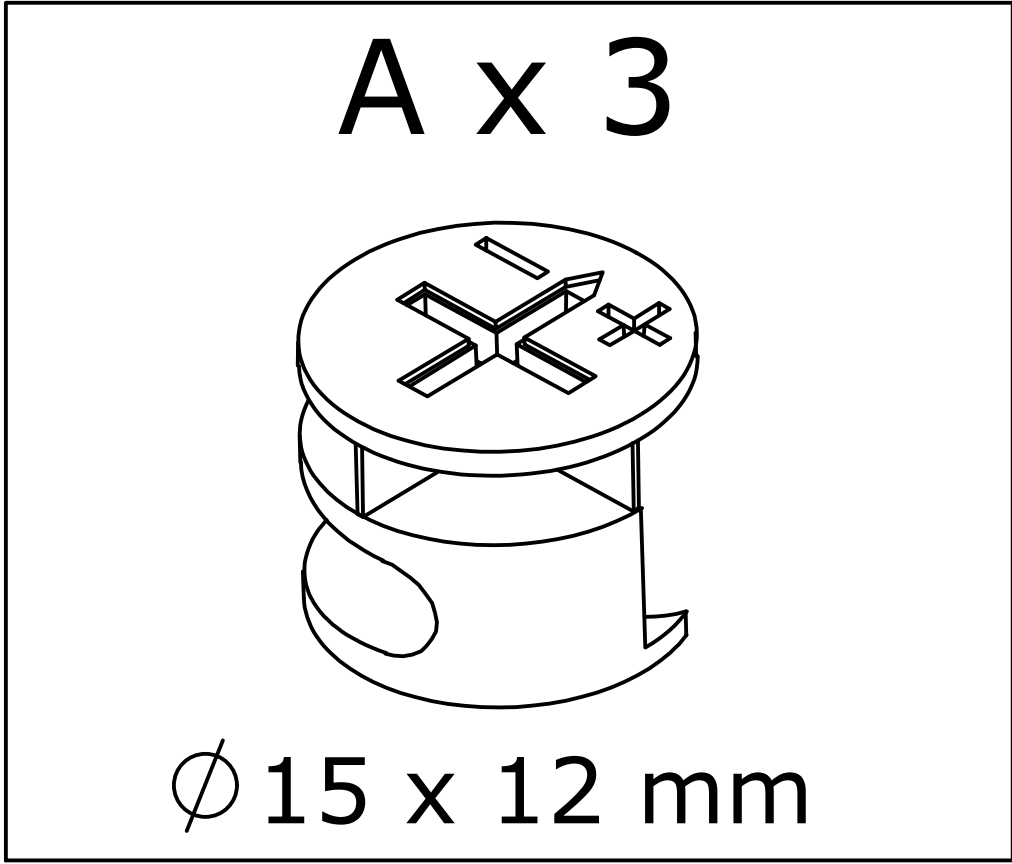 

 
- Refer to the illustration.
Connect the boards and fasten the Latch (A) tightly.

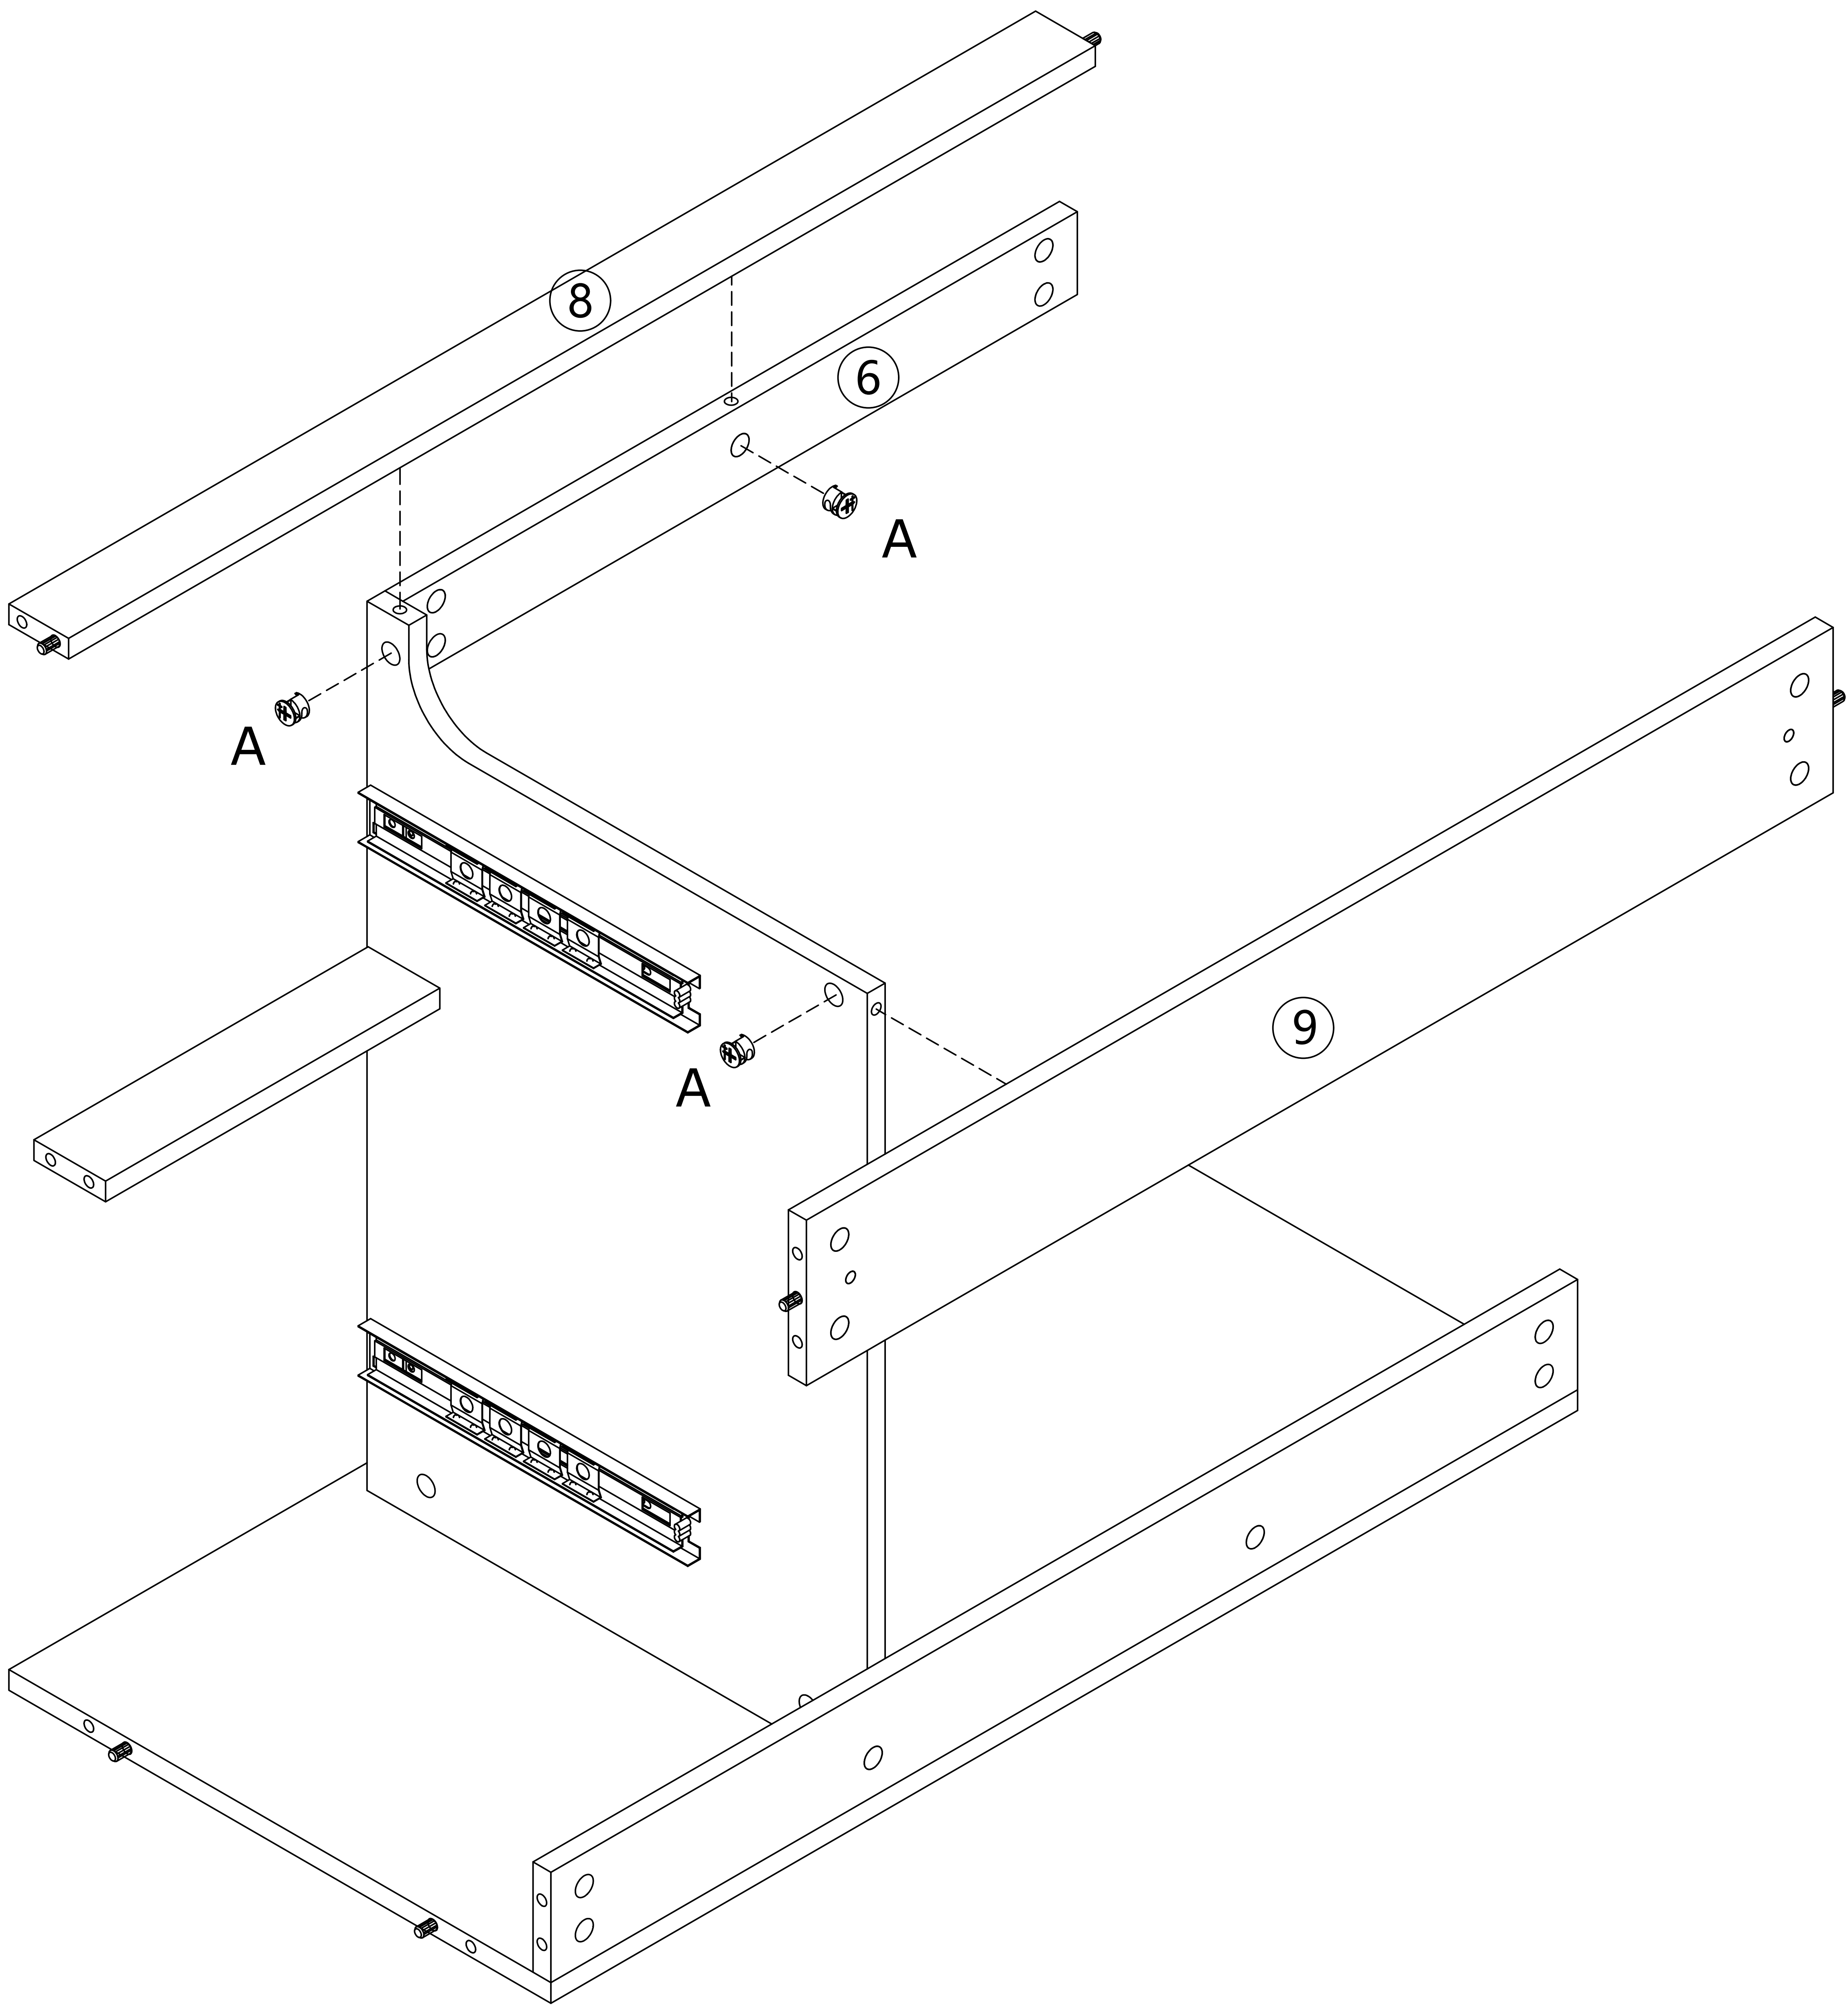

8

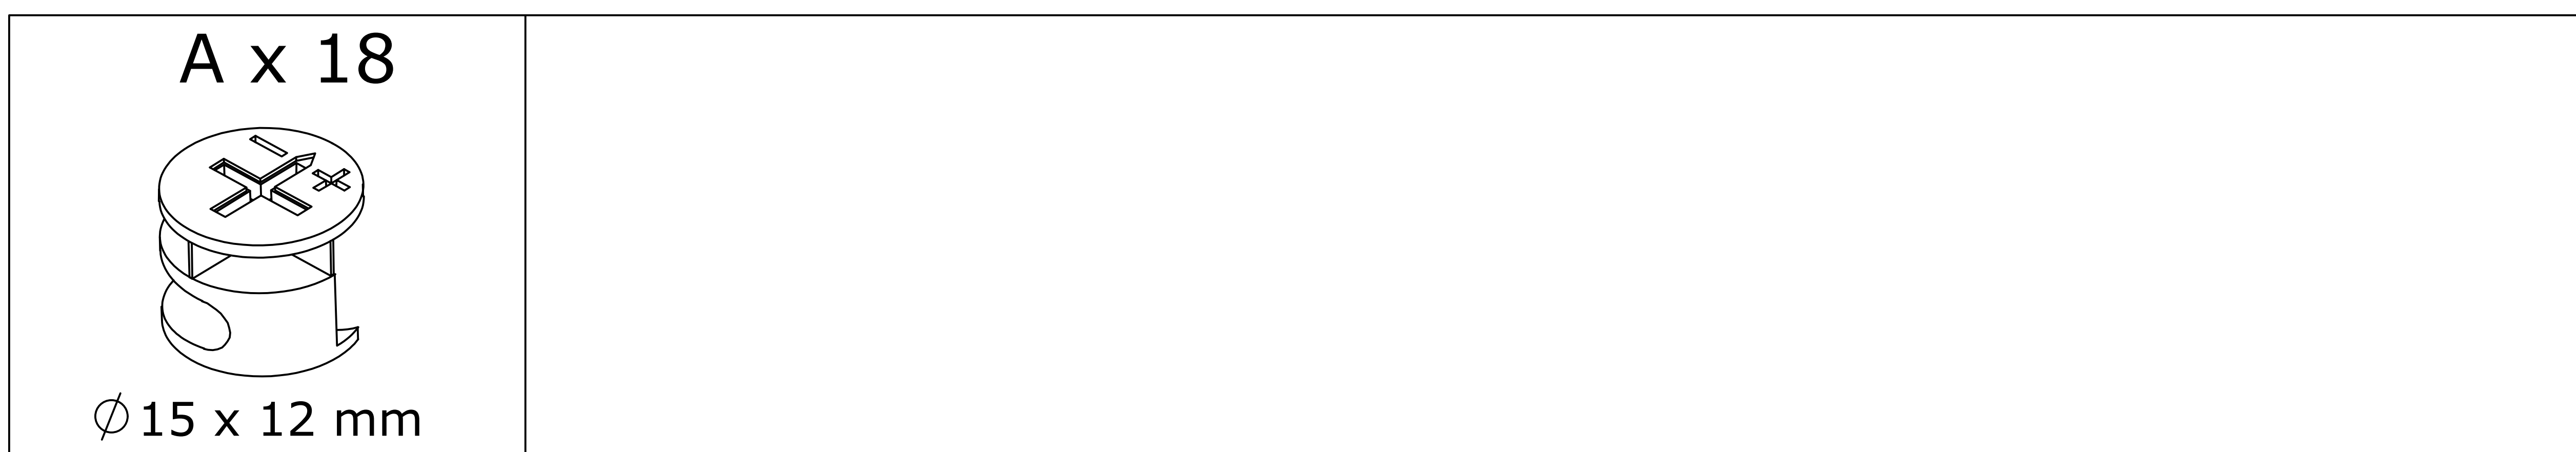 

 
- Refer to the illustration.
Connect the boards and fasten the Latch (A) tightly.

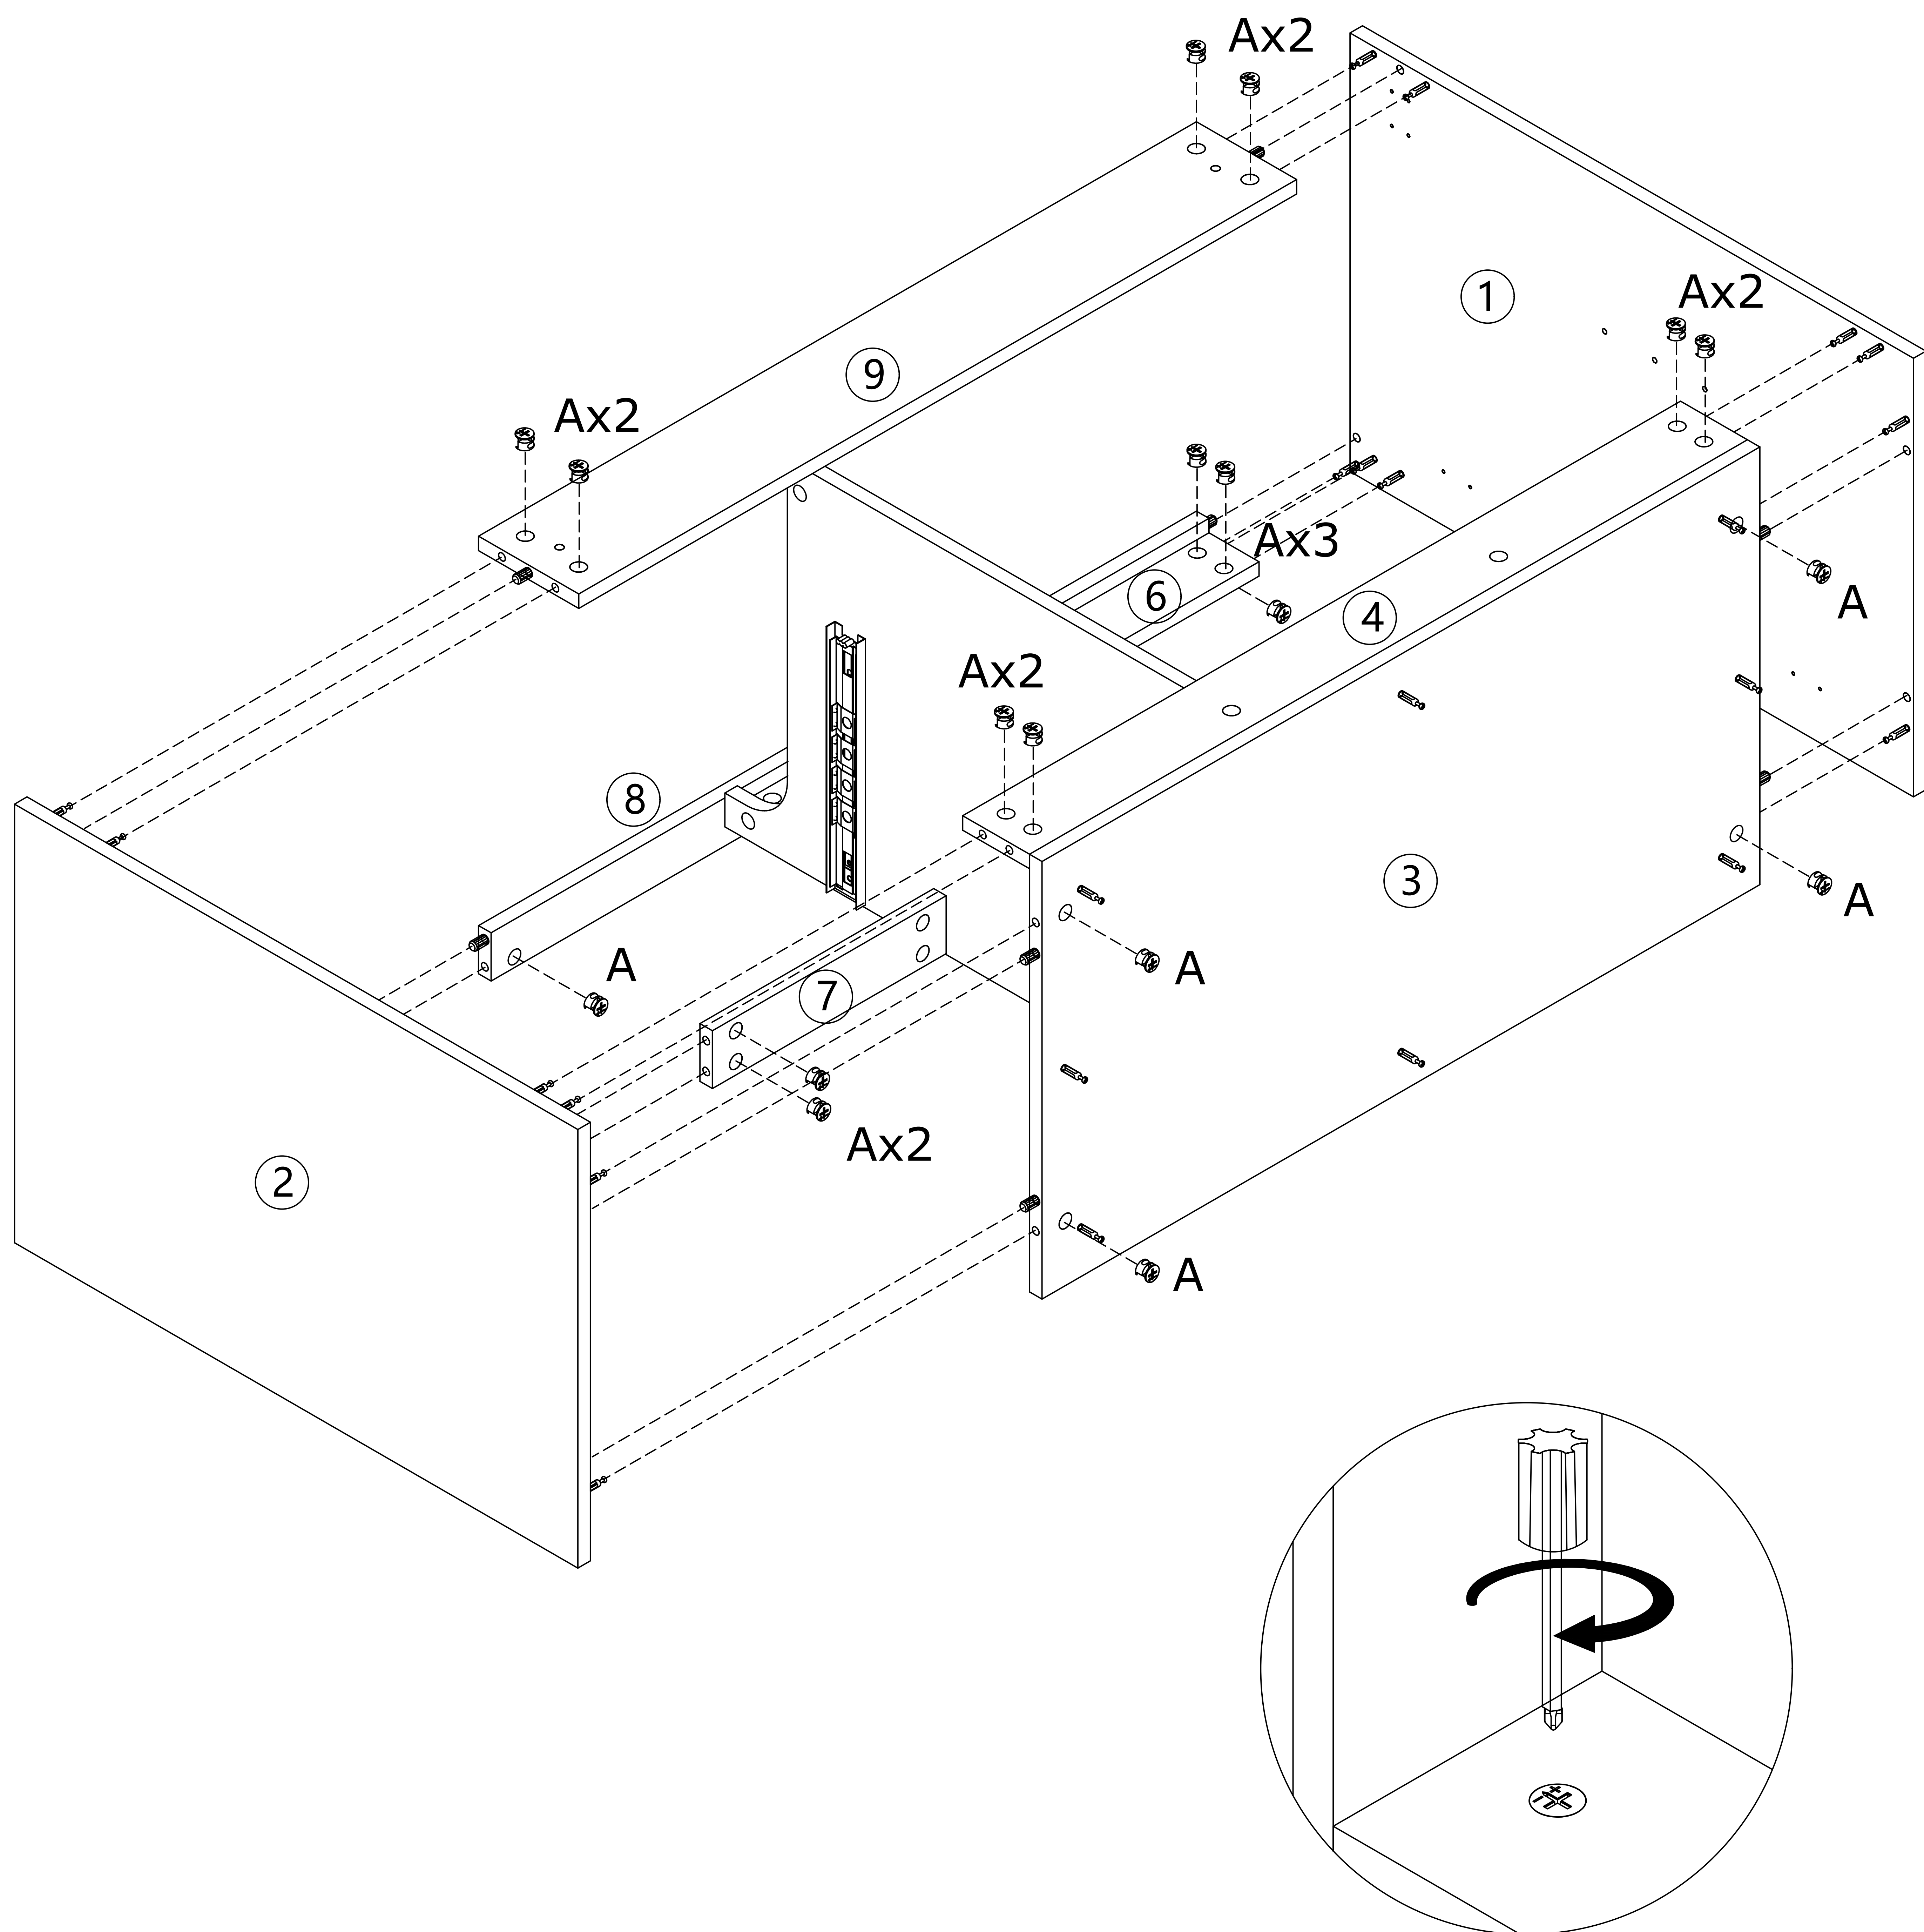

9



 
- Refer to the illustration.
Connect the boards and fasten the Latch (A) tightly.

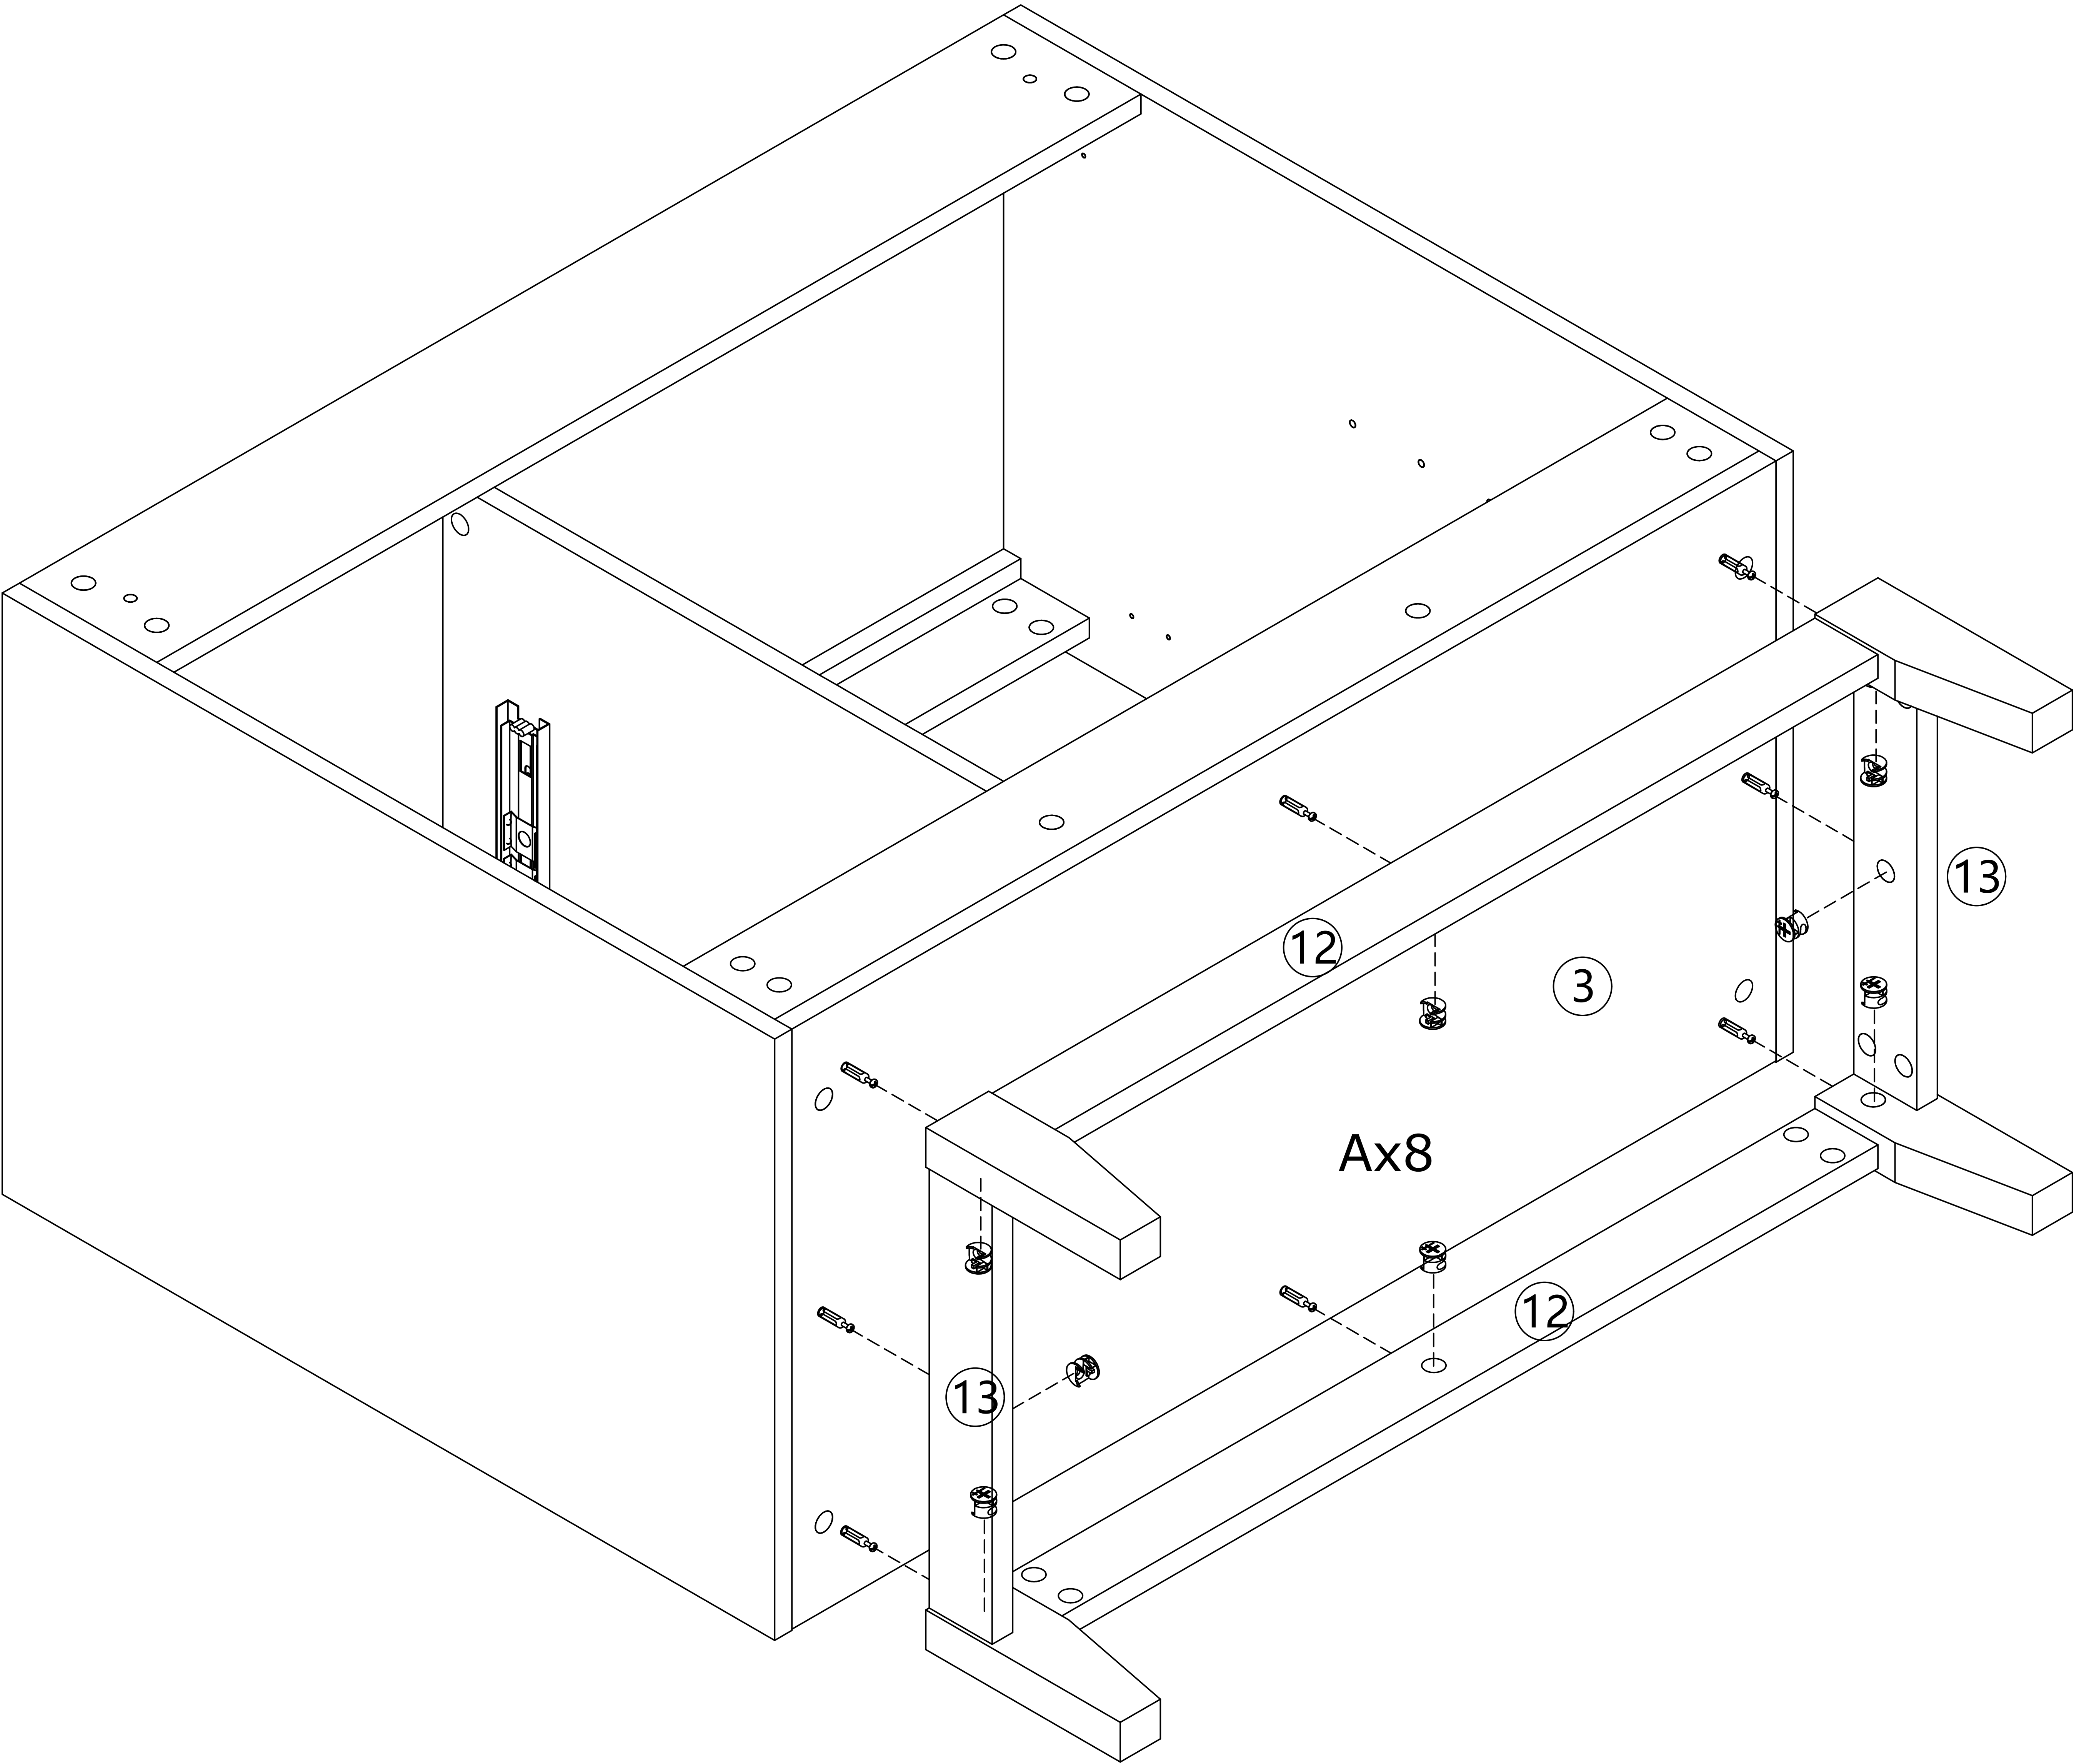


10




 
- Refer to the illustration.
Connect the boards and fasten the Latch (A) tightly. Screw (H) into boards (1) and (5), then place board (11) in position.

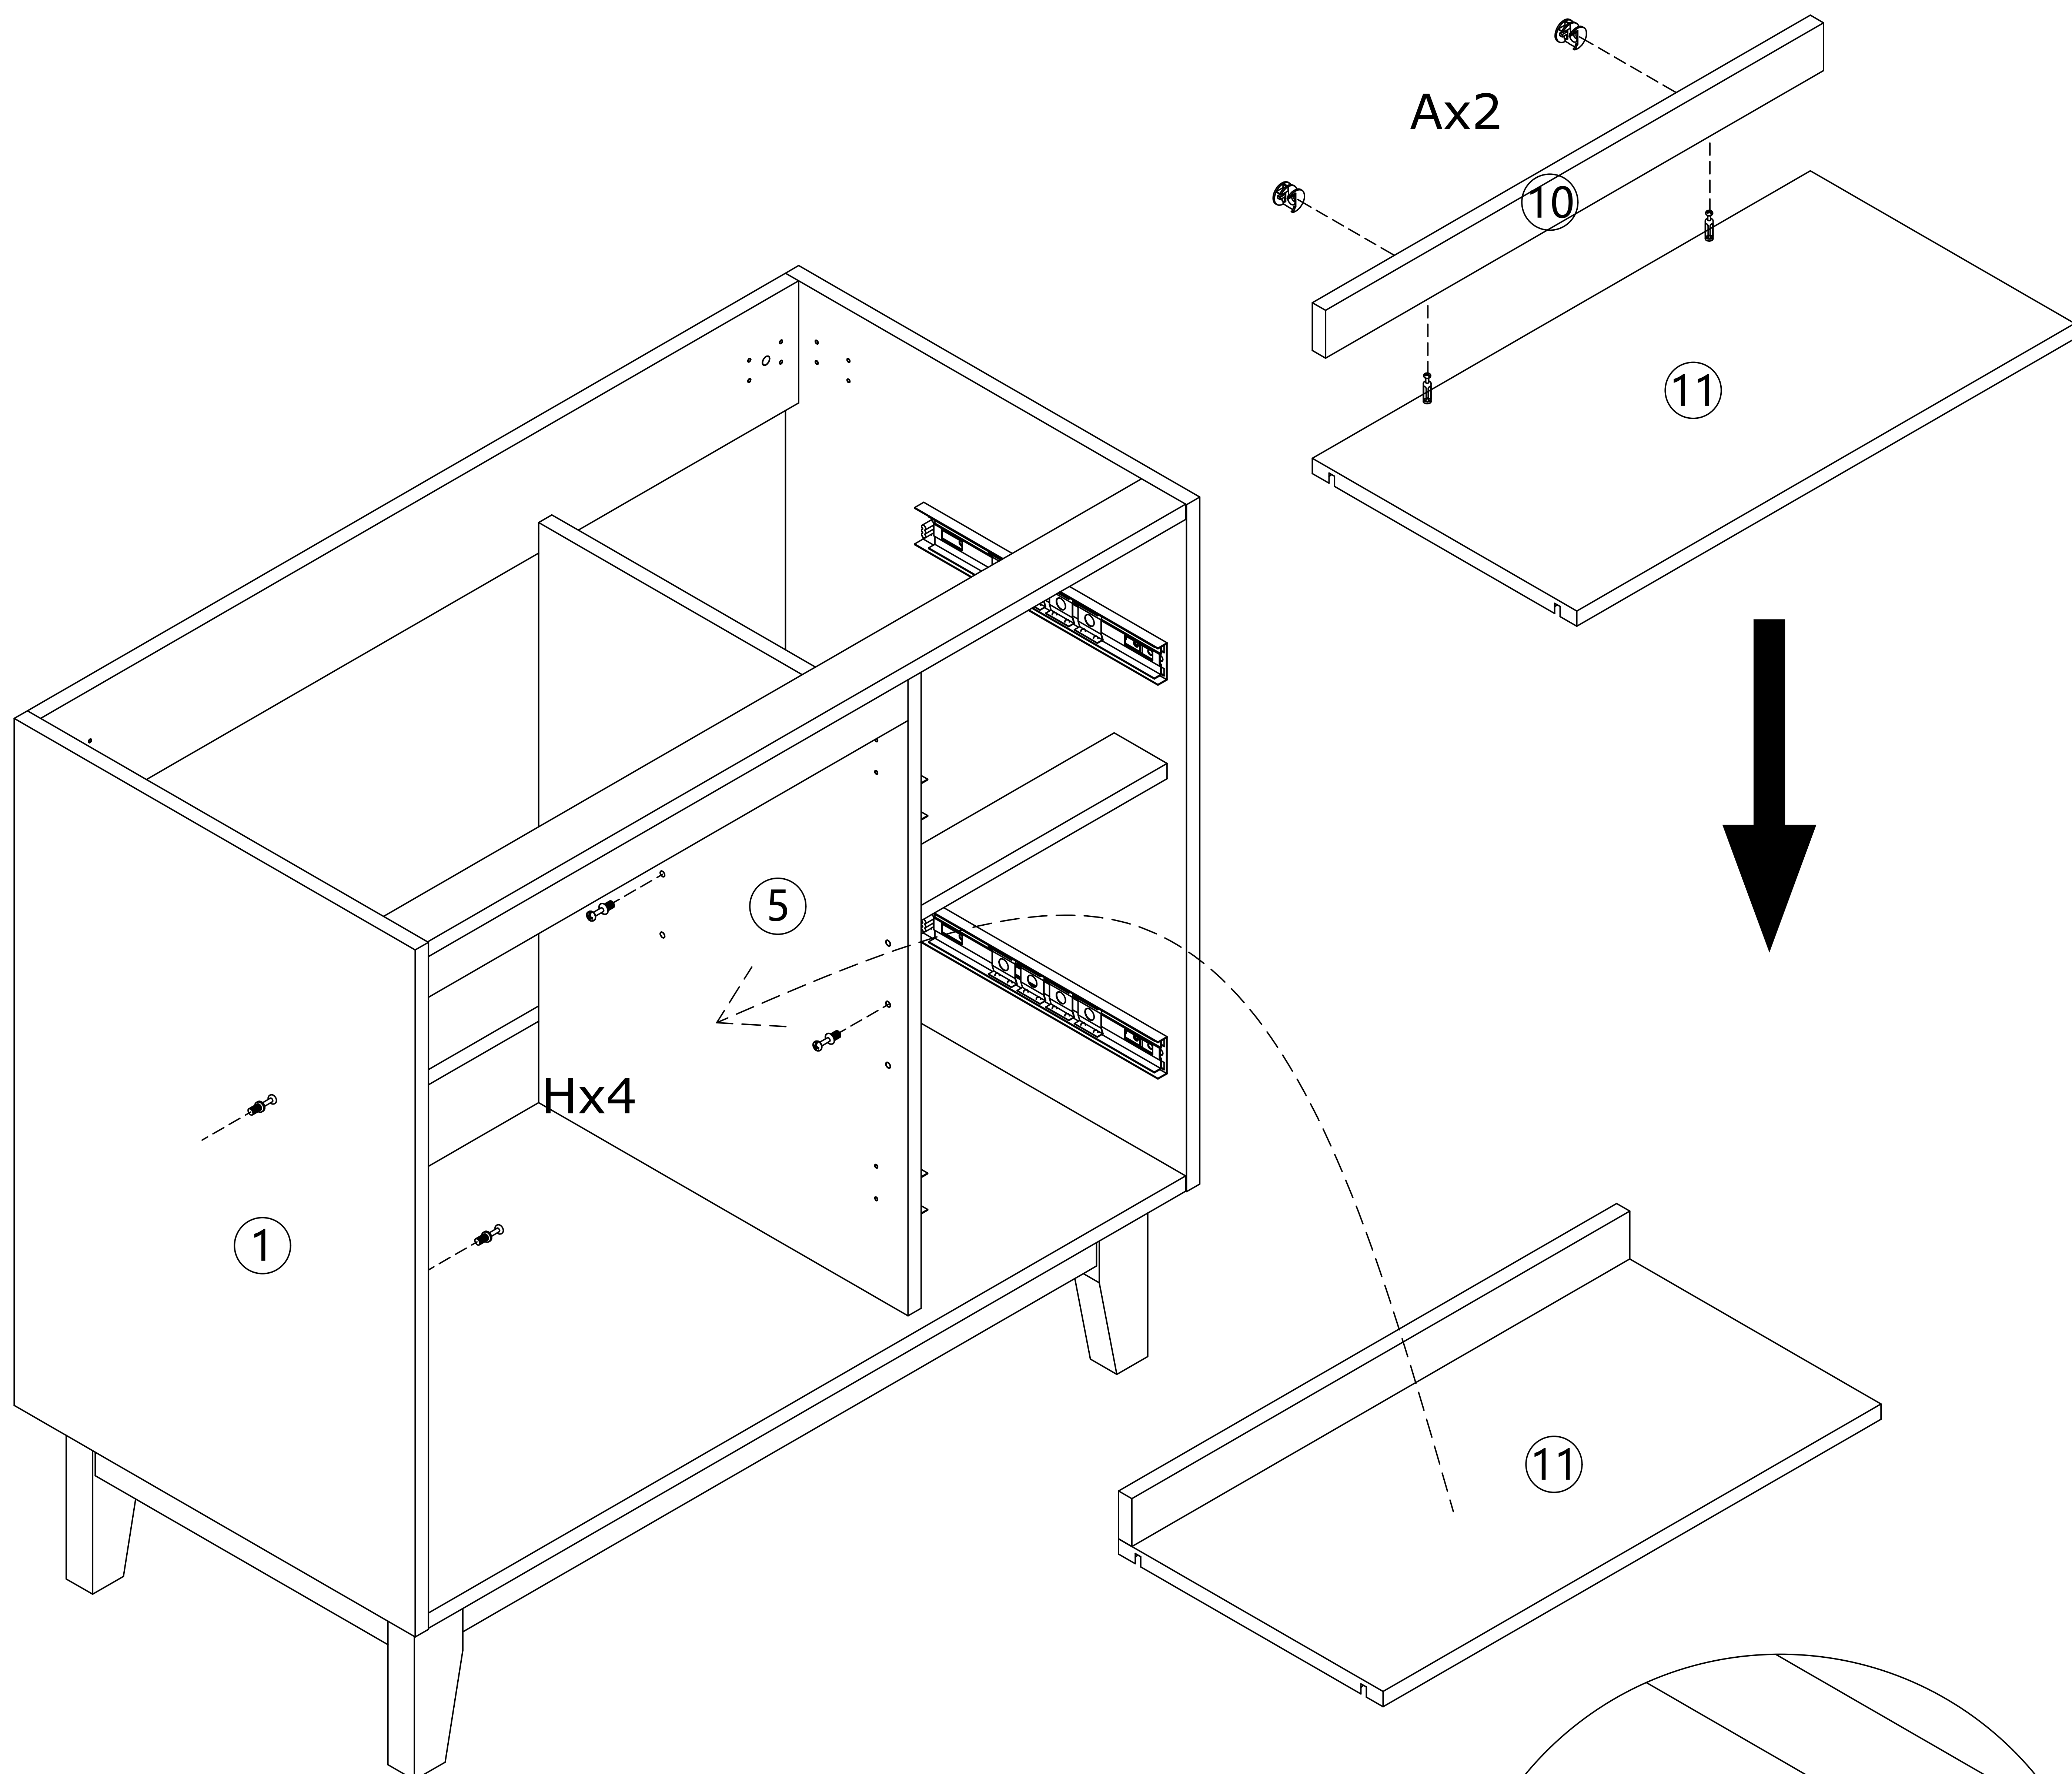


 
First insert the panel into the corresponding position, then tighten the small latches to achieve secure fixation of the panel.

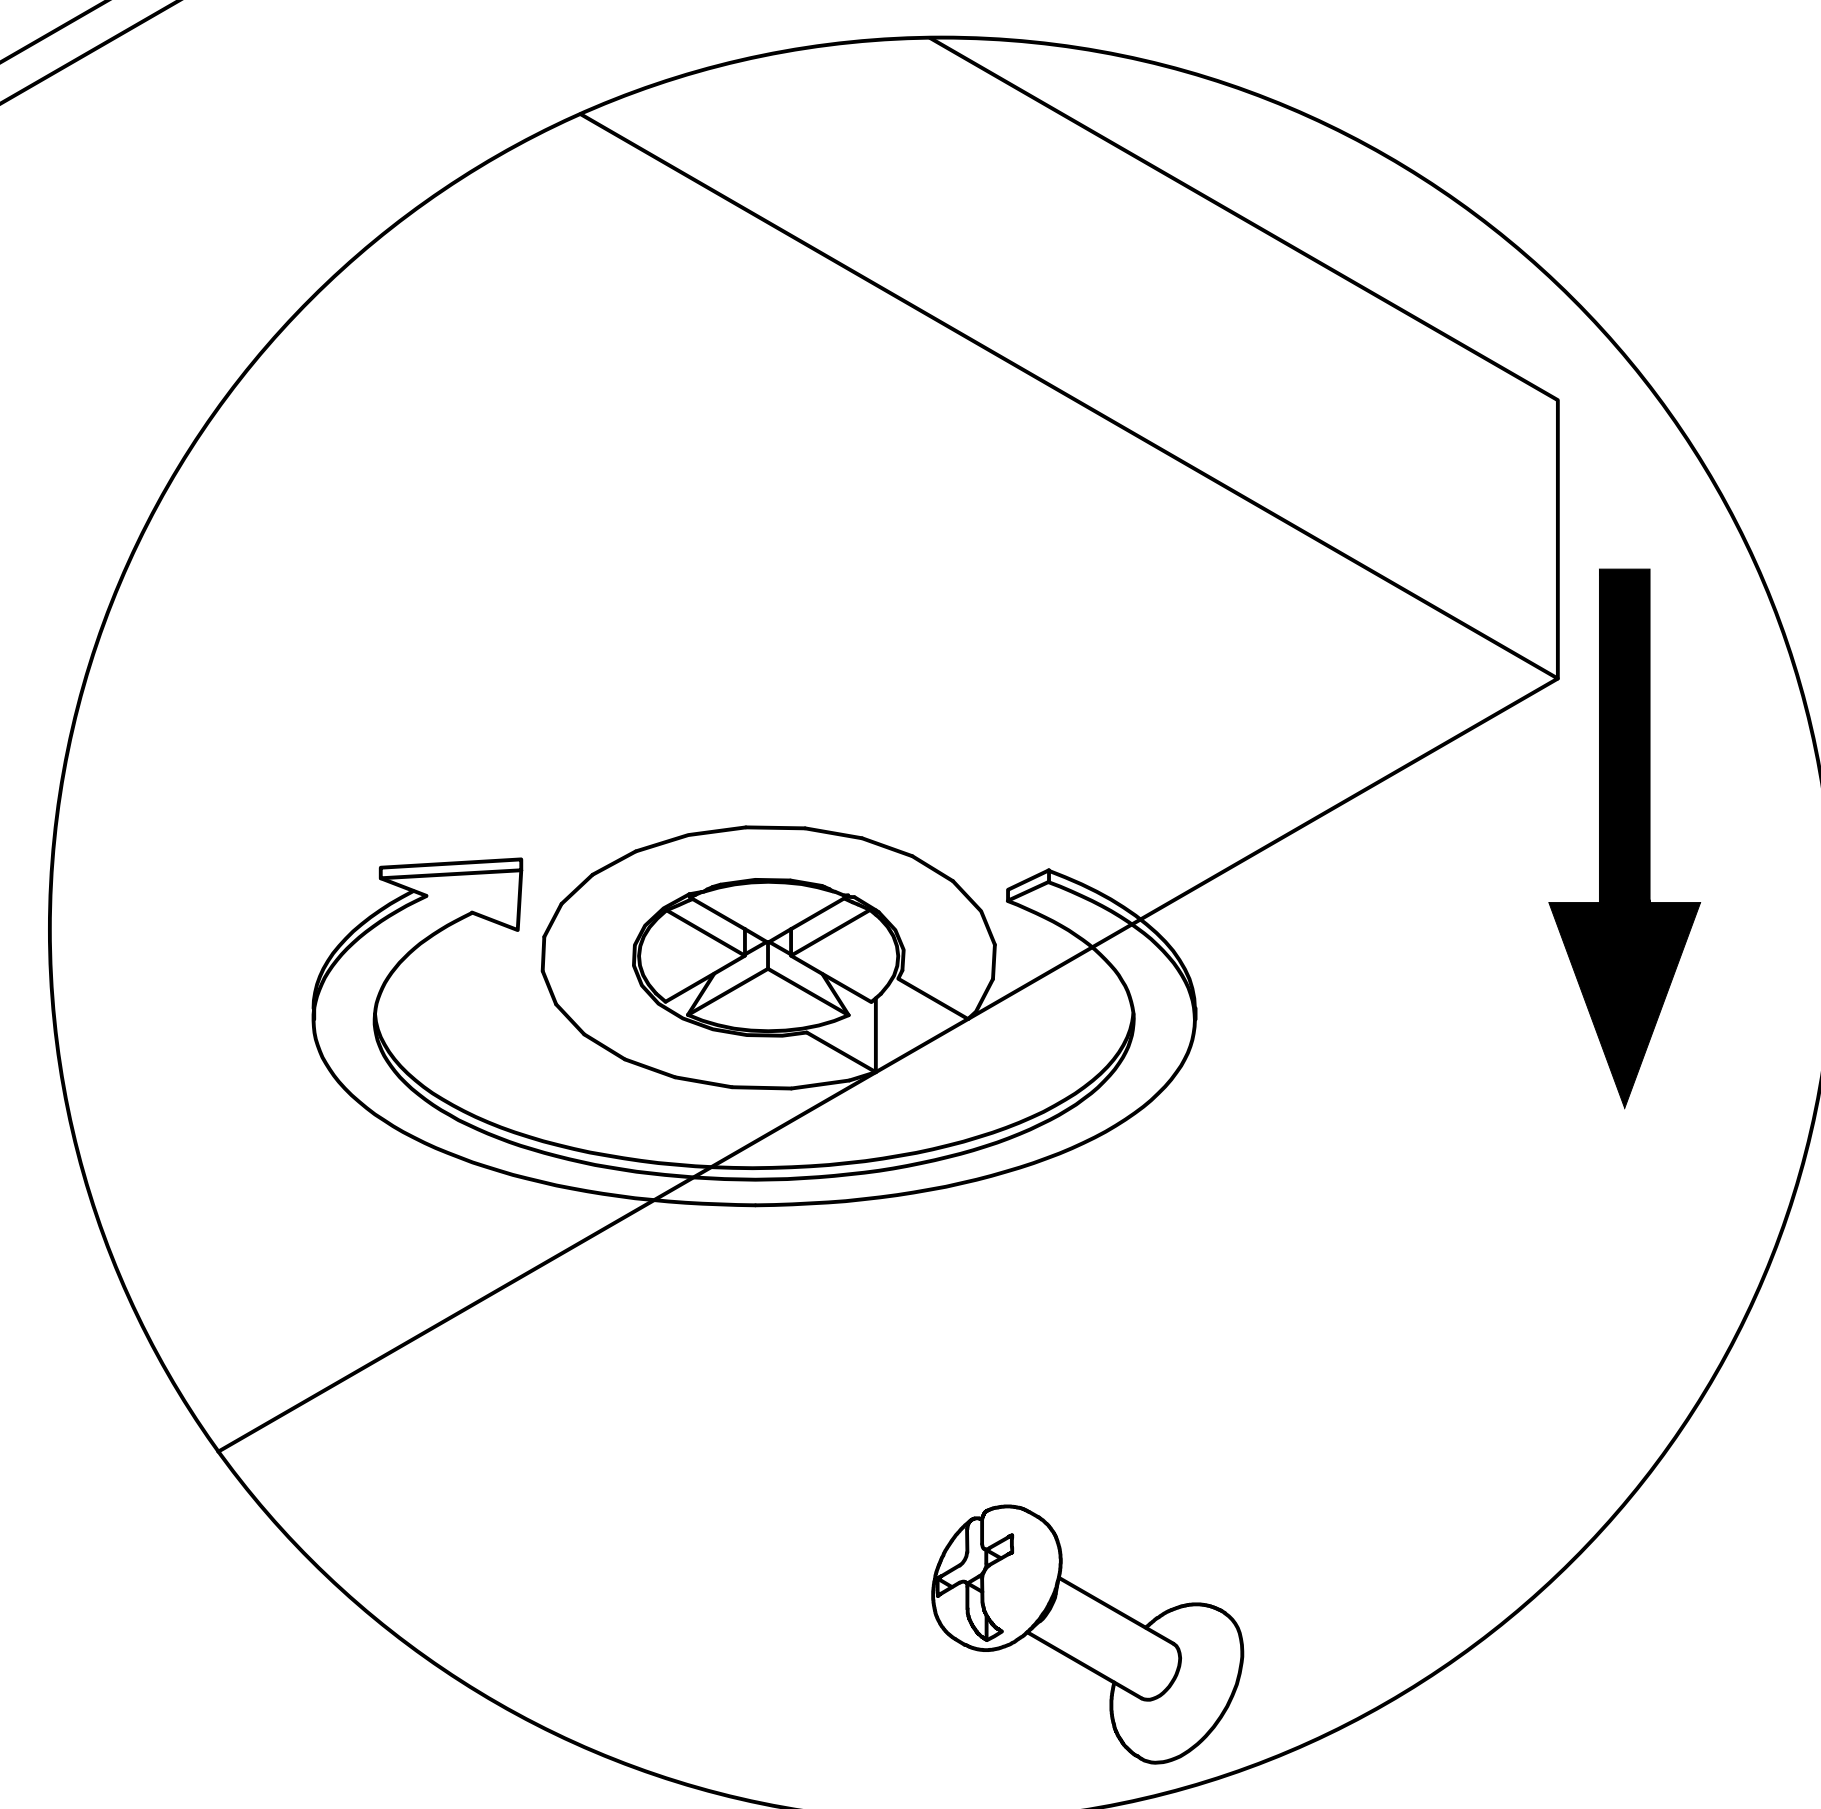





11

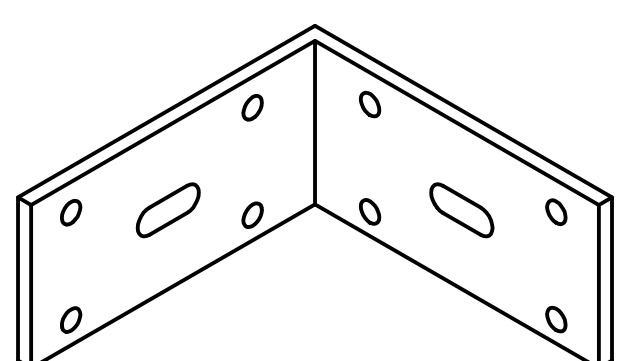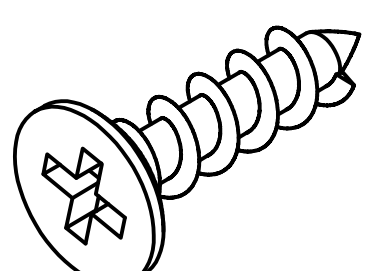  
J x 2 	D x 16  Ø 4 x 14 mm	
--	--	--

  - Refer to the illustration.
Secure (J) with screw (D).

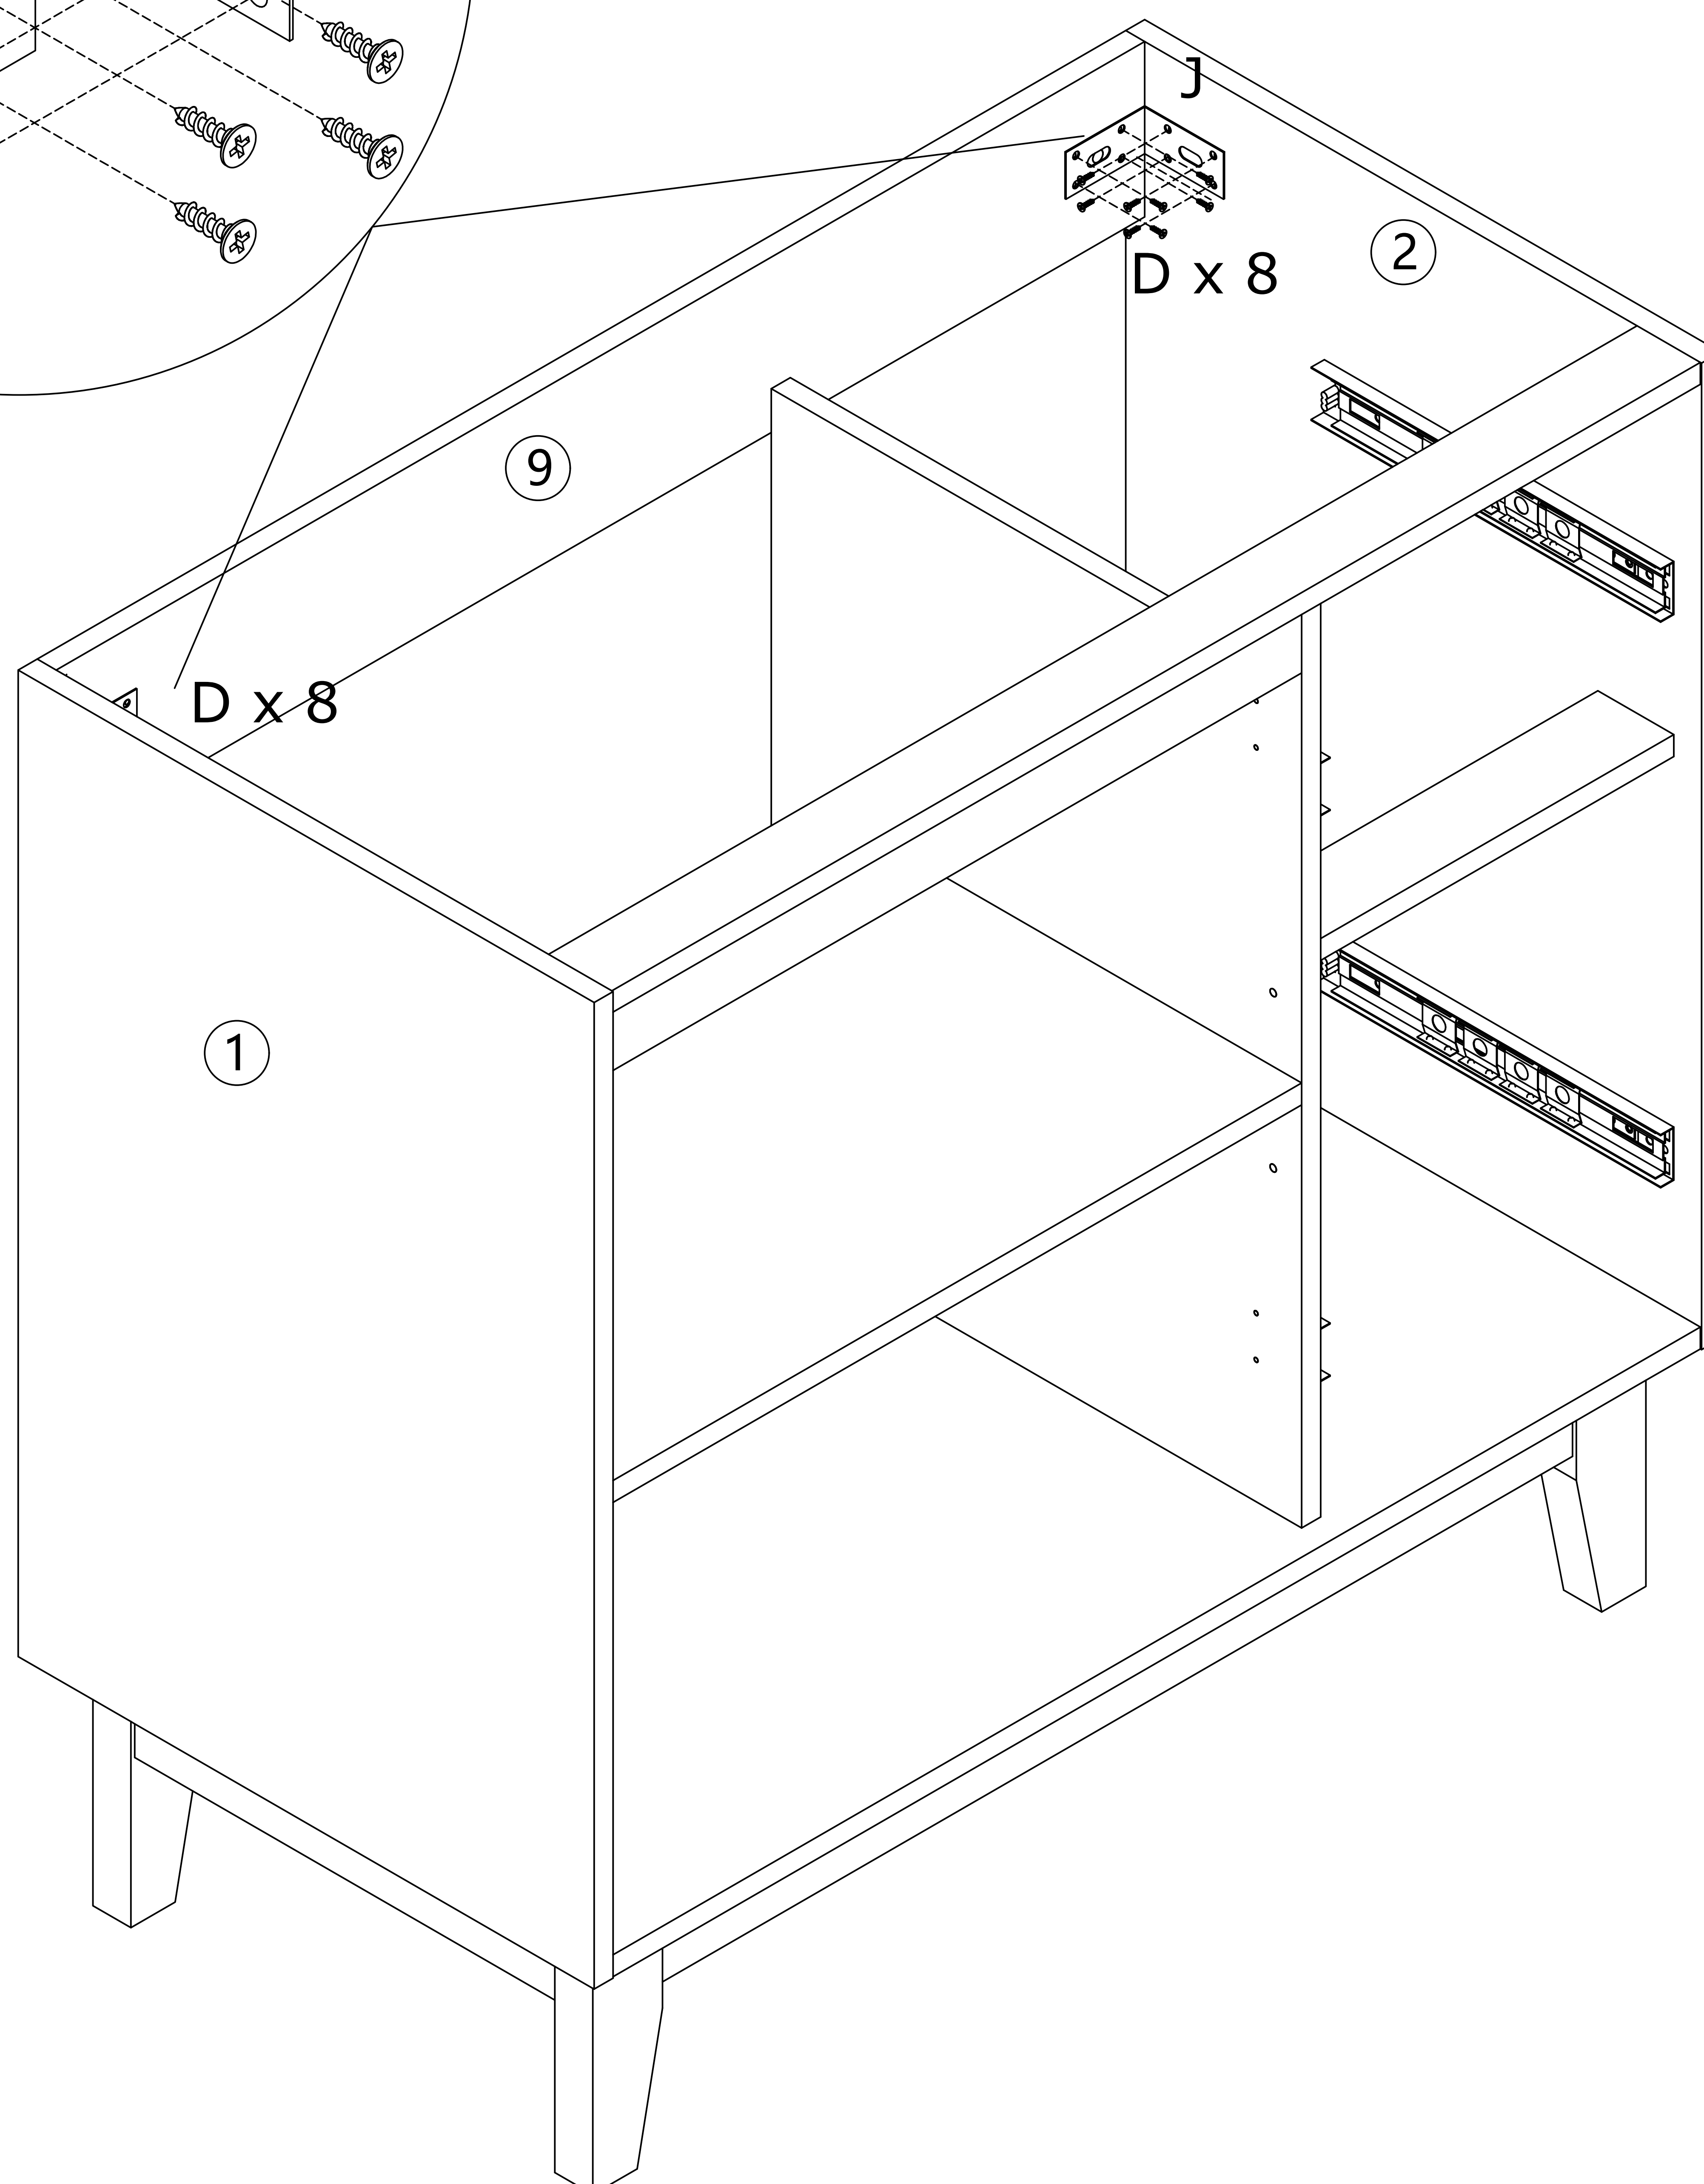
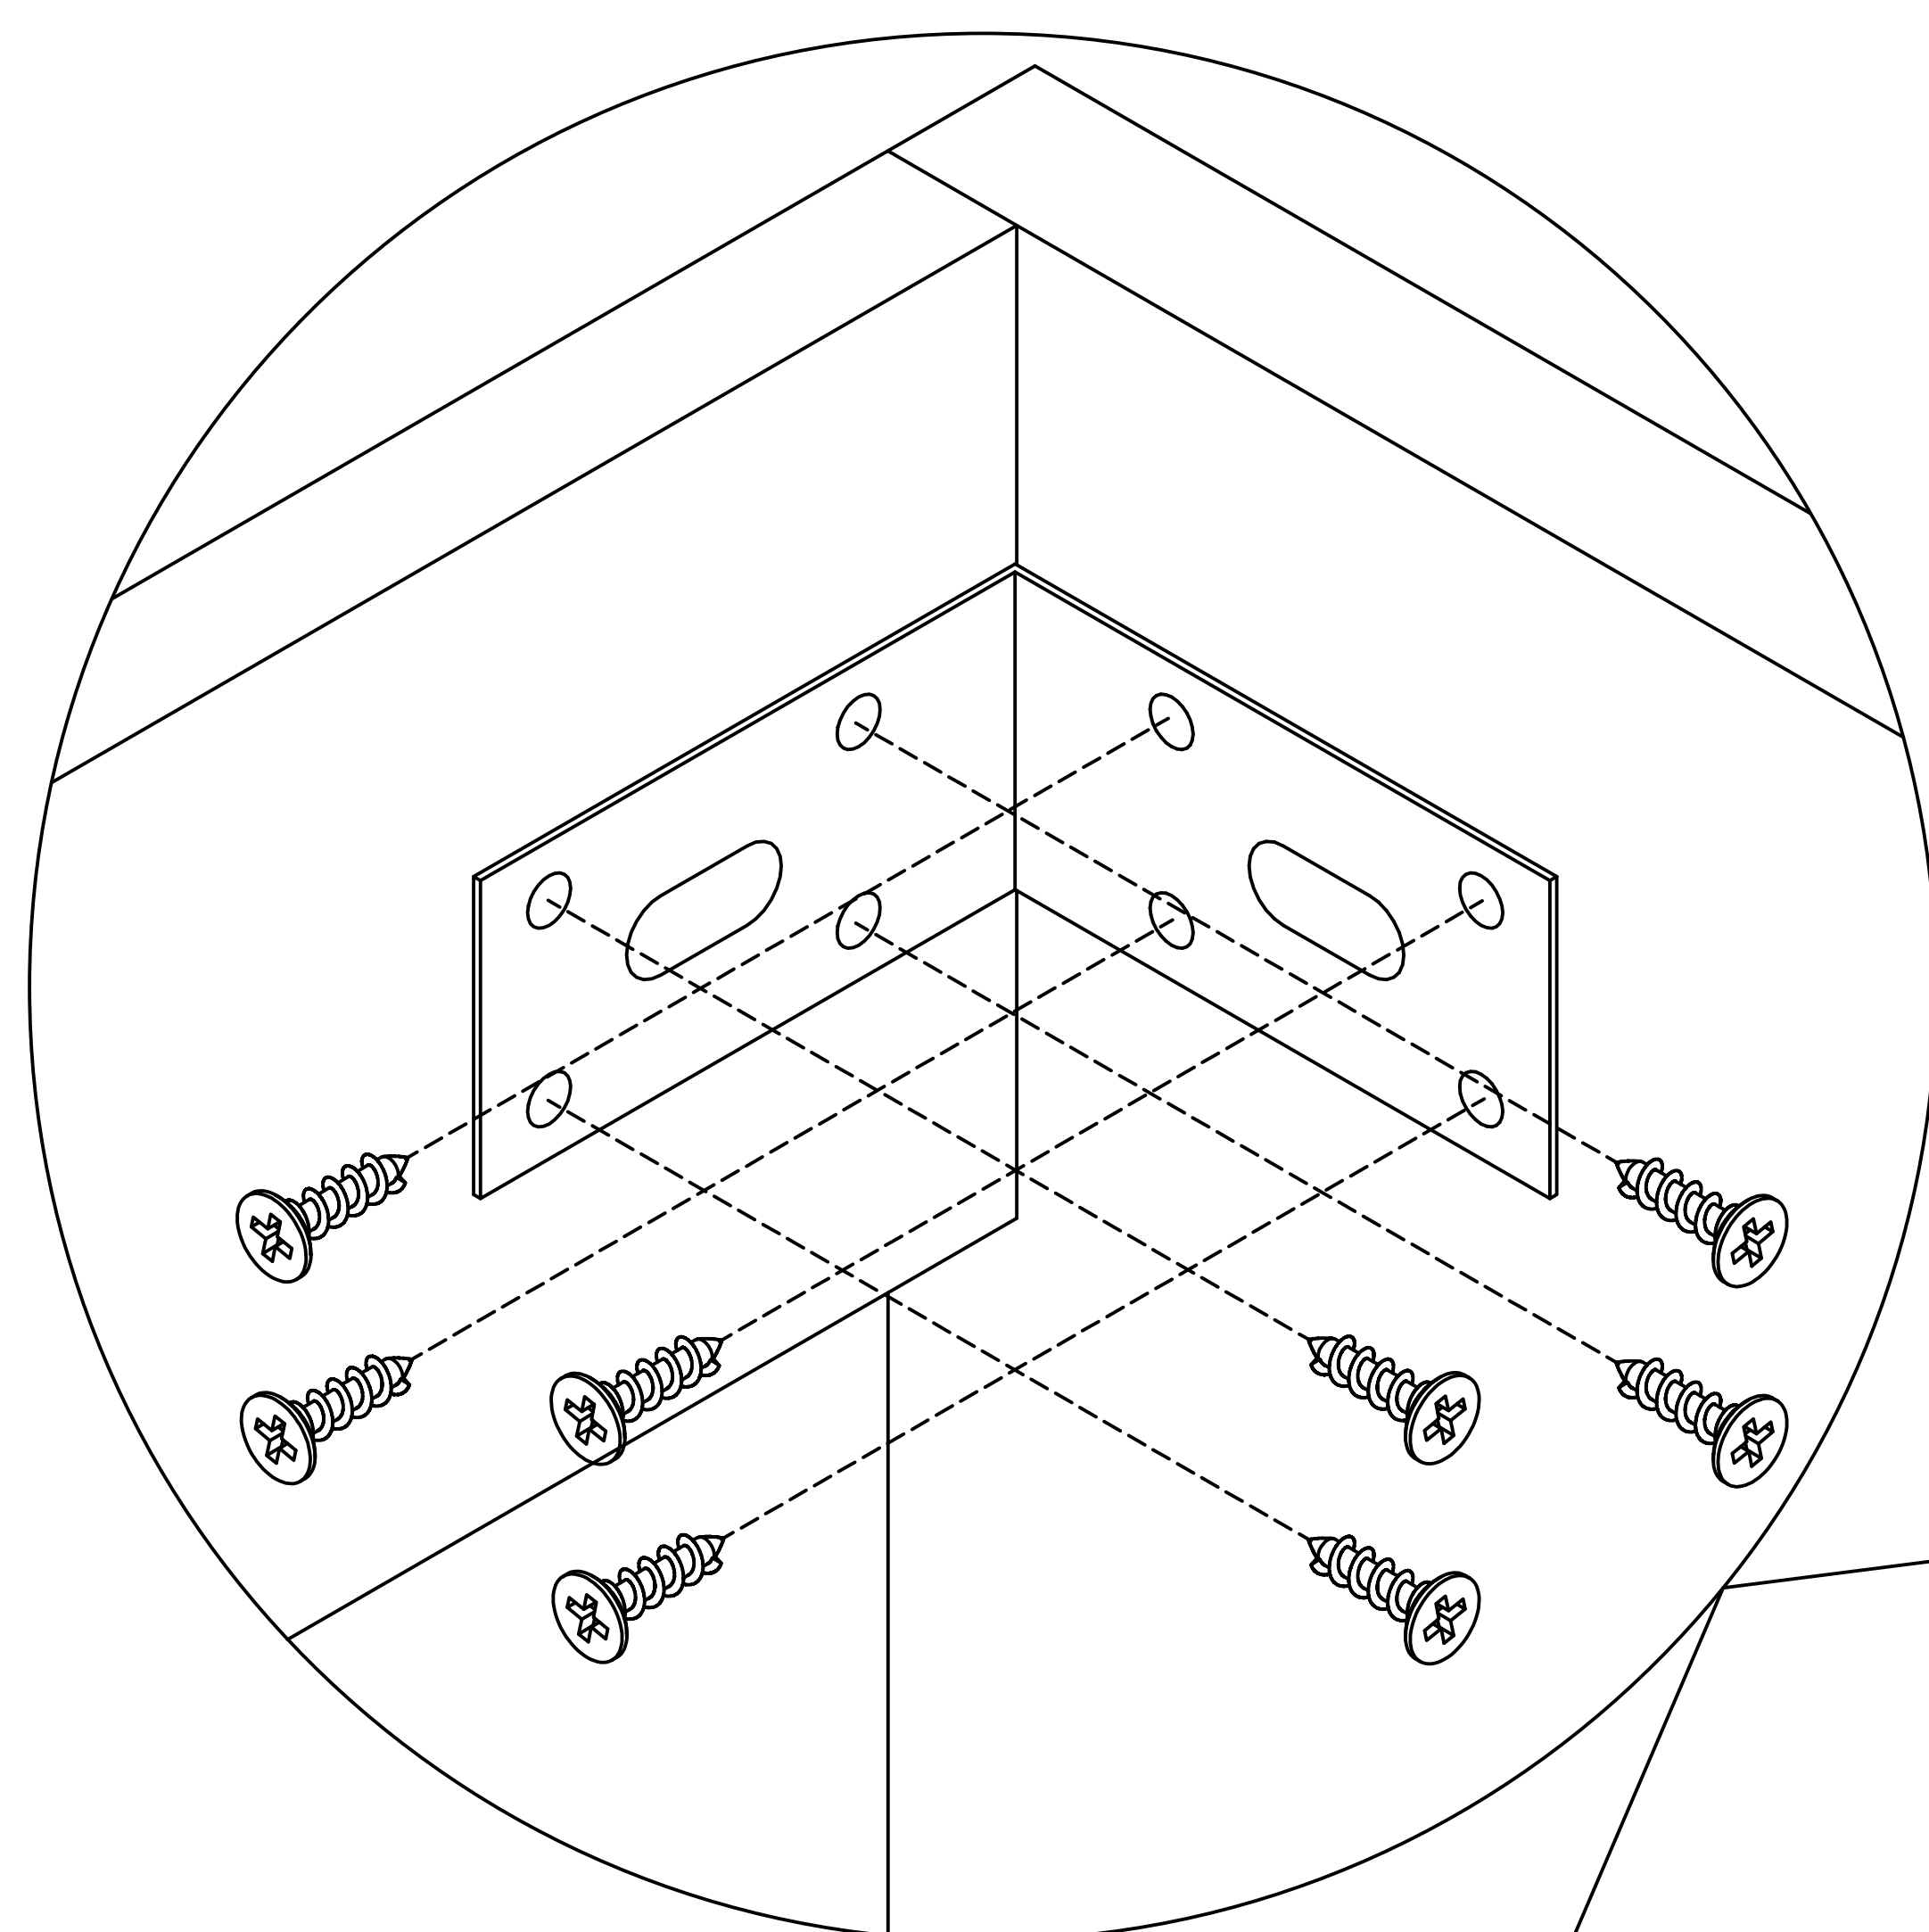


12

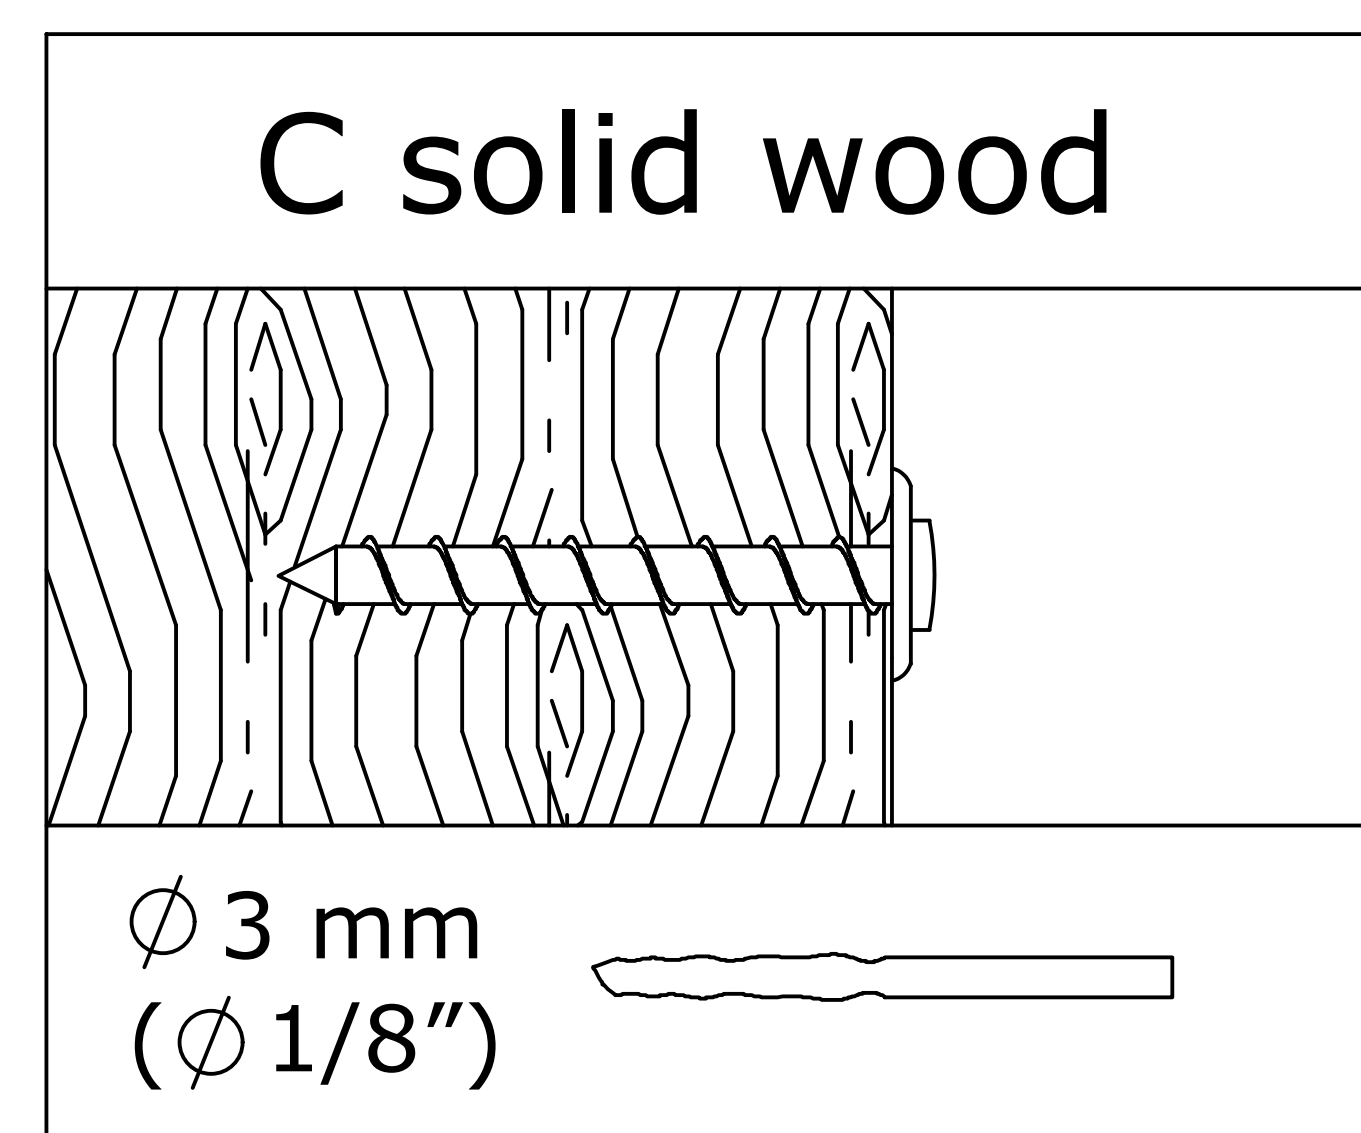 
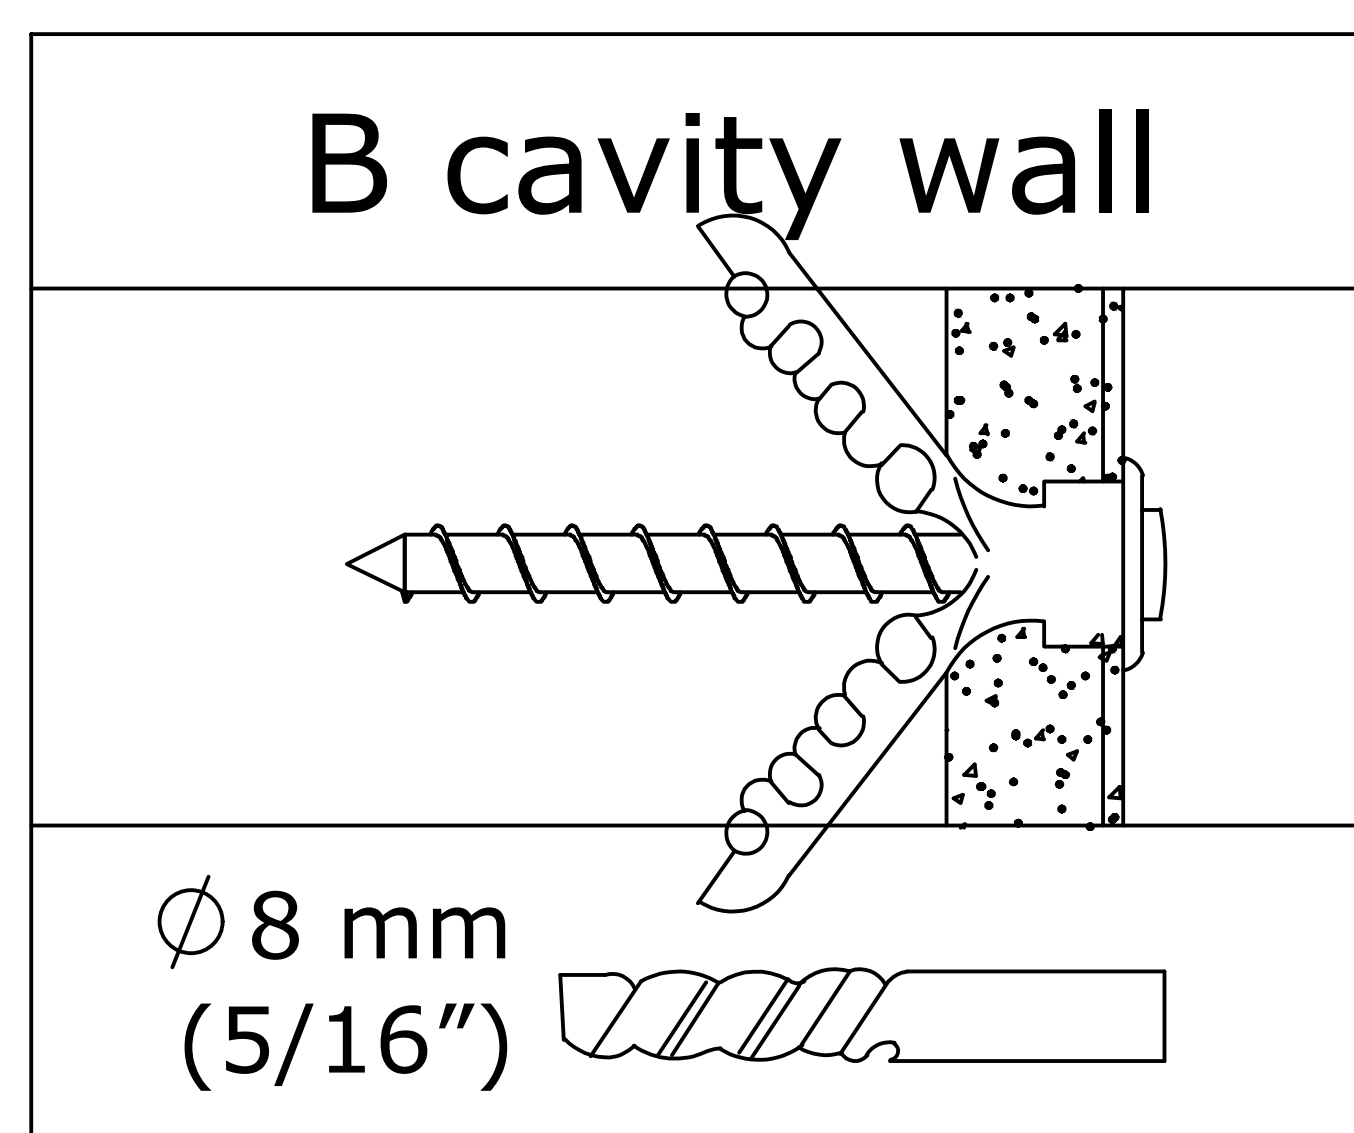 
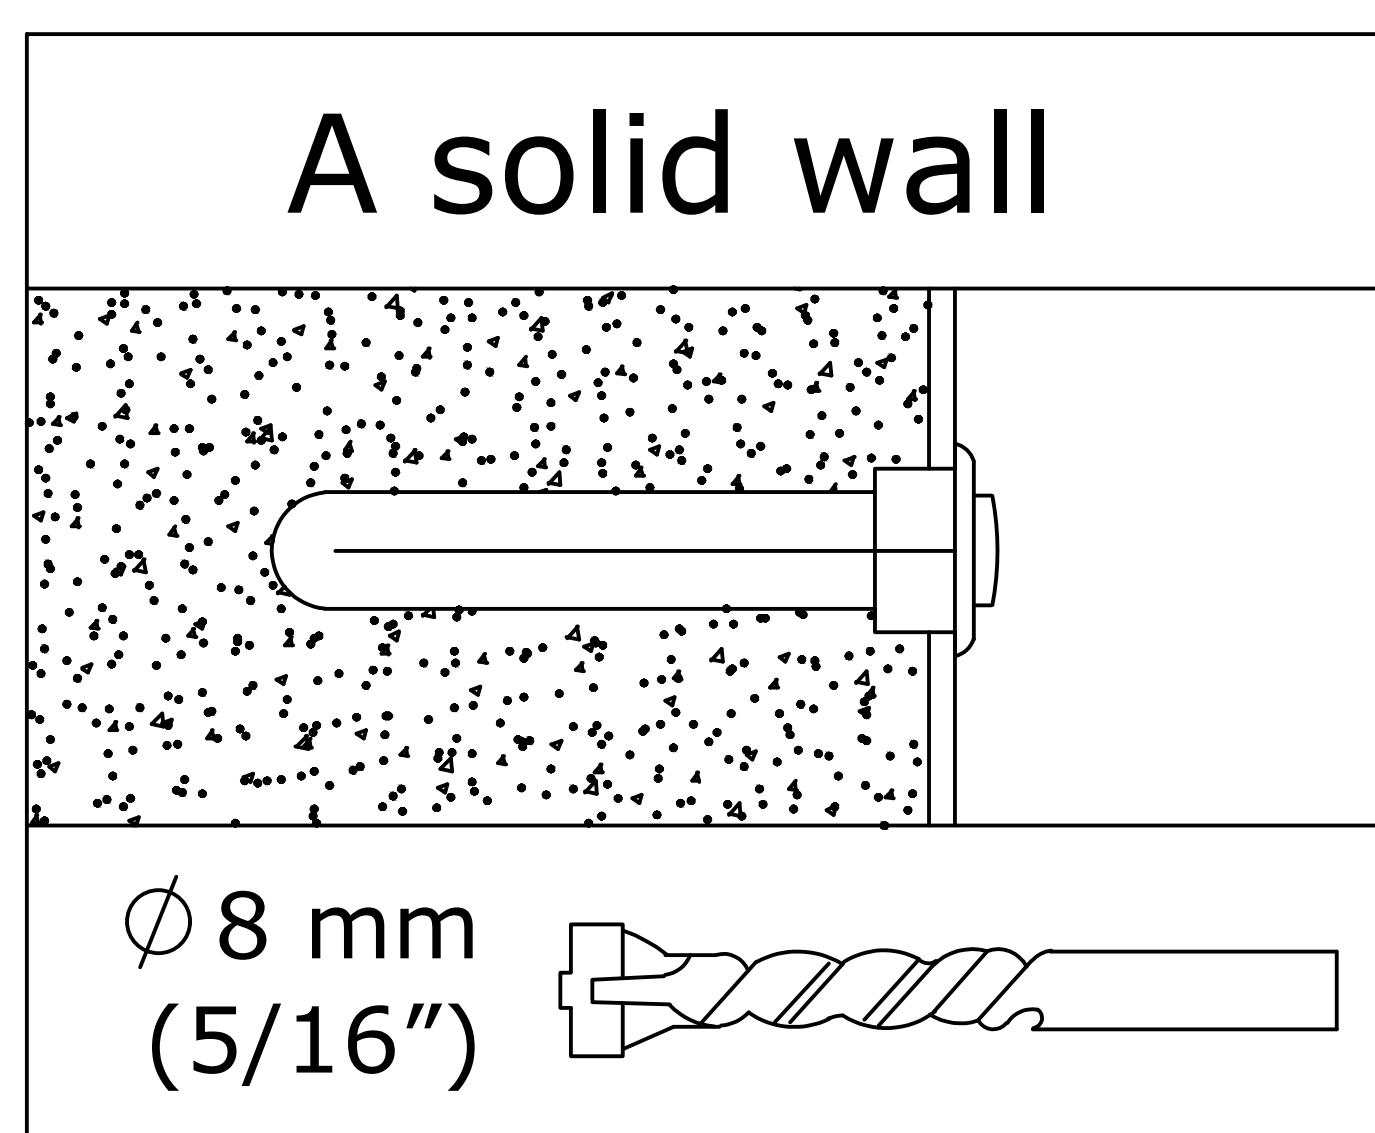 
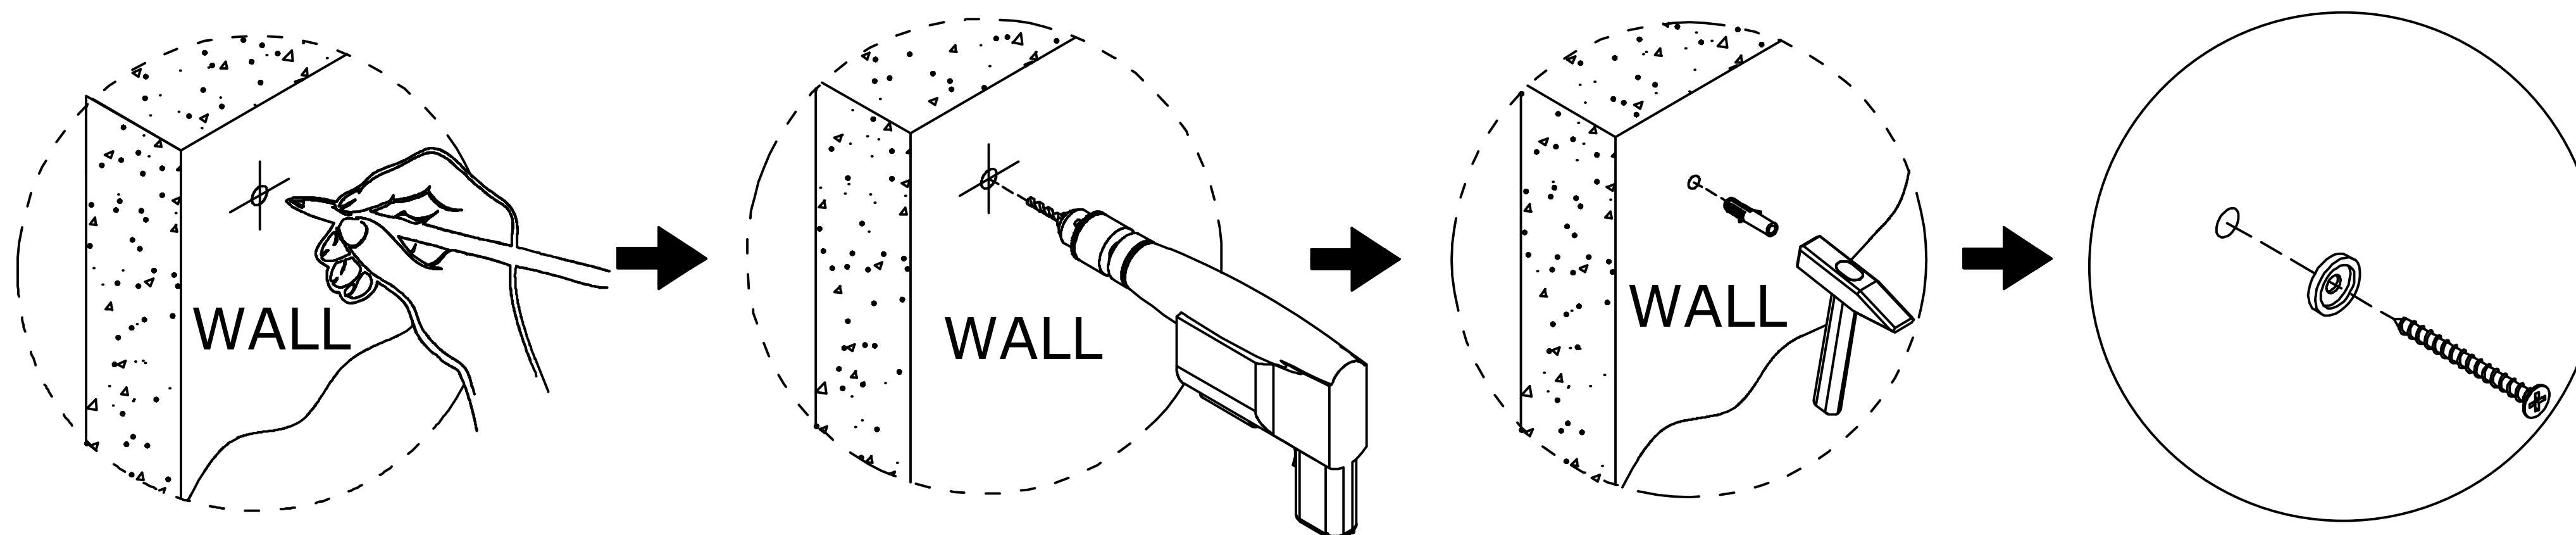 


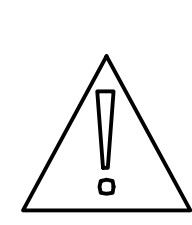  **Warning:** If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

  
1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes in to the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

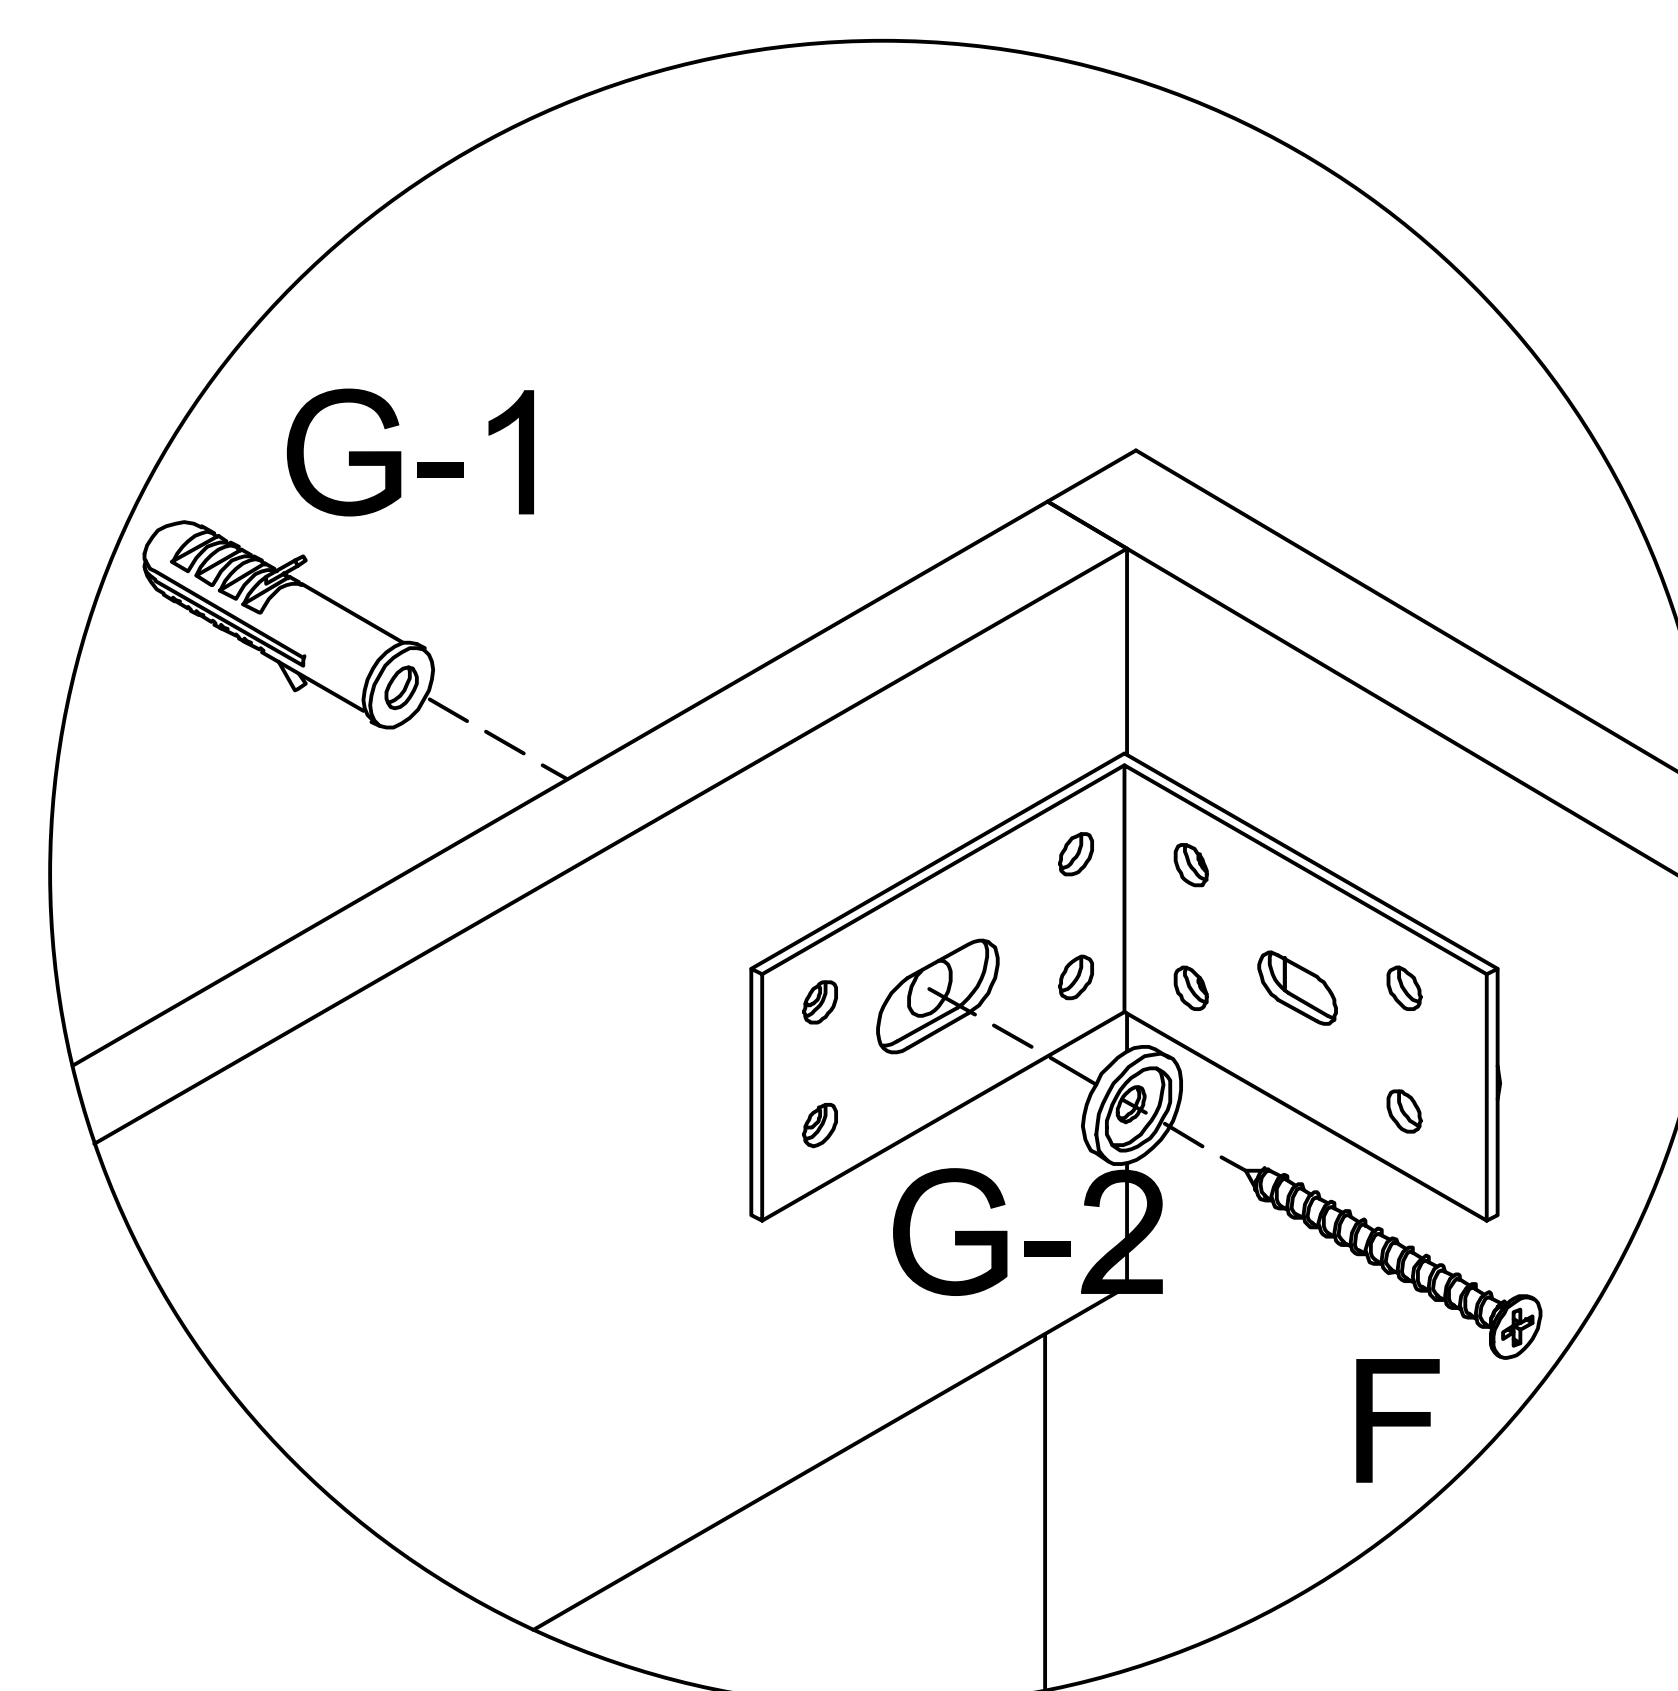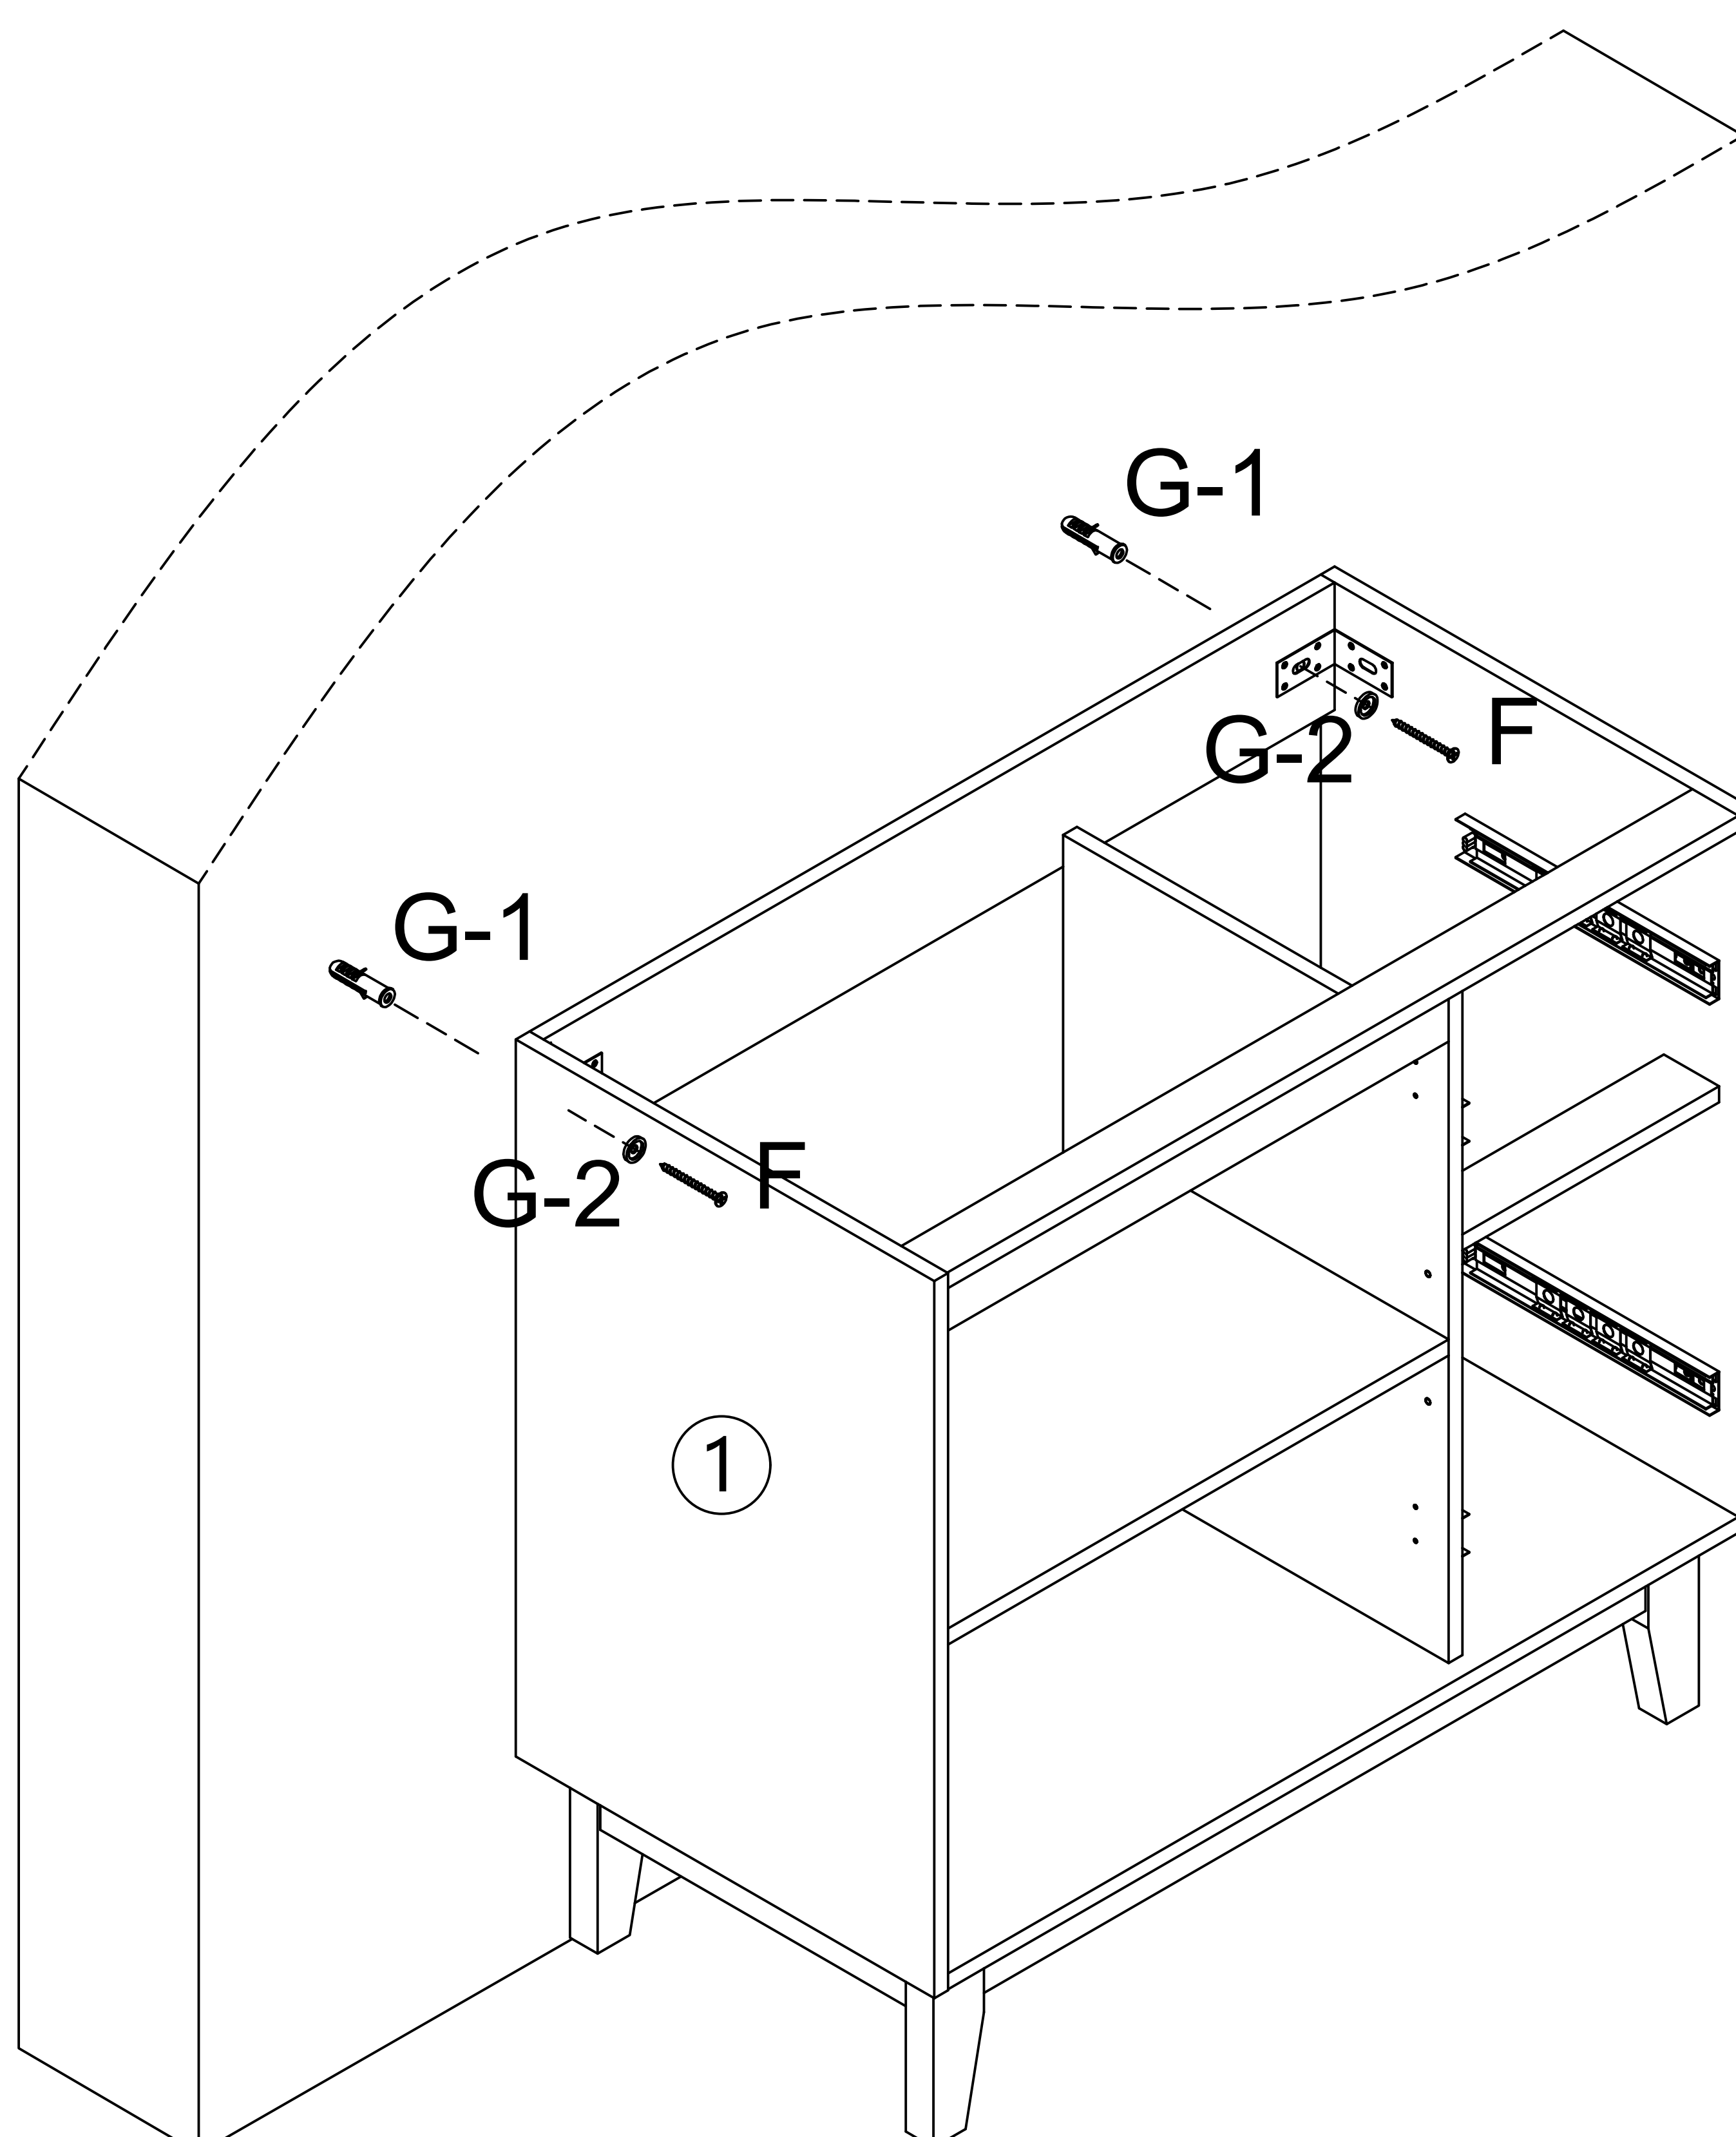





13

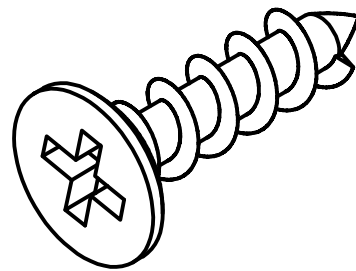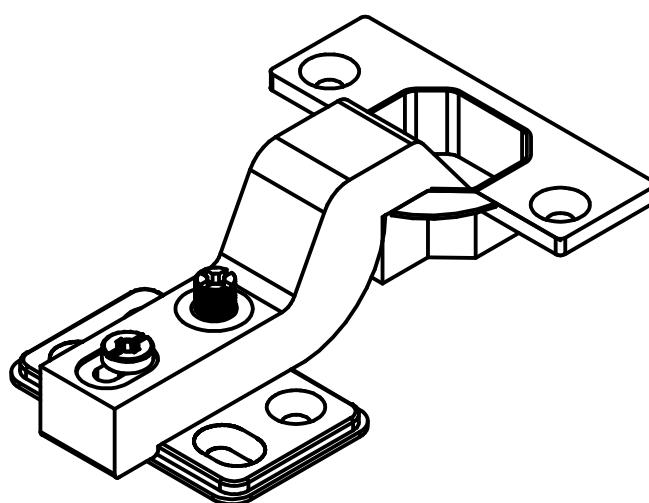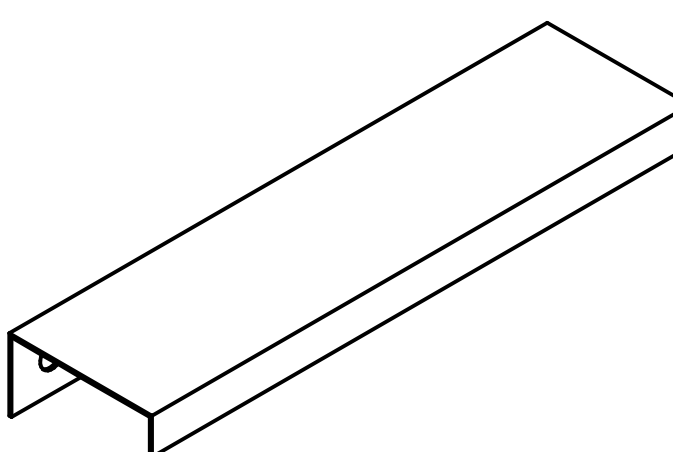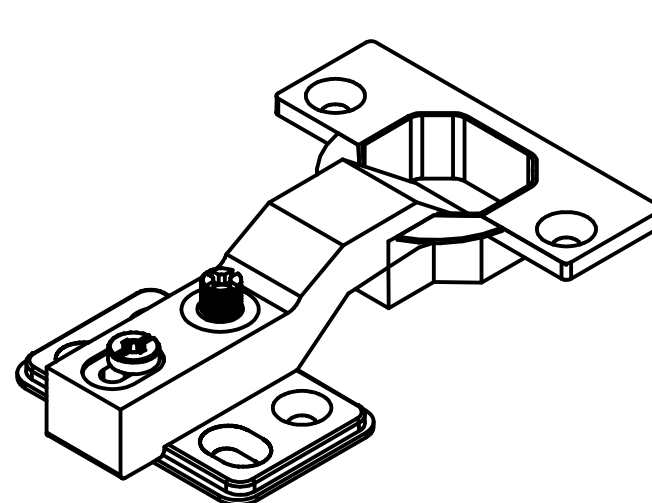    D x 12	E x 2	K x 2	M x 2	
 Ø 4 x 14 mm				

 - Refer to the illustration.
Secure the Hinges (E) and (M) with Screw (D), and secure (K) with Screw (D).



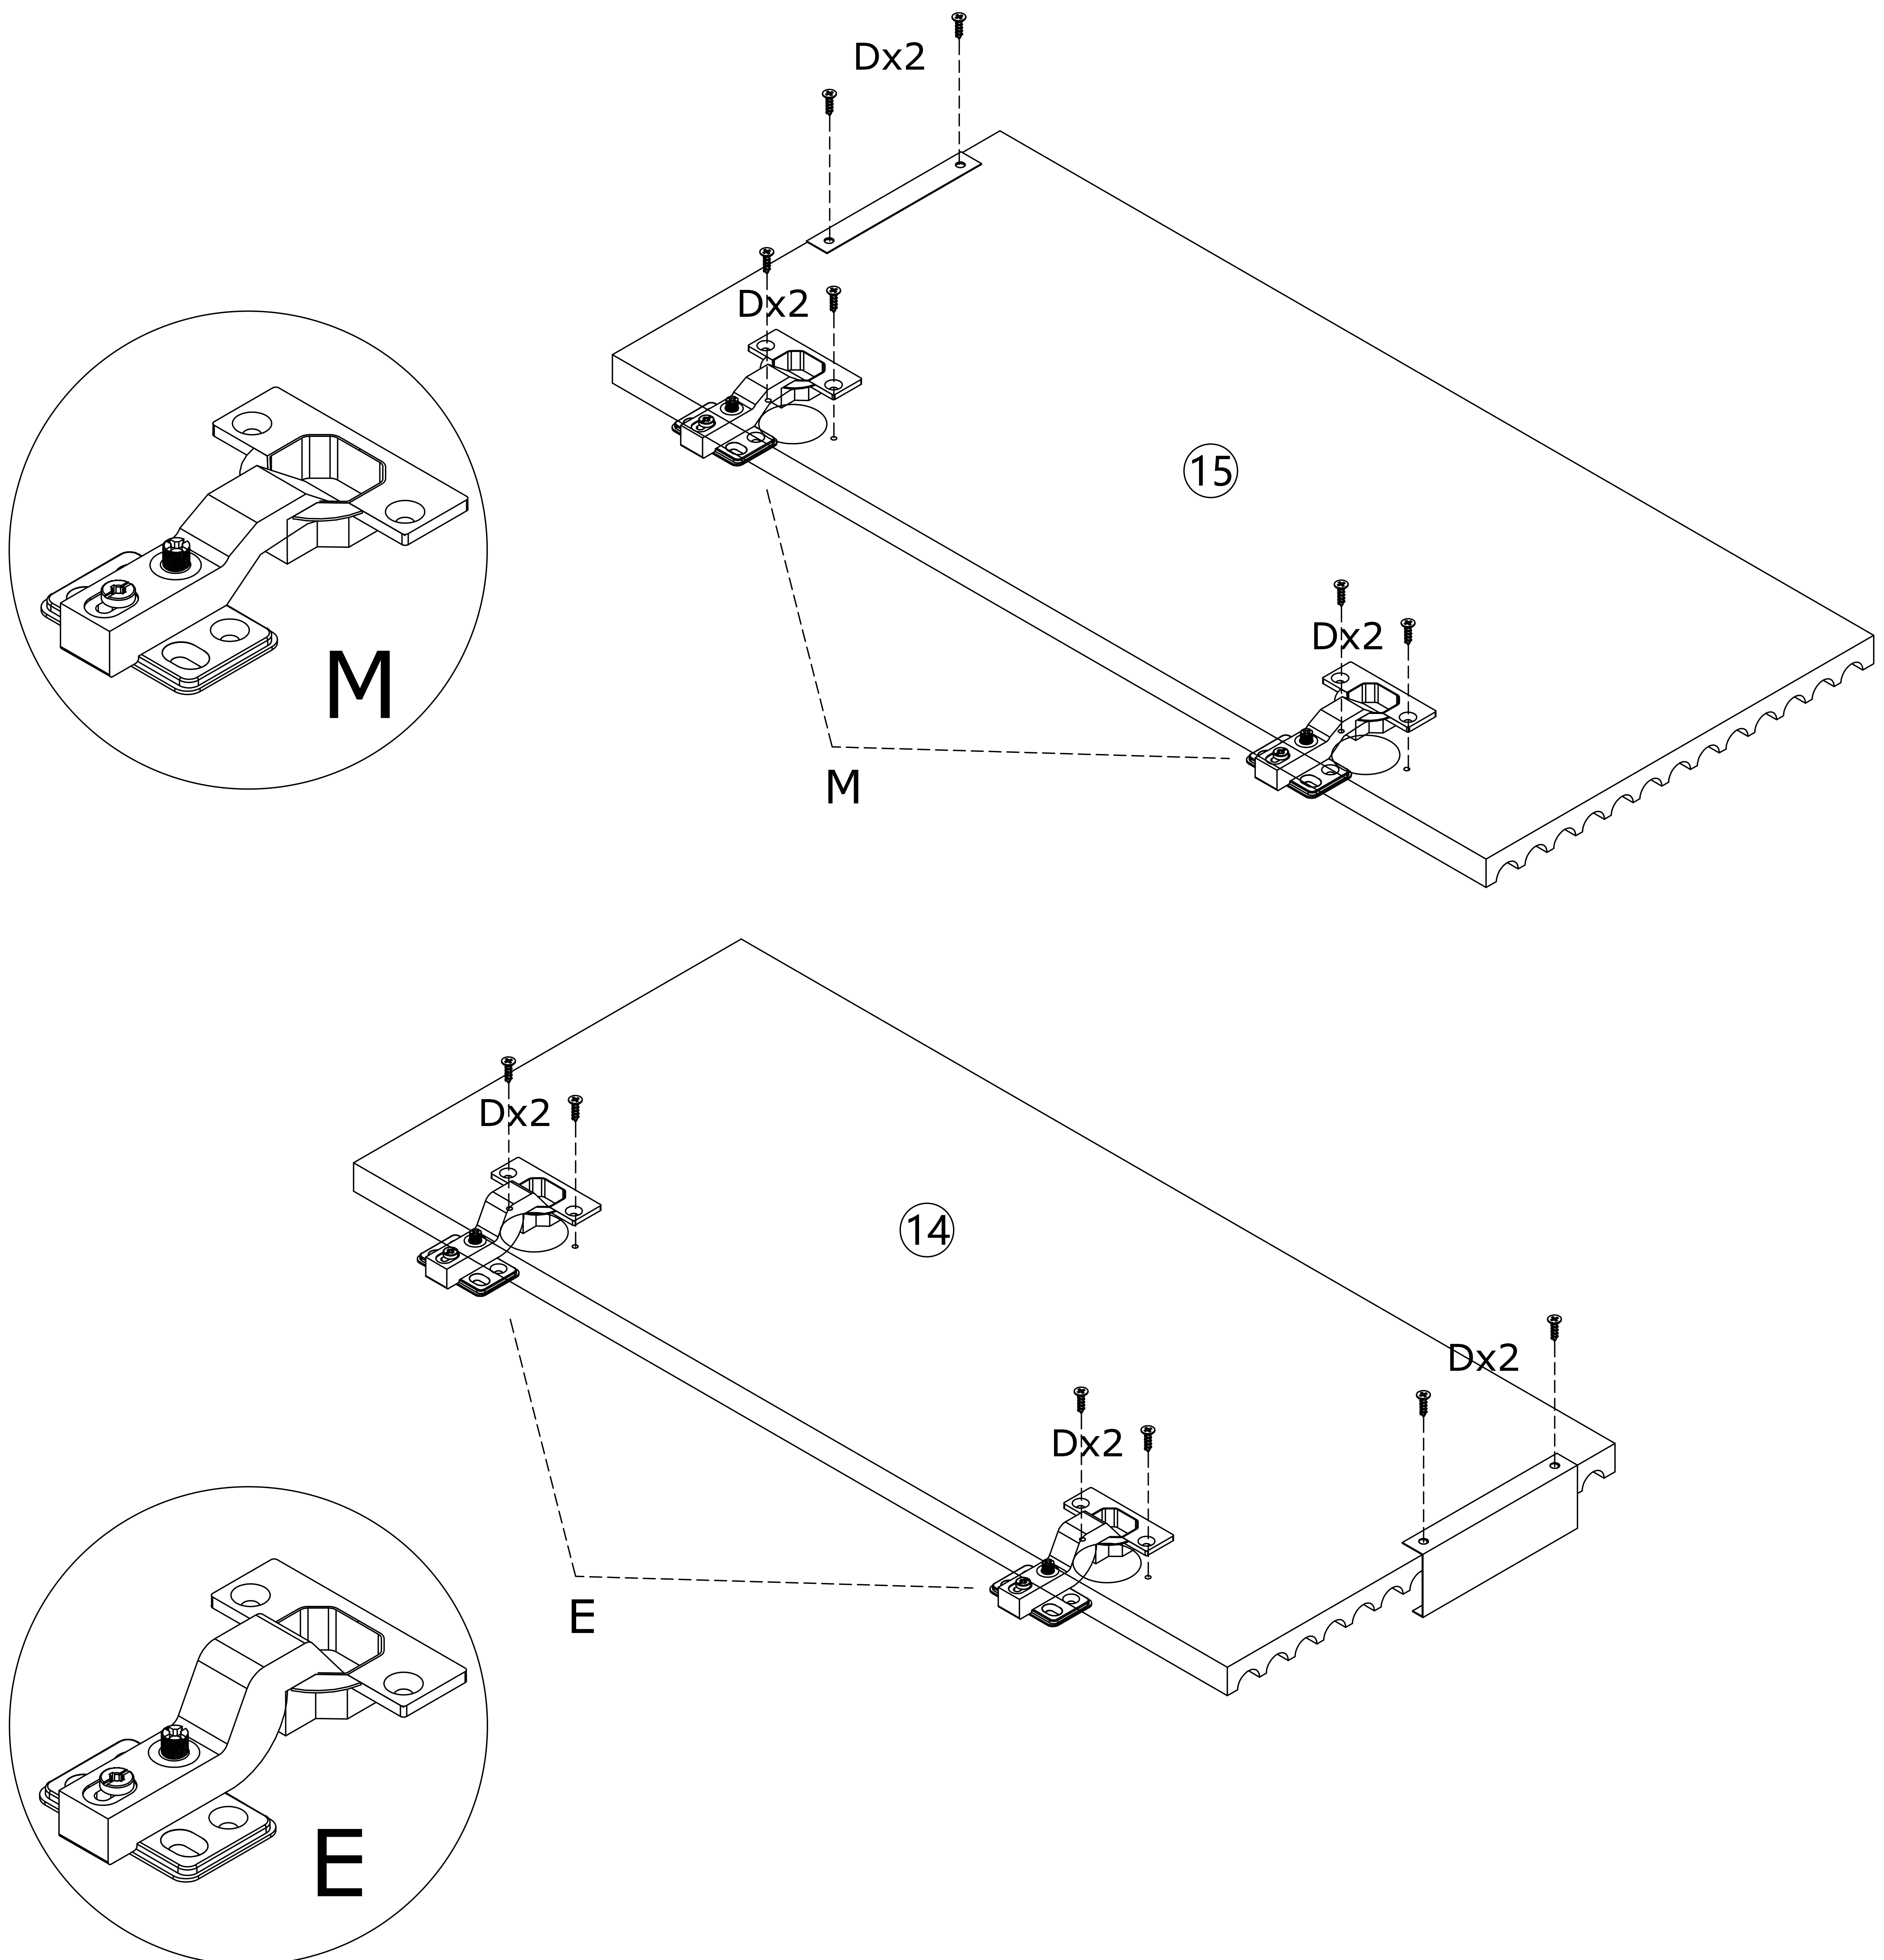


14

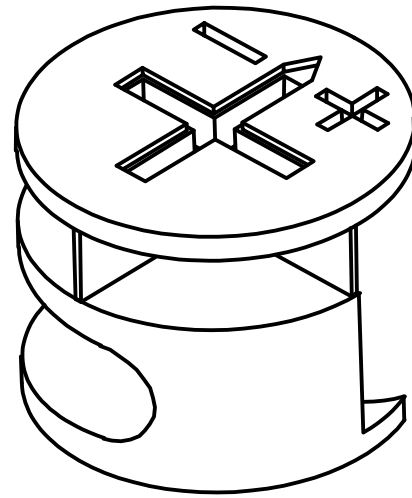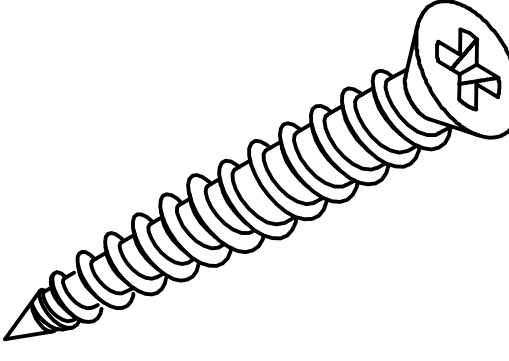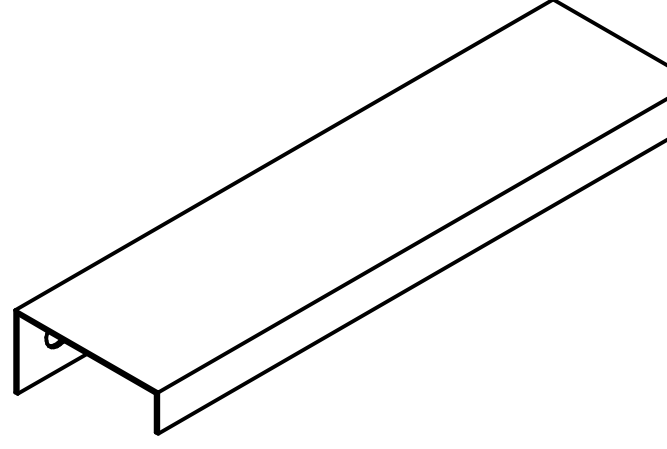   
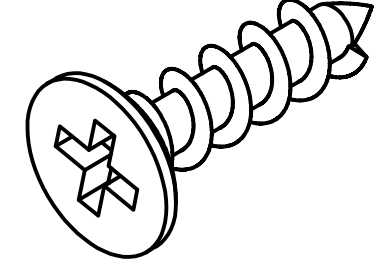 
A x 8  Ø 15 x 12 mm	N x 8  Ø 4 x 35 mm	K x 2 	D x 4  Ø 4 x 14 mm	
--	---	--	---	--

- Refer to the illustration.

 
 
 
Secure the connected boards with Screw (N), connect the boards, tighten Latch (A), and secure (K) with Screw (D).

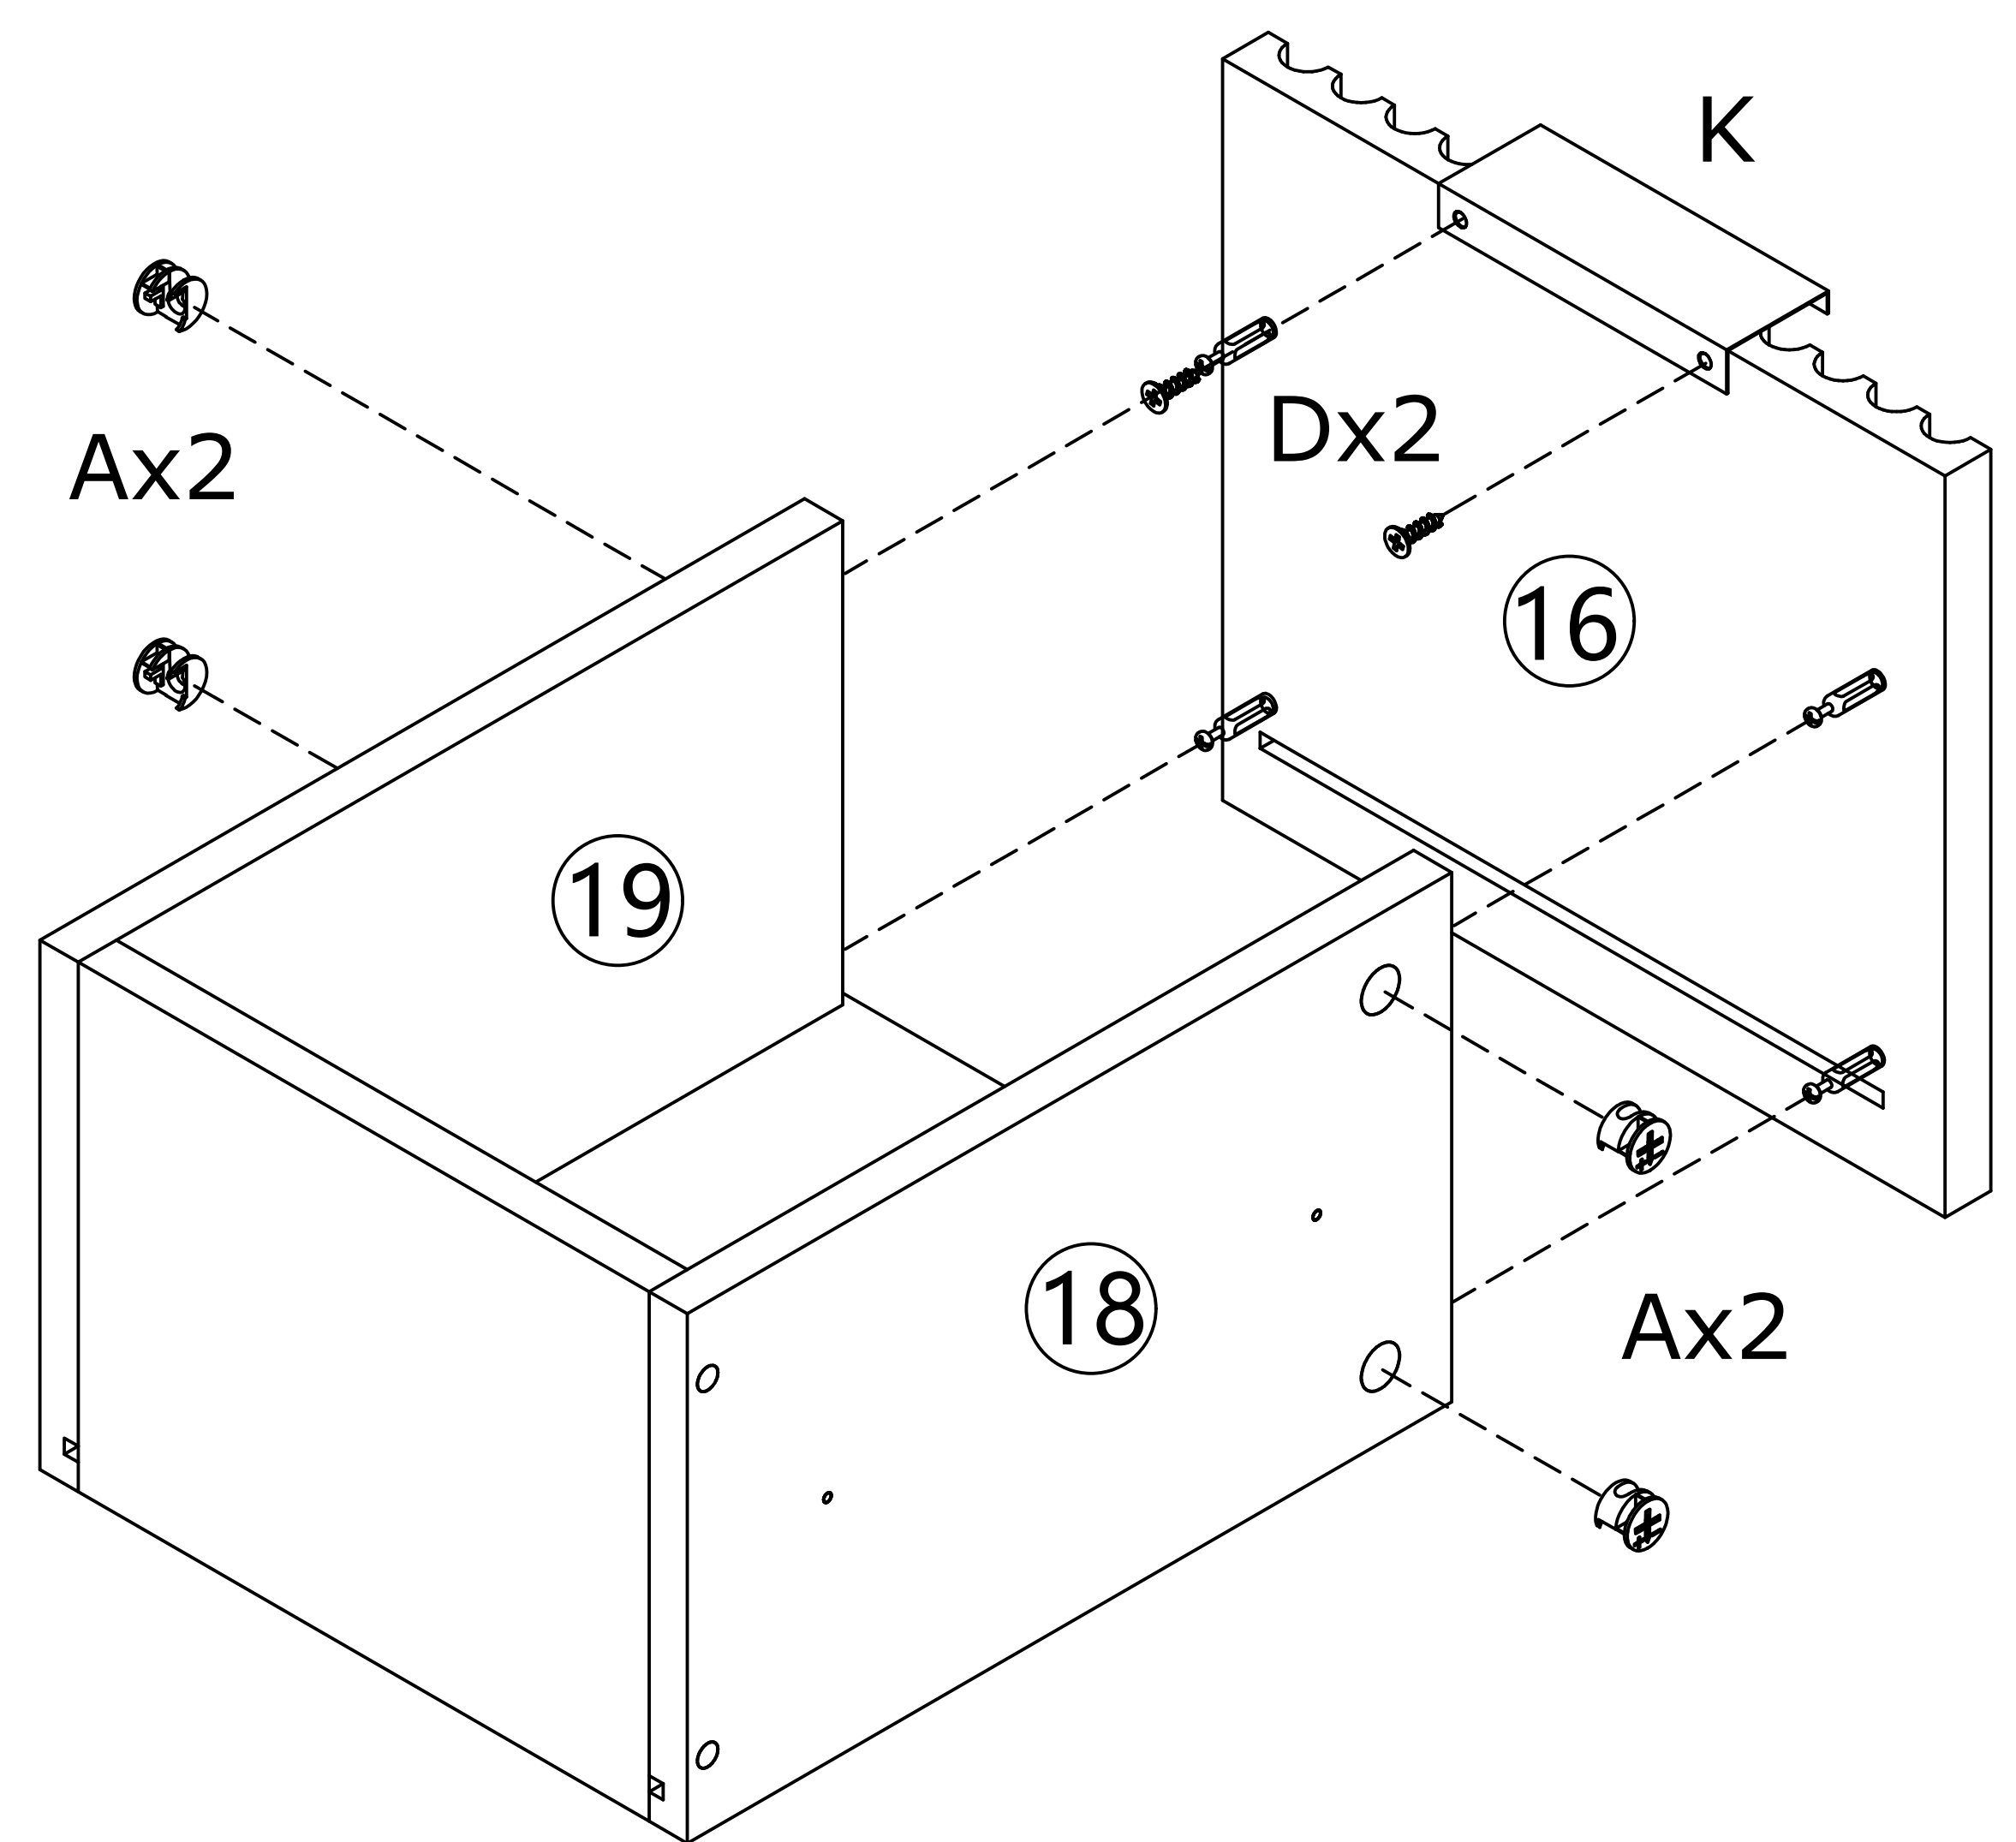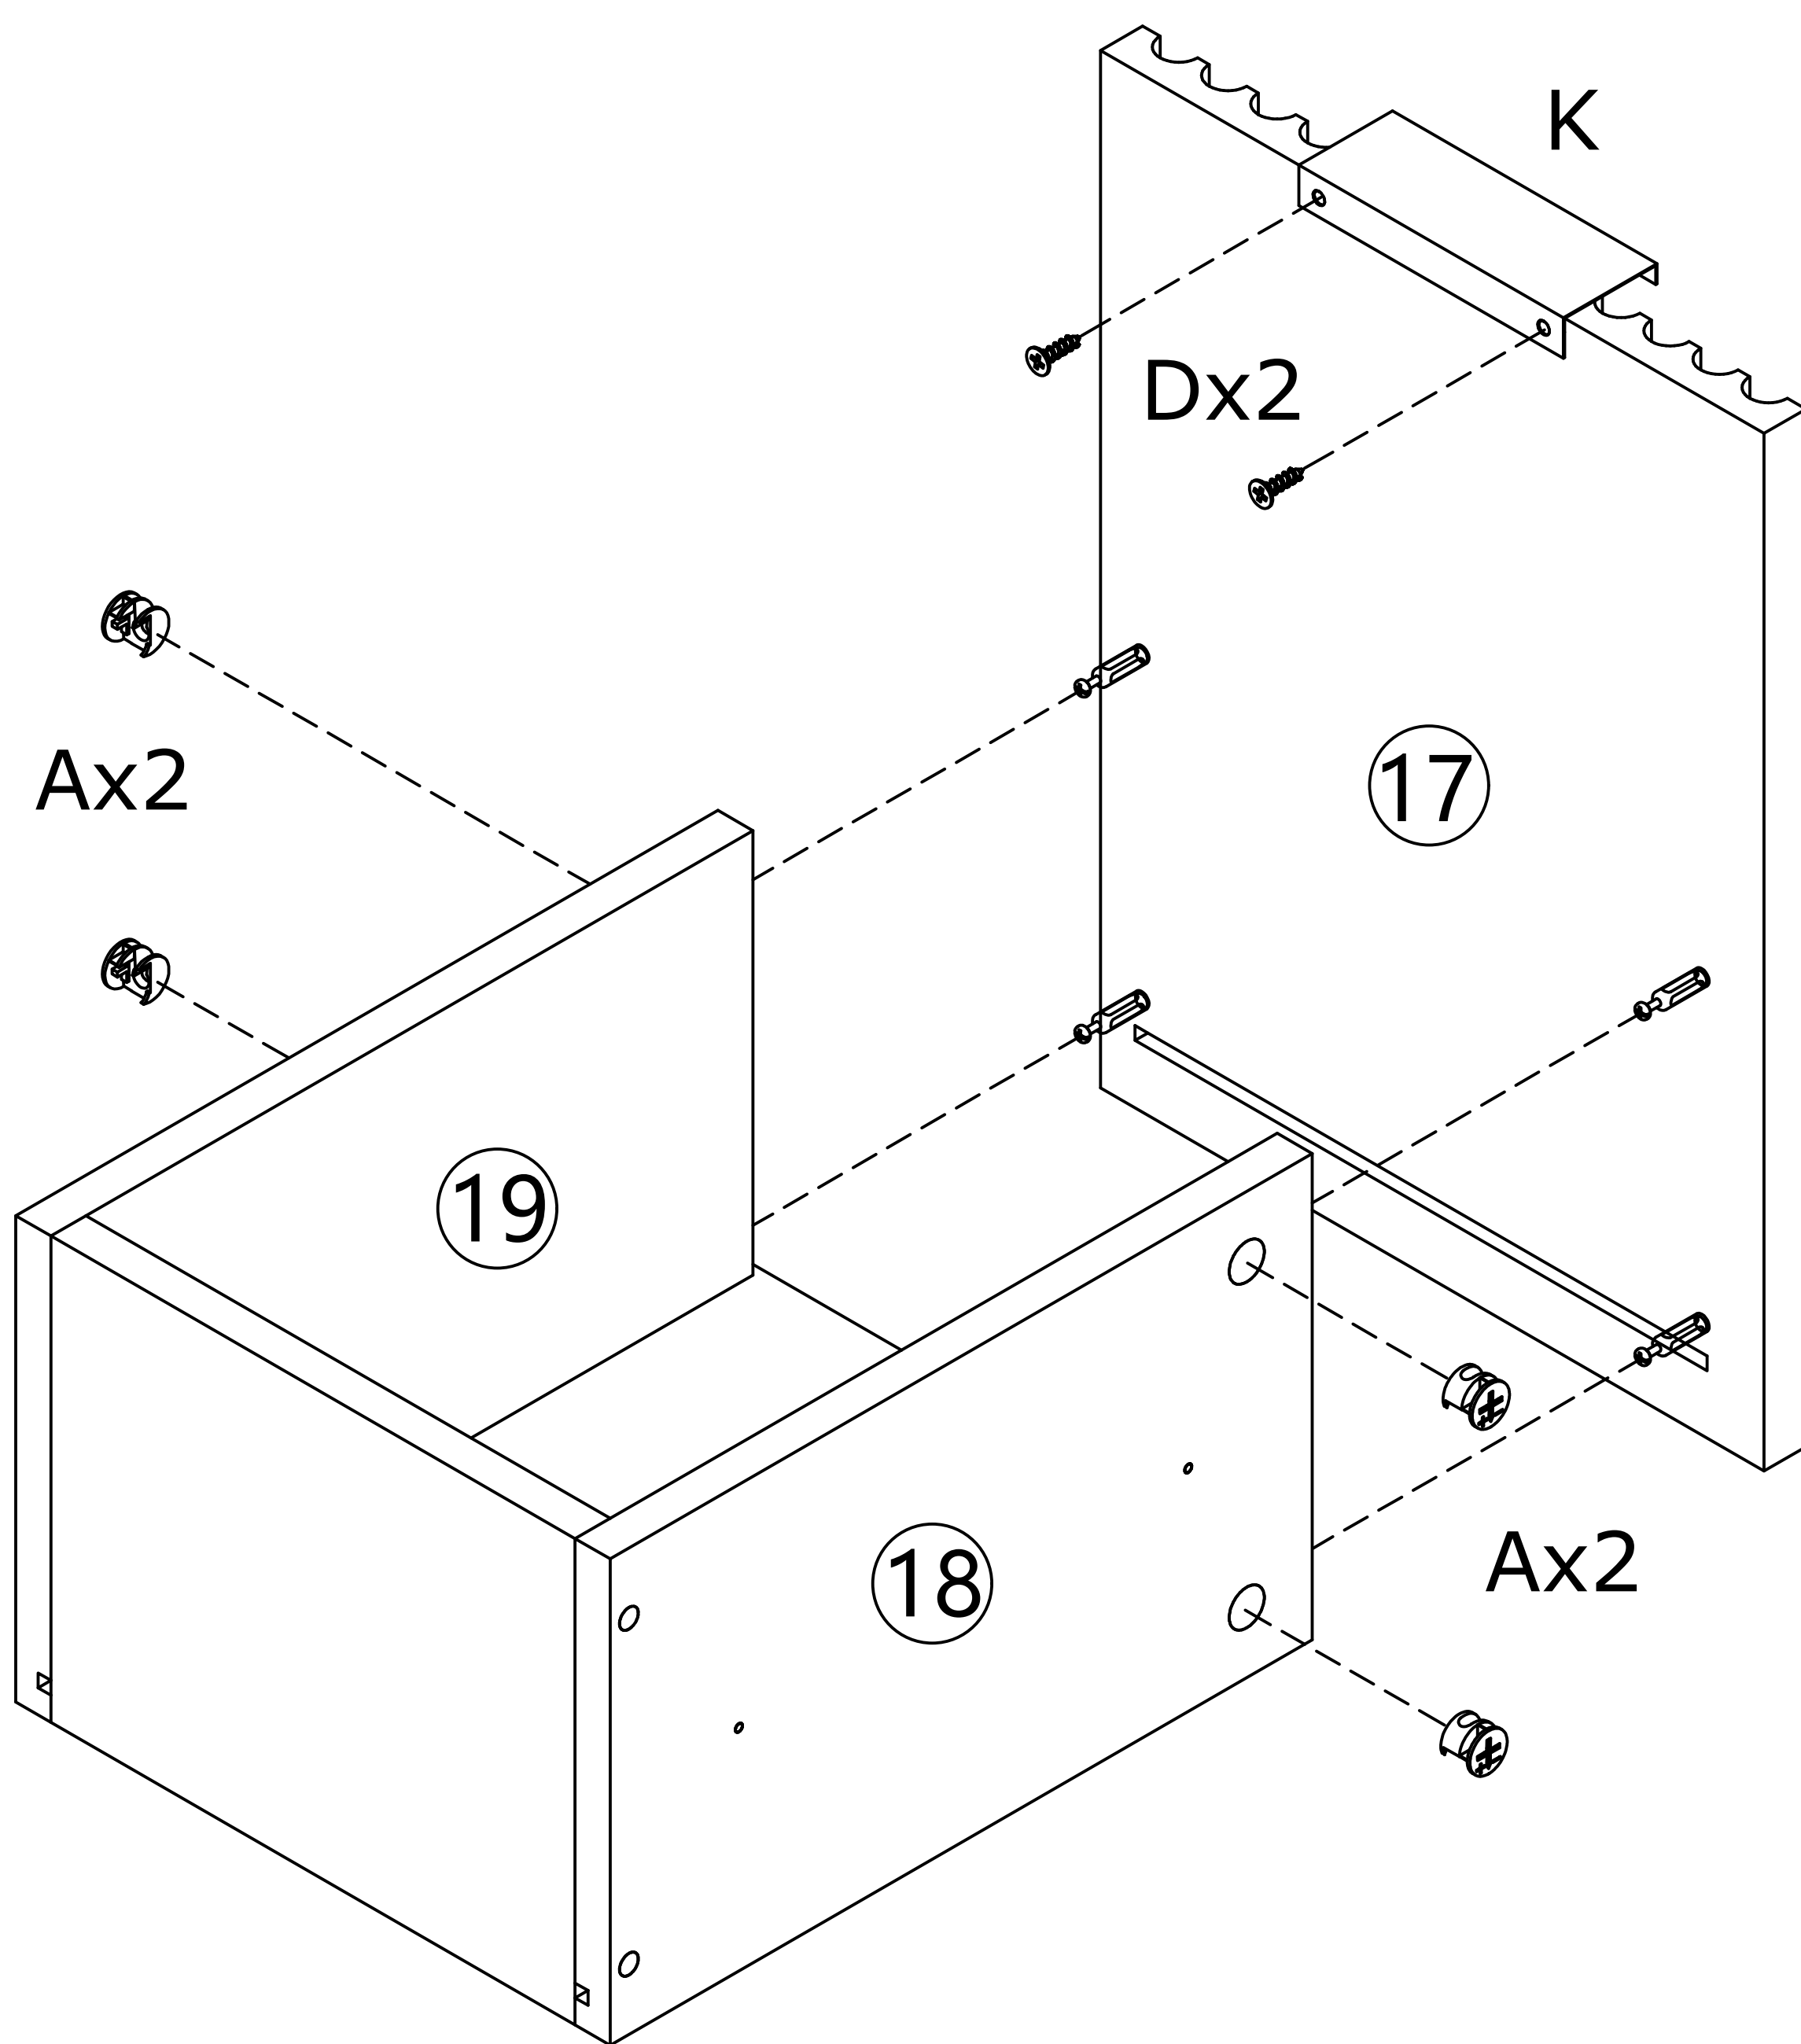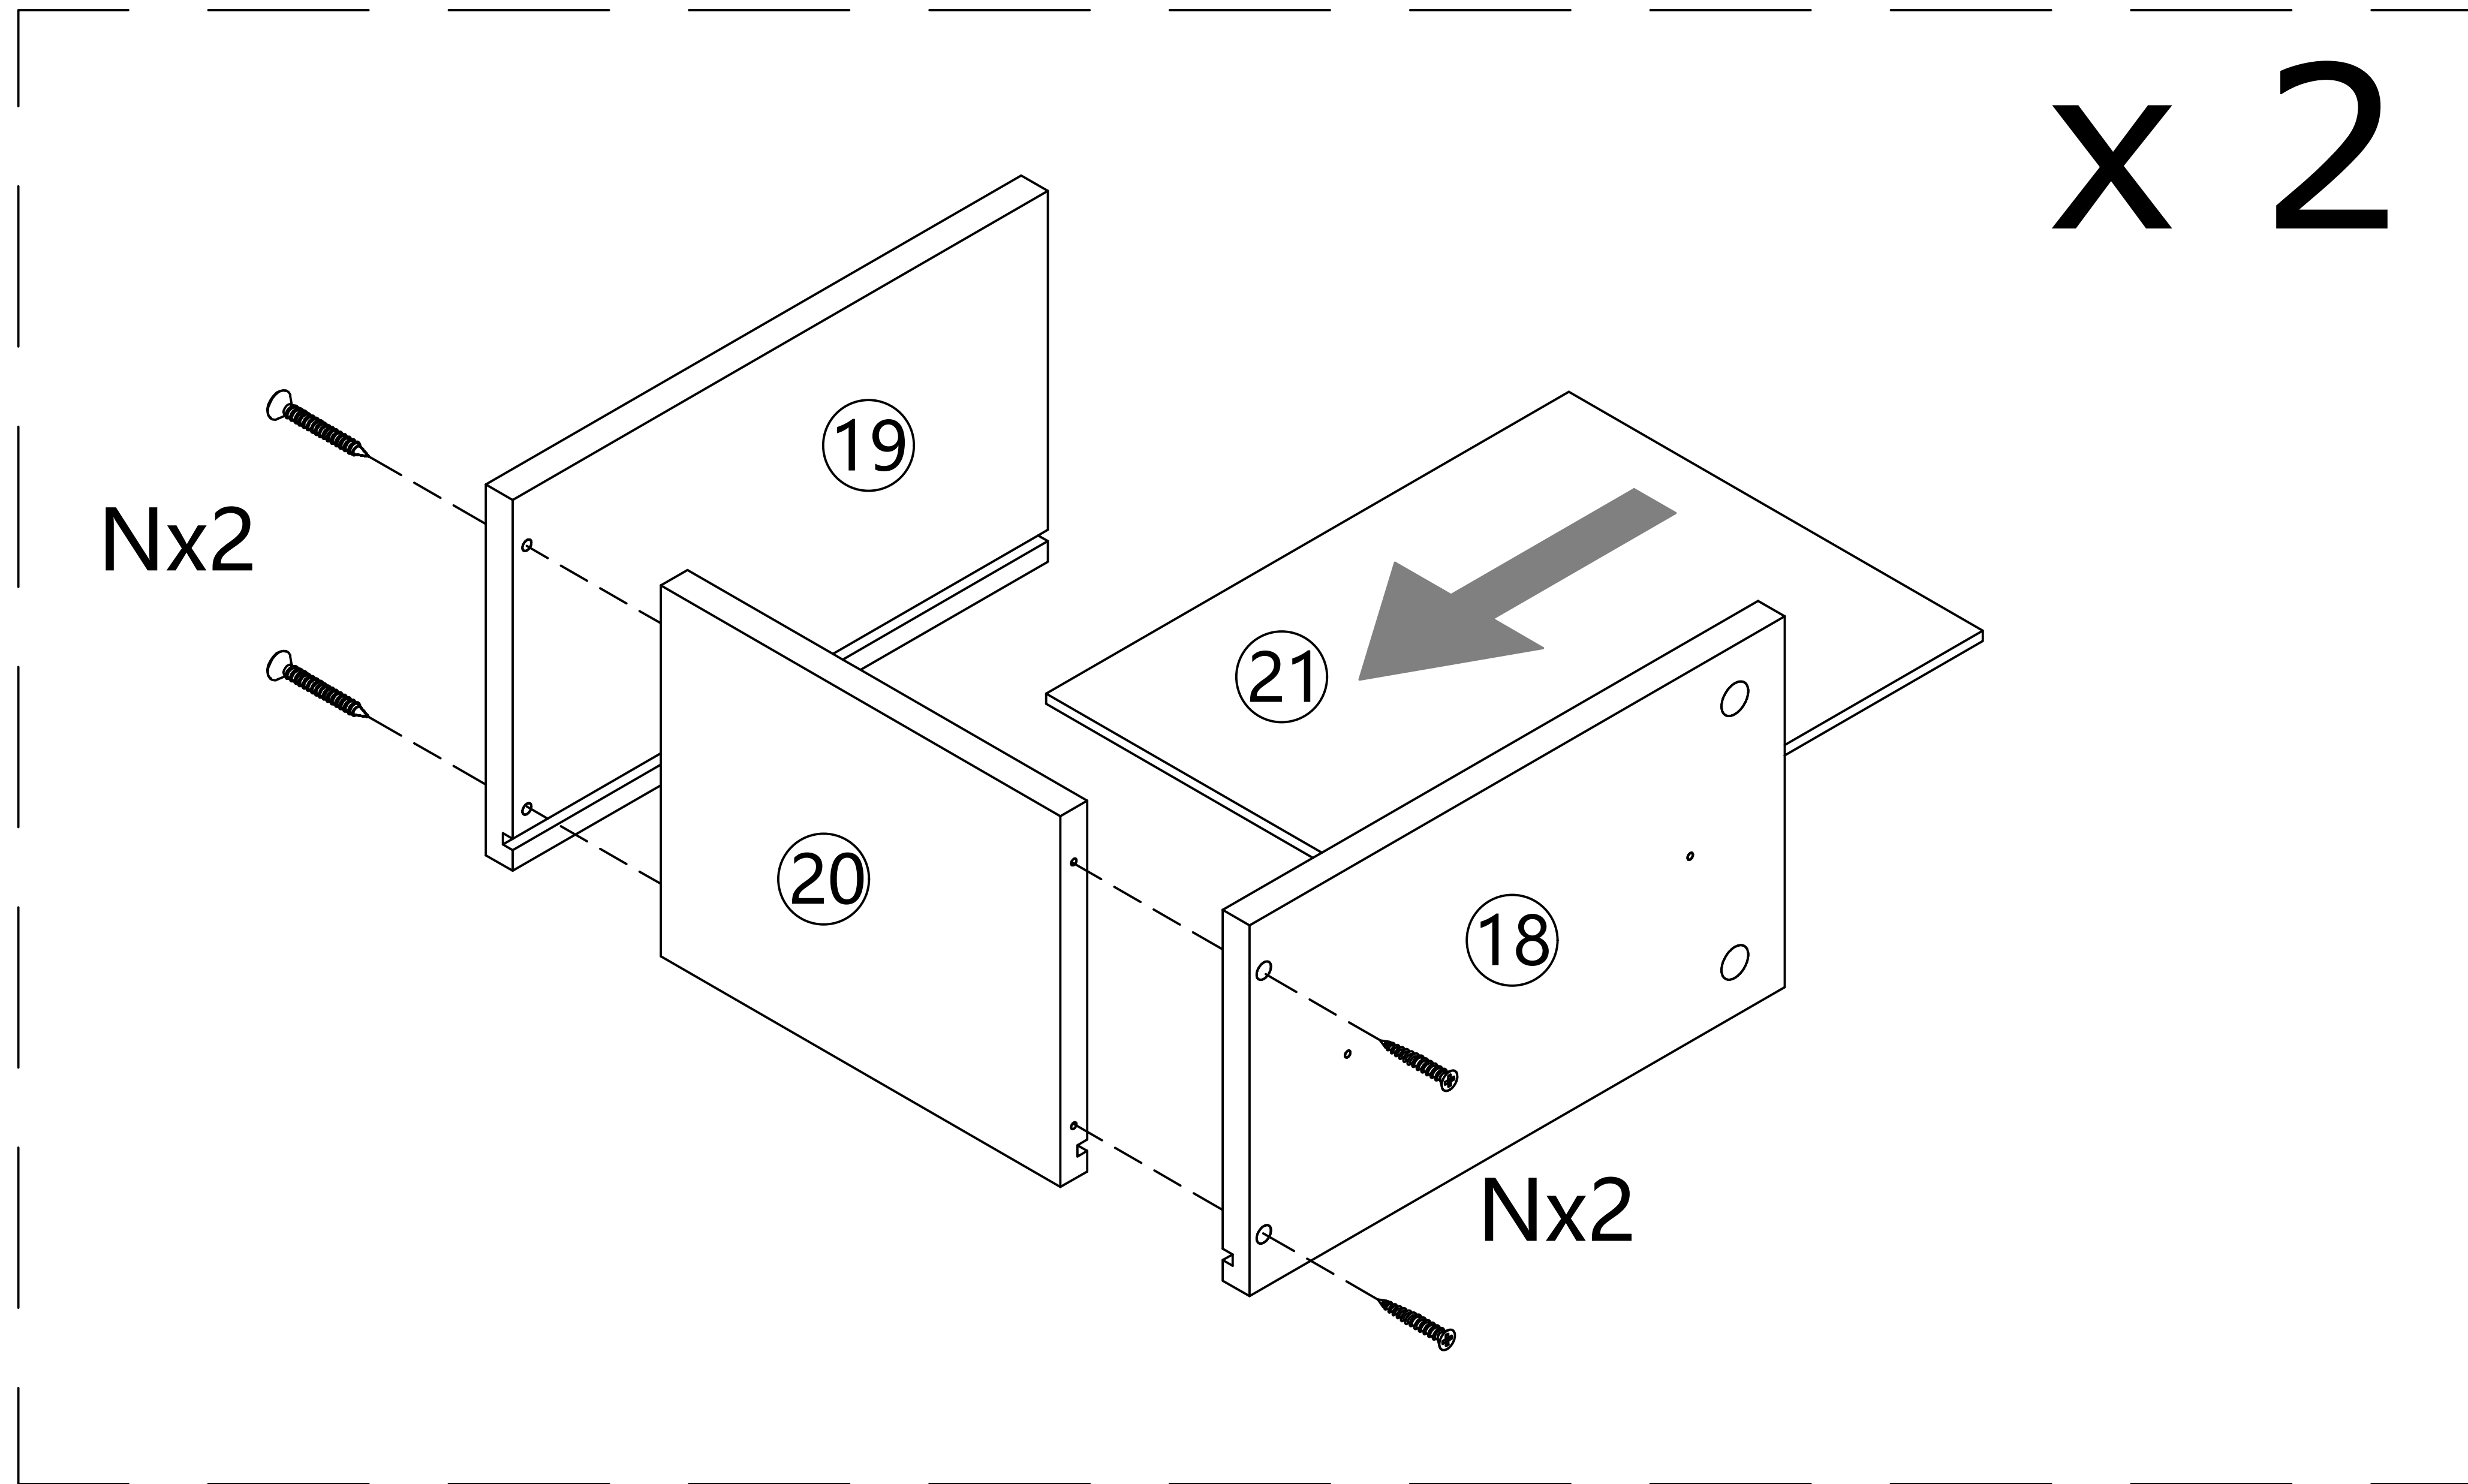


15

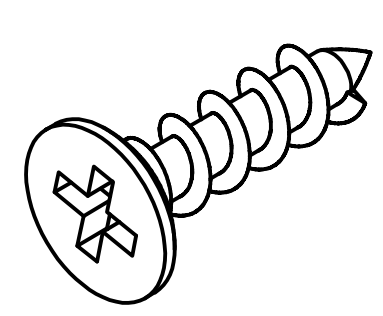  D x 8  Ø 4 x 14 mm	L1 x 4 	
---	--	--

    - Refer to the illustration.
Secure the Slide Rail (L1) with Screw (D).

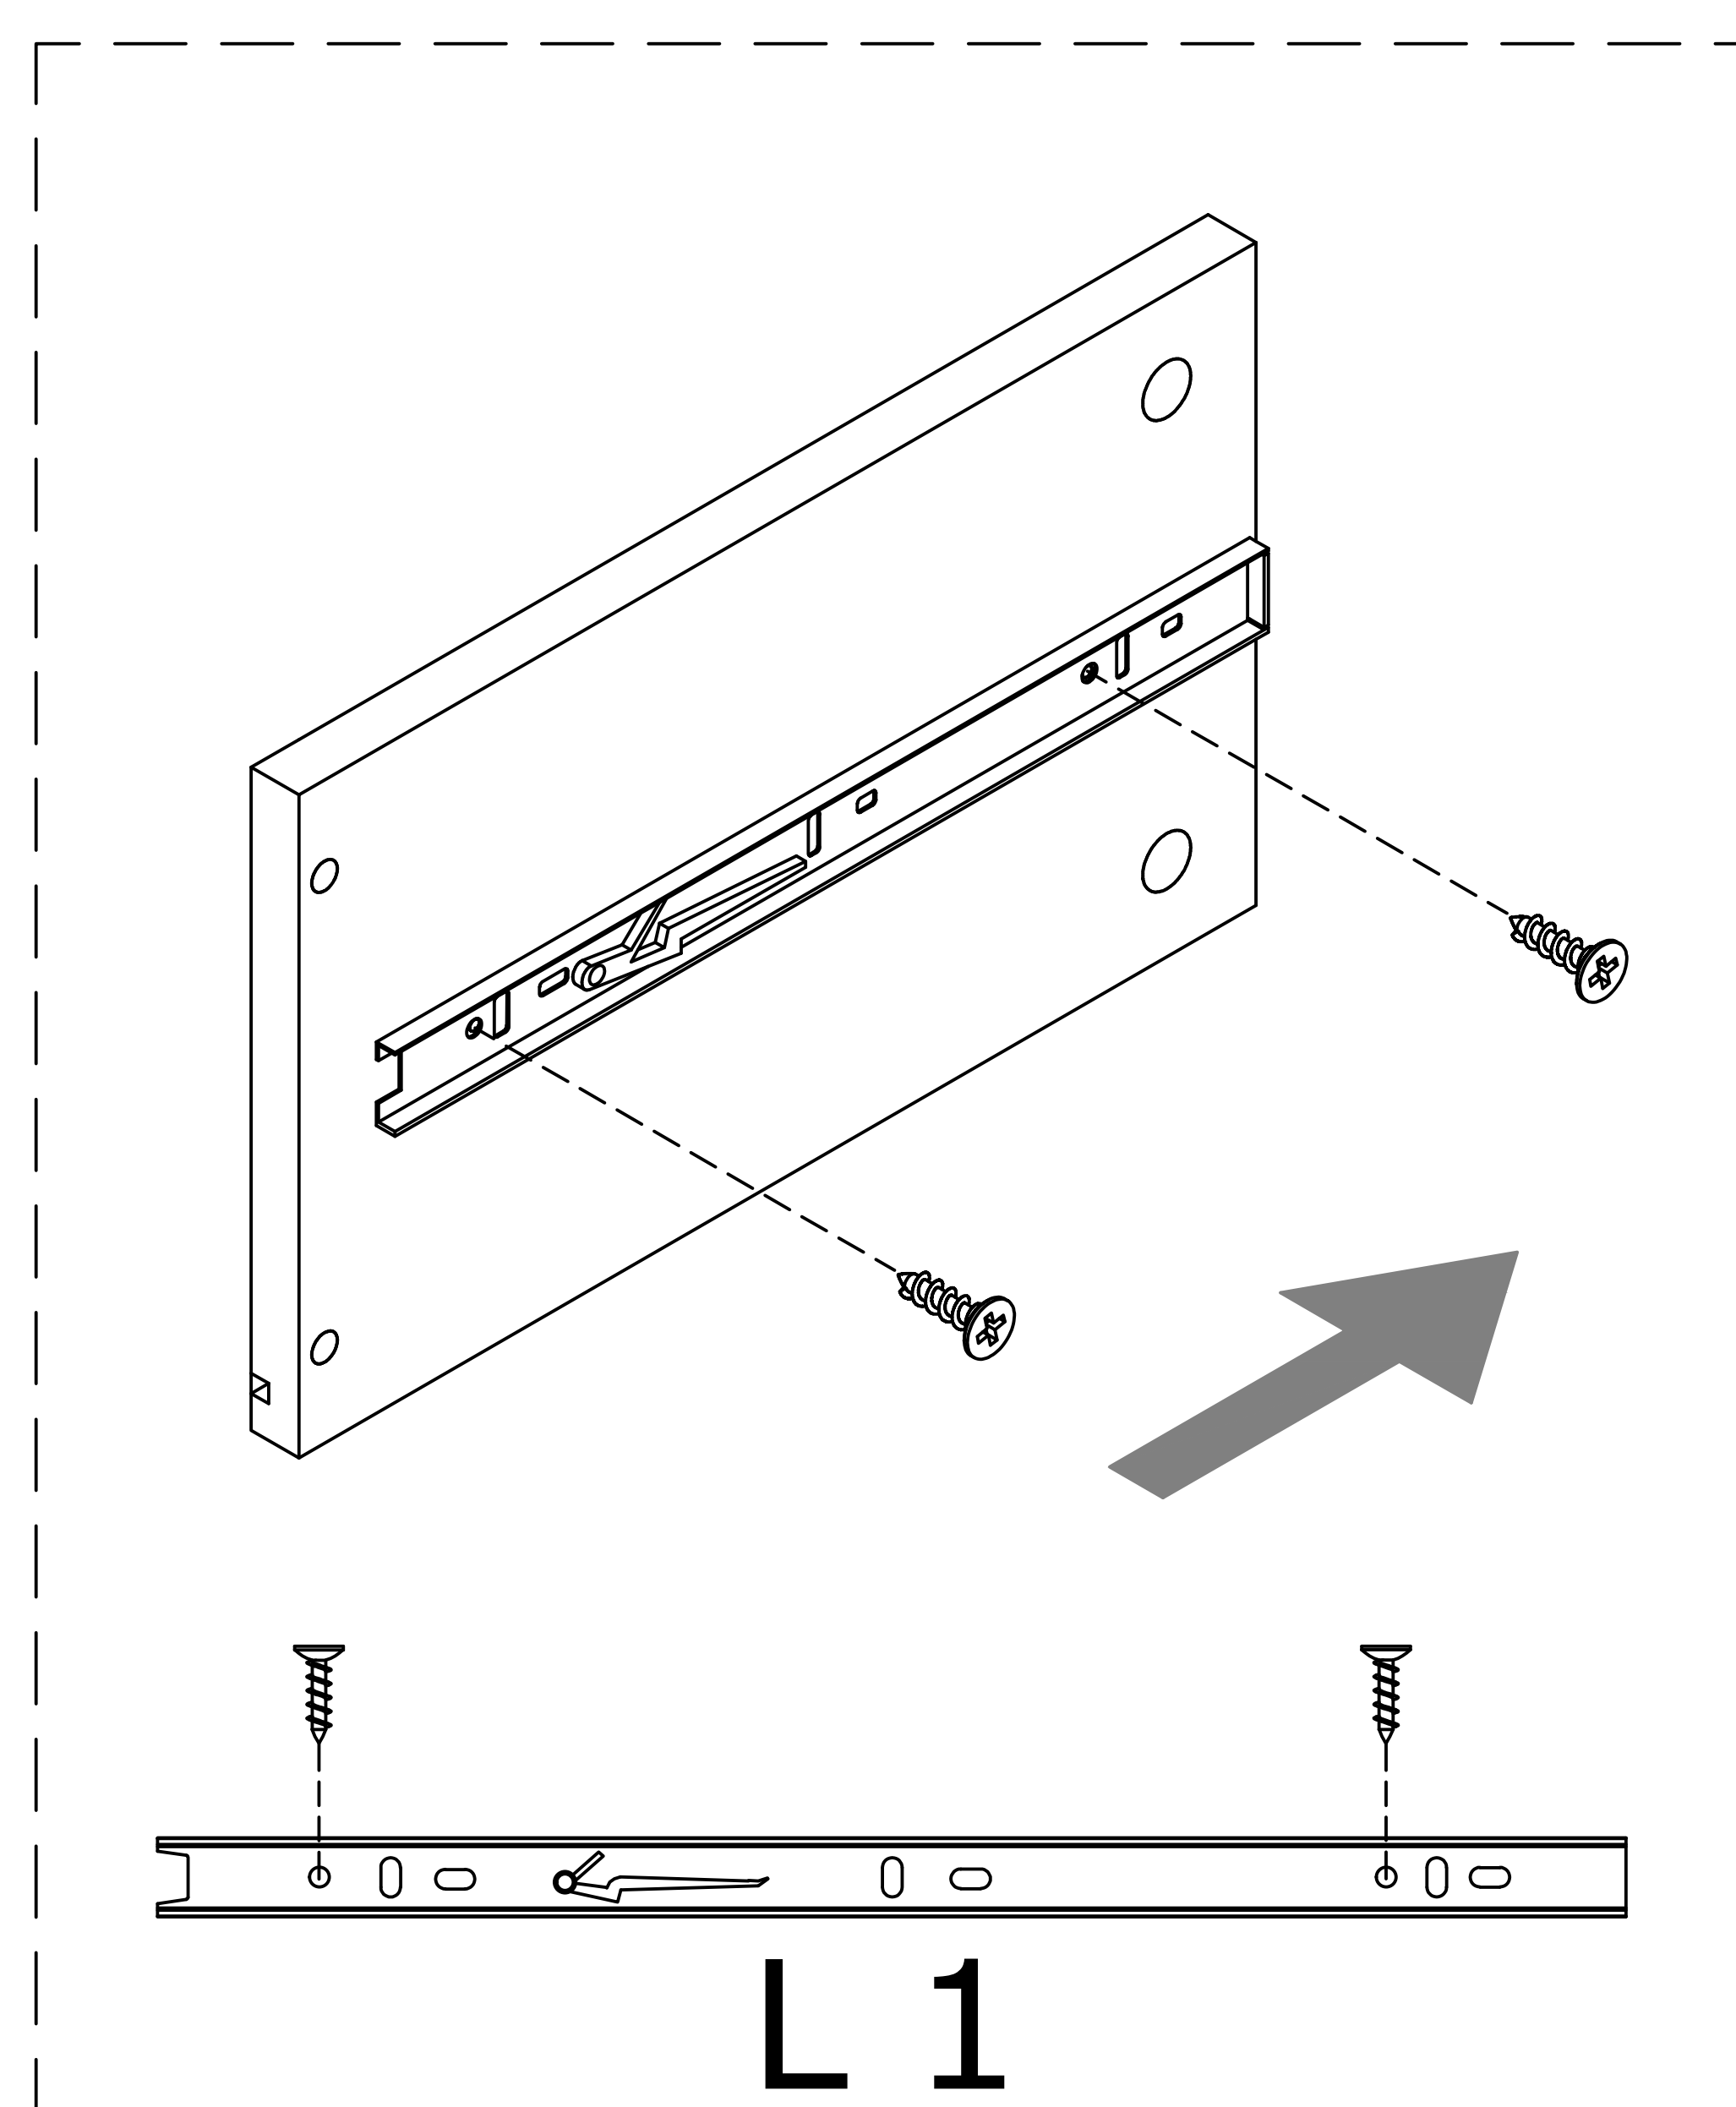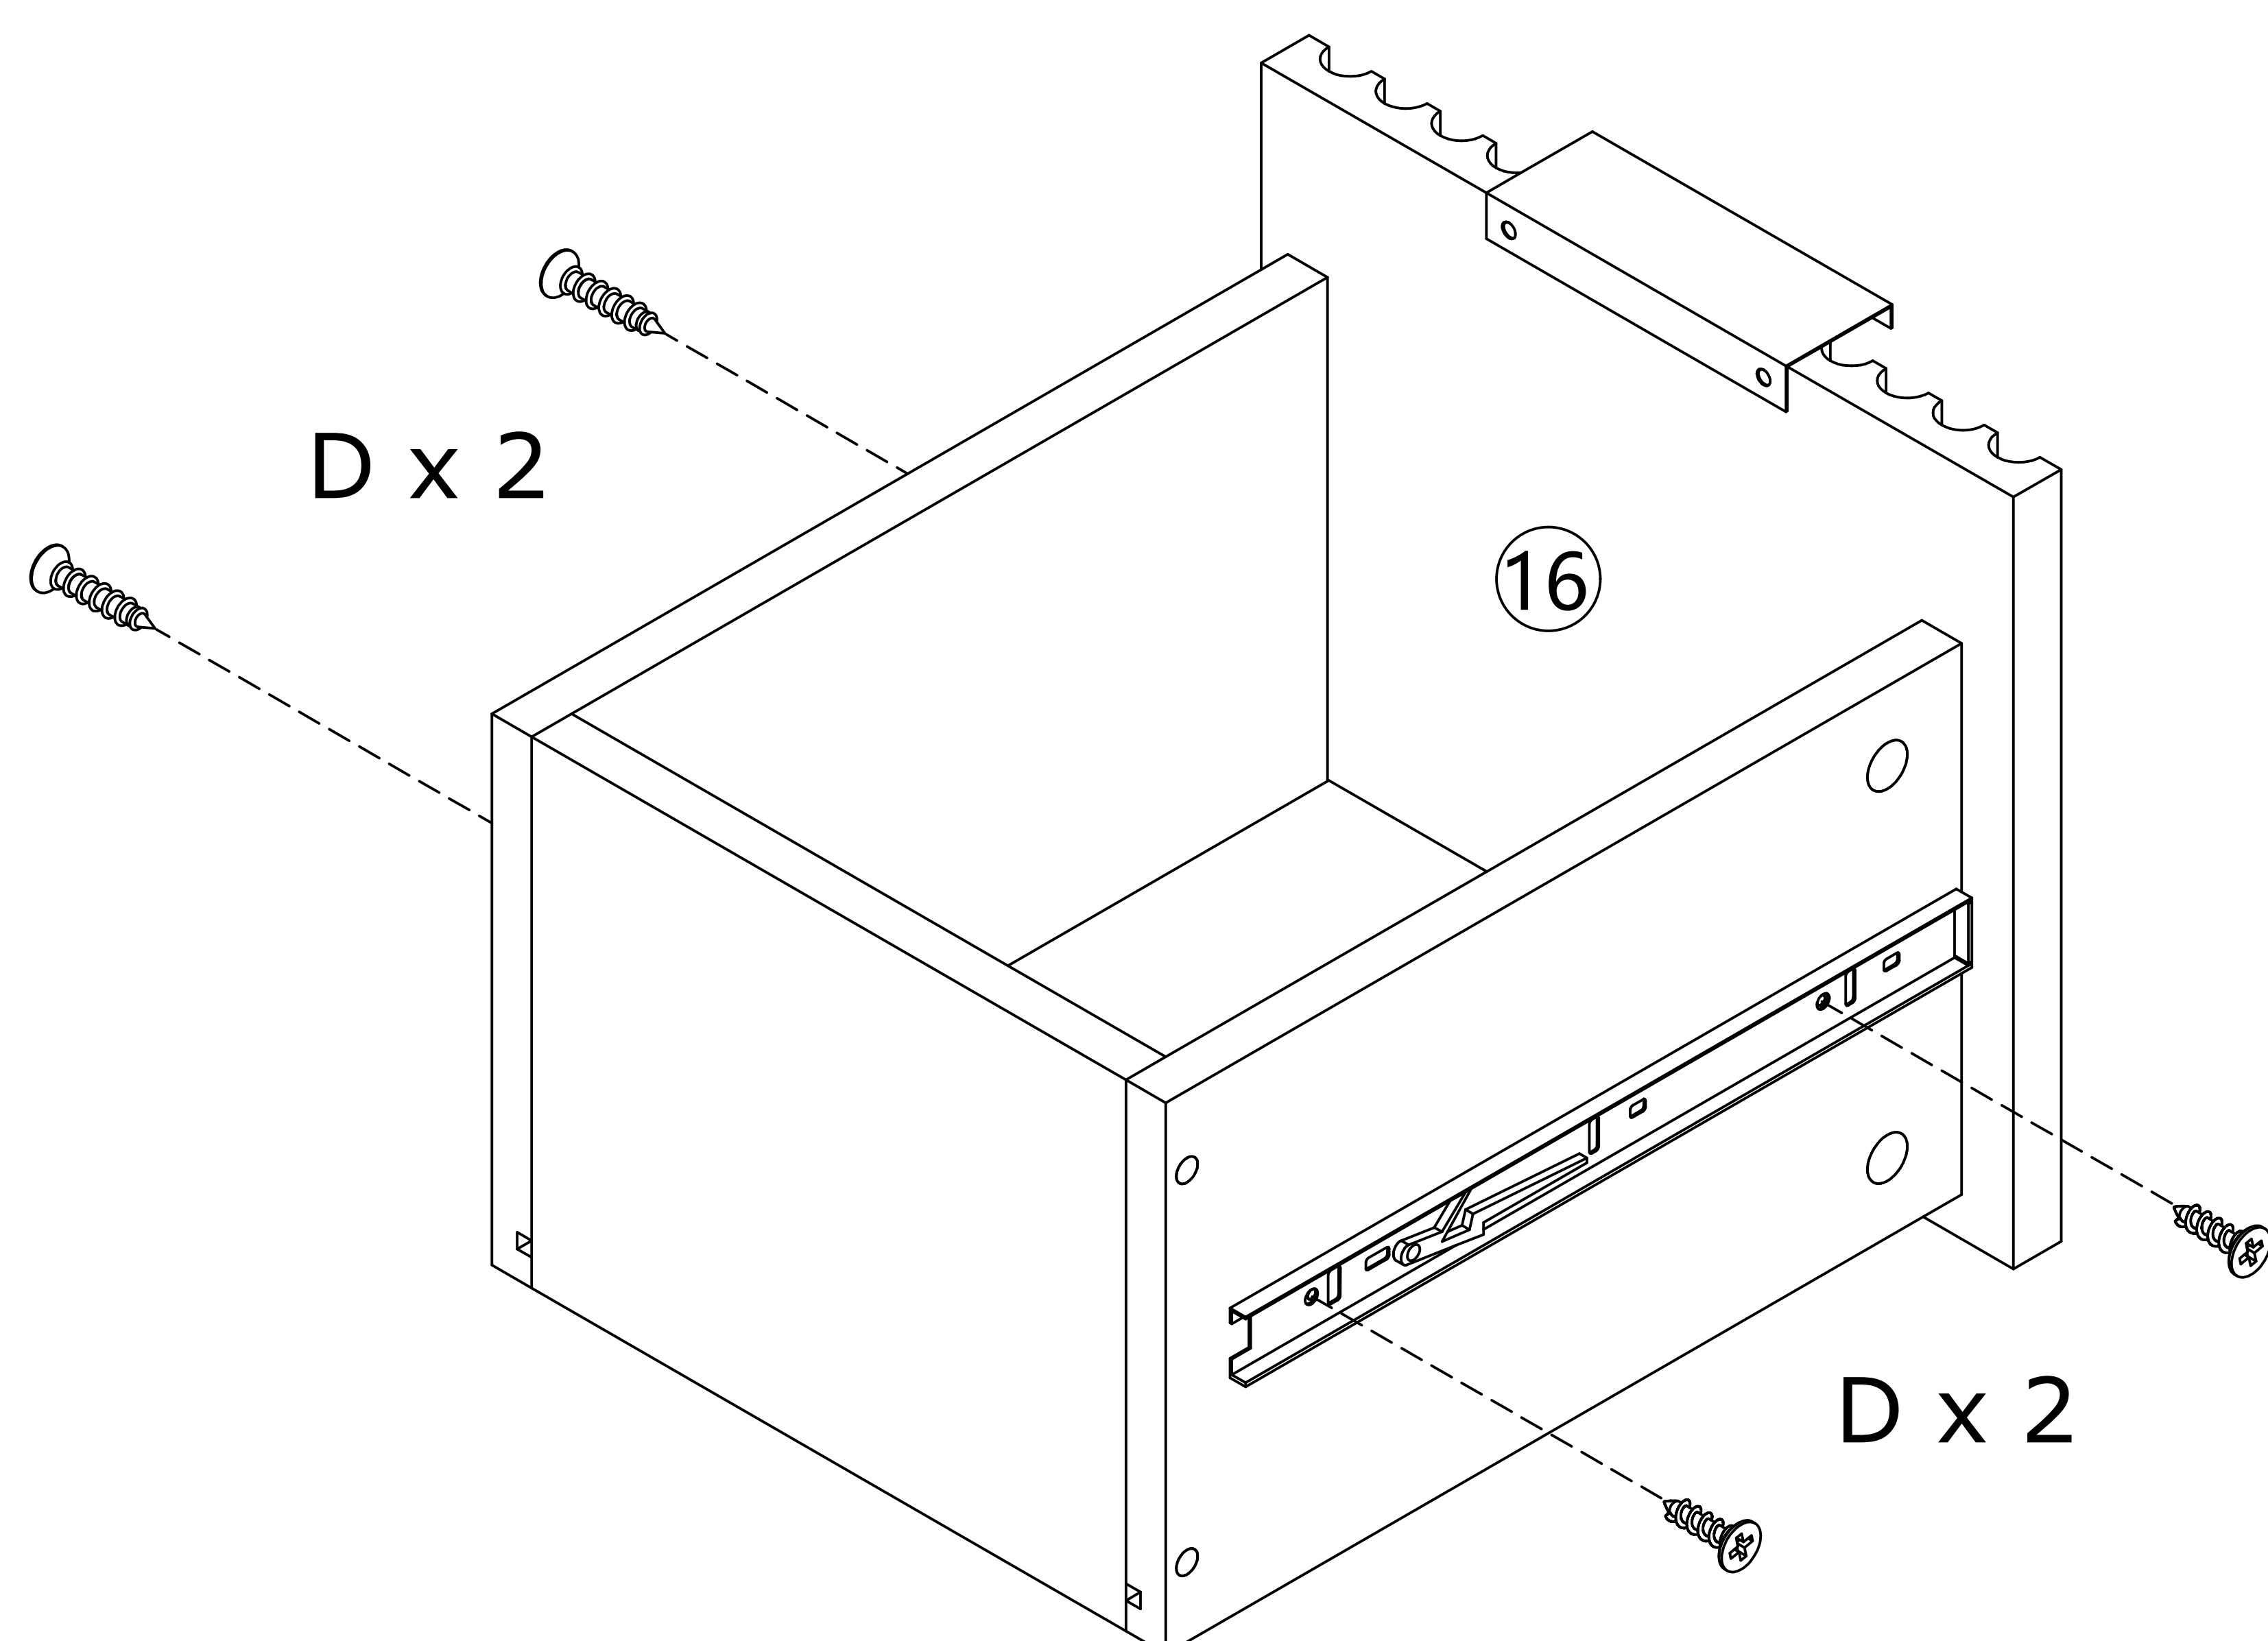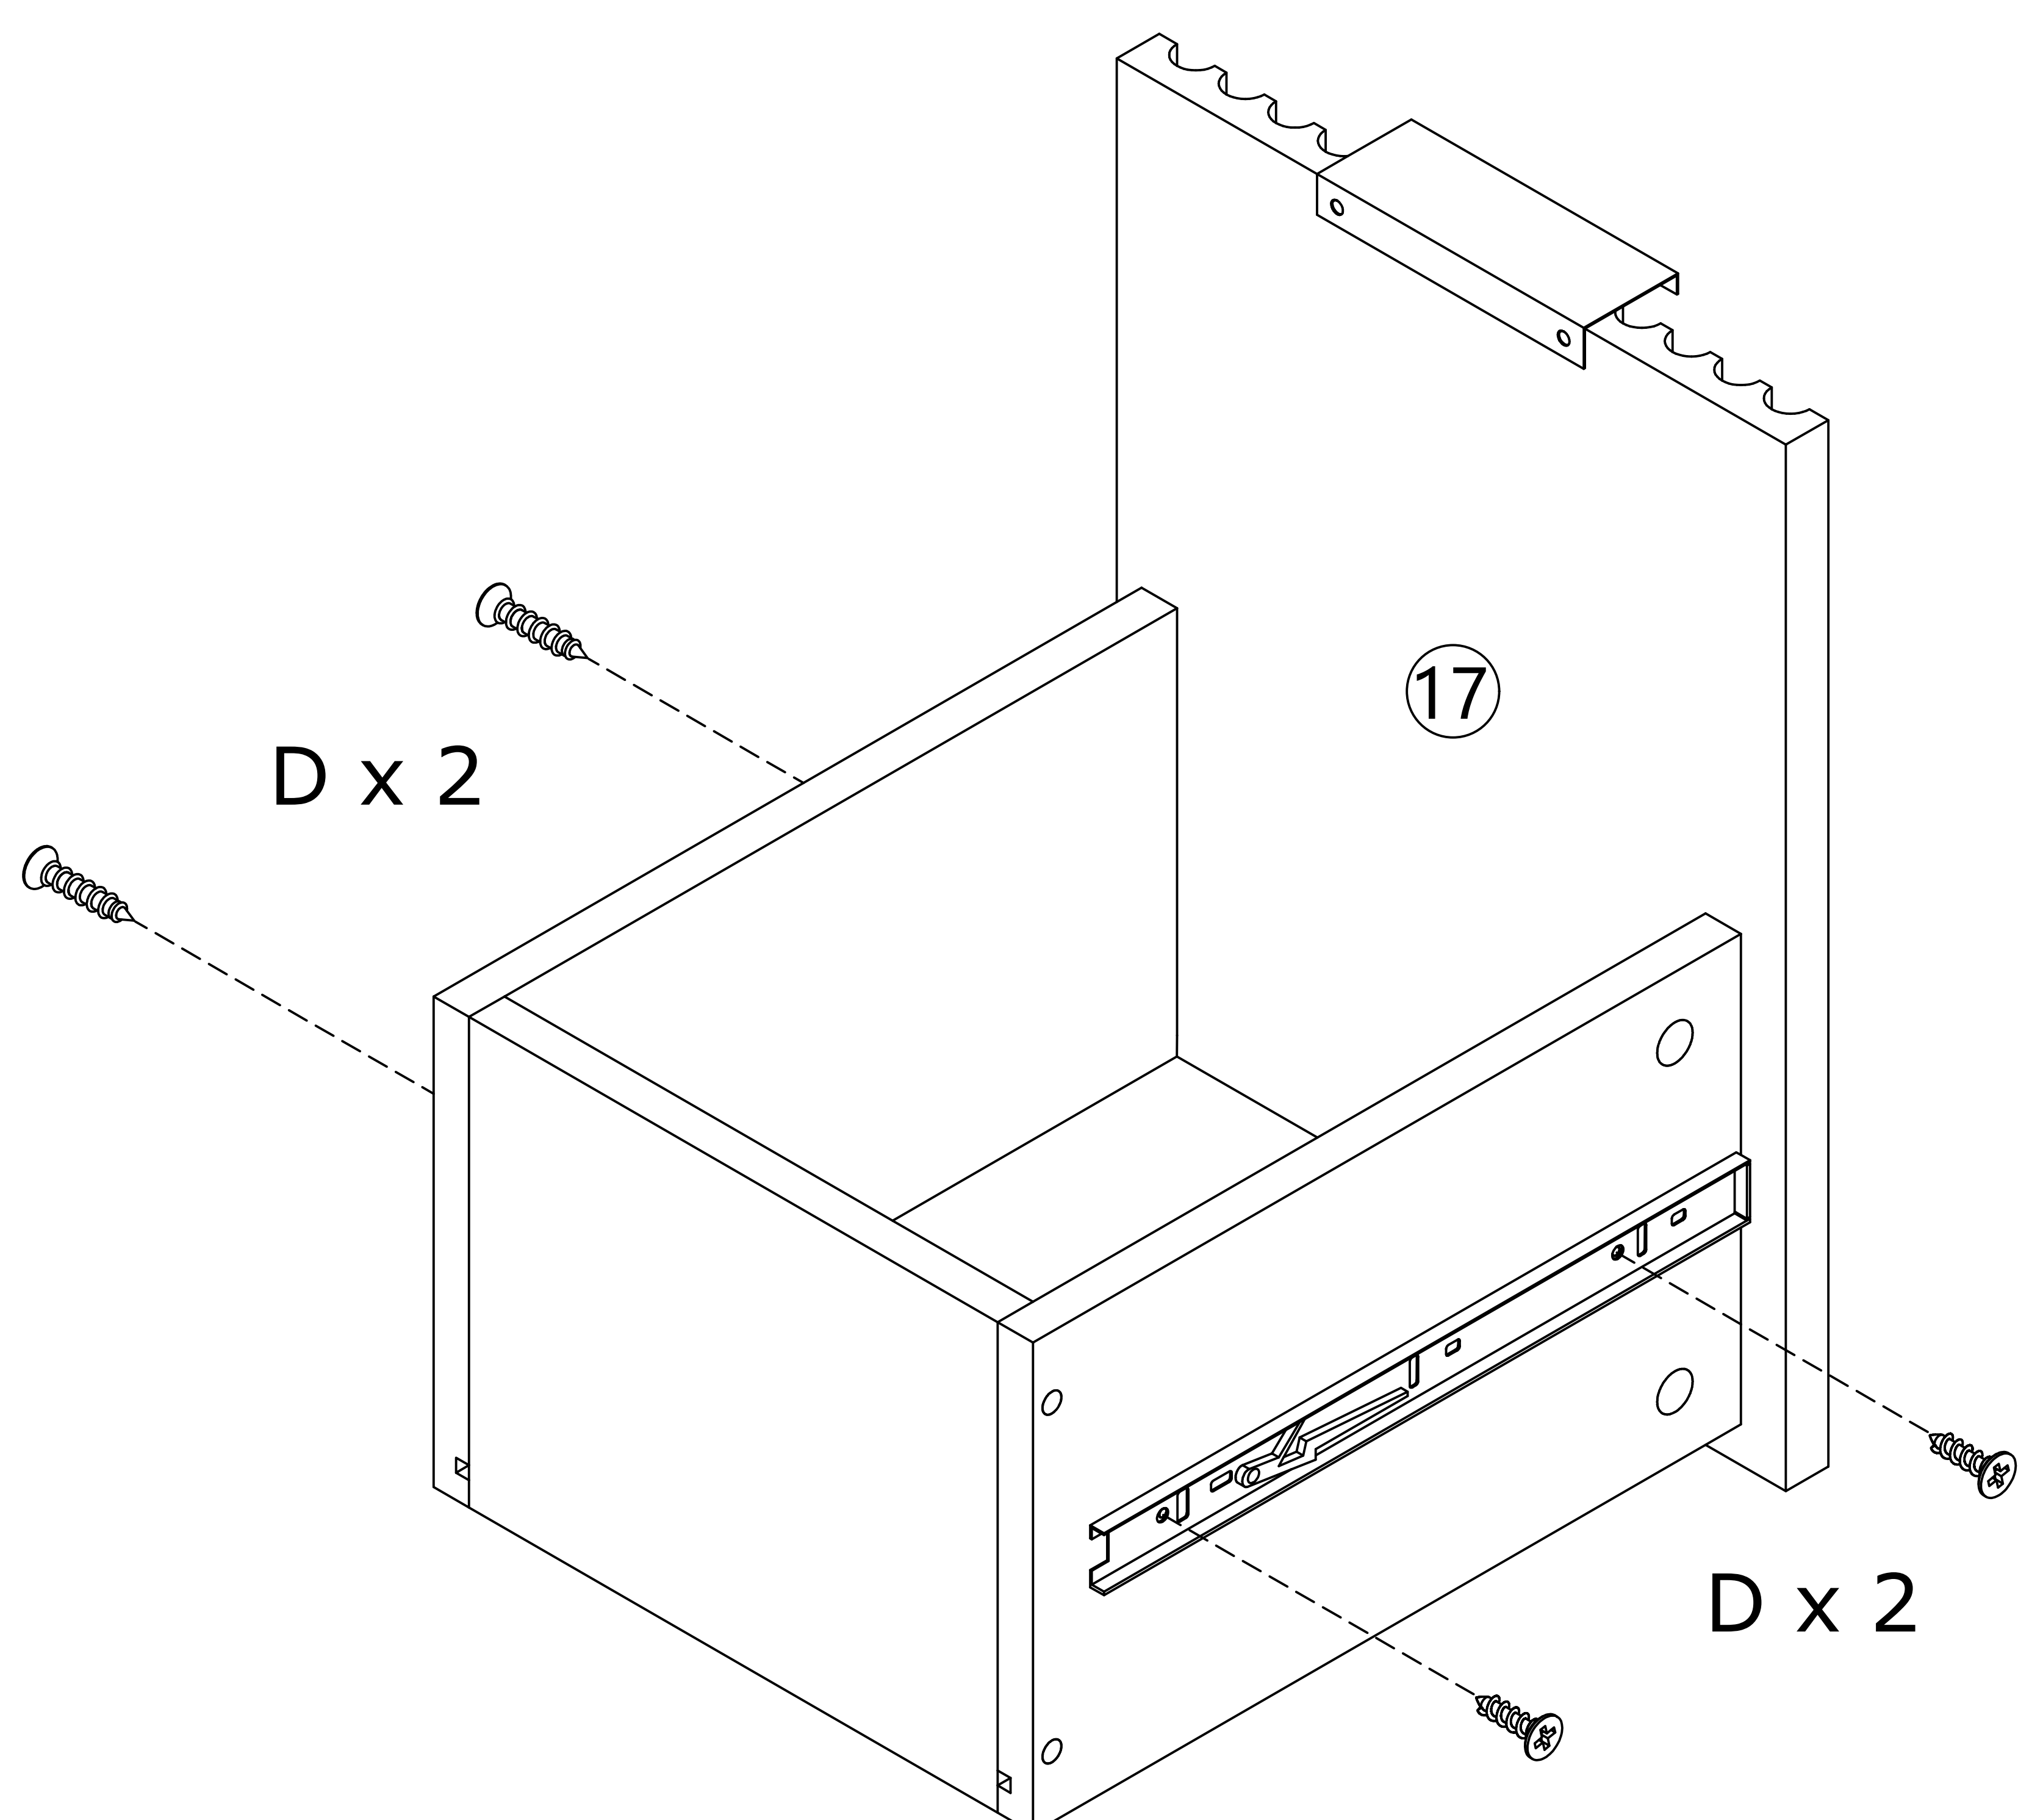

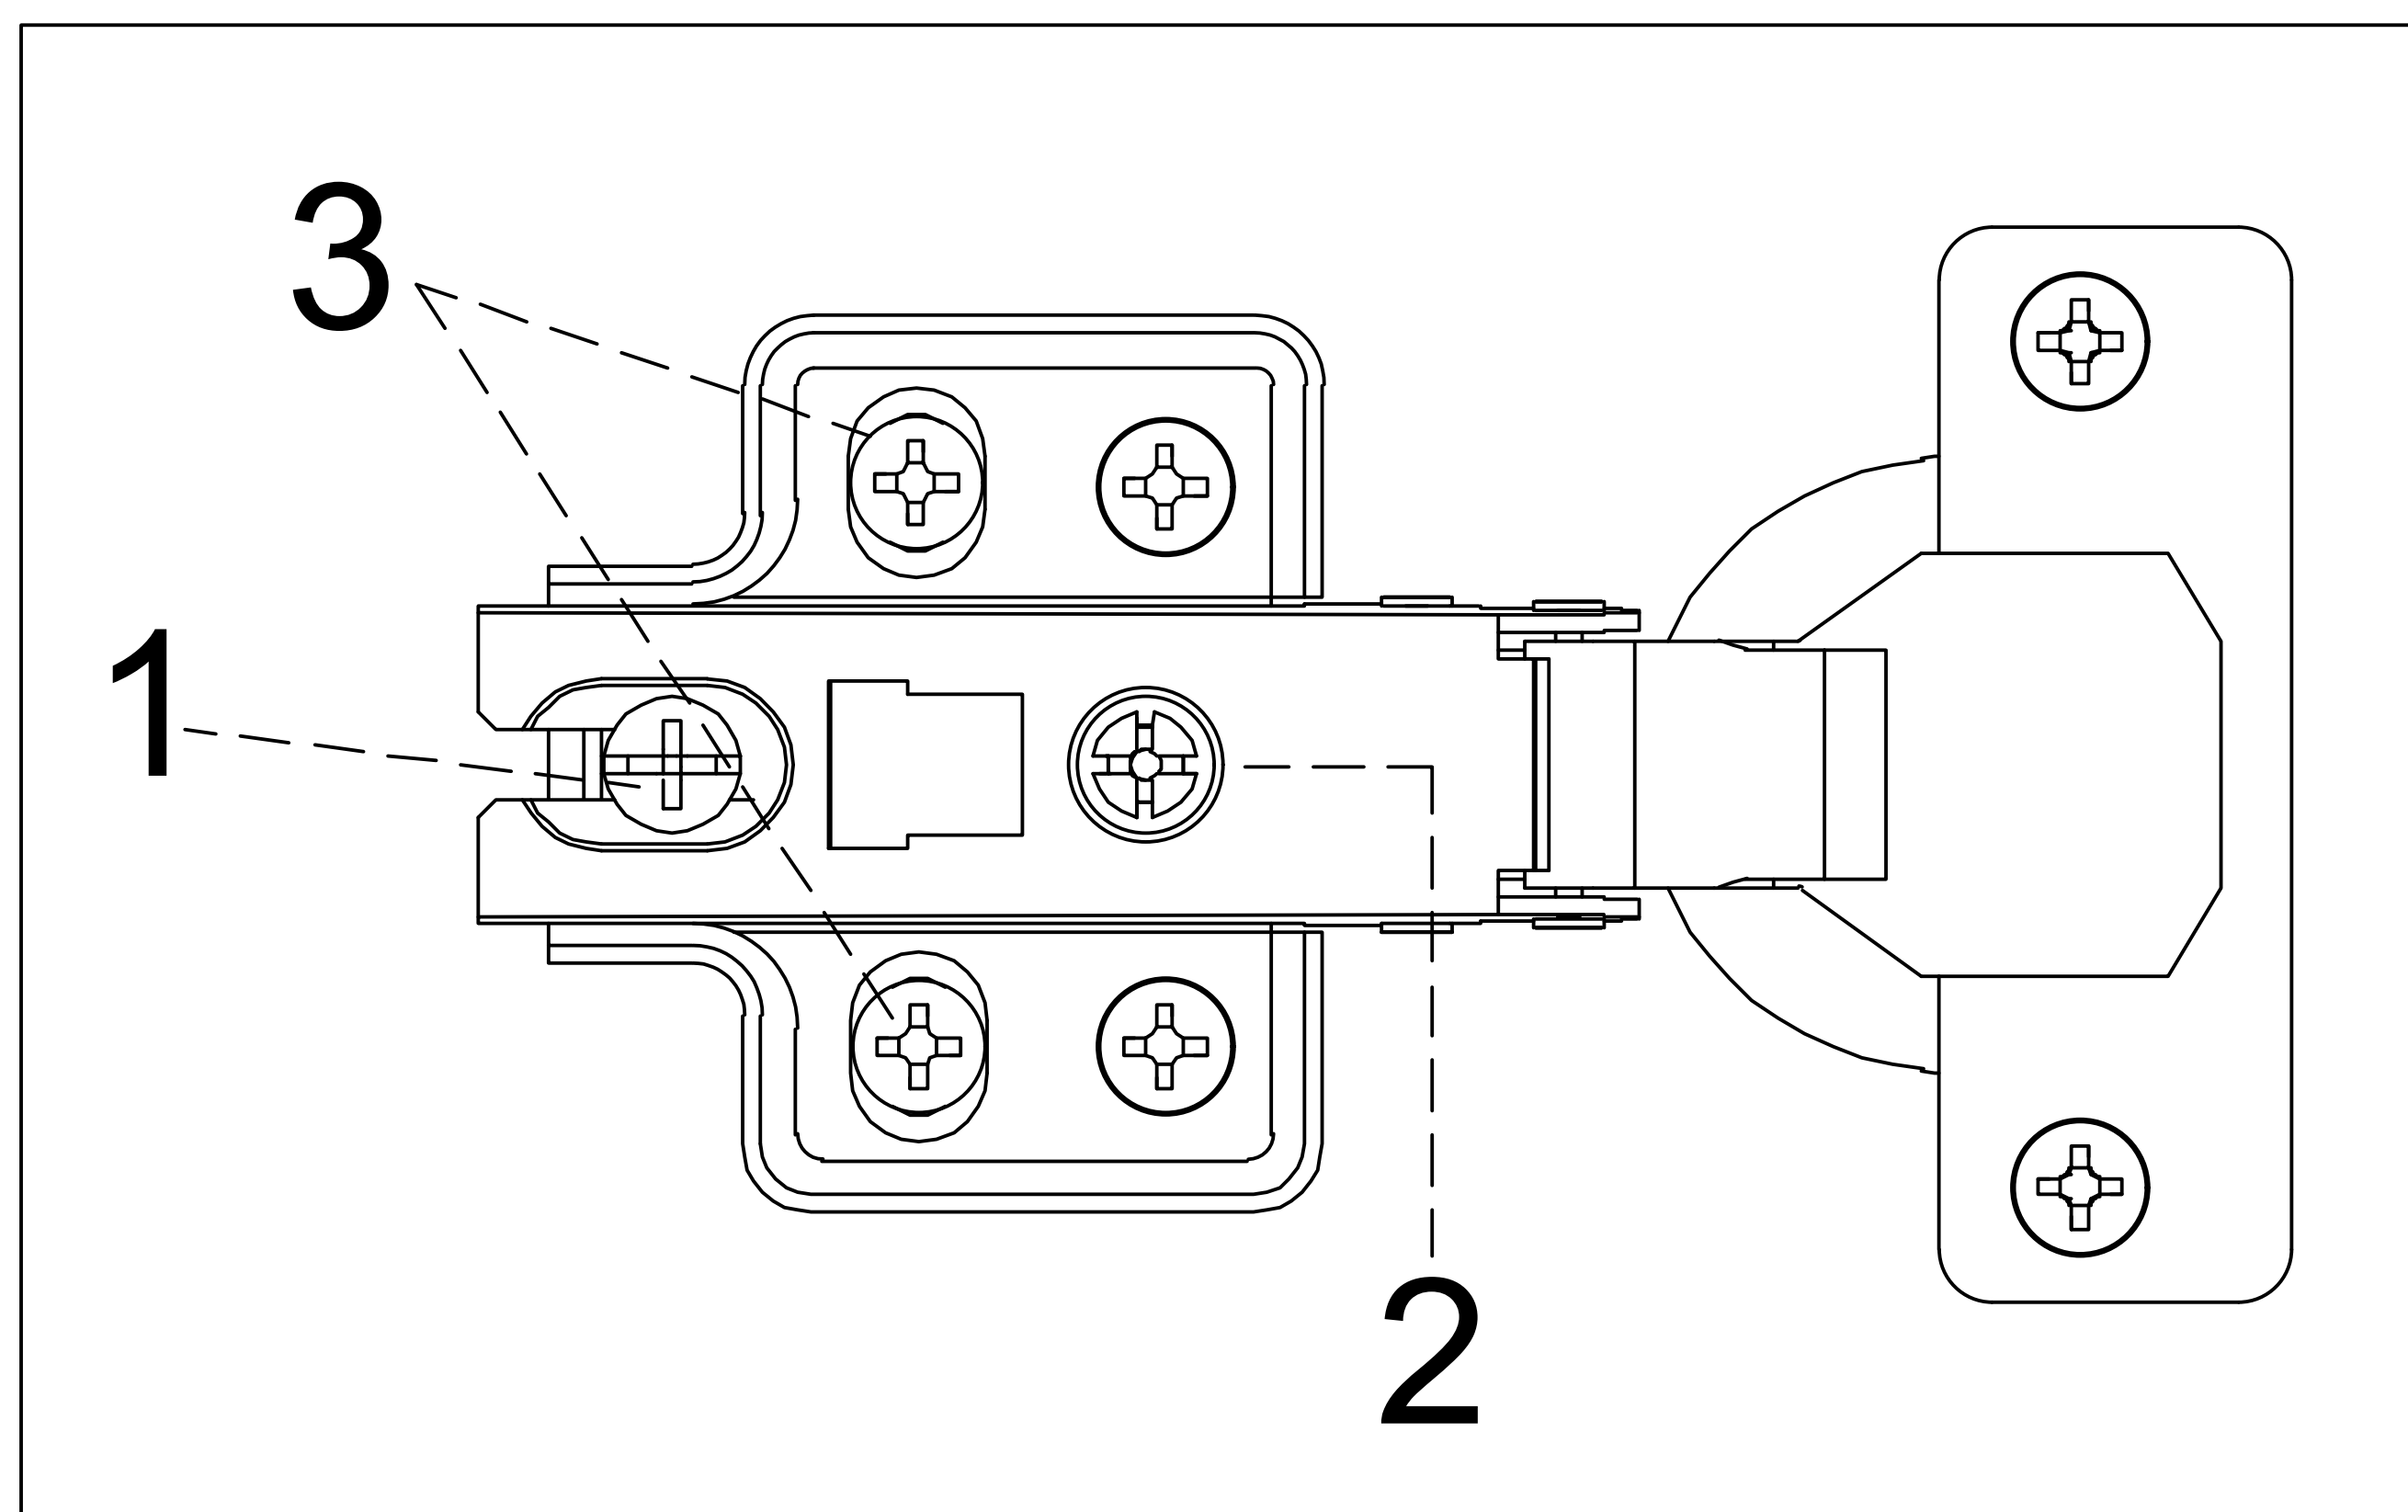


Hinge Adjustment Guide

Three-way adjustable hinge for perfectly aligned doors


Sideways/Gap Adjustment

 Turning the screw "2" on the hinges of each door allows you to adjust the door to the left or right by a few millimeters.

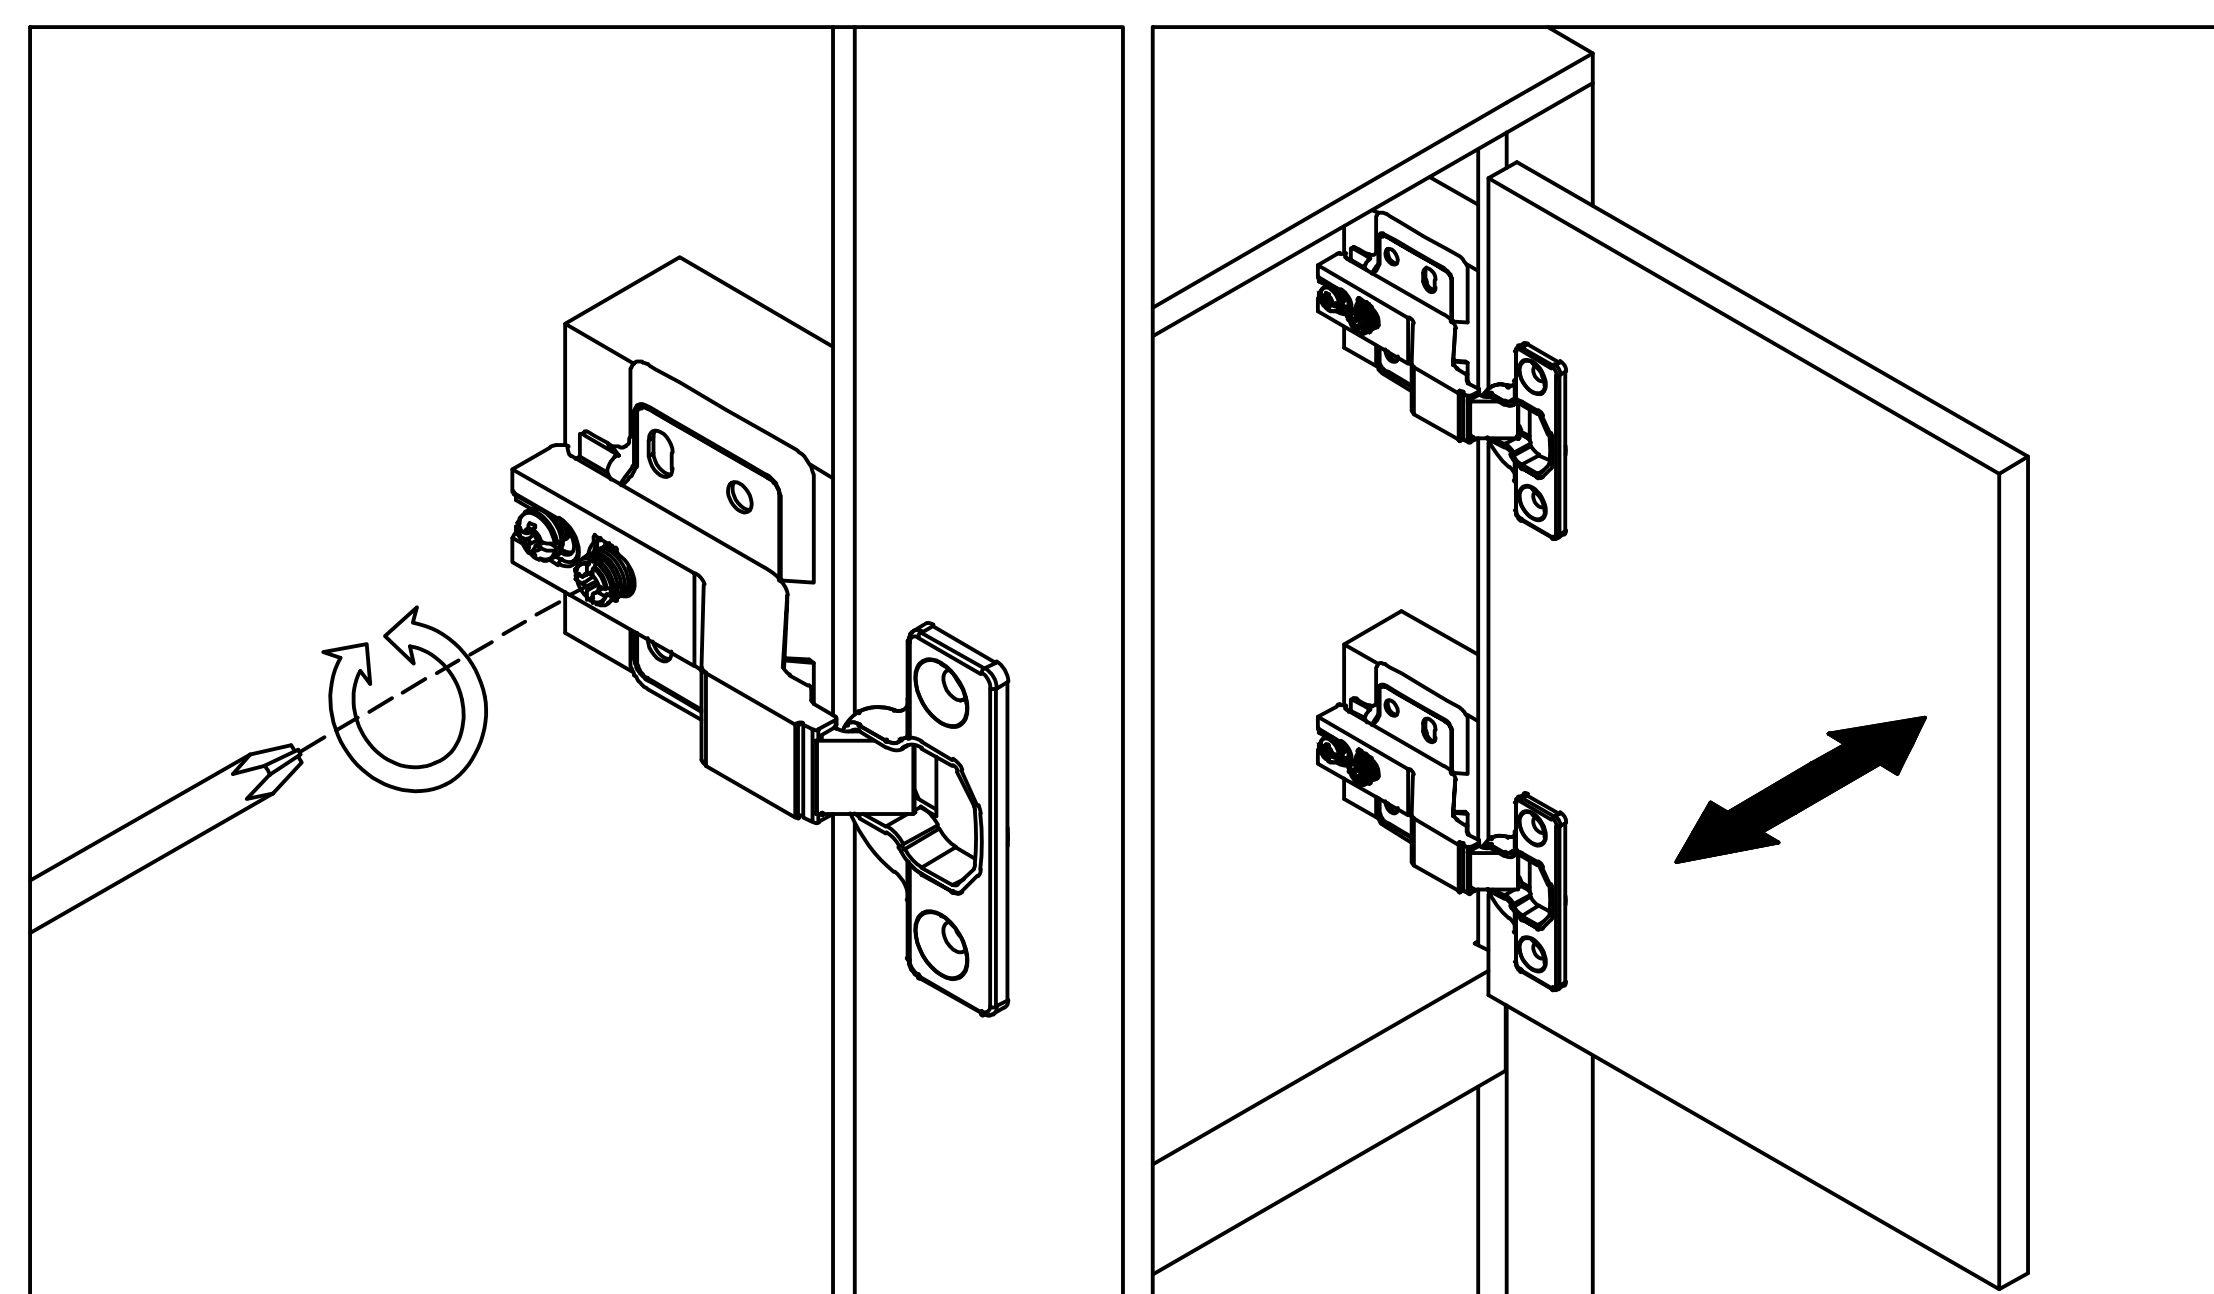


Forward/Backward Alignment

 Loosen screw "1" to adjust the door forward or backward. After adjustment, Tighten screw "1".

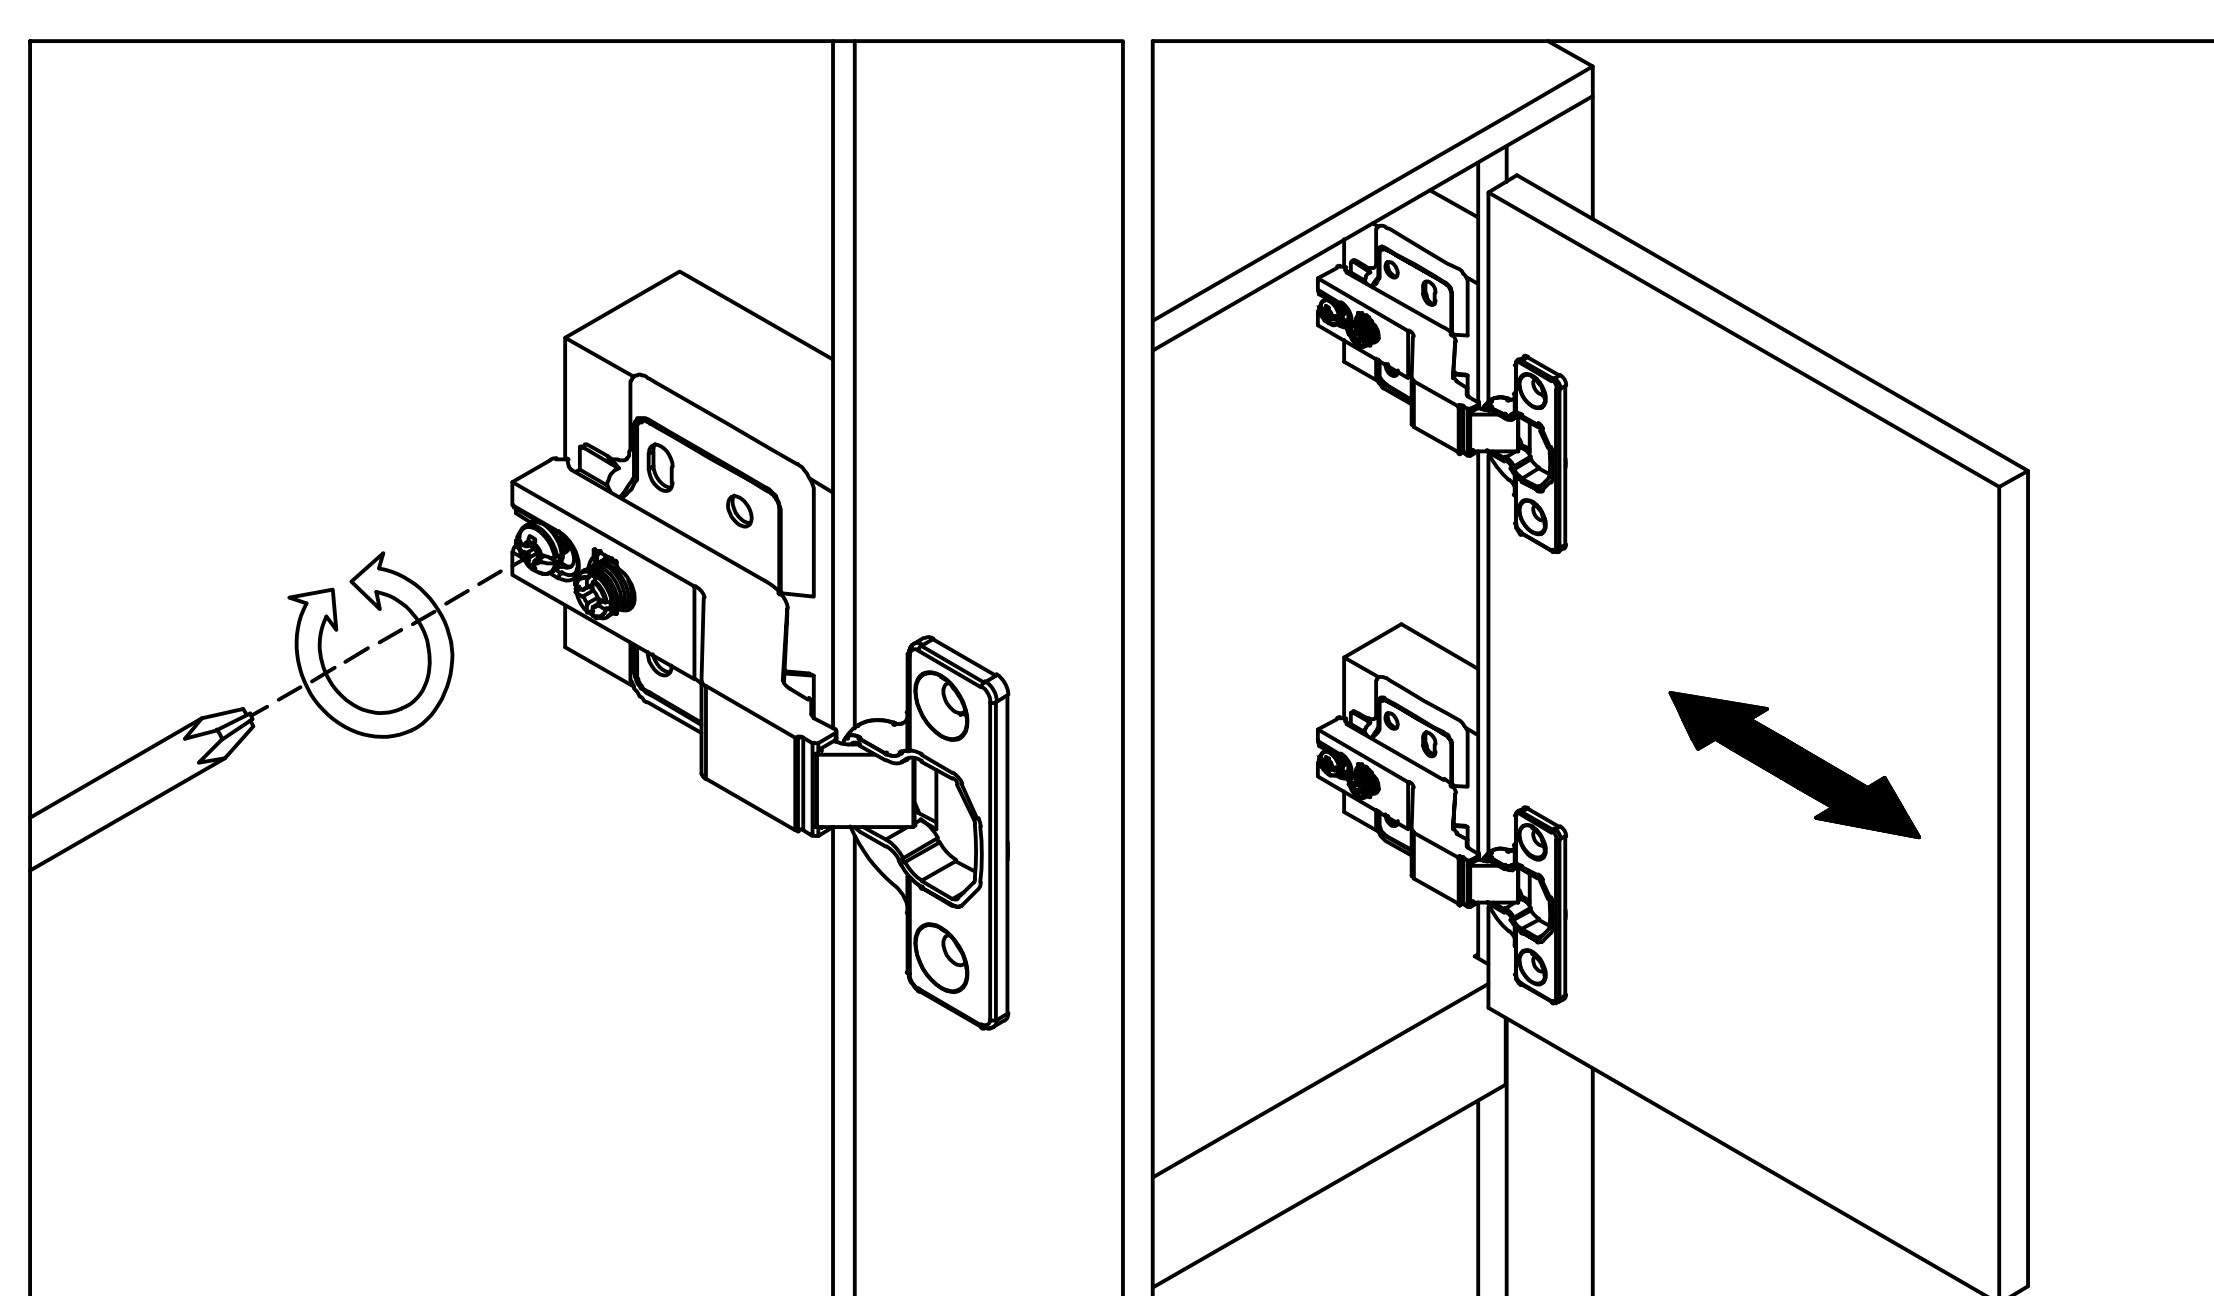


Vertical Height Adjustment

 Loosen screw "3" to adjust the door up or down. After adjustment, hold the door panel and tighten screw "3".

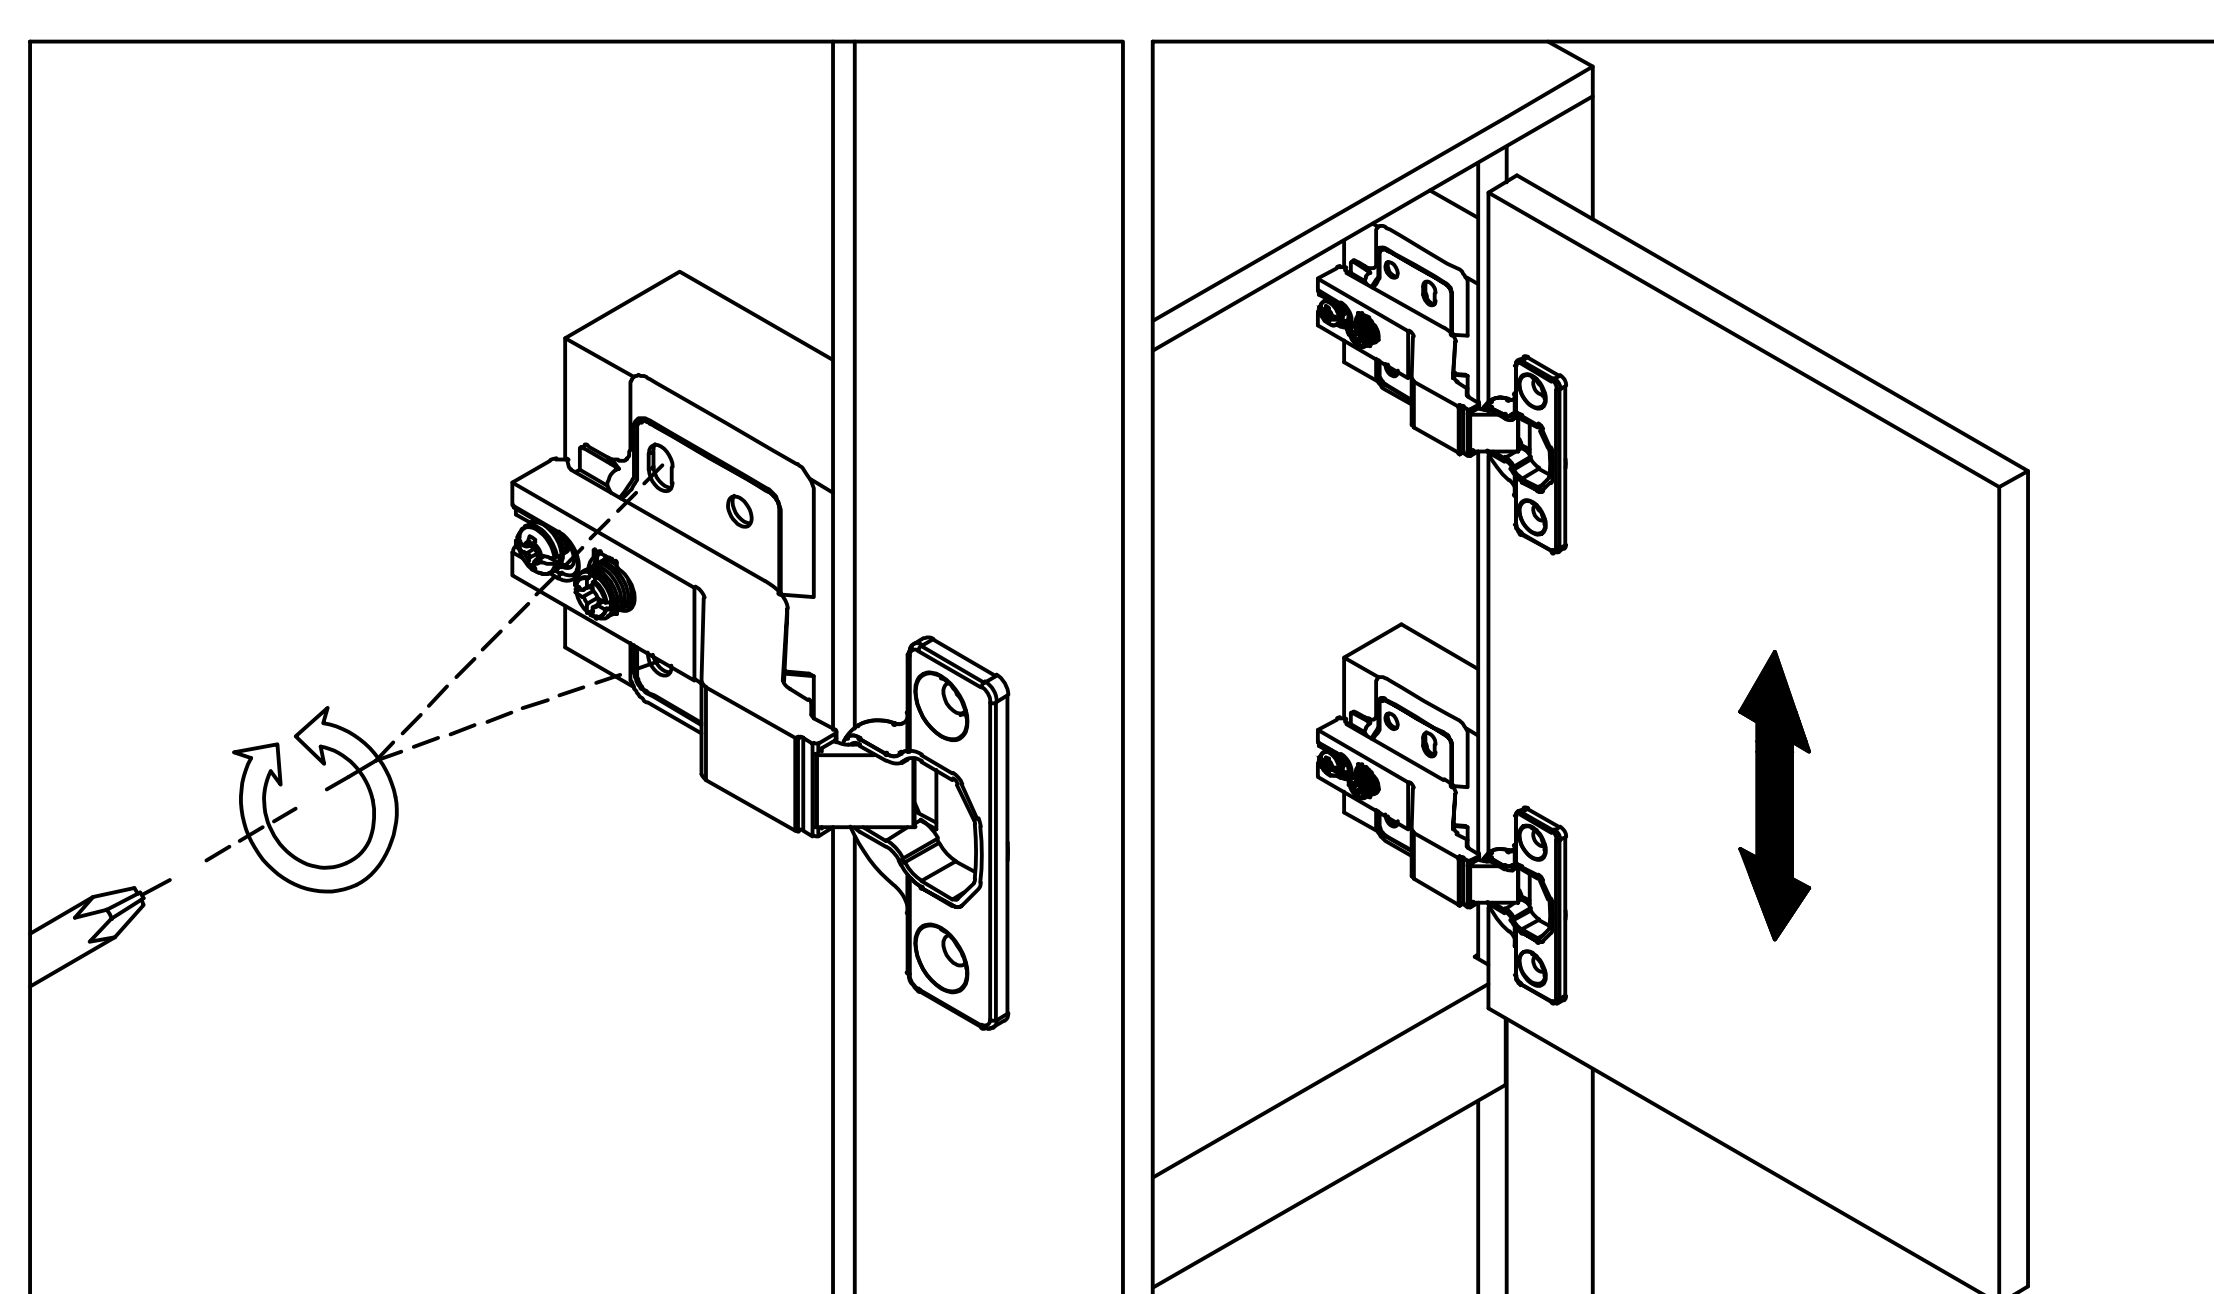




17

 D x 16

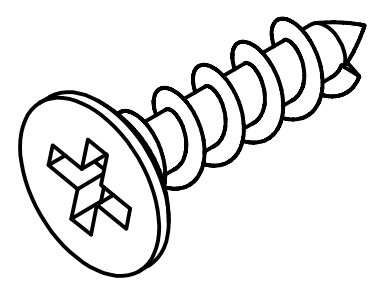


Ø 4 x 14 mm

   - Refer to the illustration.
Secure Door Panels (14) and (15) with Screw (D).

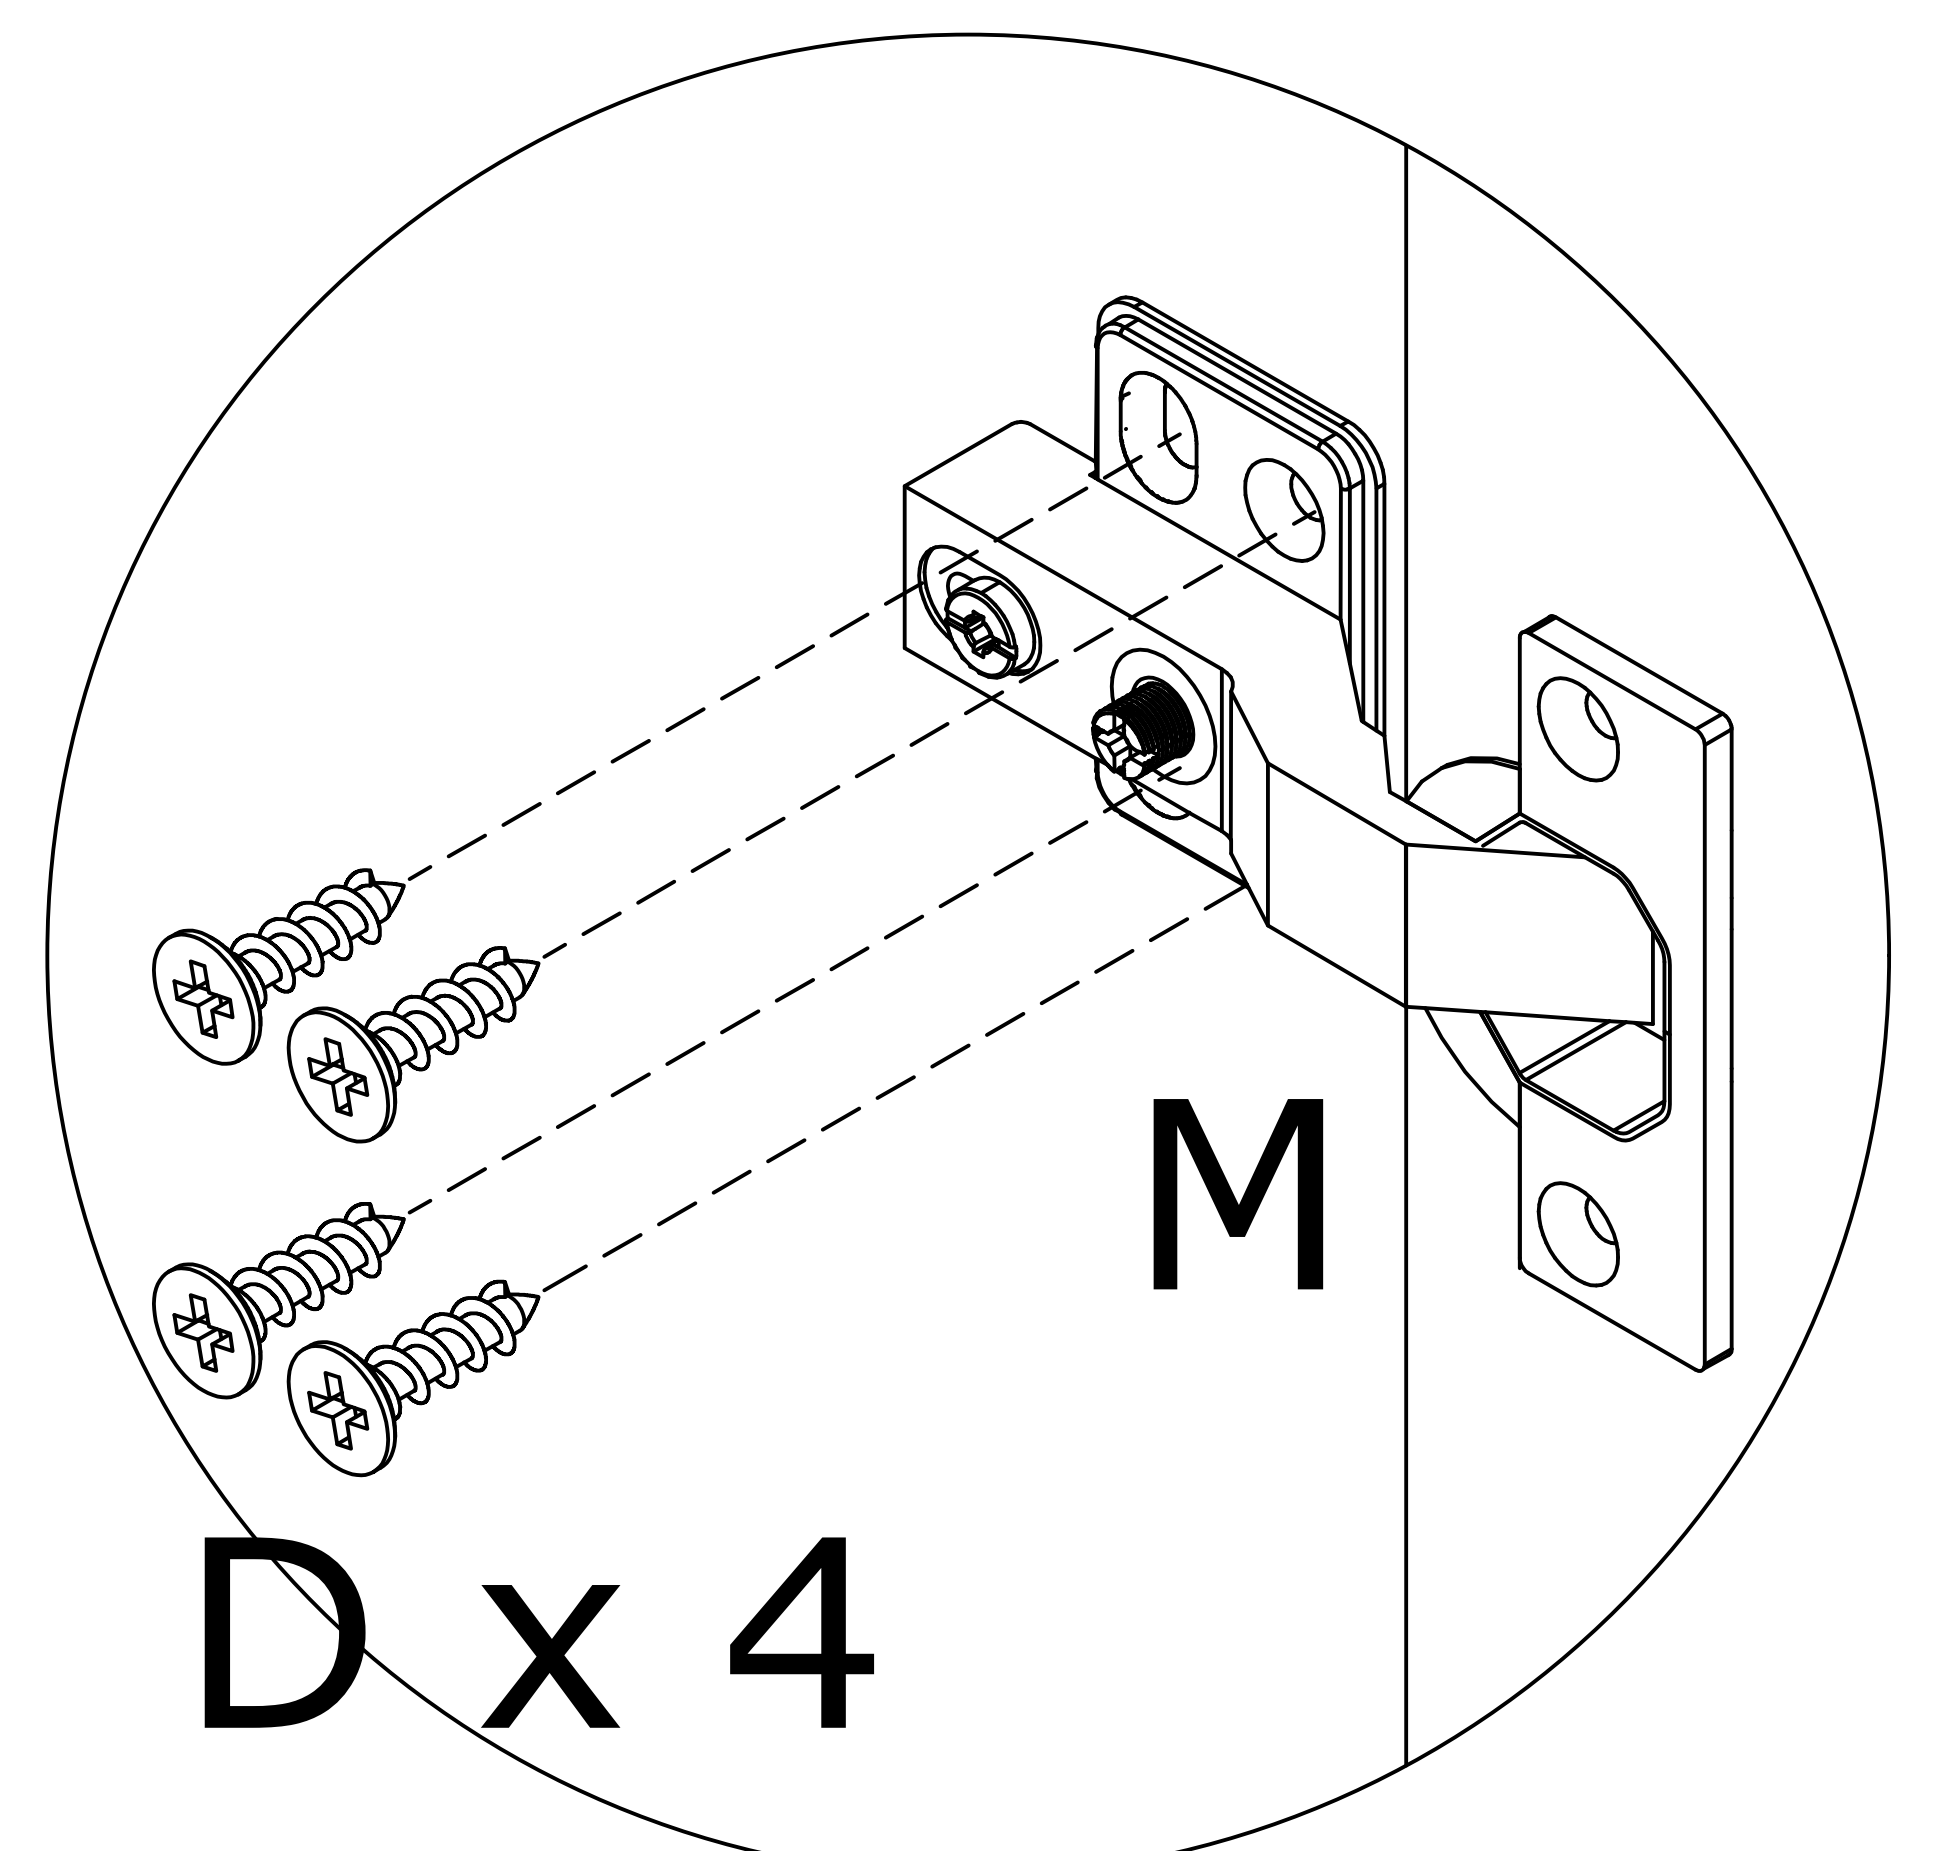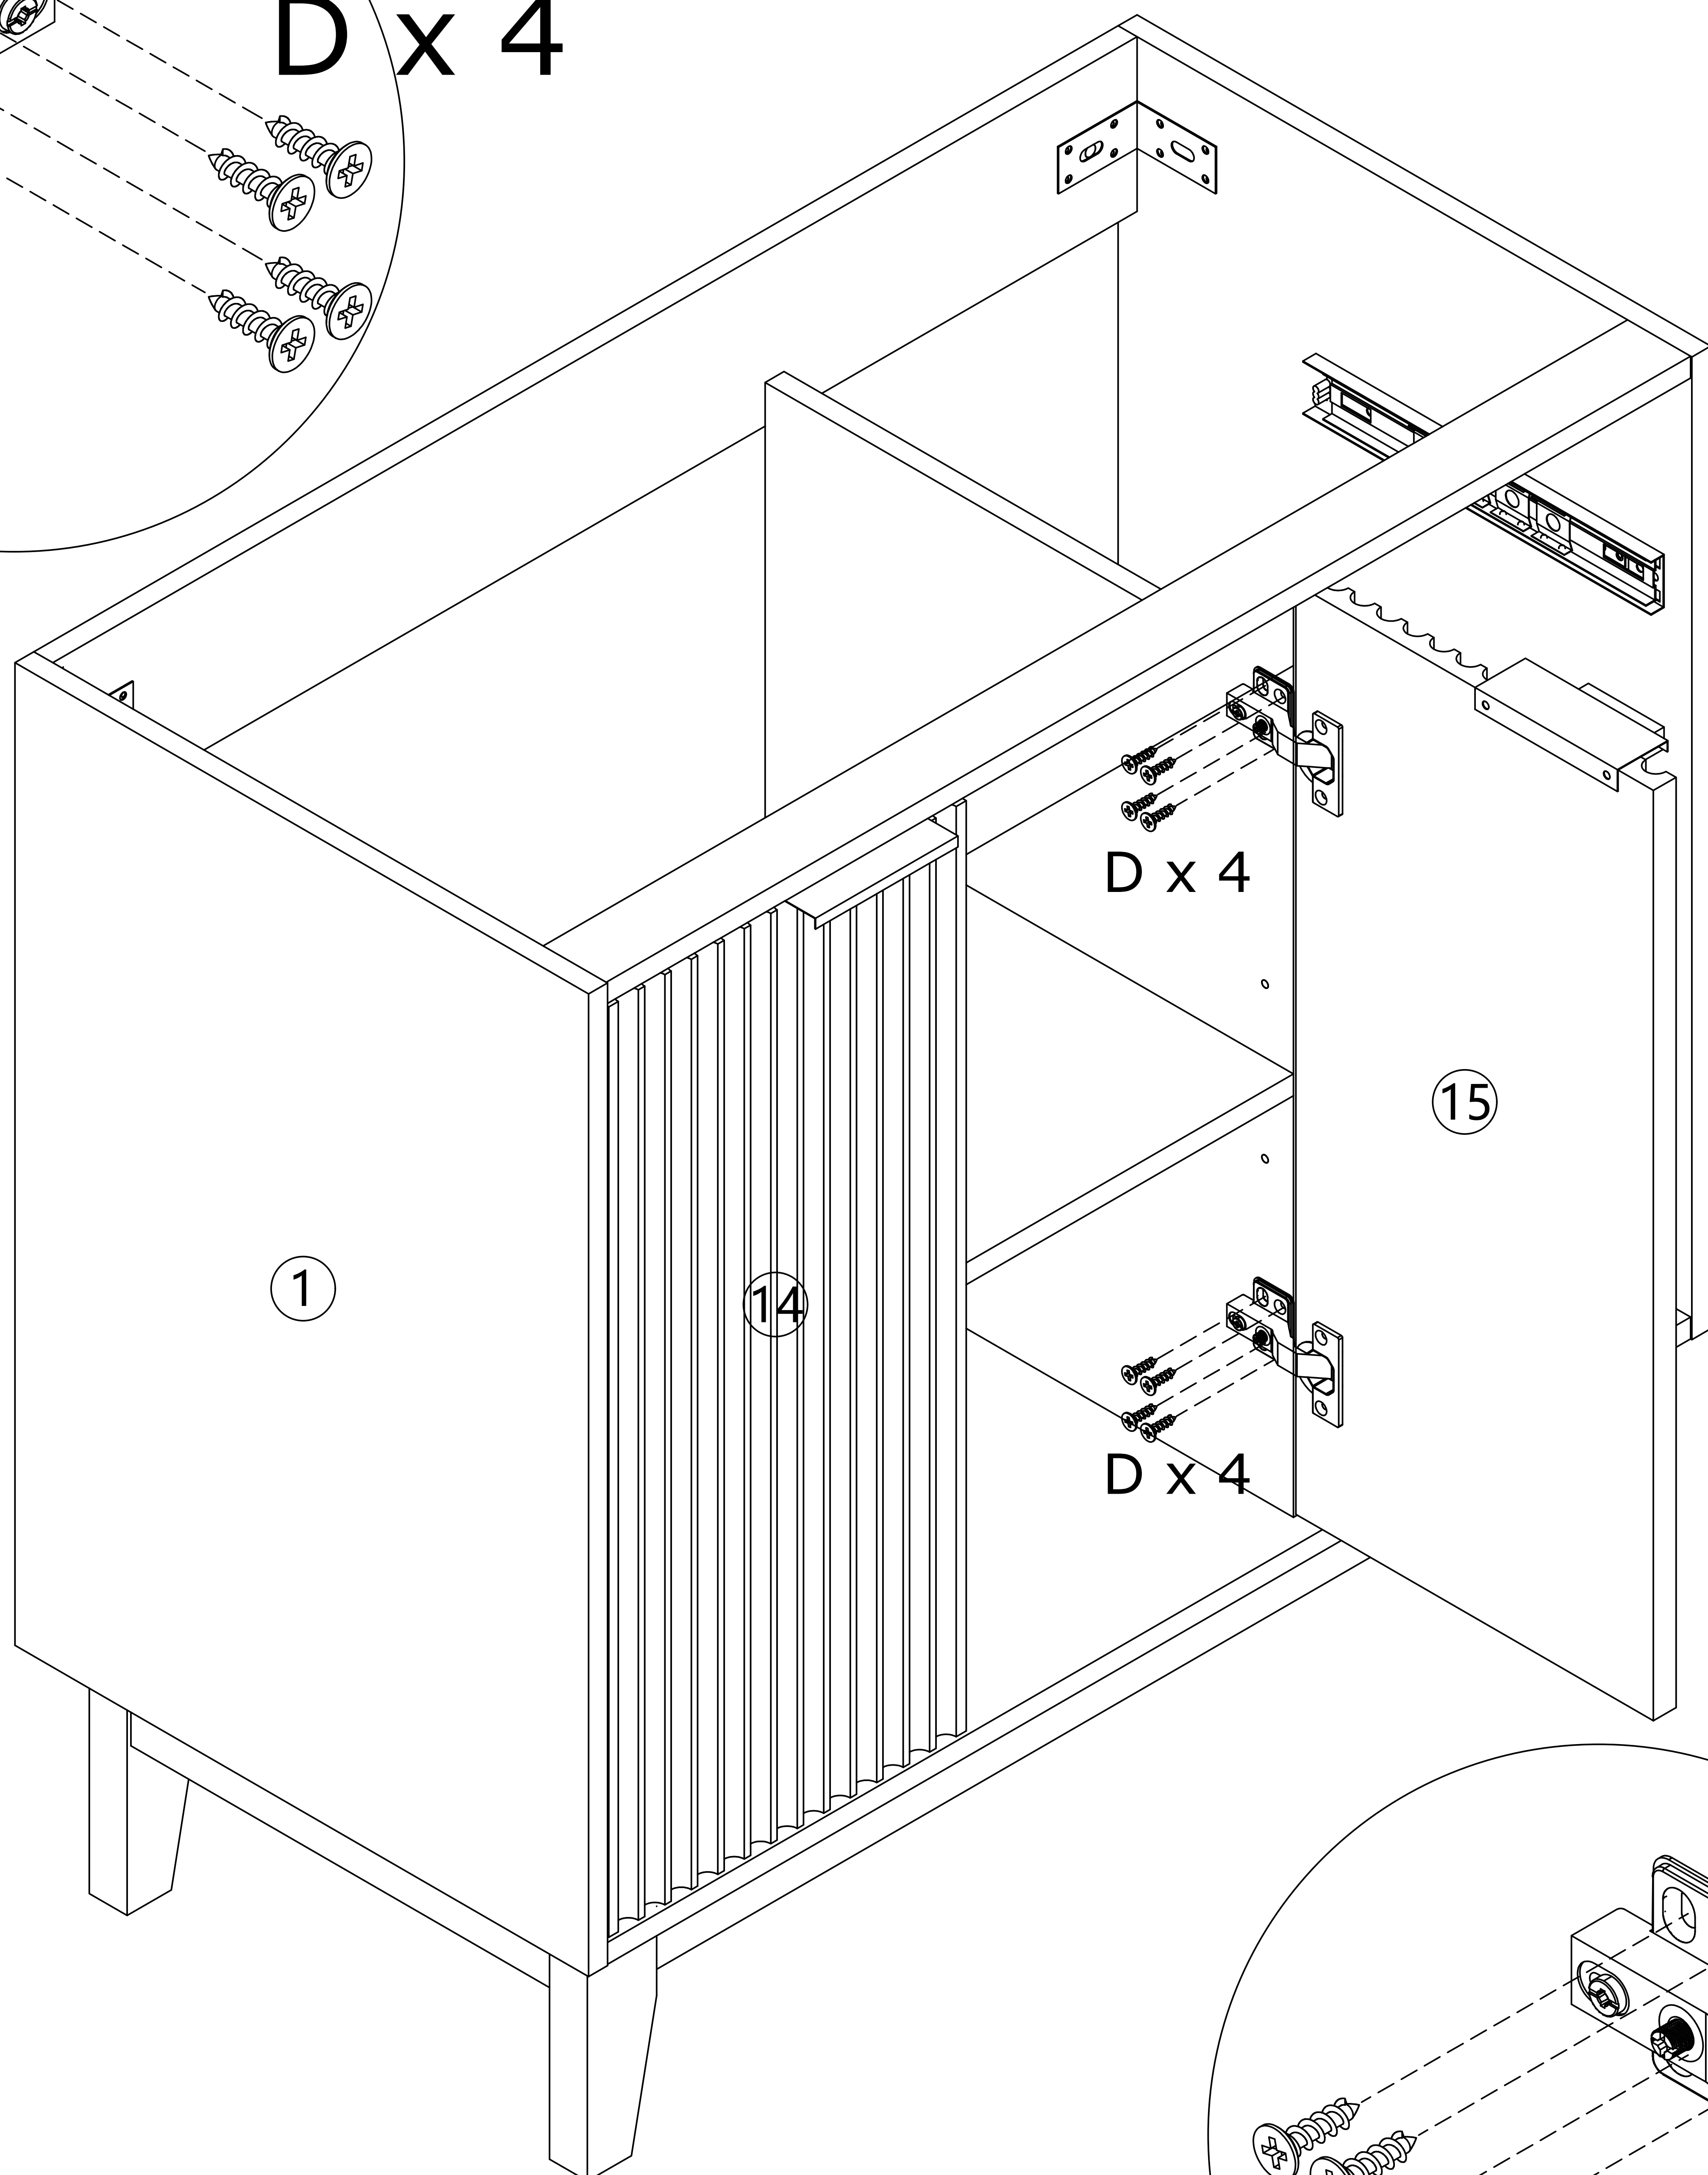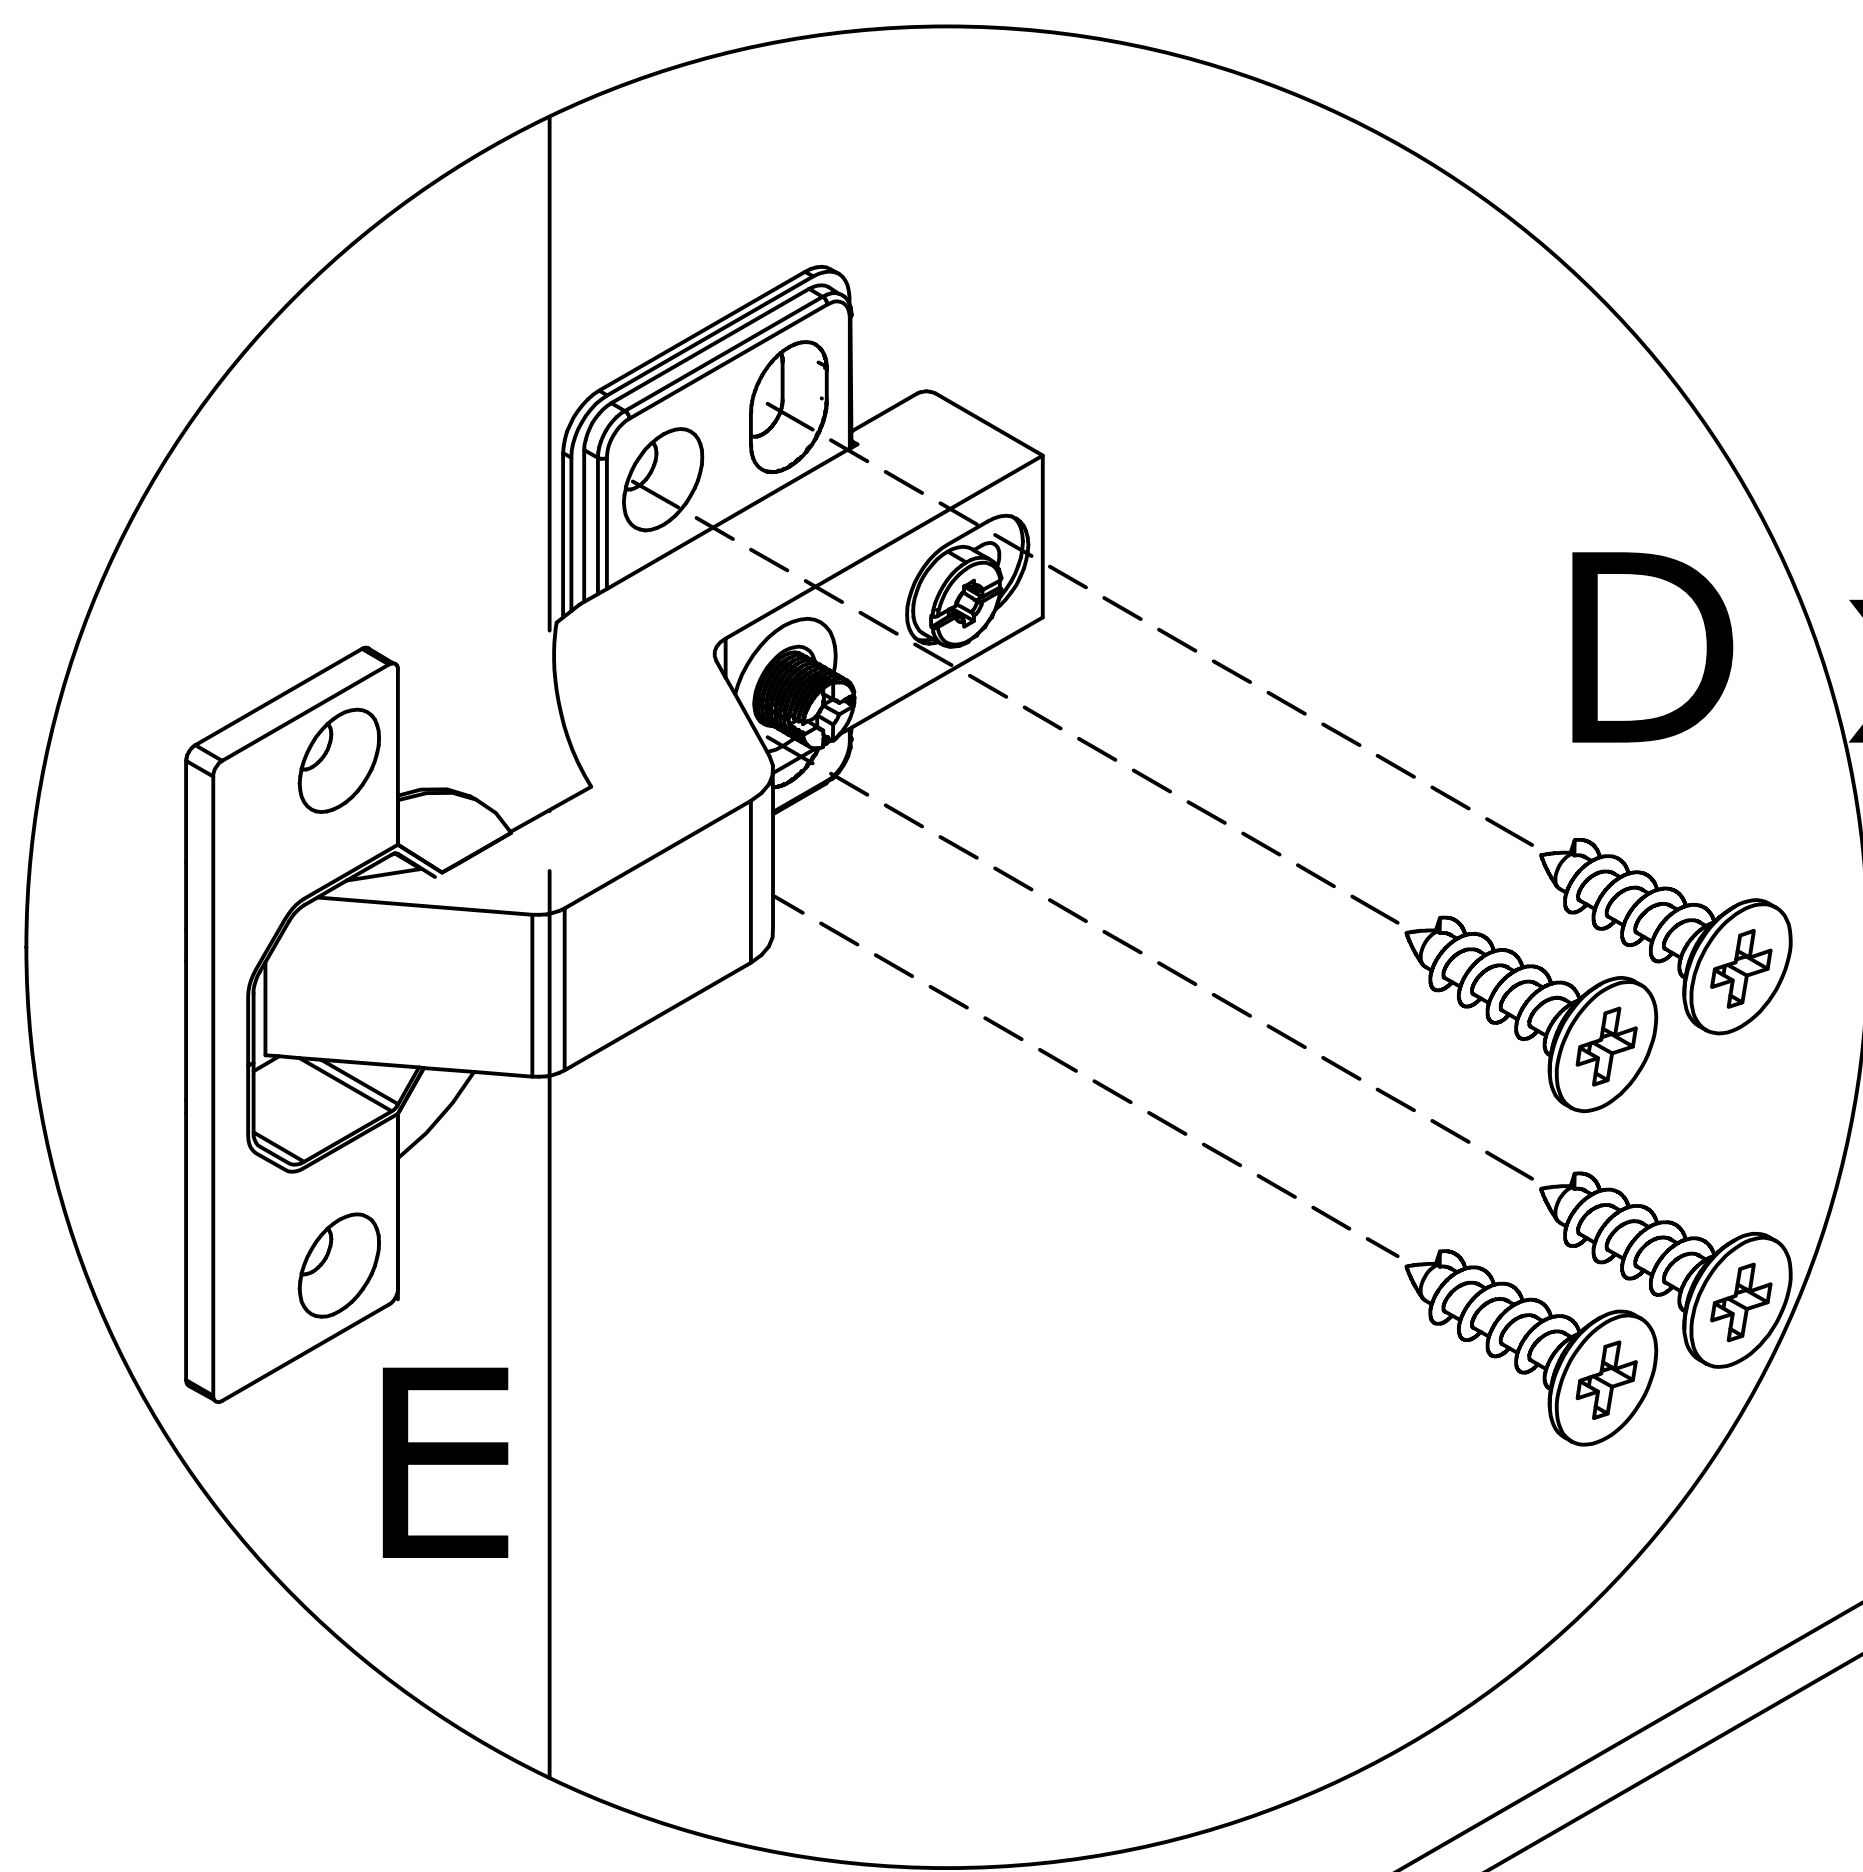


18

 - Refer to the illustration.
Install the drawer.

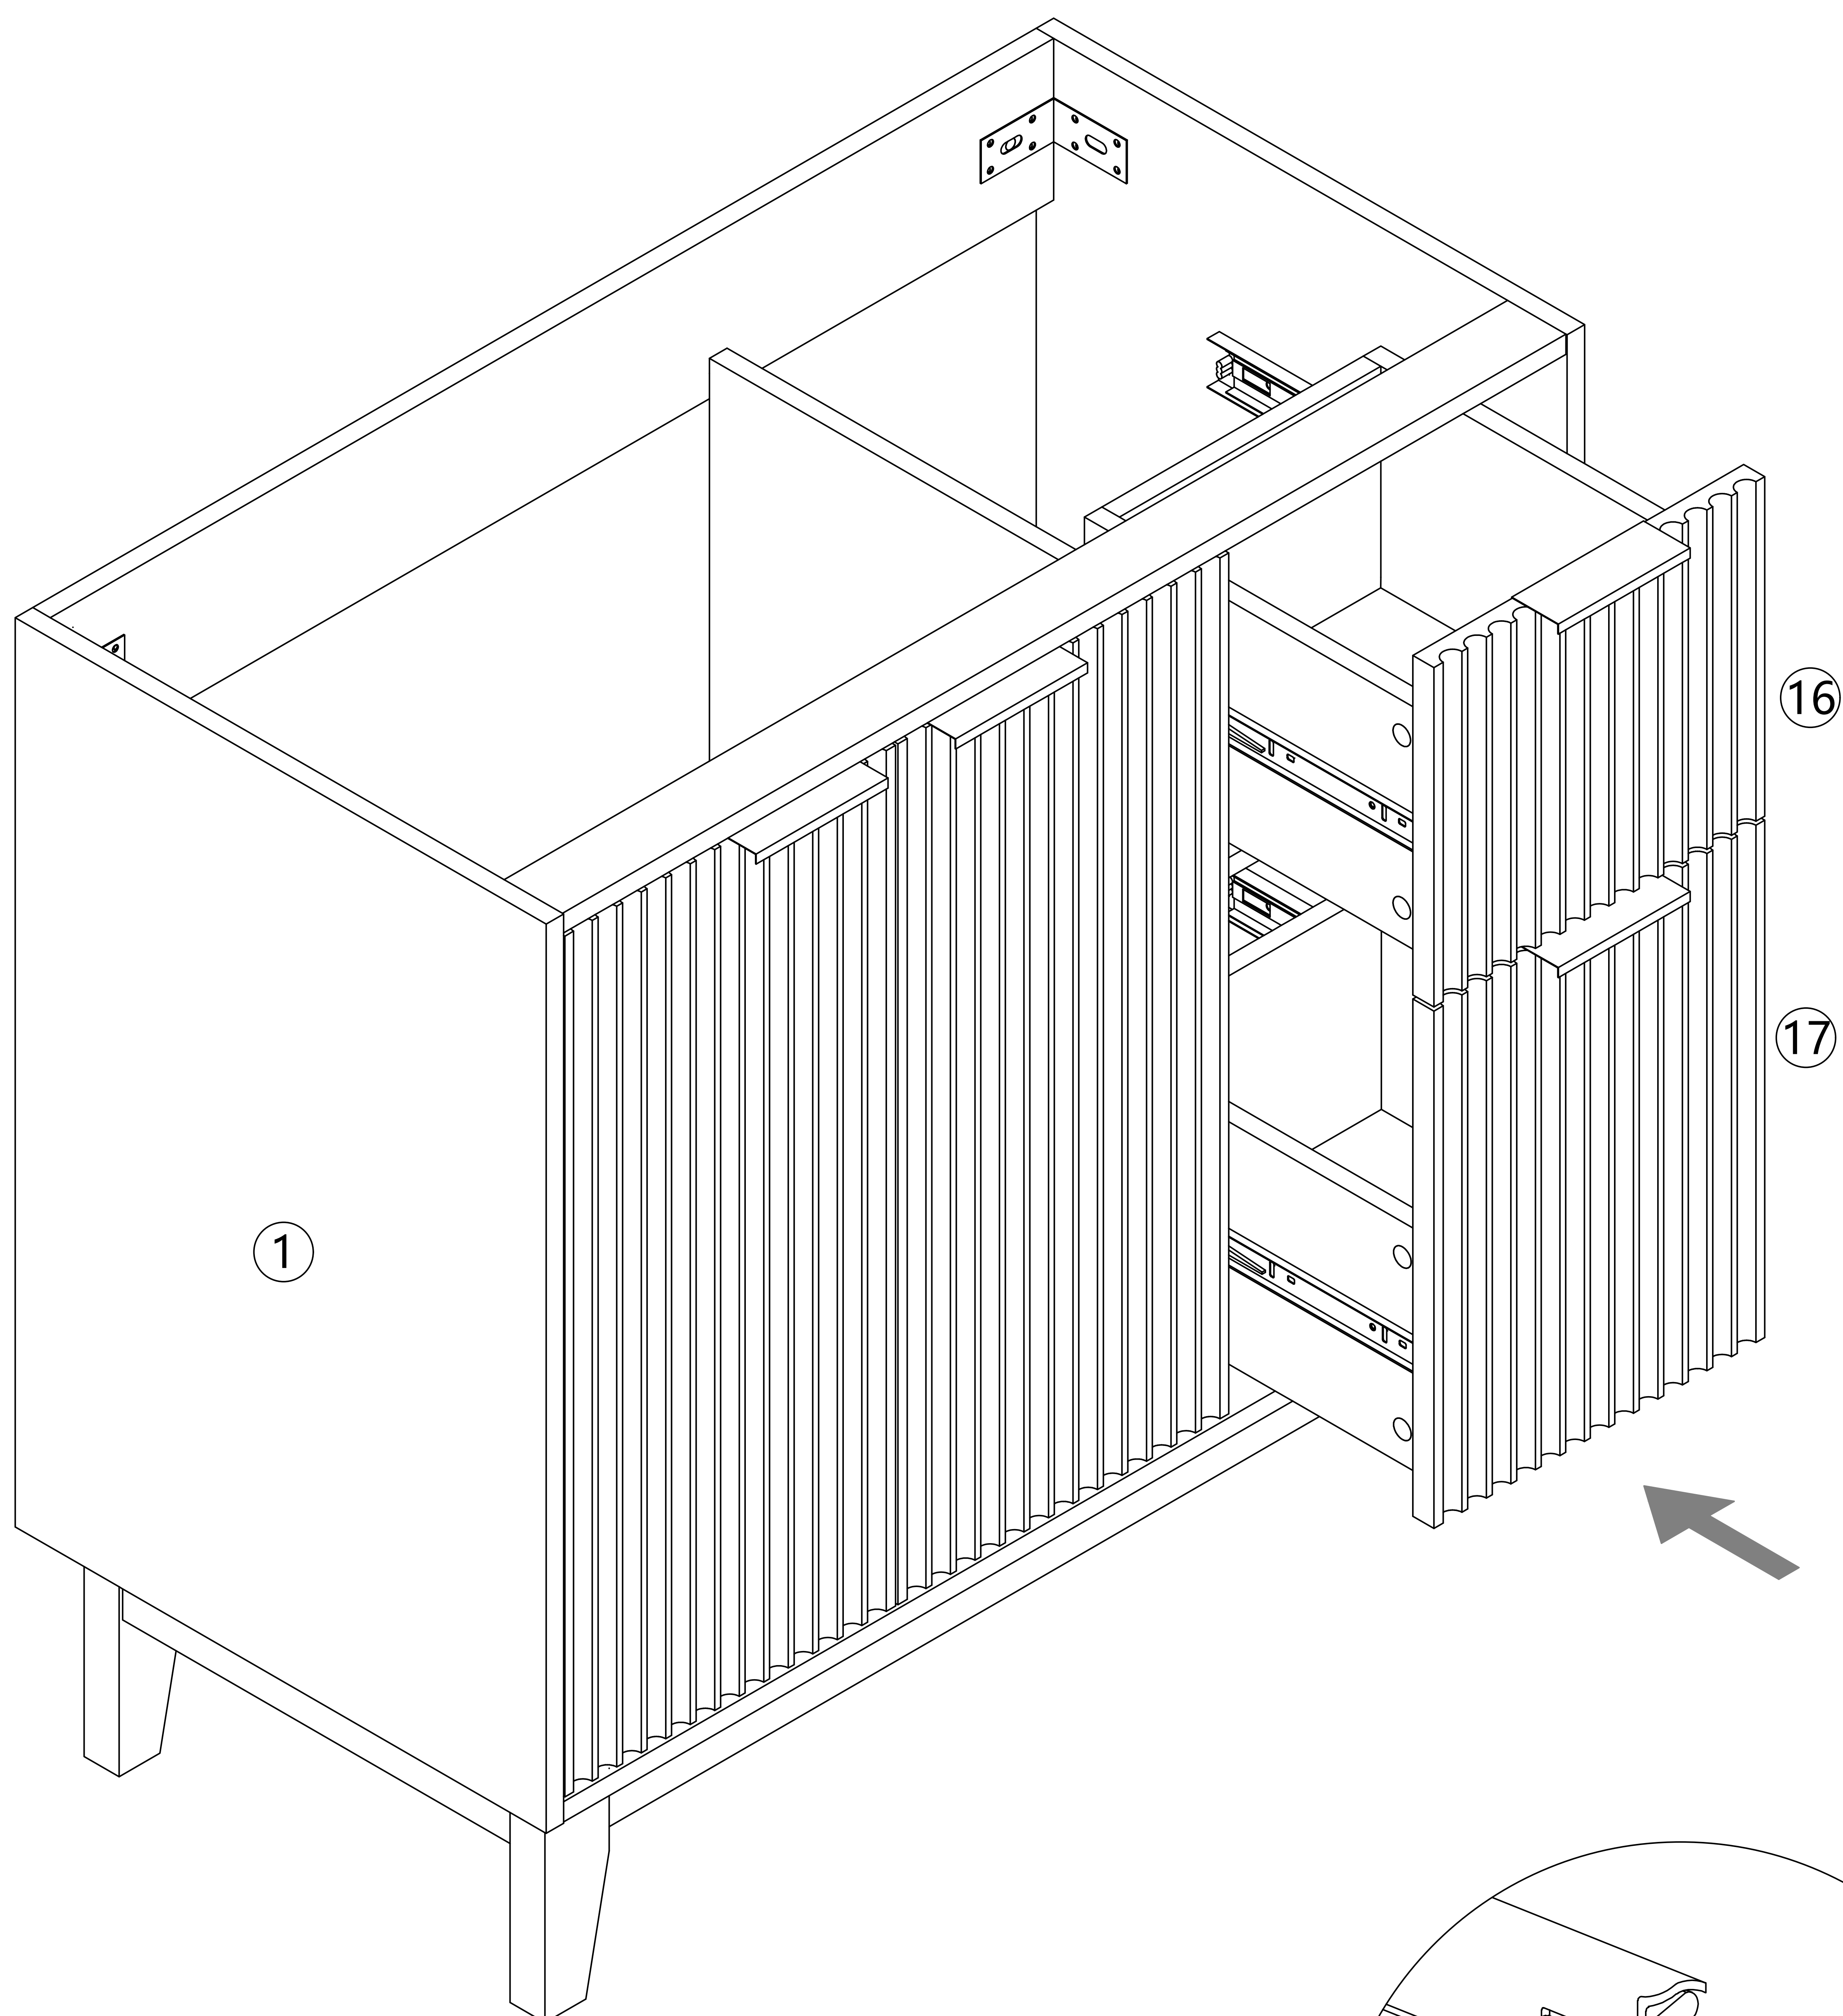


 Align the outer track with the center of the inner track and push in.

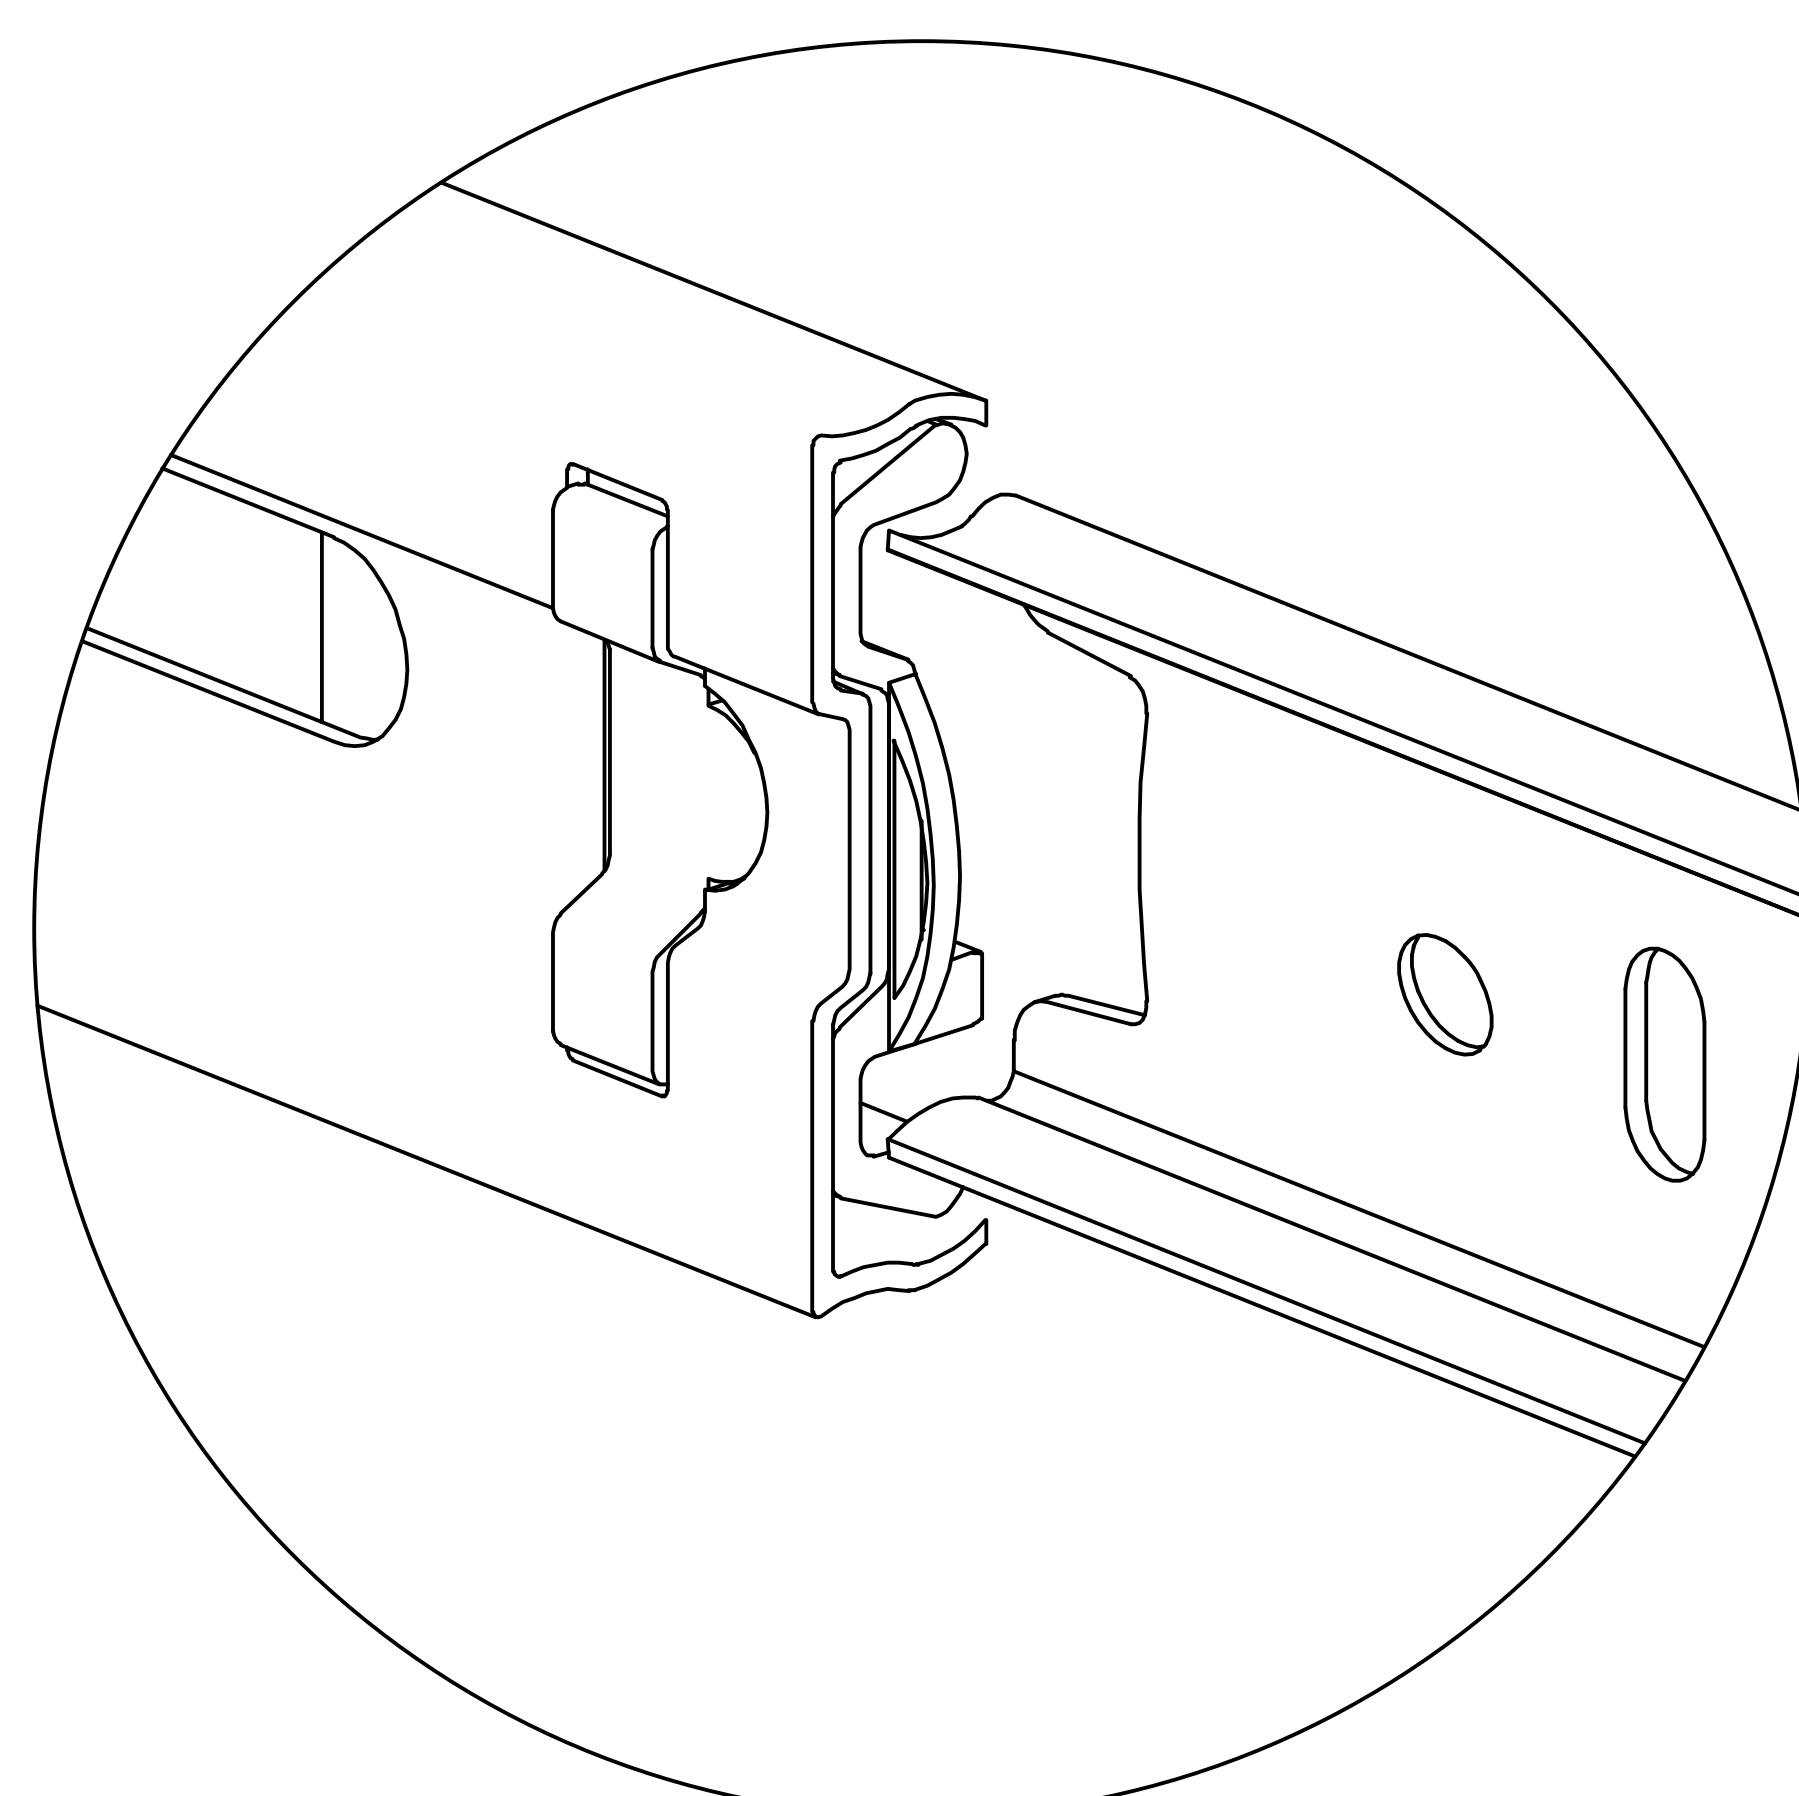

19

 -Installation complete.

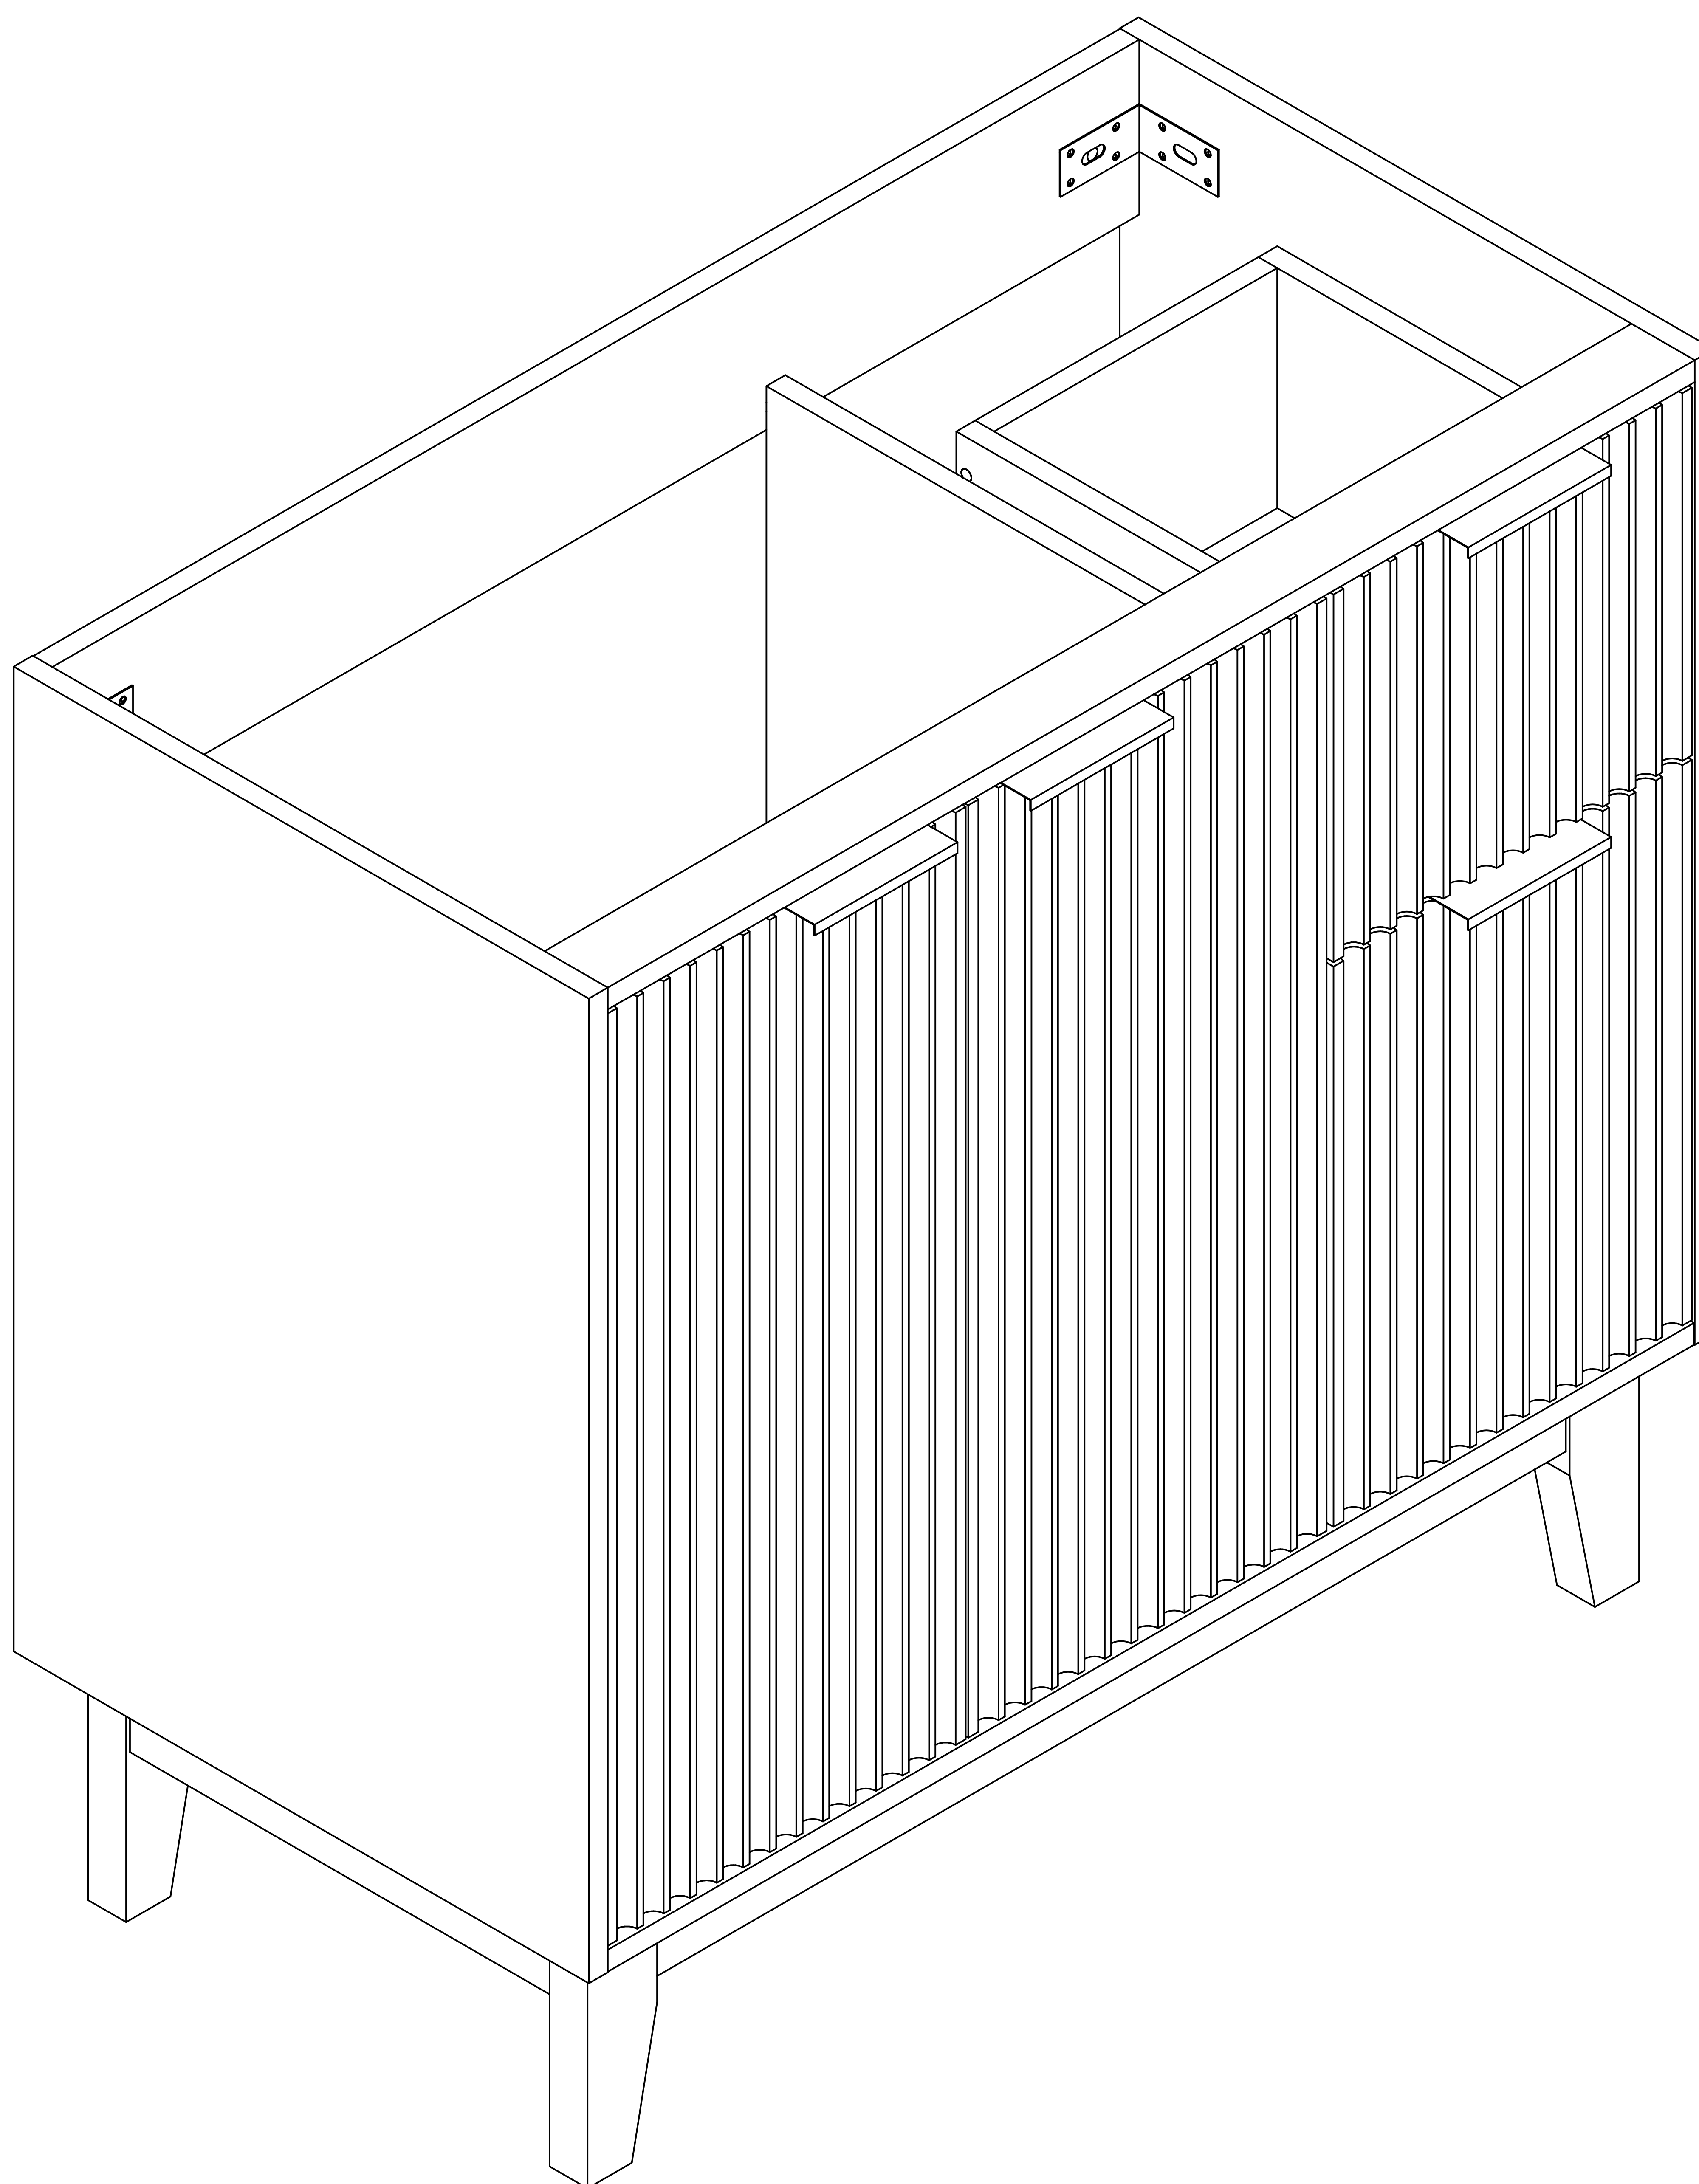

- To help prevent mildew, apply sealant to the space between the wall and the edge of the cabinet.