

PARTS AND HARDWARE

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.



A. Bolt M8x60mm

10x



B. Bolt M8x80mm

8x




C. Flat Washer M8x50mm

18x




D. Allen Key

1x

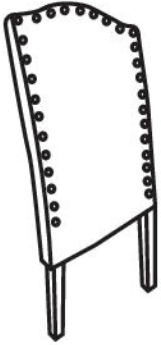

E. Backrest With Rear Legs

2x

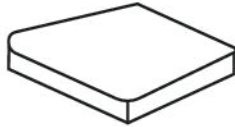

F. Seat


2x



G. Front Legs

4x

1

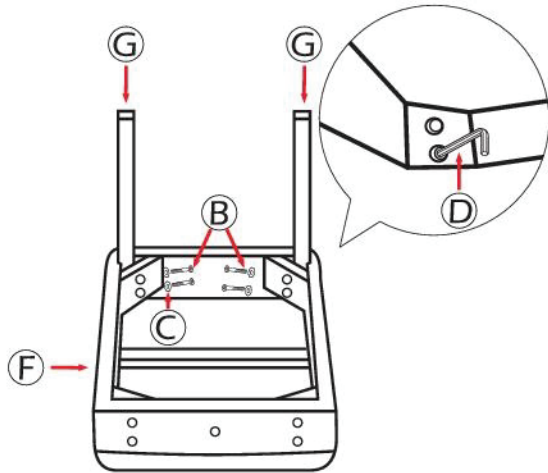


Partly screw in bolts, but do not fully tighten

ASSEMBLY INSTRUCTIONS


Do not fully tighten bolts until assembly is complete.

2

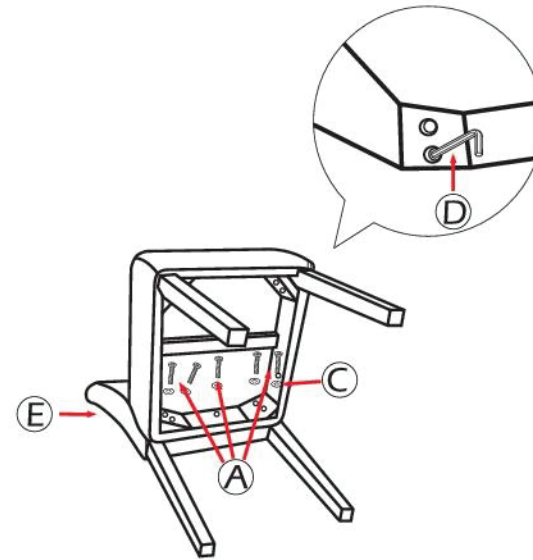

Partly screw in bolts, but do not fully tighten

3

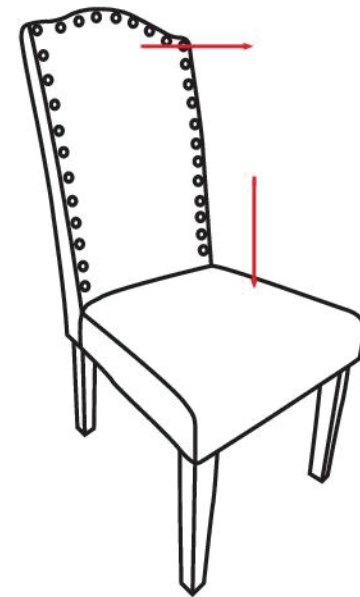

Stand the chair upright & ensure it is level before tightening all bolts

ASSEMBLY INSTRUCTIONS


Do not fully tighten bolts until assembly is complete.

Model: _____

Lot No: _____


Date of Purchase: _____

4

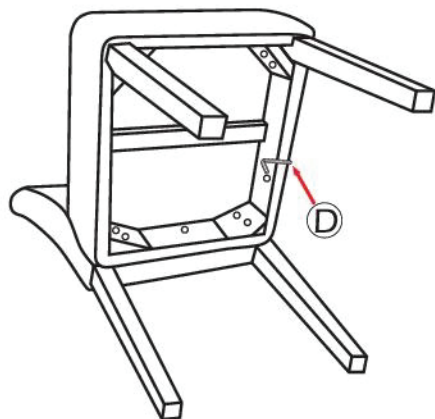


Fully tighten all bolts

5

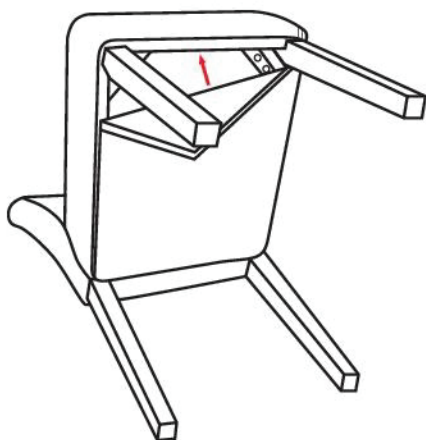

Cover the fabric

DINNING CHAIR

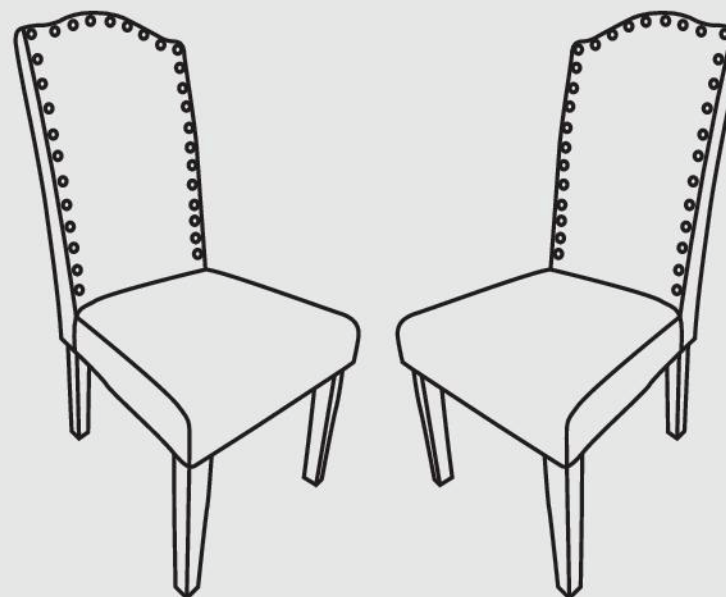

ADULT ASSEMBLY REQUIRED

If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll- free customer service number and have this assembly manual open to the parts list ready to provide the model name, and part name or number.



WARNING: This product may contain small components, please ensure they are kept away from small children.