


To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than <u>1</u> rider.

Do not mix alkaline standard(carbon-zinc), or rechargeable(nickel-cadmium) batteries.

CHILDREN'S ELECTRONIC TOY CAR OPERATION INSTRUCTIONS

Please read this manual in detail before using

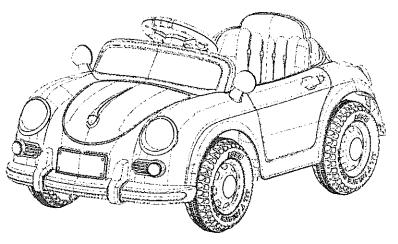

Please read the assembly manual carefully before operating.
Suitable for ages 3-7 years.
Always wear helmet when riding.
Your new vehicle requires to be assembled by adult only.
Please keep this manual since it contains important information.
Before first time use, charge the battery at least 10 hours.











Dispose of batteries safely





PRODUCT COMPLIES WITH ASTM F963-11

MADE IN CHINA



WARNING

ASSEMBLY SHOULD BE DONE BY ADULT

- 1. PRODUCT SPECIFICATION
- 2. PARTS LIST
- 3. CAUTIONS FOR SAFETY
- 4. PARTS DIAGRAM
- 5. ASSEMBLY STEPS
- 3. VEHICLE FUNCTION
- 7. CHARGING THE VEHICLE
- B. FUSE
- 9. TROUBLE SHOOTING GUIDE
- D. MAINTAINING YOUR VEHICLE:
- 1. DISPOSAL OF BATTERY

1.Product Specification

Suitable age:	3-7 Years	Battery:	6V 4.5 AH*1/4.5 AH*2
Load Capacity:	25kg	Size of car:	97*53*49CM
Speed:	3~5km/h	Power way:	Rechargeable
Charge:	Input: 110V	Average	Approximately 300 times
	Output: DC12V 500mA	battery life:	
Charge time:	8-12 Hours	Fuse	5A / 7A

2. Parts list



Vehicle Body x1



Wheel×4



Seat x1



charger×1



Dash board X1




Rear-view mirror×2







Sticker×1

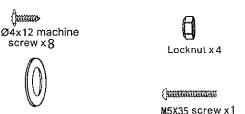

3. CAUTIONS FOR SAFETY

Ø10washer x 8


- 1. While riding, adult supervision is required at all times. Always wear a helmet when riding.
- 2. Do not drive near roads or on the footpath.
- 3. It is not recommended to drive the vehicle on wet surfaces or on slopes of greater than 15 degrees.
- 4. It is not recommended to ride this vehicle on sandy or soft surfaces.
- 5. Do not use this vehicle outdoors when it is raining.
- 6. Make sure you come to a complete stop before changing directions from forward to back.
- 7. Don't allow children to operate the charger or play with the battery.
- 8.Clean the motorcycle with a dry cloth only.

- 9. Please follow the correct weight and age limits allowed to drive this vehicle.
- 10. It is prohibited to change the circuit or add other electric parts.
- 11. Adults must teach their children about safe driving procedures.
- 12. Please cut off the power when stop driving.
- 13. Check the seat to confirm it has been fitted and secured before driving.
- 14.Inspect wires and connections of the vehicle periodically
- 15. Don't mix new and old batteries.
- 16. Charging the battery should only be done by adults.

 Charging plug is located underneath the seat.
- 17.In order to avoid accidents, please ensure the vehicle is safe before riding.
- 18. Check all wire plugs and connections periodically.


Parts Diagram

Assembly Steps

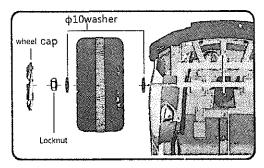


The Method of front wheels:

- 1. Gasket (φ10) on the front axle, install wheels, And Coupled with the gasket (φ10), tightened with self-locking nuts(M 10), mounted on the wheel hub.
- 2. Notice: Installation of wheels on both sides is different.

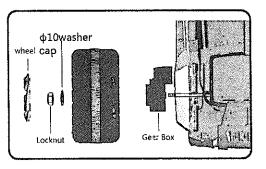


The Method of the back wheels:

- 1. The plum blossom is arranged on the rear axle for wheel, connect with the Gear Box's the plum blossom, And Coupled with the gasket (ϕ 10), Were tightened with self-locking nuts(M 10), mounted on the wheel hub.
- 2. Notice: When you fix the back wheels, please Fill the boss of wheel after installed the back wheel.
- Notice: If you buy the car with two batteries and two motor, please mounted on the other side with same method.

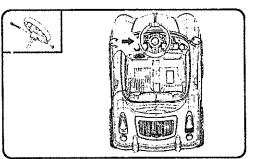


The method of the steering wheel:

Please connect the steering wheel 's line and the dashboard, Make sure the point of Steering wheels is Aligned with the bar of the direction, And tighten with the screws and the nut.

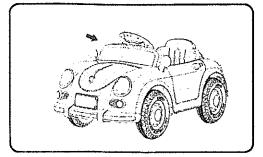


The method of the windshield frame:

Please lock the fastener of the windshield frame and the location hole of the car. (As shown in Figure)

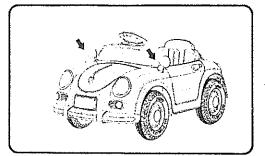


The method of the rear -view mirror:

Please lock the left/right rear-view mirror and the location hole of the car, And Press locking until can't been pulled up.

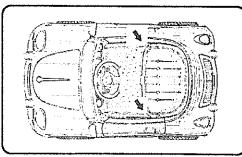

The method of the Seat:

Firstly, you need connect the battery's line of the car, Then take away the one side of the safety belt, insert the two fastener into the hole of the car separately, Make sure the hole of the seat is aligned with the hole of the car, And tighten with the Tapping truss head screws (4X12 mm).

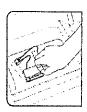


Notice: The battery line has two poles (The positive and negative pole) .The red line corresponds to the red place of the battery, the black line corresponds to the black place of the battery.

Charging The Vehicle

Charge socket is at the right

Caution: You must charge the 6-Volt battery for a "Full" 10 hours prior to use. Never charge the battery longer than 20 hours.

Failure to charge the battery as directed will cause permanent damage to the battery. After each use, or once a month minimum, recharge the battery of your vehicle for 8-10 hours. Do not charge the battery longer than 20 hours. NEVER run battery completely flat.

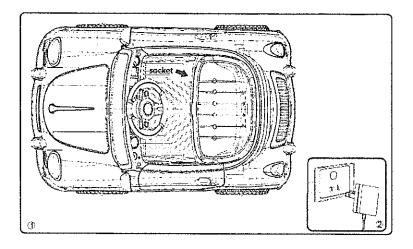


Find the socket As shown⊕
Plug the charger port into the input socket.
Plug the charger plug into a wall outlet. As shown ②

Fuse

When the vehicle won't work or can not be charged, please check the fuse .replace the fuse if necessary, and wait for 15 seconds after the fuse reset and power or restored.

The car features one thermal rest fuse in under the seat. (Refer to the picture.)

They will automatically trip and cut all power to vehicle if the motor, electric system or battery is overload. The fuse will reset and power will restored, after approximately 15 seconds.

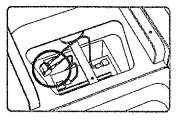

Trouble Shooting Guide

Problem	Possible Cause	
(1).The6-Volt battery Will not recharge	1. Motor connector or adapter connector is loose. Make sure the motor connector and the adapter connector is firmly plugged. 2. The 6-volt battery will not recharge. Make sure the charger is plugged into a 110v wall outlet and the power flow to the outlet is on. 3. Charger is not plugged in. Make sure the charger is plugged into a 110v wall outlet and the power flow to the outlet is on. 4. Check and replace fuse if necessary	
(2). The vehicle does not run	1. The battery may be low on power. After each use, or once a month minimum, charge the battery for a "full" 10 hours. DO NOT leave the battery on the charger for more than 20 hours. 2. Thermal fuse has tripped. Replace the tripped fuse by another spare one. 3. Wheel nuts are loose. If the wheel nuts with a wrench. 4. Motor connector or wires are loose. Make sure the motor connector is firmly plugged into the battery. 5. Battery is dead. Have you properly maintained the battery according to the directions? Is the battery old? Your battery may need to be replaced. 6. Electrical system is damaged. Water may have corroded the system, or loose dirt, gravel or samd might have jammed the switch. Check. 7. Motor is damaged. The vehicle needs professional repair.	
(3).The vehicle does not run very long.	1.Battery may be undercharged. You may not be charging the battery long enough. After each use, or once a month minimum, charge the battery for a "full" 10 hours. DO NOT leave the battery on the charger for more than 20 hours. 2.Battery is old. The 6-volt battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery Should operate for one to three years. Replace the batter with a new 6-volt battery.	
(4).Battery buzzes or gurgles when charging.	1.This is normal and not a cause for concern. It may also be silent When charging, which is also normal.	
(5).Charger feels warm when recharging battery.	1.This is normal and not a cause for concern.	

(6).The vehicle runs sluggishly or beeping occurs.	 Battery needs recharging. After each use, or once a month minimum, charge the battery for a "full" 10 hours. DO NOT leave the battery on the charger for more than 20 hours. Low battery signal will sound when the battery is running low on power. Battery is old. The 6-volt battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery Should operate for one to three years. Replace the battery with a new 6-volt battery. Vehicle is overloaded. Maximum weight is 25 kg. DO NOT overload the vehicle. DO NOT tow anything behind the vehicle. ONLY one rider at a time.
--	---

Maintaining Your Vehicle

- Occasionally use a lightweight oil to lubricate moving parts such as wheels and the steering linkages.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- ADULTS ONLY: Recharge the battery after each use. Recharge the battery at least once a month when the vehicle is not being used. See page 7 for instructions about recharging the battery.
- DO NOT wash the vehicle with a hose. DO NOT wash the vehicle with soap and water.
- DO NOT drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. DO NOT use car wax. DO NOT use abrasive cleaners.
- DC NOT drive the vehicle in loose dirt, sand or fine gravel, which could damage moving parts, motors or the electric system.

Disposal Of Battery

Disposal of Battery &




- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.
- Return an exhausted battery to your local approved lead-acid battery recycle. such as a local seller of automotive batteries.
- Contact your local waste management officials for other information regarding the environmentally sound recycling and disposal of lead-acid batteries.

Instructions for remote control

(Non remote control has nothing to do with this)

Schematic diagram of function

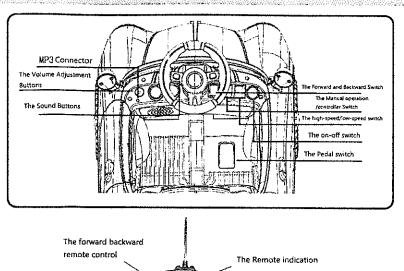

The Remote Control Switch

method of operation:

This car have two switch (The Pedal and The Remote). When the converting switch is on the mote, It limited to use remote control only. When it is on the pedal, it limited to use pedal.

Please take away the telescopic antenna from the bag and screwed into the remote controller .

The left and right control

Put on batteries, open the "Power' button, outstretch the remote antenna, Then can operate a remote control.


Push the forward/backward button Switch to the front, the car goes forward, Pull the button to e back, the Car goes backward.


Push the left/right button to the left, the car turns left, Pull the button to the right ,the car turns ht.

With the operation of remote control's left and right button together, it will make play more erested.

Only adult can operate the remote control, and the must keep distance within 10M for remote ntrol and car. In The same place, Must not have two or two above cars using remote control!

Label Decoration

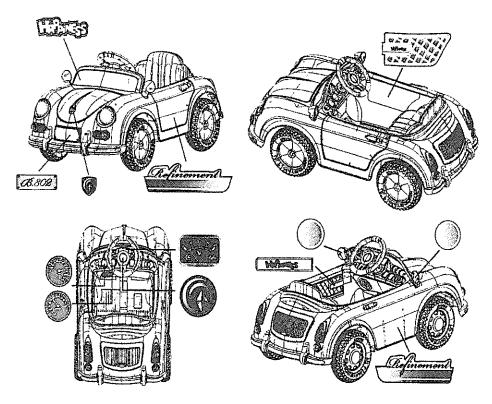

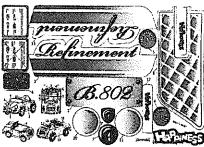

HINT:Some labels shown are applied on both sides of the vehicle.

- Wash your hands before applying the labels.
- Before applying the labels, wipe the surface of the vehicle with a clean, dry cloth to remove any dust or olis.
- Place the labels exactly as shown in the illustrations.