

**OVENTE®**

# ELECTRIC TOASTER OVEN

TO6895B SERIES



*Before use, please read this manual thoroughly and save for future reference.*

[ovente.com](http://ovente.com)

# ELECTRIC TOASTER OVEN

TO6895B SERIES



# ELECTRIC TOASTER OVEN

## TO6895B SERIES

### TABLE OF CONTENTS

|                                 |           |       |
|---------------------------------|-----------|-------|
| IMPORTANT SAFETY                | . . . . . | 4 - 5 |
| PARTS AND FEATURES              | . . . . . | 6     |
| USING THE ELECTRIC TOASTER OVEN | . . . . . | 8     |
| TOASTER OVEN TIPS               | . . . . . | 9     |
| CARE AND MAINTENANCE            | . . . . . | 9     |
| ELECTRICAL REQUIREMENTS         | . . . . . | 9     |



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to prevent risk of fire, electric shock, burns, or other injuries or damages.

- Read all instructions before using the toaster oven.
- Before connecting the toaster oven, check if the voltage indicated at the bottom of the appliance corresponds to the local mains voltage before you connect the appliance.
- DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. If the mains cord is damaged, contact your service provider immediately.
- To protect against electrical hazards, DO NOT immerse cord, plugs, or the appliance itself in water or other liquid.
- DO NOT let cord hang over the edge of a table or counter, and do not let it touch hot surfaces.
- Regularly check the main cord if it is still in good and safe condition.
- Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break.
- To avoid circuit overload, do not operate another high voltage appliance on the same circuit.
- Keep hands and utensils out of the product when using.
- The toaster oven should always be used on a dry and level surface.
- Do not place the toaster oven on or near a hot gas or electric burner.
- Do not touch hot surfaces while the appliance is operating, it can become very hot.
- Use an oven mitt (not included) when opening and closing the lid when in use for safety.
- When operating the toaster oven, keep at least four inches (ten centimeters) of space on all sides of the oven for adequate air circulation.
- The glass door is heavy, hold the handle until the door is completely open. Do not let the door fall itself.
- Do not cover any part of the oven with metal or cloth, as it may cause overheating of the oven.
- DO NOT PUT OVERSIZED FOODS OR METAL UTENSILS INSIDE THE TOASTER OVEN, AS THEY MAY CREATE A FIRE OR RISK OF ELECTRIC SHOCK.
- Extreme caution should be exercised when using containers constructed of anything other than qualified metals or ceramics.
- DO NOT PLACE ANY OF THE FOLLOWING MATERIALS IN THE OVEN: PLASTIC, PAPER, OR ANYTHING SIMILAR.
- Close supervision is necessary when the appliance is used and near children.
- This appliance is not intended to be used by people (including children) with reduced physical, sensory and mental capabilities. This appliance is not for people with lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.



# IMPORTANT SAFEGUARDS

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking the parts off.
- DO NOT use any attachments or accessories that are not recommended, or sold and approved by the manufacturer of this product.
- This appliance is for HOUSEHOLD USE ONLY.  
Do not use outdoors or for purposes other than intended use.
- DO NOT touch hot surfaces. Use handles or knobs.
- DO NOT move the unit when it is still hot.
- Always place the appliance on a heat-resistant surface.
- Turn the switch OFF before connecting or disconnecting plug from power outlet.
- Always unplug the toaster oven immediately after using, and allow cooling before cleaning and storing.
- DO NOT leave unit unattended while in use.
- The device is not intended to be operated with an external timer or separate remote control system.
- DO NOT attempt to examine or repair this product yourself. Only qualified and approved service personnel should perform any repair.
- This appliance has a tempered glass door. This glass is stronger than ordinary glass and more resistant to breakage. It can break, but the pieces will not have sharp edges. Avoid scratching the door surface to prevent the glass from breaking.
- ⚠ CAUTION: This appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires, or other damage to property caused by touching the parts while in use or during cooling.
- ⚠ CAUTION: The surfaces of the toaster oven gets very hot. To avoid steam being released while cooking, and to prevent accidental burns and scalping, always use an oven mitt (not included) when opening and closing the lid.
- ⚠ WARNING: During the first few minutes of initial use, you may notice a little smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few times.

# PARTS AND FEATURES

## 700-WATT MOTOR

Heats food faster

## COOL TOUCH HANDLE

Secures grip and protects hands from heat or injuries

## THERMOSTAT KNOB

Lets you set your ideal heating temperature

## FOOD TRAY

Removable aluminum tray that fits securely for optimal cooking

## GRILL RACK

Captures the heat, so that your food cooks from the top and the bottom

## TIMER KNOB

A cooking time setting that can be set for up to 60 minutes

## TEMPERED GLASS DOOR

Designed for easy viewing

## LED INDICATOR LIGHT

Remains lit whenever the oven is on and in use



# 10-LITER ELECTRIC TOASTER OVEN

## TO4810B SERIES



### HOMEMADE PIZZA

Throw a party and bake irresistible pizza for everyone.  
Perfect for busy weeknights and fun weekends!



### CORN CASSEROLE

Sweet and savory corn casserole with onion, red bell pepper, fresh sage sautéed in butter and flavored with paprika and cayenne.



### BAR-STYLE TORTILLA PIZZA

Extra crispy tortilla-based pizza  
will be your new favorite!



### STIR-FRY FRITTATA

Give your Frittata a surprising Asian taste  
with stir-fry veggies, hoisin sauce and ginger.



# USING THE ELECTRIC TOASTER OVEN

## HOW TO OPERATE

- Put the oven on a stable and heat-resistant surface.
- Set the ideal temperature and time, then preheat the oven for 10 minutes.
- Insert the food tray or rack with food.
- Only use either the tray or rack to ensure consistent cooking quality.
- During cooking, watch the food through the tempered glass door. For thick food, it is better to turn it over. Open the door carefully using oven mitts (not included), turn the food over once or twice and close it immediately.
- Once cooking is finished, the timer will shut off automatically. If the cooking is finished earlier than the set time, turn back the timer to OFF in order to shut it off.
- Make sure to switch the Timer Knob to "O" in order to turn the oven OFF when cooking is done.
- Remove the food from the oven carefully.
- NOTE: All toasting timing is based on meats at refrigerator temperature. Frozen meats may take considerably longer. Therefore, it is highly recommended to use a meat thermometer.

⚠ CAUTION: The surfaces of the toaster oven gets very hot. To avoid steam being released while cooking, and to prevent accidental burns and scalping, always use an oven mitt (not included) when opening and closing the lid.

## HOW TO BAKE

- Insert the wire rack into a suitable position.
- Put the food tray loaded with food on the wire rack, then close the oven door.
- Set temperature and baking time.
- Wait until your food is ready.

## HOW TO BROIL

- Insert the wire rack with food.
- Keep the door half-open.
- Set temperature and cooking time.
- Wait until your food is ready.

## HOW TO TOAST

- Set the temperature to maximum.
- Insert the wire rack with food.
- Set temperature and cooking time.
- Wait until your food is ready.





# TOASTER OVEN TIPS

- ★ Ensure that there is enough ventilation around the area.
- ★ Ensure that the oven is completely dry before use.
- ★ Do not put the oven on an untreated wood surface.
- ★ There might be some smoke that will come out from the oven during the first use. This is normal. The smoke will disappear after 5-15 minutes.
- ★ In order to get better cooking performance, it is recommended to preheat the oven for about 10-15 minutes.
- ★ Oil the food tray or rack before putting food on it to provide stickiness.
- ★ If the food is oily like chicken, pork sausage, fries, etc., use two pieces of aluminum foil to wrap the food to keep oil from splashing during cooking.



## CARE AND MAINTENANCE

- Unplug the toaster oven and allow it to cool before cleaning.
- Clean the interior and exterior of the appliance with a damp cloth or sponge (not included).
- The toaster oven features a Quick-Clean coating. If desired, wipe walls with a damp cloth (not included) moistened with mild detergent.
- Do not use abrasive cleaners or sharp utensils to clean the appliance, as it may damage the porcelain enamel coating.
- Do not immerse the appliance in water.
- Do not use abrasive or metallic materials.

- All surfaces can be cleaned with a clean damp cloth (not included).
- If stains still appear, it is recommended to use soap.
- Dry all parts and surfaces of the oven thoroughly prior to plugging it in and using.
- Store the toaster oven in a clean and dry place. Never store the oven while it is still hot or still plugged in.
- ⚠ **CAUTION:** This appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires, or other damage to property caused by touching the parts while in use or during cooling.
- ⚠ **WARNING:** During the first few minutes of initial use, you may notice a little smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few times.
- ⚠ **DO NOT PUT OVERSIZED FOODS OR METAL UTENSILS INSIDE THE TOASTER OVEN, AS THEY MAY CREATE A FIRE OR RISK OF ELECTRIC SHOCK.**
- ⚠ **DO NOT PLACE ANY OF THE FOLLOWING MATERIALS IN THE OVEN: PLASTIC, PAPER, OR ANYTHING SIMILAR.**



## ELECTRICAL REQUIREMENTS

Voltage : 120V

Hertz: 60Hz

Power: 700W

# ELECTRIC TOASTER OVEN

TO6895B SERIES





# OVENTE WARRANTY

Register your product within **30** days of purchase to activate its one-year limited manufacturer's warrant at [ovente.com/register](https://ovente.com/register)

**NOTE: WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.**

## LIMITED ONE (1) YEAR WARRANTY:

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use or accidents.

## LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

**Customer Support:** [ovente.com/support](https://ovente.com/support)  
Visit us at [ovente.com](https://ovente.com)

OVENTE®

*Defining Housewares*