





## HARDWARE LISTS Α В ¢ || Ø5/16" x 20mm 4mm Allen key (1pc) Hex-head bolt (4pcs) С D Ø5/16" x 30mm Ø5/16" x 40mm Hex-head bolt (6pcs) Hex-head bolt (5pcs) F Ε ((Ŏ) [0] Ø5/16" Ø5/16" Flat washer(15pcs) Spring washer (15pcs) Н G EQ. Ø5/16" x 70mm Hanger bolt (2pcs) Half moon (2pcs) L J Ø5/16" Nut (2pcs) Wrench (1pc) Κ L Ø1/4" x 30mm Ø1/4" x 50mm Hex-head bolt (2pcs) Hex-head bolt (8pcs) Μ Ν Ø1/4" Ø1/4 Spring washer (10pcs) Barrel nut (8pcs) Q R Ø1/4" Ø4 x 30mm Wood screw (44pcs) Flat washer(10pcs) S Т M Cam bolt (8pcs) Cam lock(8pcs)

## ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS :

- 1. Do not FULLY TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
- 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
  - 3. Keep all hardware parts out of reach of children.
- NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.
  - 4





















