




CAMPING KITCHEN

SAFETY & WARNINGS

- Please read all instructions carefully.
- Retain instructions for future reference.
- Separate and count all parts and hardware.
- Read through each step carefully and follow the proper order.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.
- Ensure the unit is installed on level, firm ground.
- Ensure all parts are securely locked into position.
- Do not overload the table. Keep children away from all cooking areas.
- Follow all advice and warnings of your cooking devices if they are being used on this unit.
- Never take a BBQ into a tent, caravan or cabin. BBQ (both charcoal and gas) produce carbon monoxide which is a highly poisonous substance.

COMPONENTS

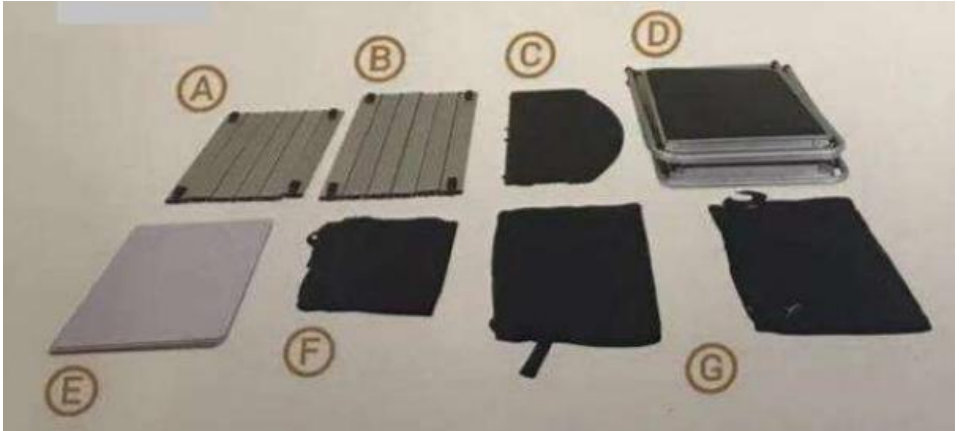

- A: Lower Table
- B: Upper Table
- C: Wind Shield
- D: Frames
- E: Cupboard Shelves
- F: Middle Cupboard
- G: Side Cupboard

INSTALLATION

Step 1

Open the frame and lock the supports into place.



Step 2

Clip on the side cupboards using the supplied hooks.



Step 3

Insert the cupboards shelves.



Step 4

Attach the two metal shelves. The wind shield fixes into the pre-cut slots.



Step 5

The center cupboard can now be attached.



MAINTENANCE

- Wipe the unit down with a damp cloth. Mild detergent may be used if the unit is extremely dirty. Avoid the use of a spray and other harsh cleaners as they may stain, streak or dull the surface.
- Ensure the unit is fully dry, and store inside the carry bag, in a dry, well ventilated location.