 


INSTALLATION

 
 
Product Manual

Version: KF150314US-25A-PF

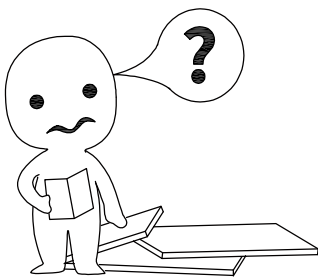



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

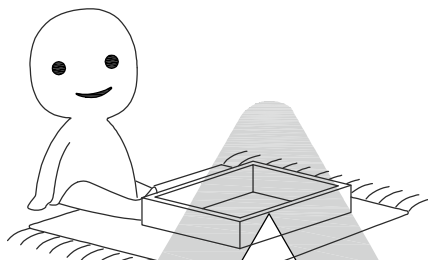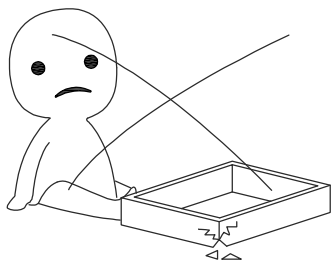





AVOID SCRATCHES!

  In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

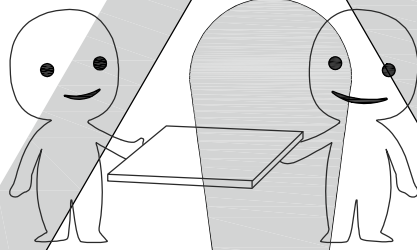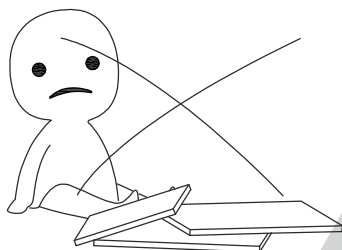

IMPROVE EFFICIENCY !

    Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

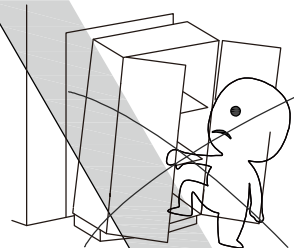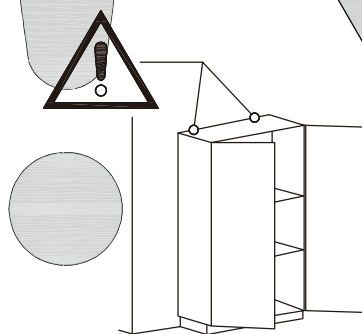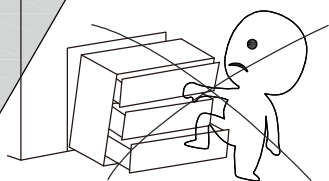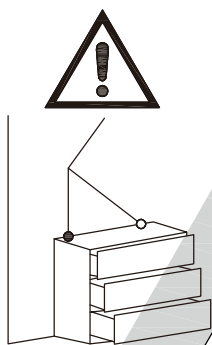

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

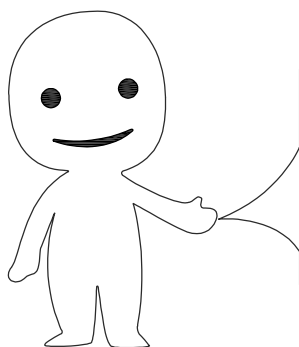

Please prepare the following tools

   


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 106 M5x42 mm	B x 106 Ø15x10 mm	C x 44 M5x40 mm	D x 66 M3.5x12 mm	E x 12 Ø6x40 mm
F x 18 Ø8x40 mm	G x 2 M5x12 mm	H x 14 M6x10 mm	I x 10 M6x25 mm	J x 8 M6x30 mm
K x 8 M6x50 mm	L x 2 M6	M x 2 M4x45 mm	N x 2 M4	O x 8 M8x40 mm
P x 8 38x20x25	Q x 1 Ø60	R x 1 	x 1 #4	x 1 12mm 10mm
x 1 M4	x 1 #5			


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

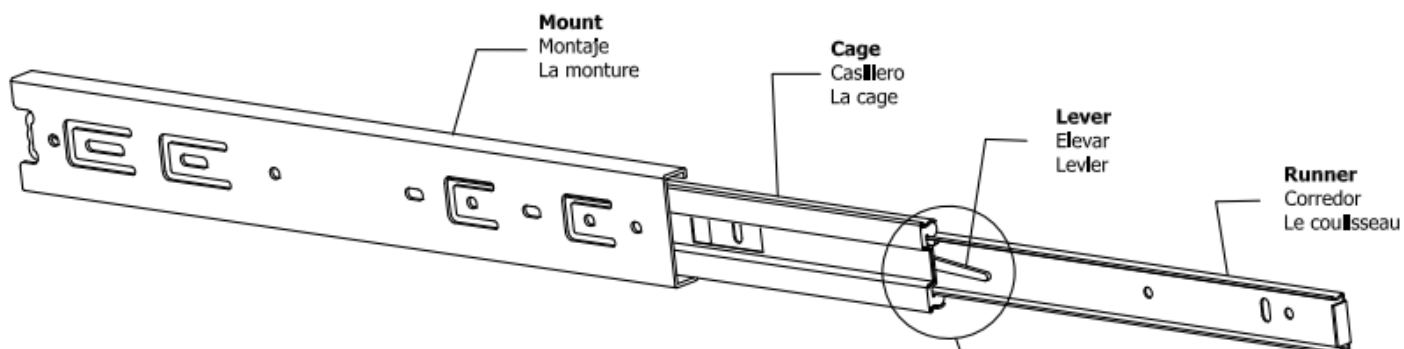

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive


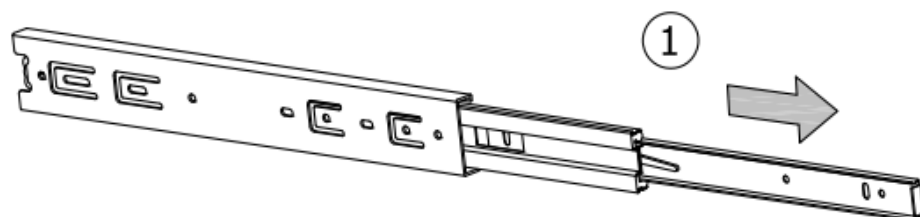


 STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

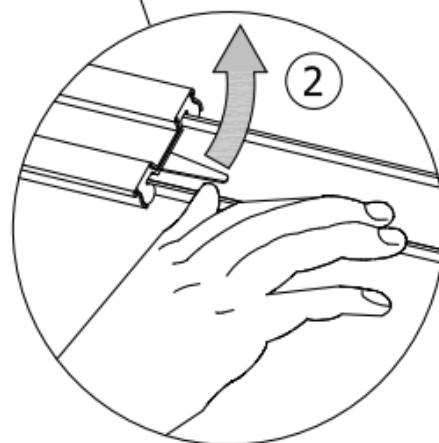

   STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

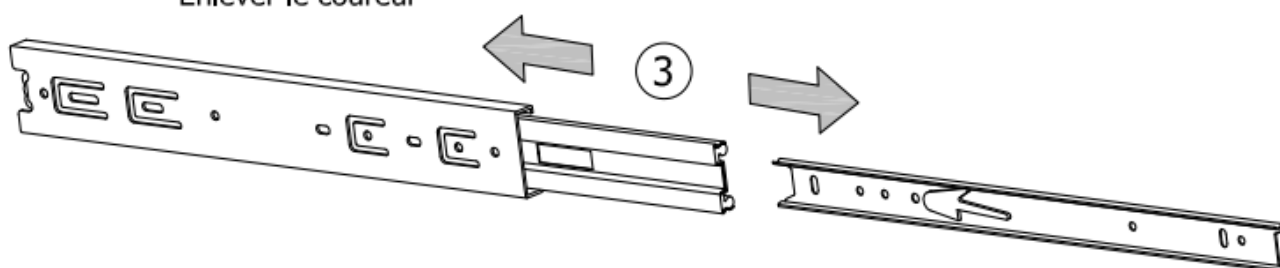

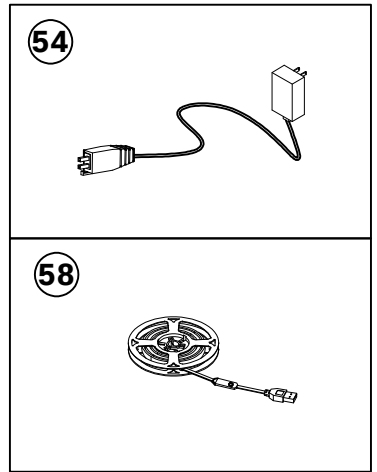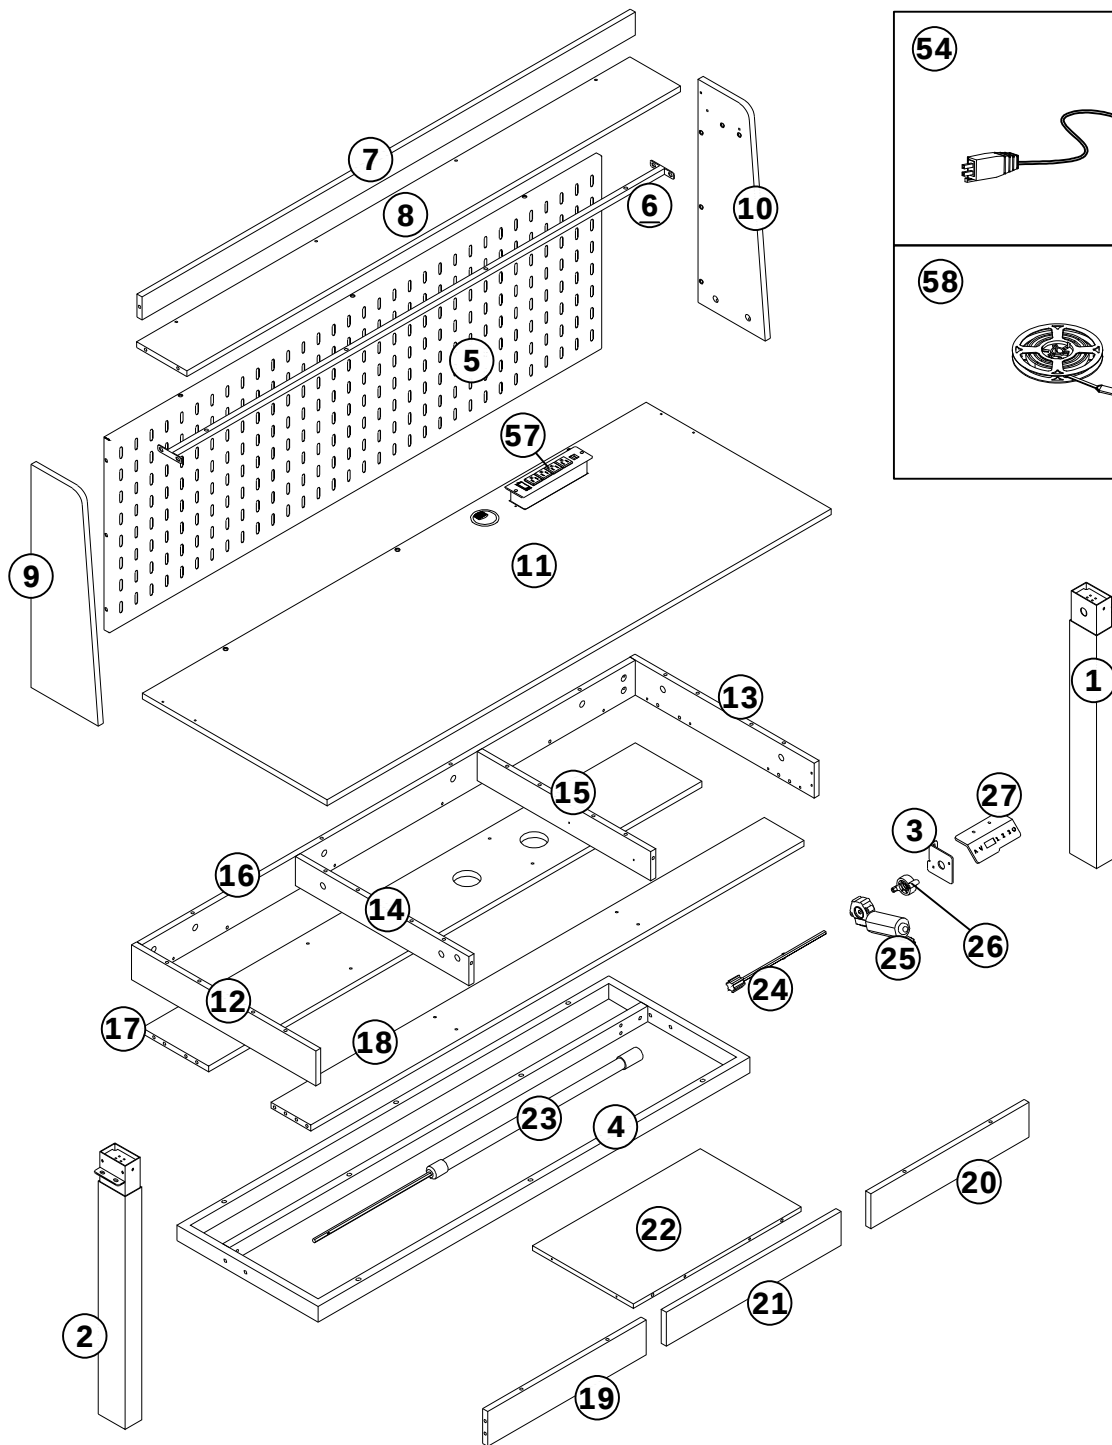

⚠ WARNING

 
 
 
 
 
 
 



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.




*This is a permanent label.
Do not remove!*



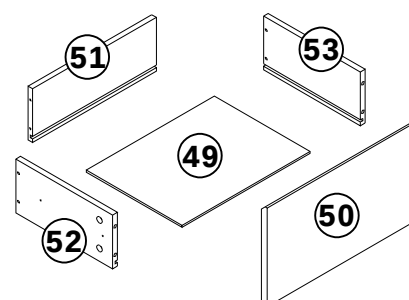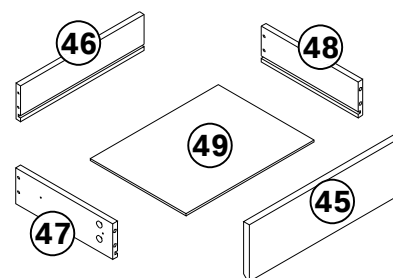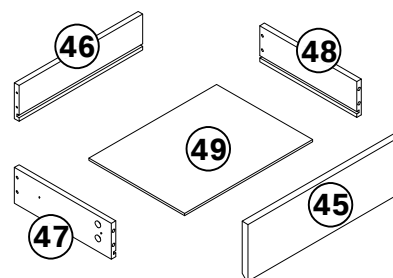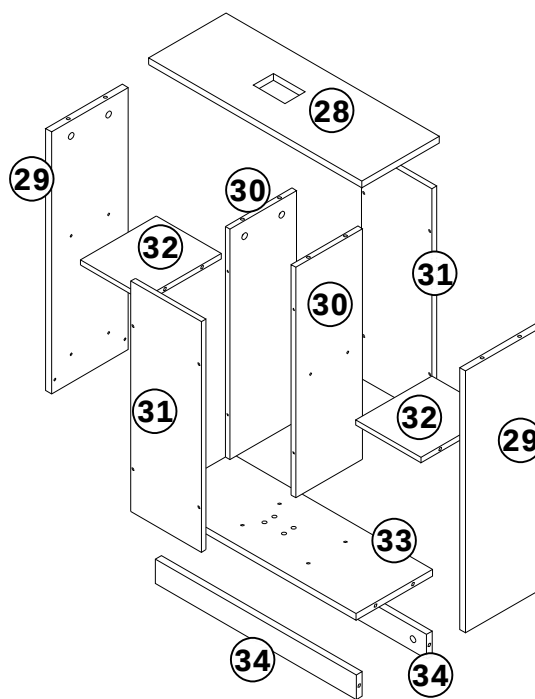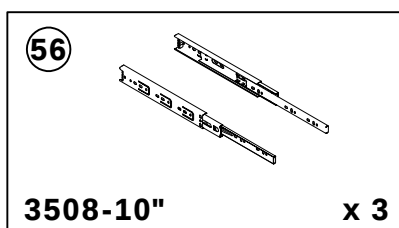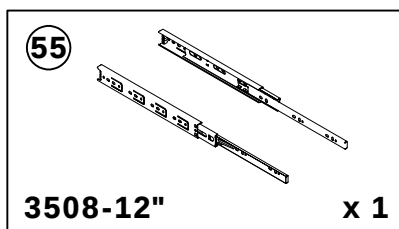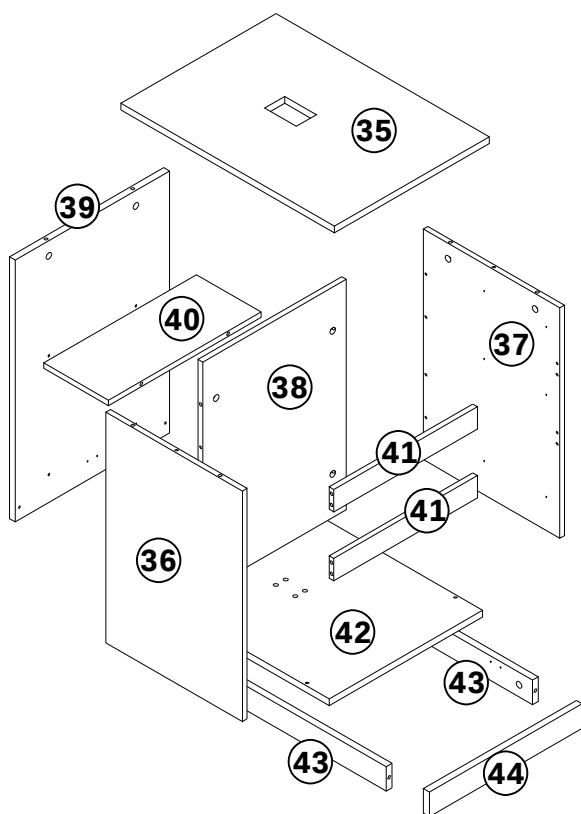

1

A x 4  M5x42 mm	C x 4  M5x40 mm	
--	--	--

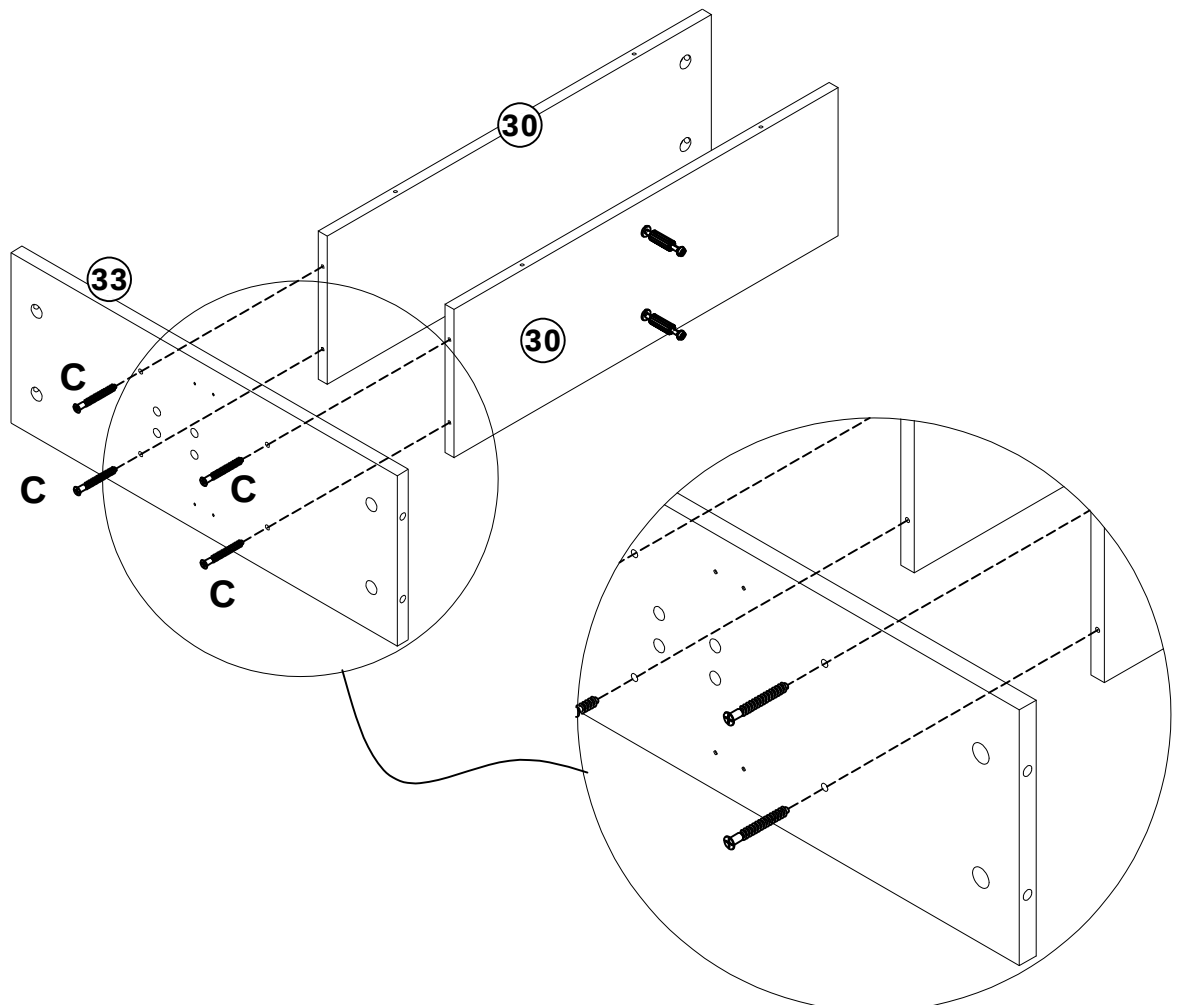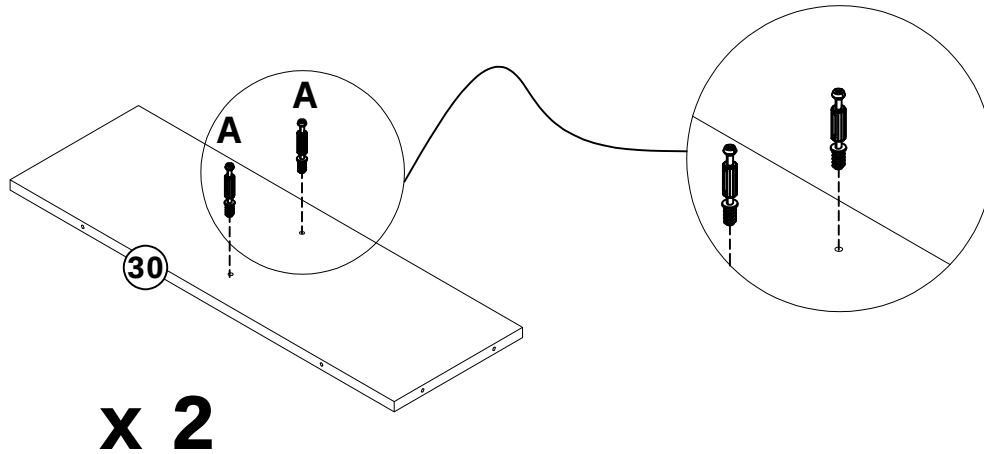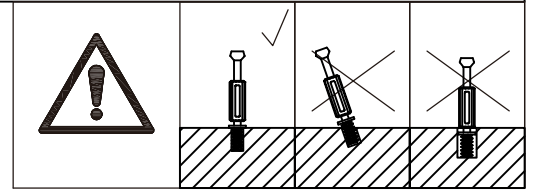   

2

A x 12

 
 
 
 
 


M5x42 mm

B x 6





Ø15x10 mm

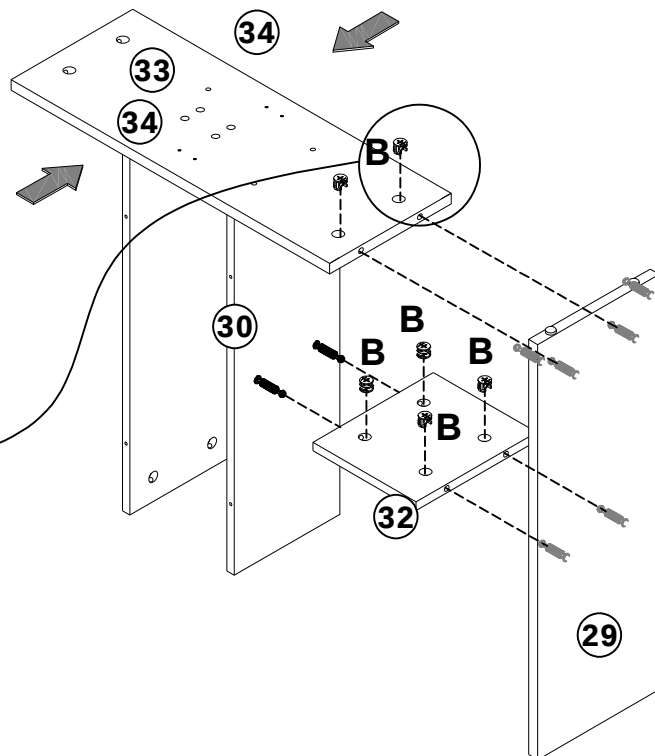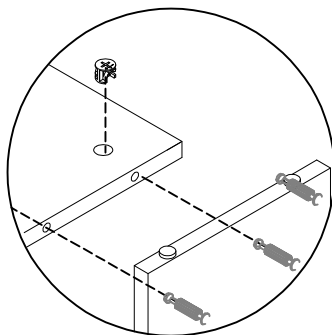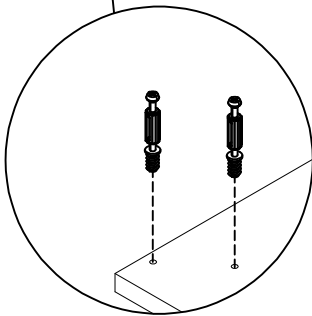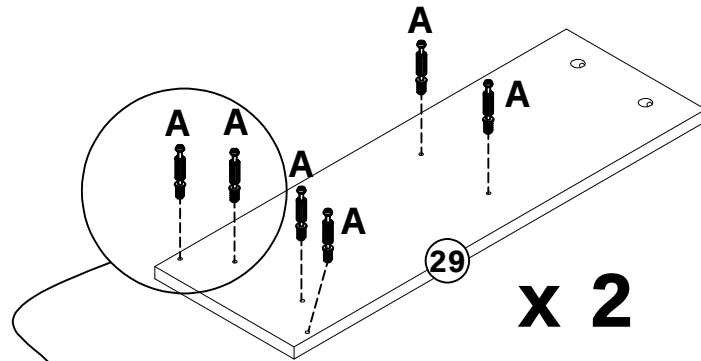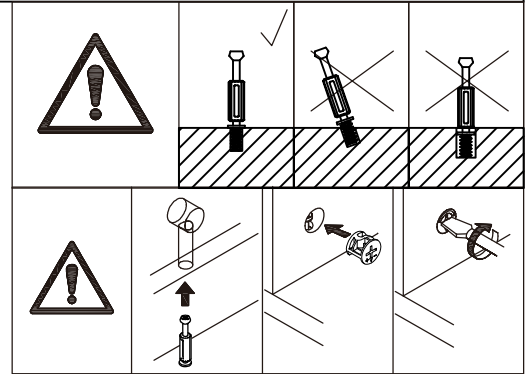

3

D x 8  M3.5x12 mm	B x 2  Ø15x10 mm	P x 2  38x20x25	
--	---	--	--




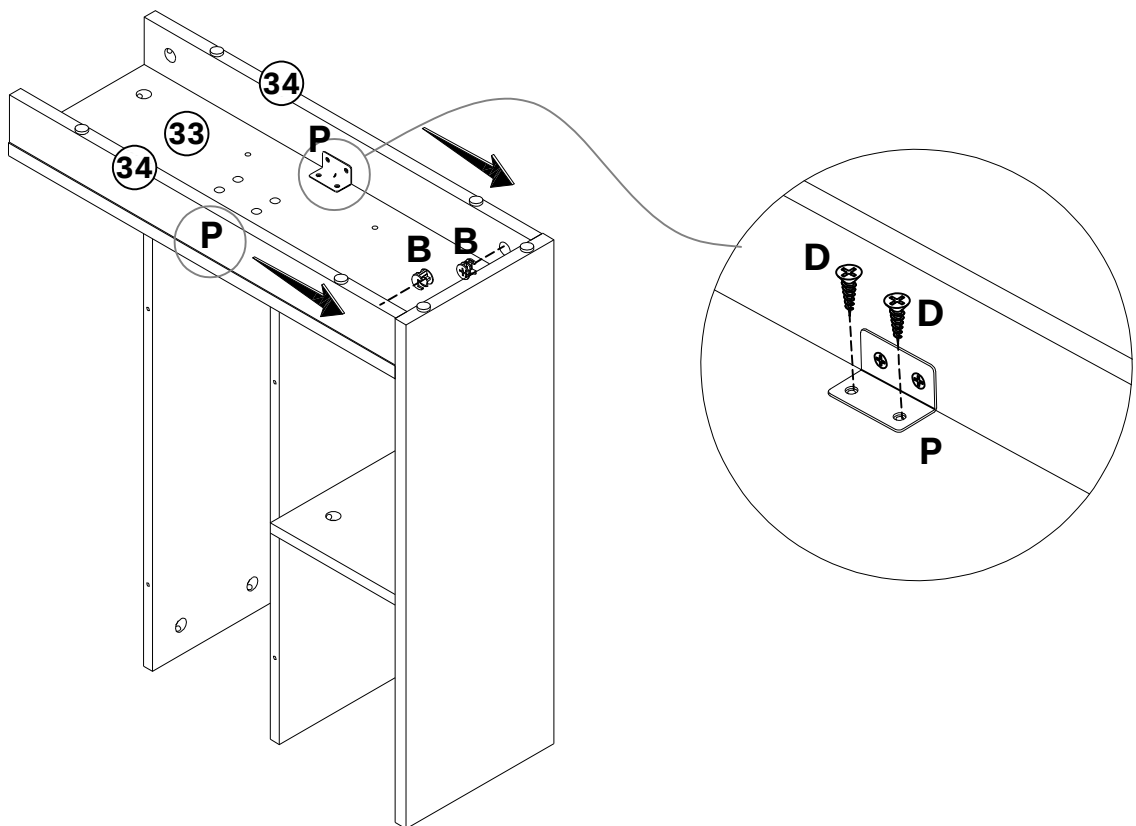 
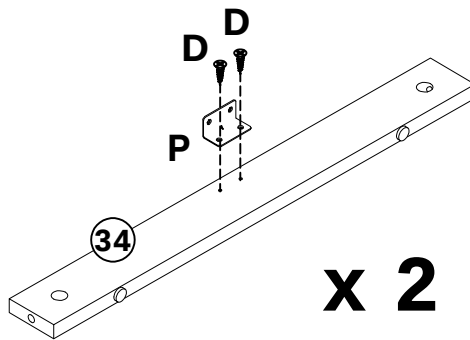 


4

B x 8



     Ø15x10 mm

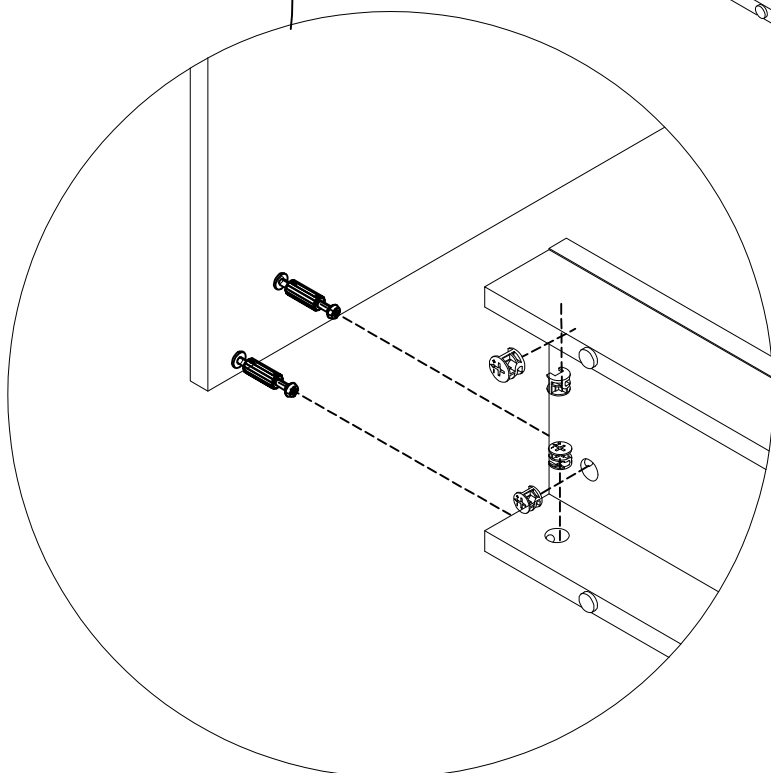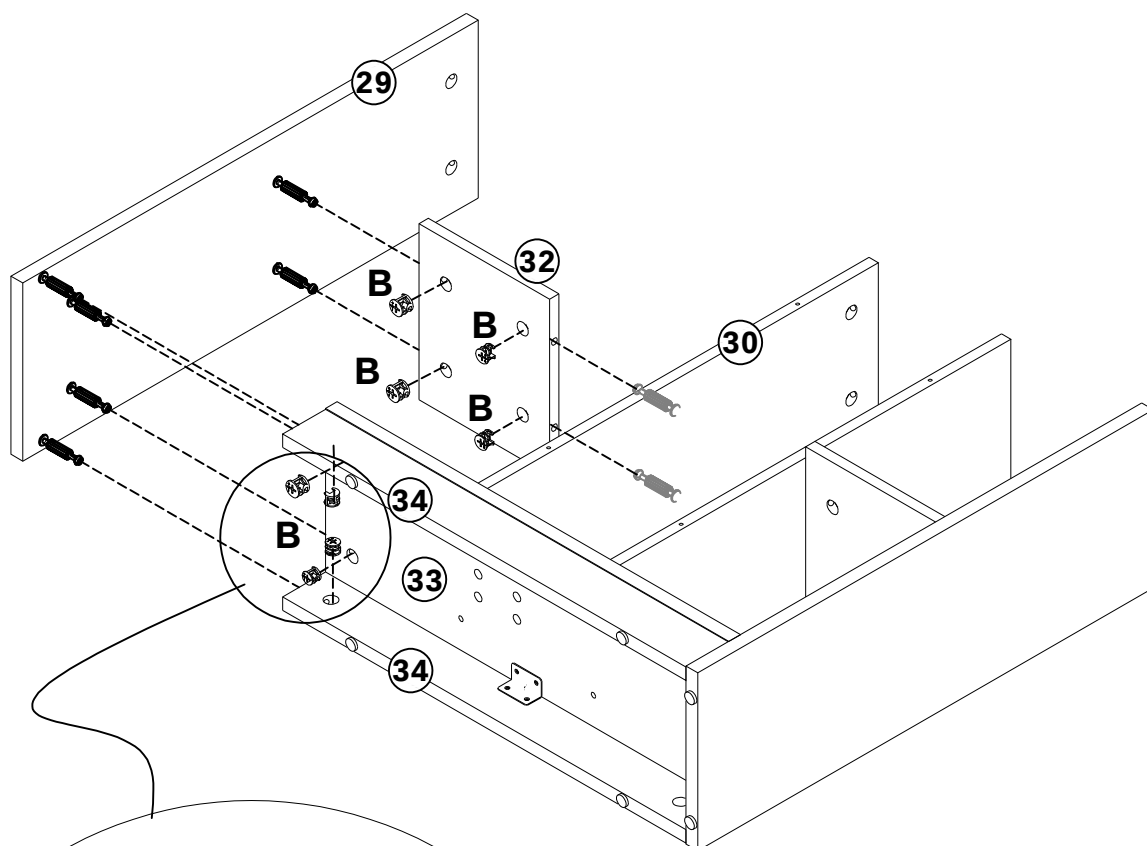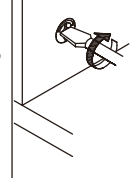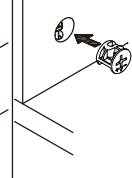

5

A x 8

 
 
 
 


M5x42 mm

B x 8



Ø15x10 mm

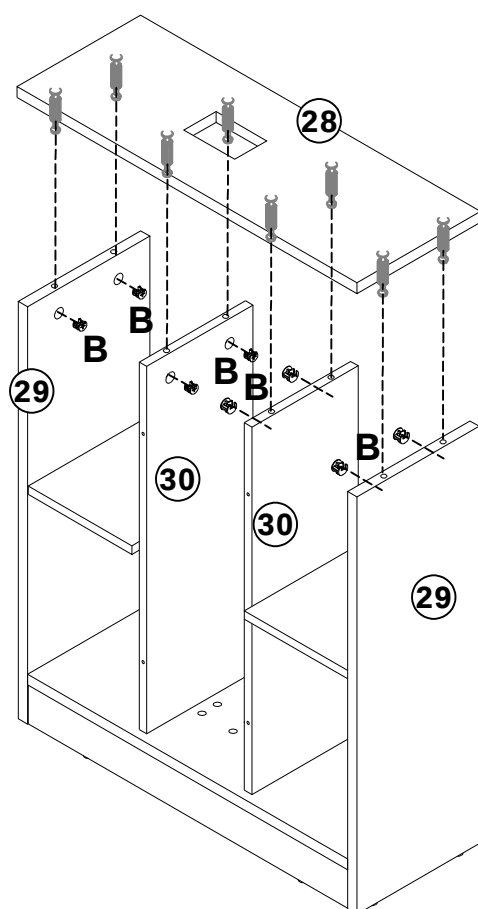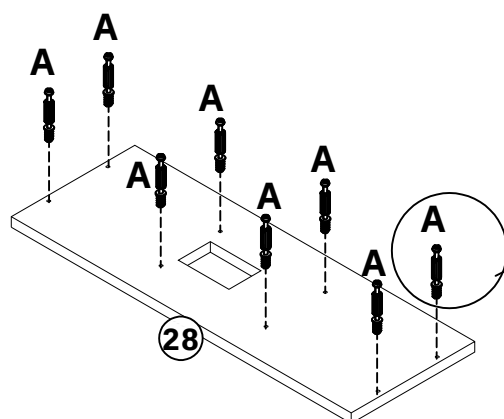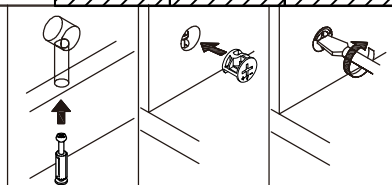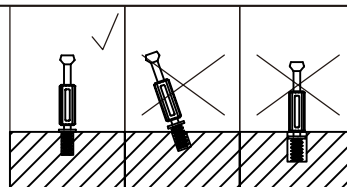

6

C x 8

 
 


M5x40 mm

O x 4






M8x40 mm

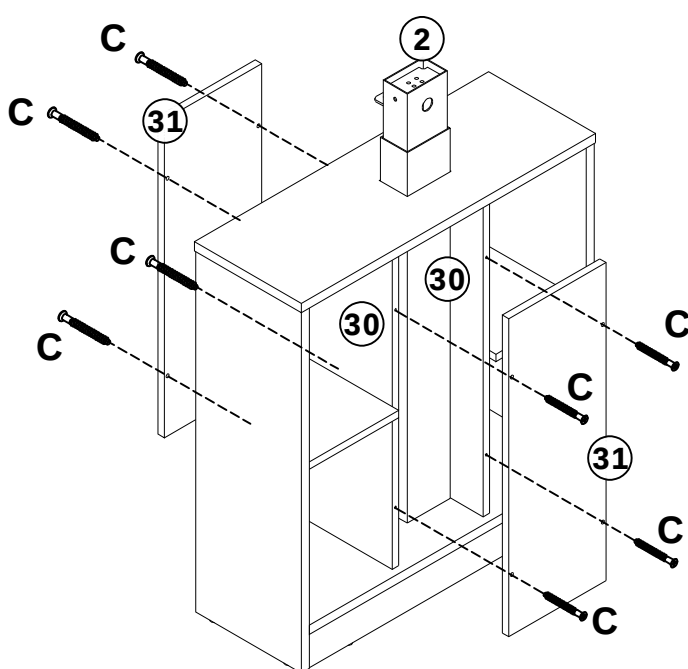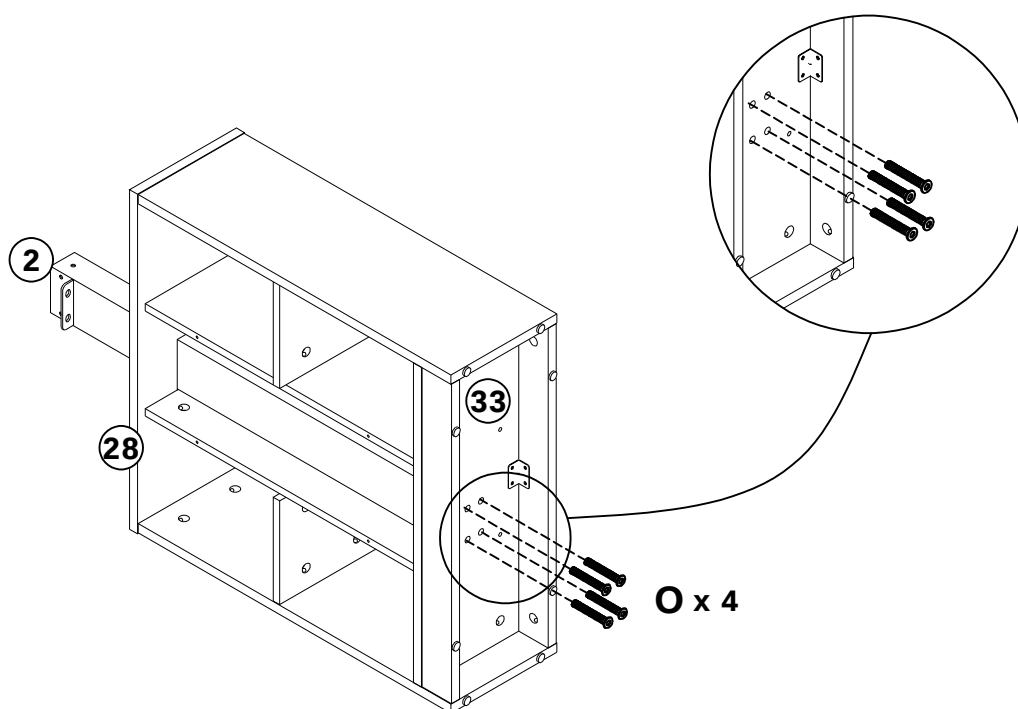

7

A x 8  M5x42 mm	D x 12  M3.5x12 mm	
--	---	--

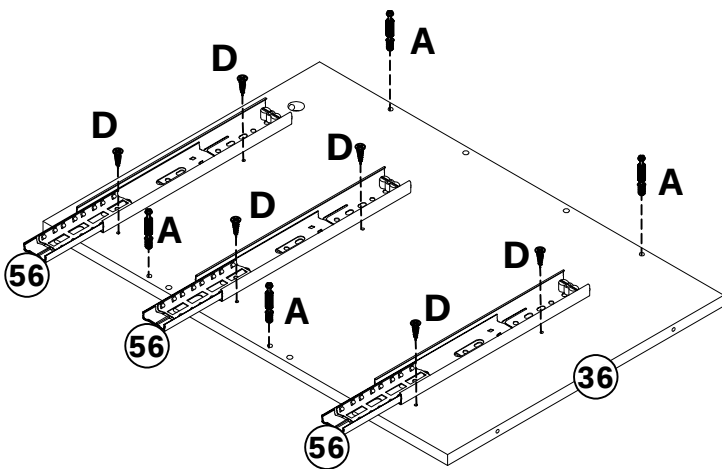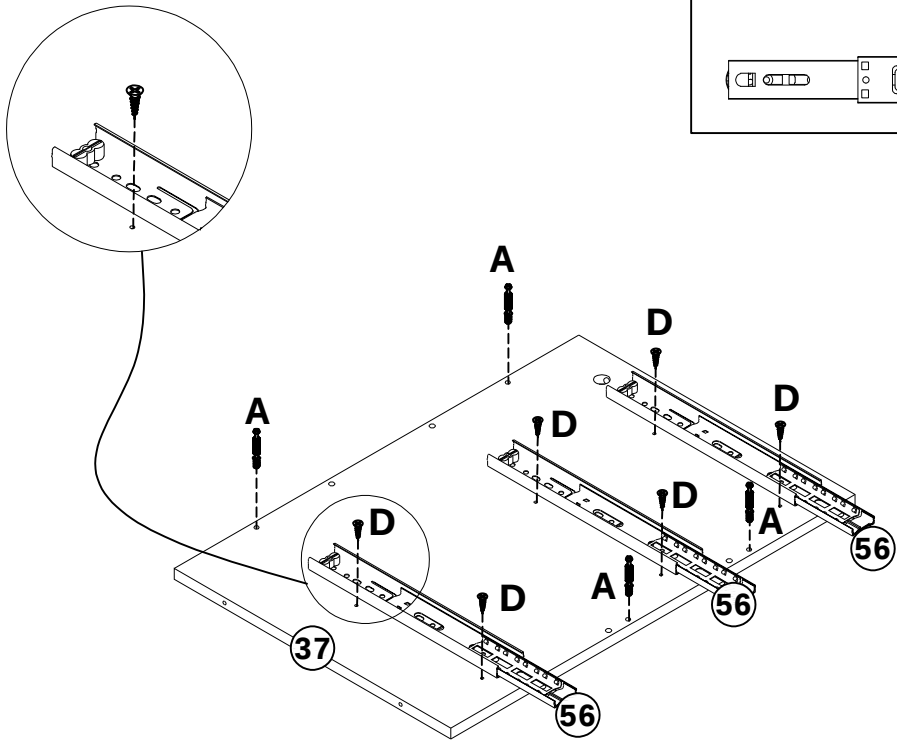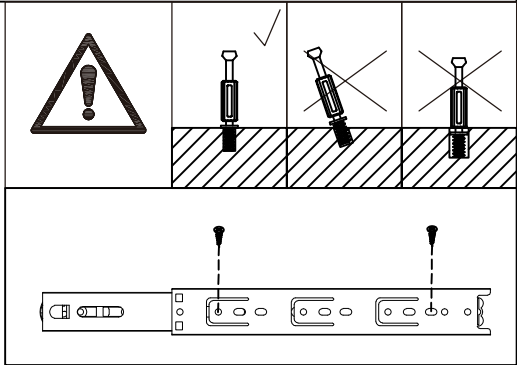   

8

A x 2



M5x42 mm

B x 4

 
 
 


Ø15x10 mm

E x 4



Ø6x40 mm

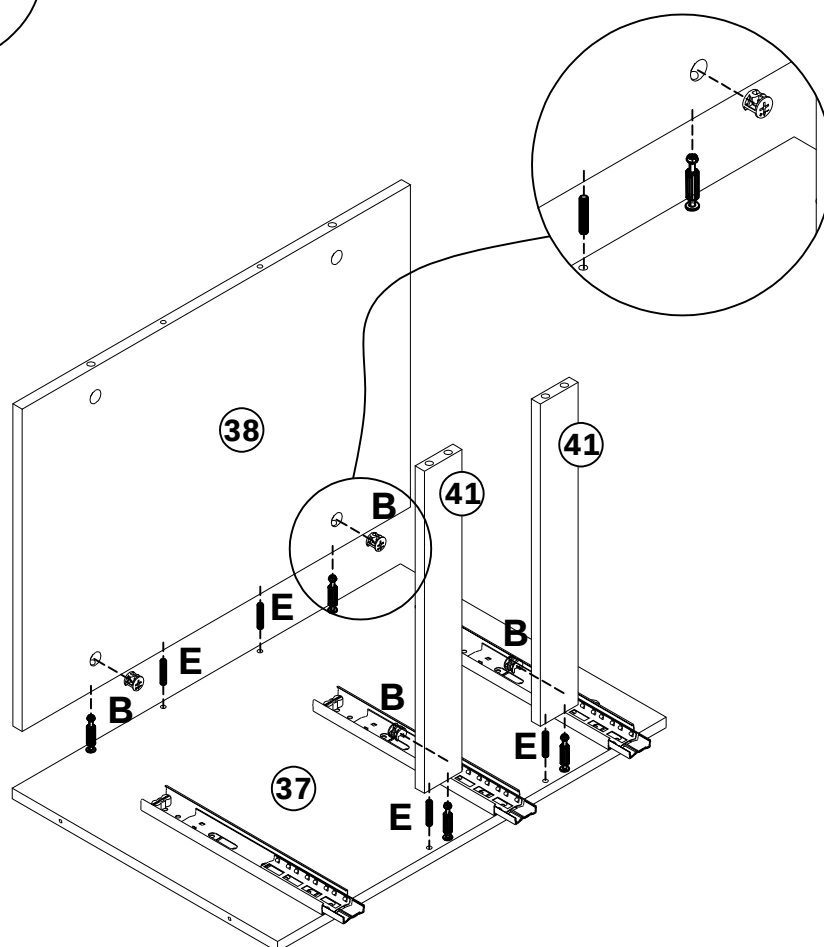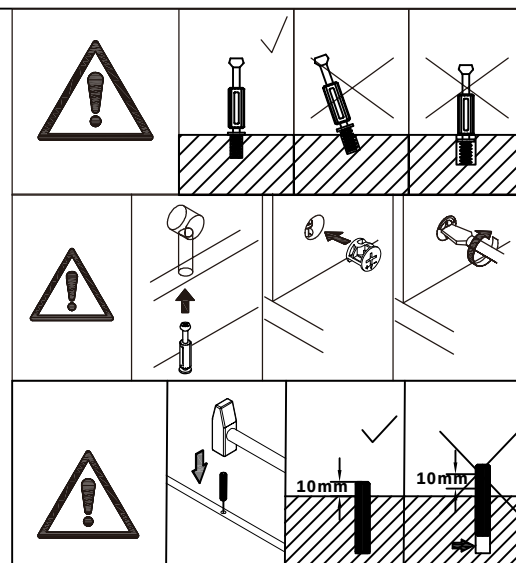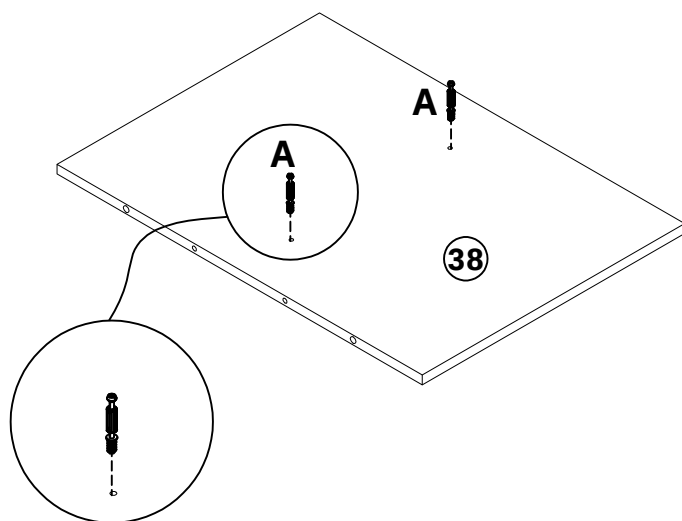








9




Ø15x10 mm



       Ø6x40 mm

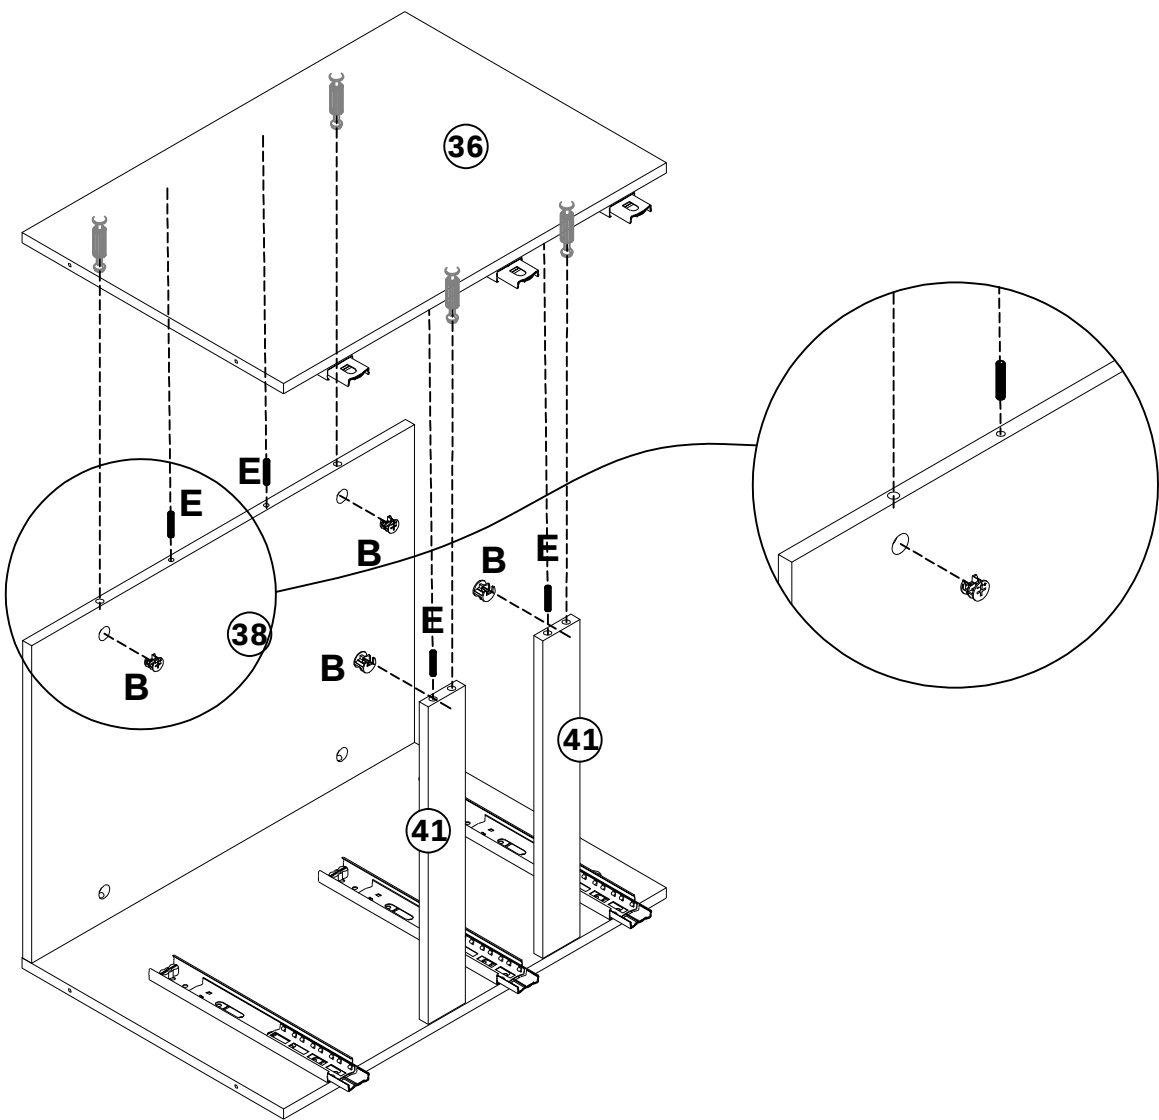


10

C x 4



 M5x40 mm

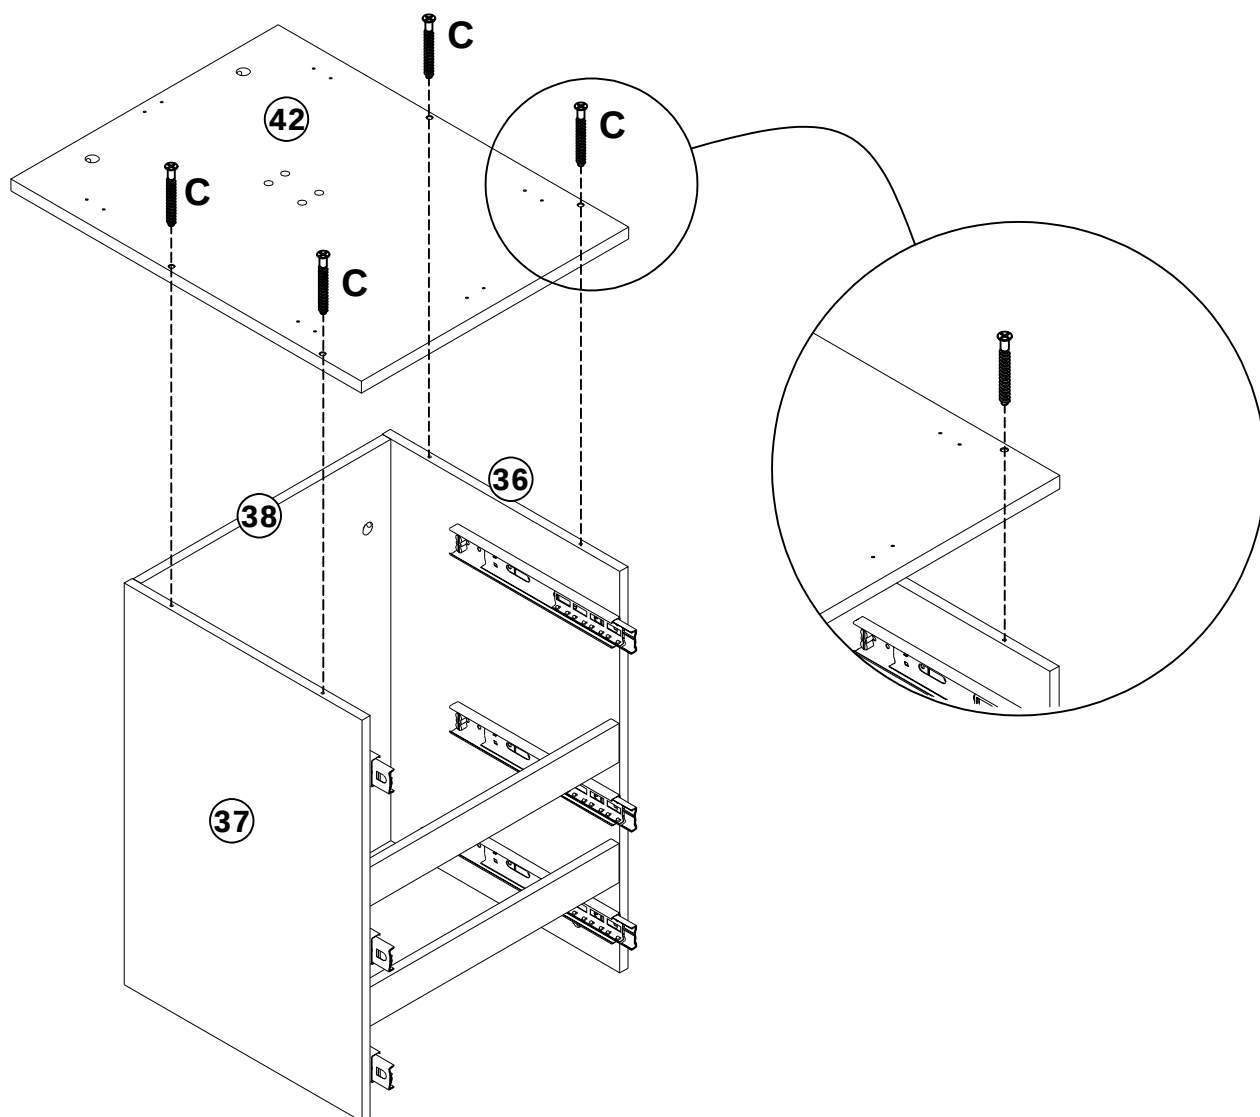




11

A x 6

M5x42 mm

B x 6

   Ø15x10 mm

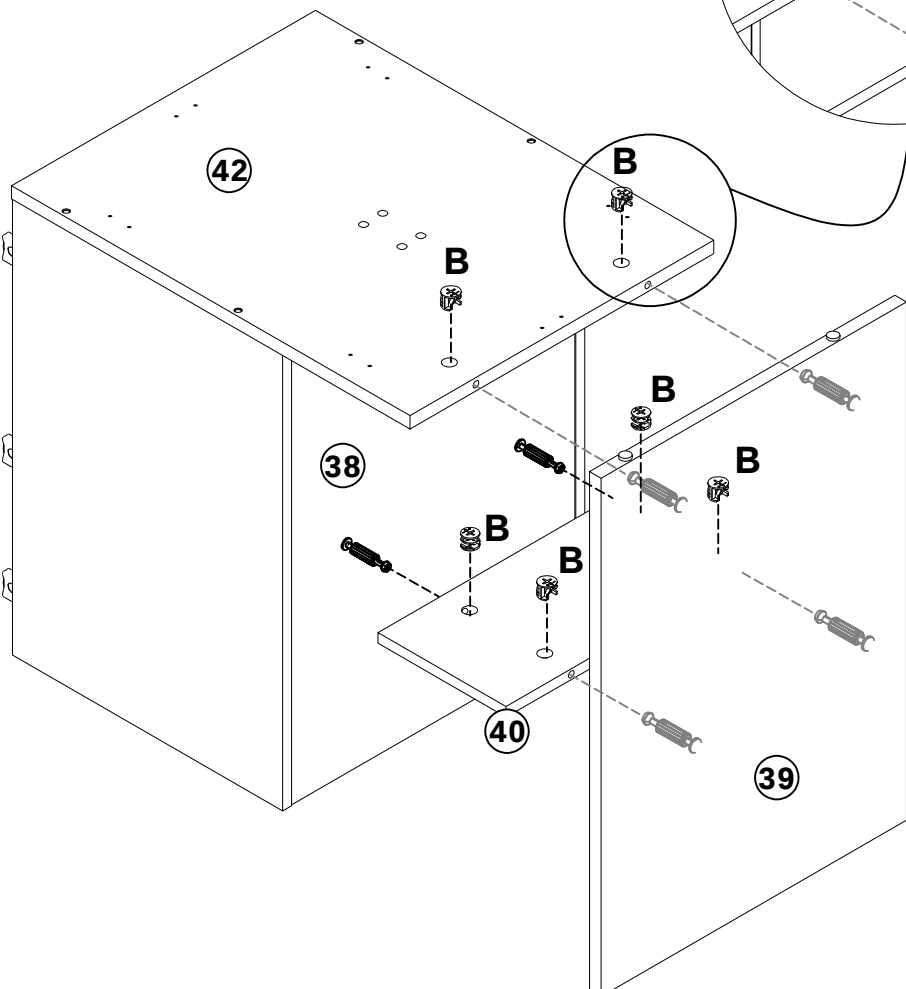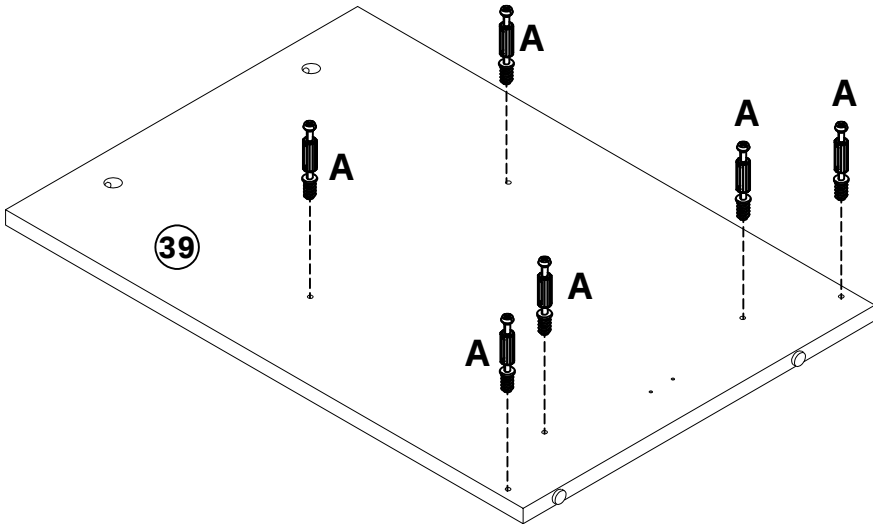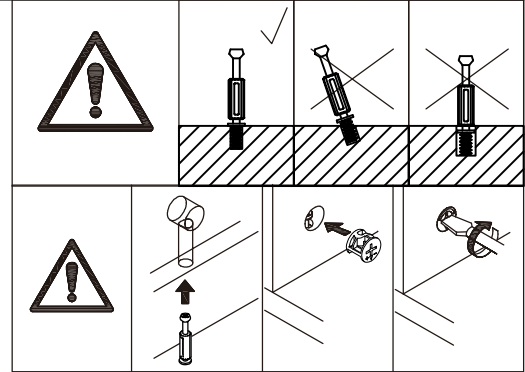

12

A x 2

 
 


M5x42 mm

B x 2



Ø15x10 mm



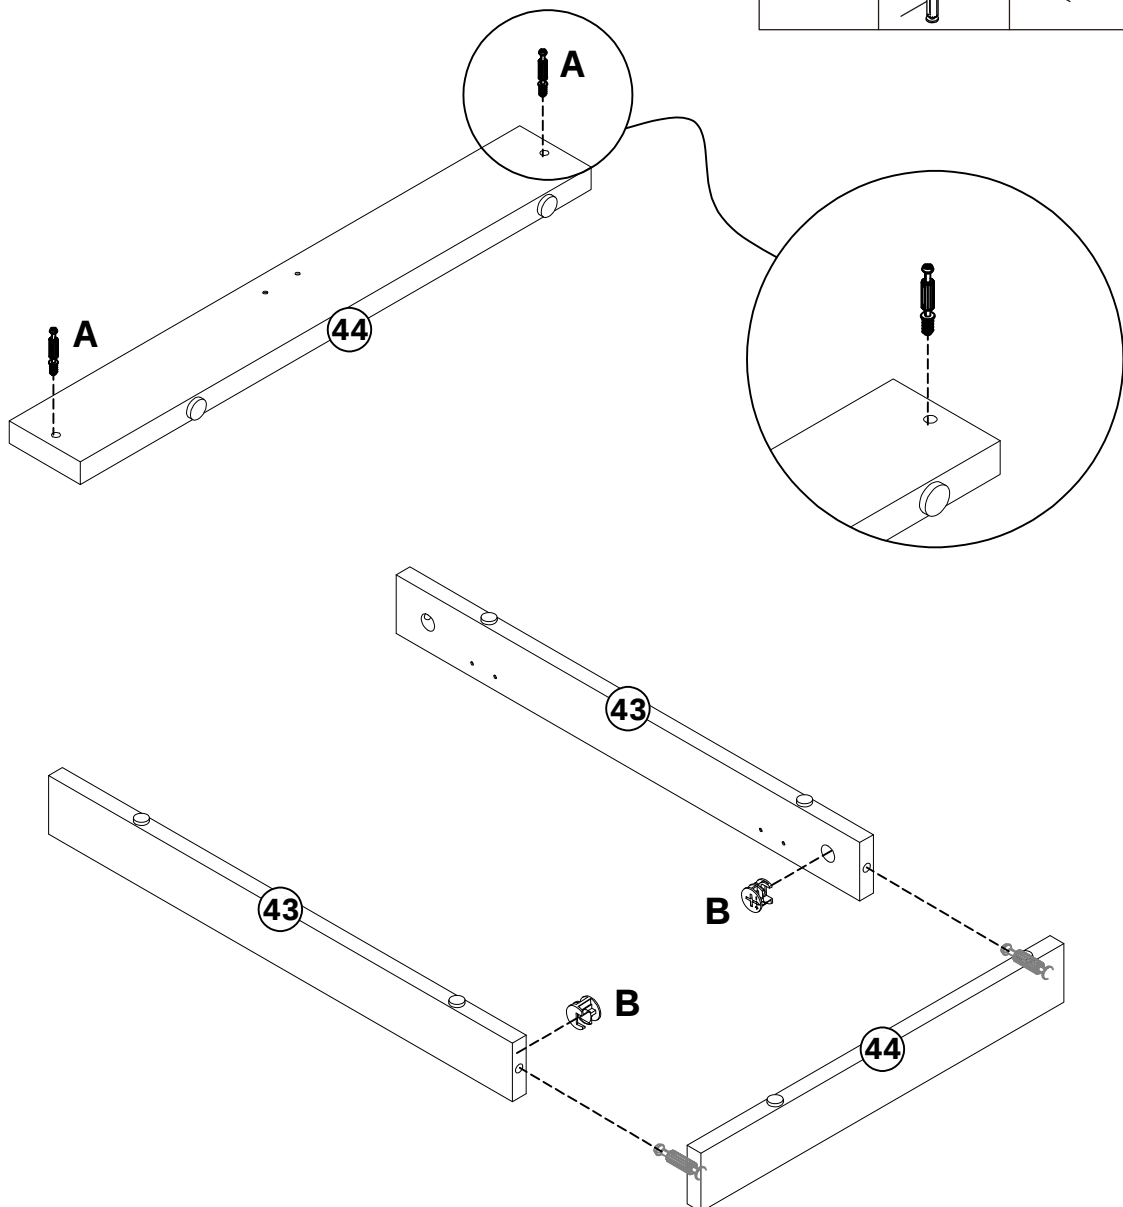
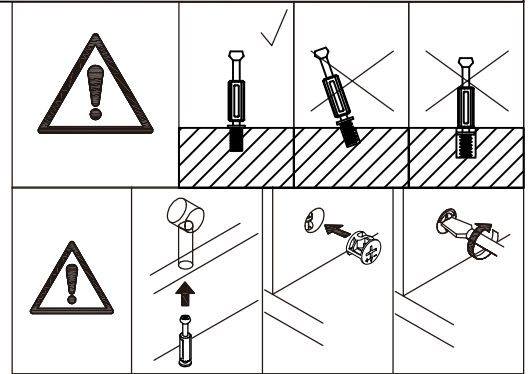


13

B x 2





    Ø15x10 mm

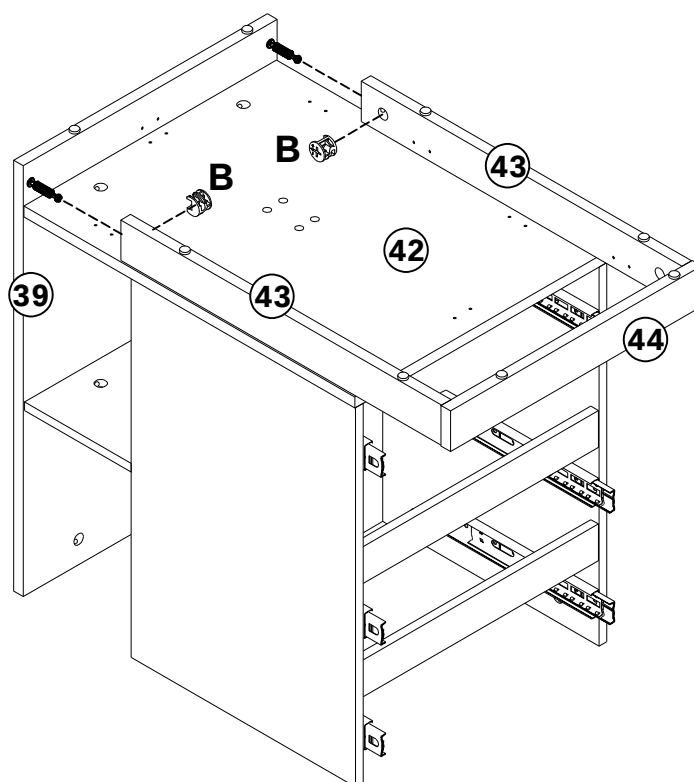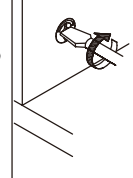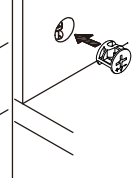




14

D x 24  M3.5x12 mm	P x 6  38x20x25	
---	--	--

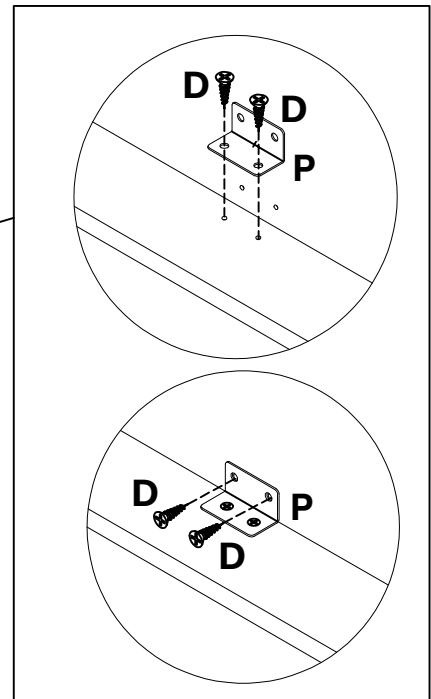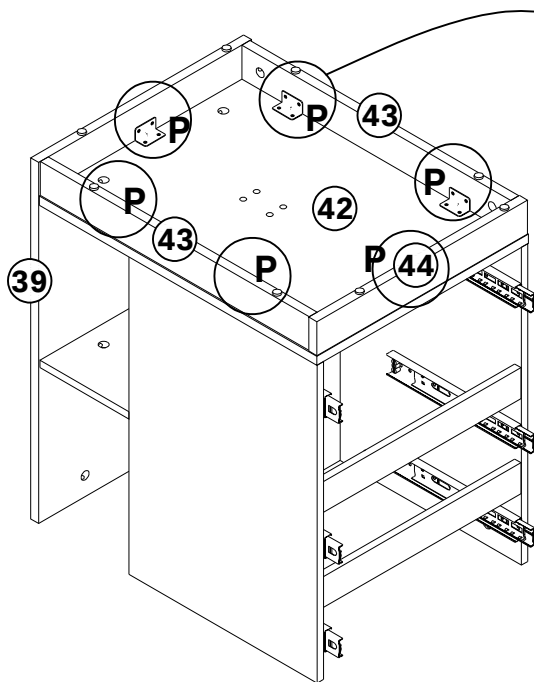  

15

A x 6  M5x42 mm	B x 6  Ø15x10 mm	E x 2  Ø6x40 mm	
--	---	--	--

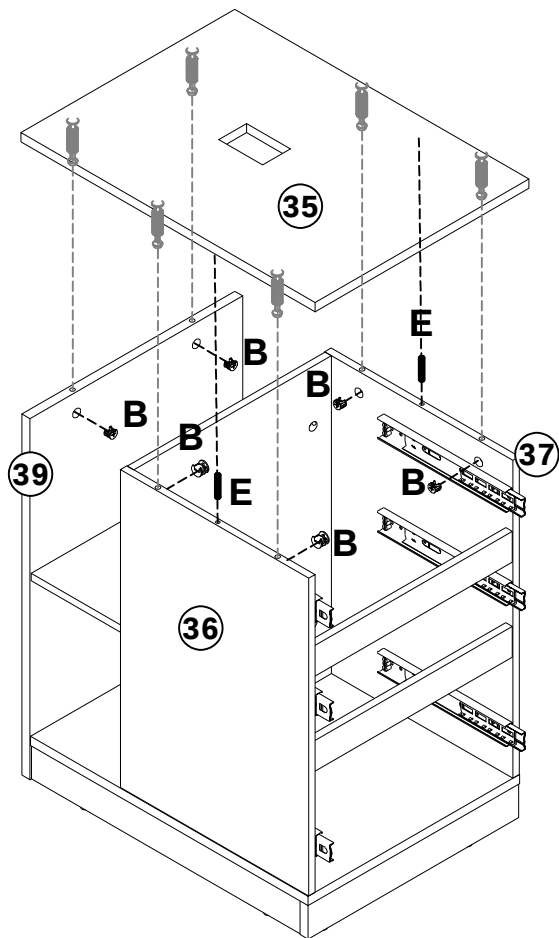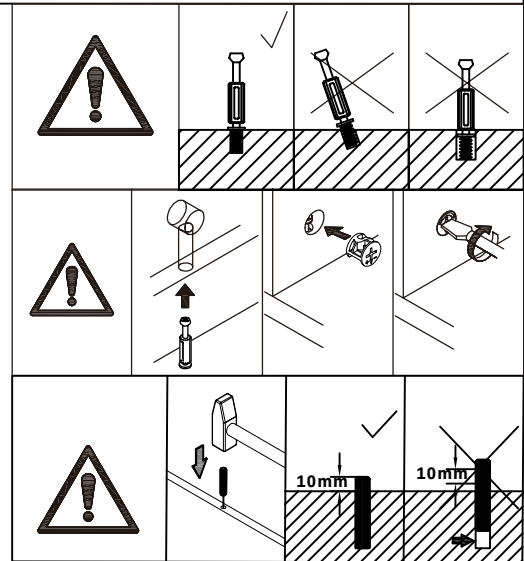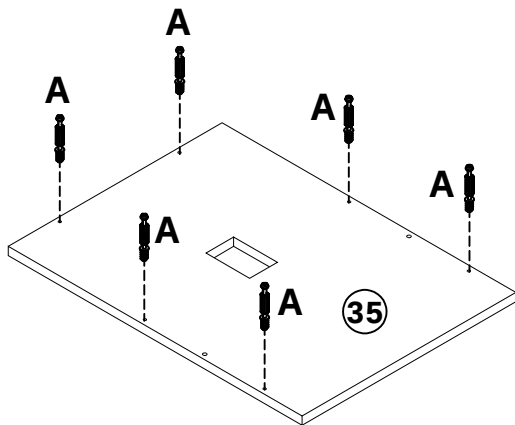   


16

O x 4



 M8x40 mm

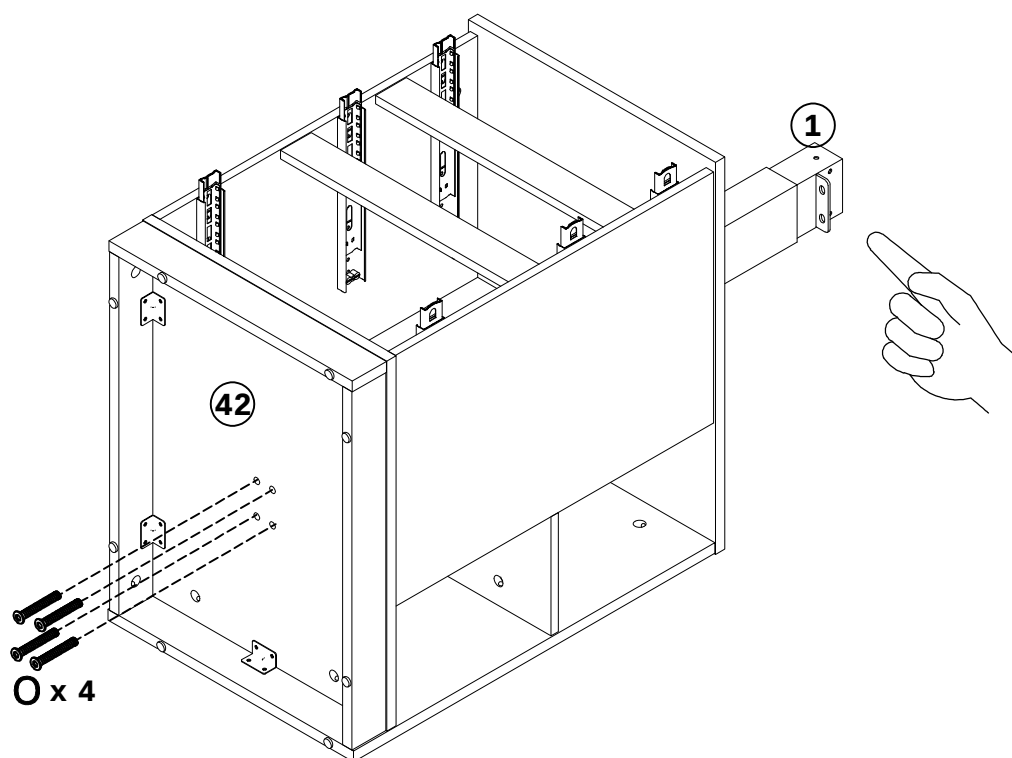


17

J x 6





 M6x30 mm

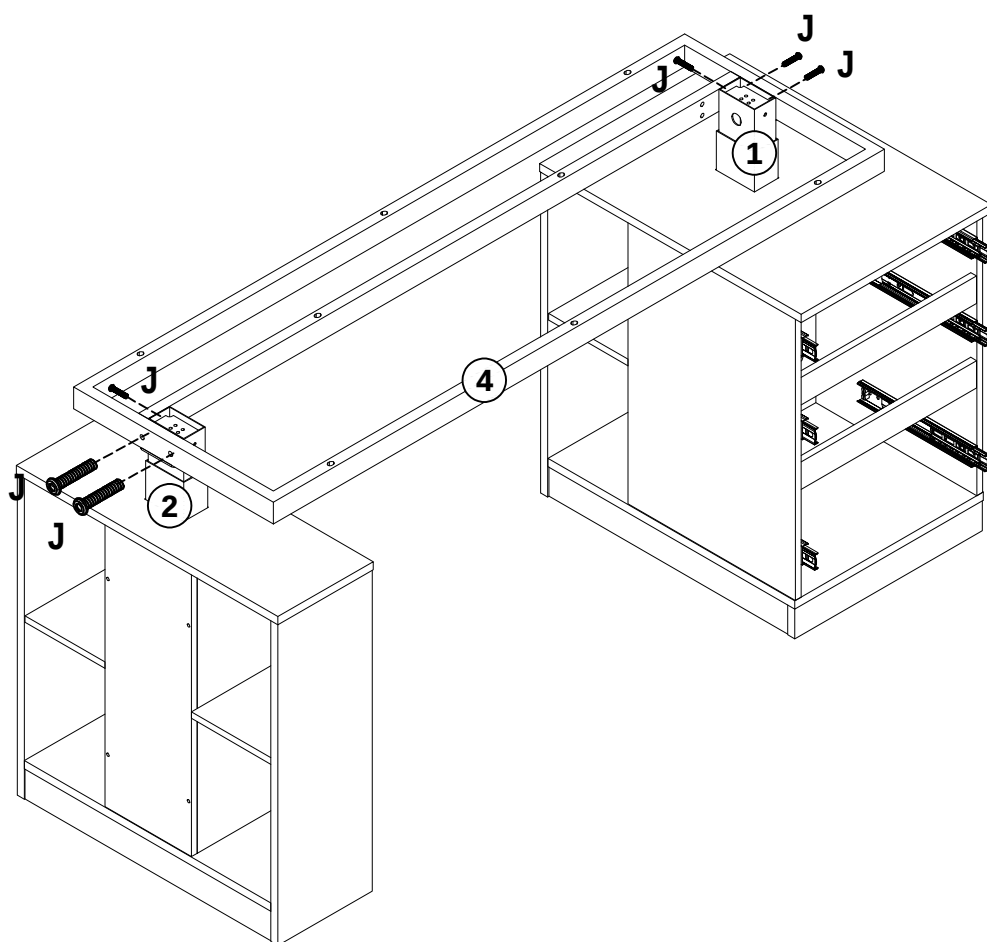

18

M x 2  M4x45 mm	N x 2  M4	
--	--	--

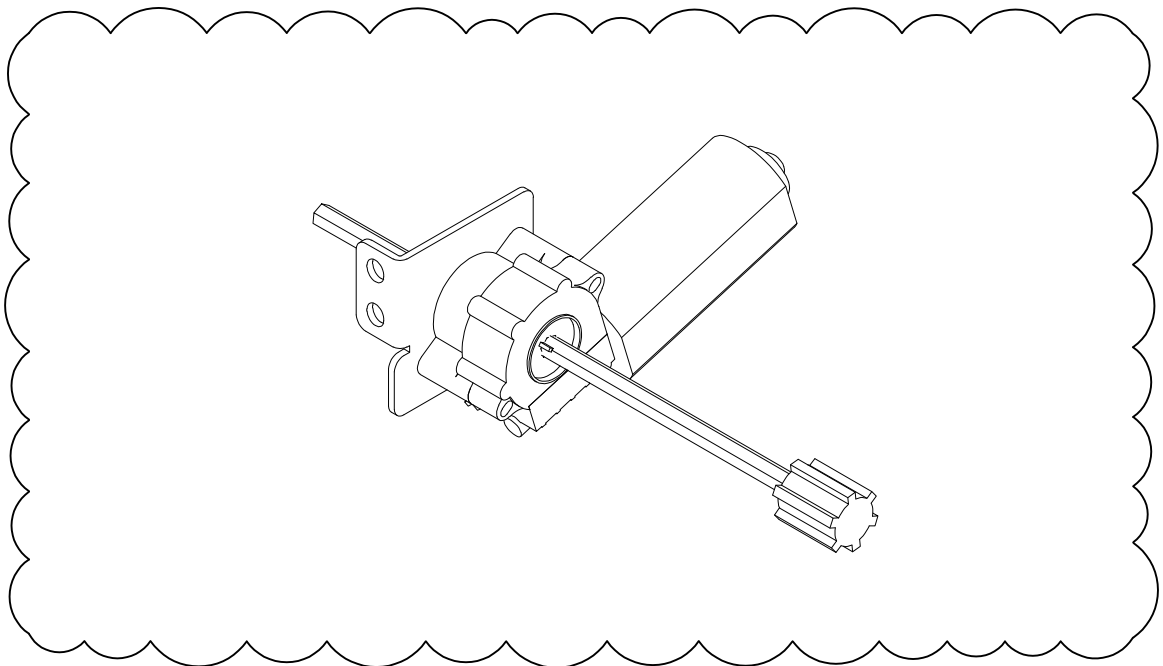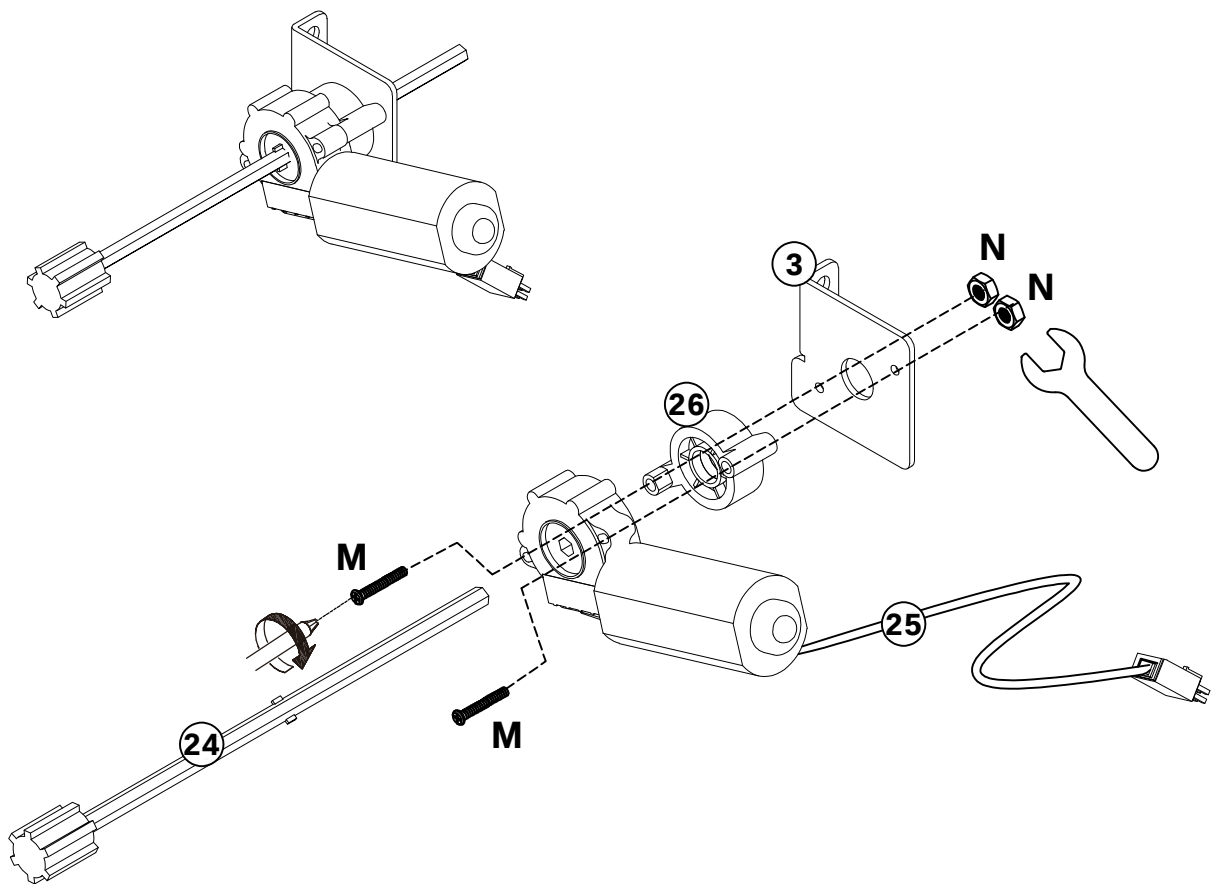  

19

J x 2

 
 


M6x30 mm


L x 2



M6

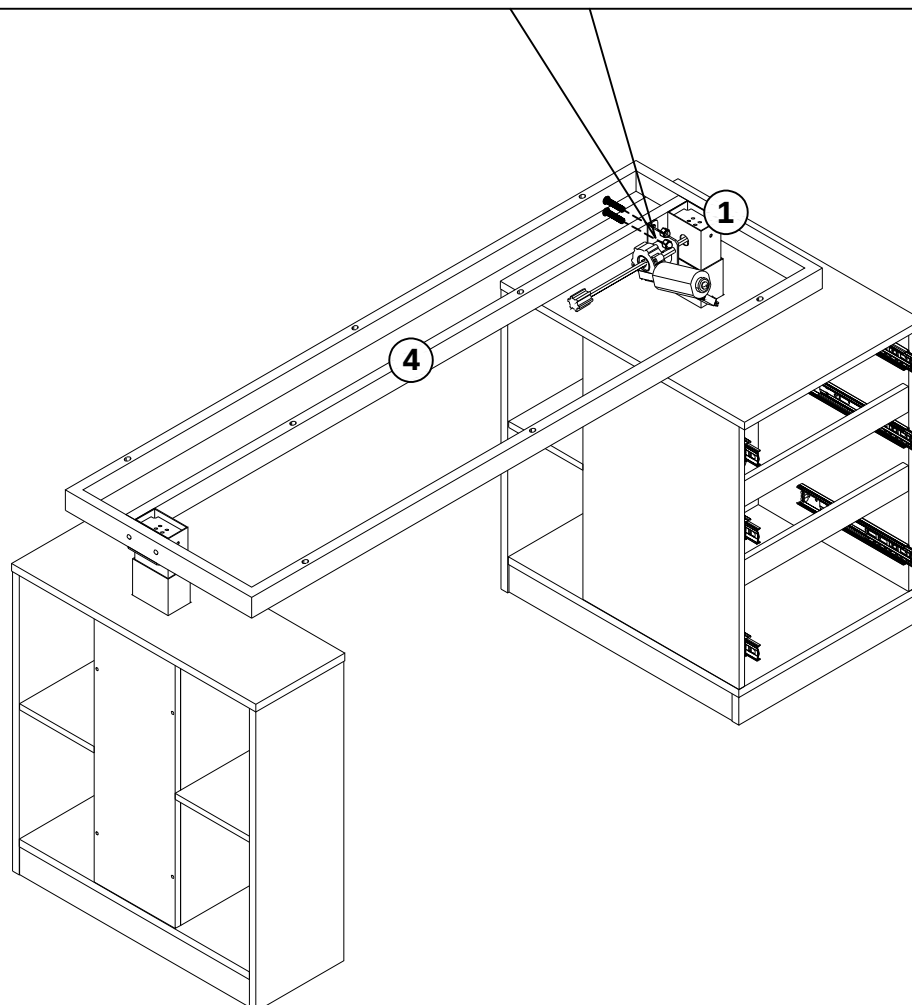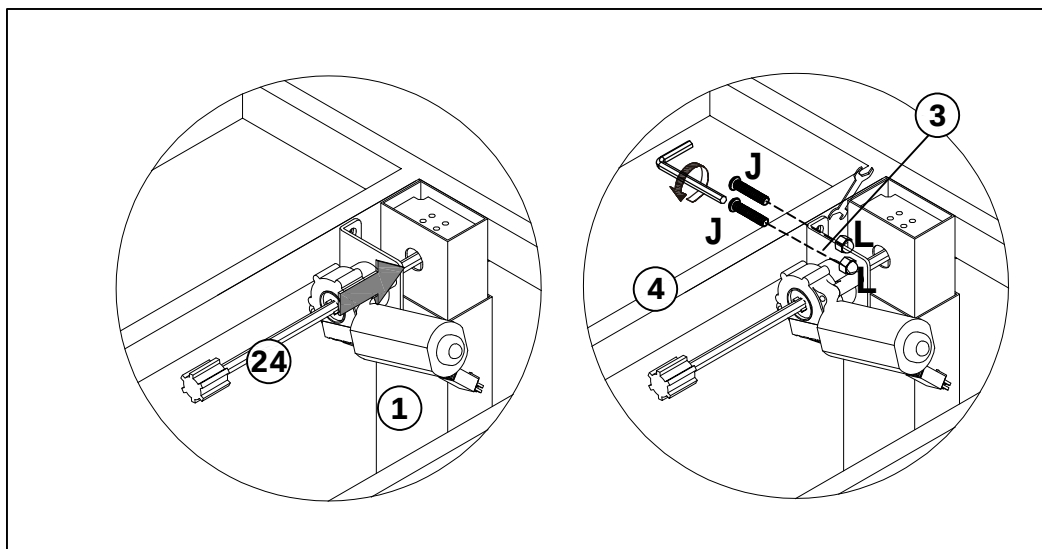


20

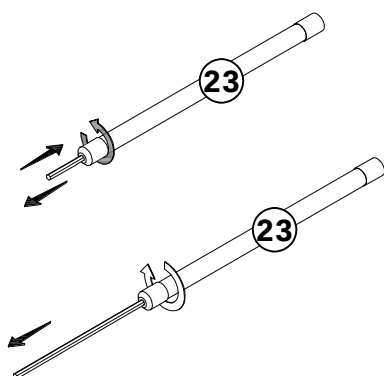 

Loosening this button
can extend Telescopic rod,
while tightening it can
secure Telescopic rod.

 Adjust to the appropriate length
for installing Telescopic rod.
After the installation is completed,
tighten the button to secure the
length of Telescopic rod.

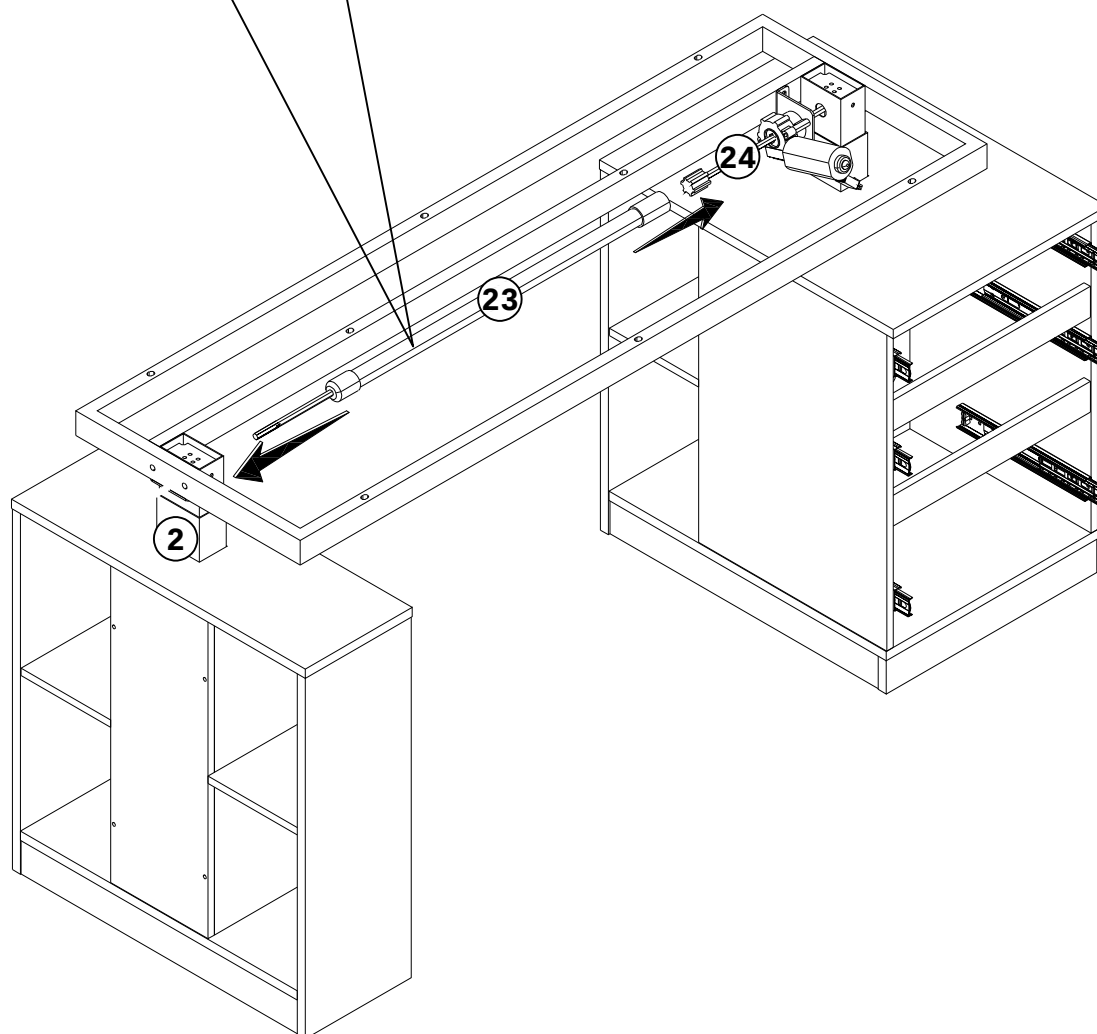


21

H x 4



 
M6x10 mm

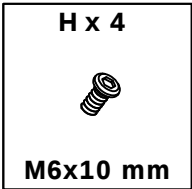

H x 4



 M6x10 mm



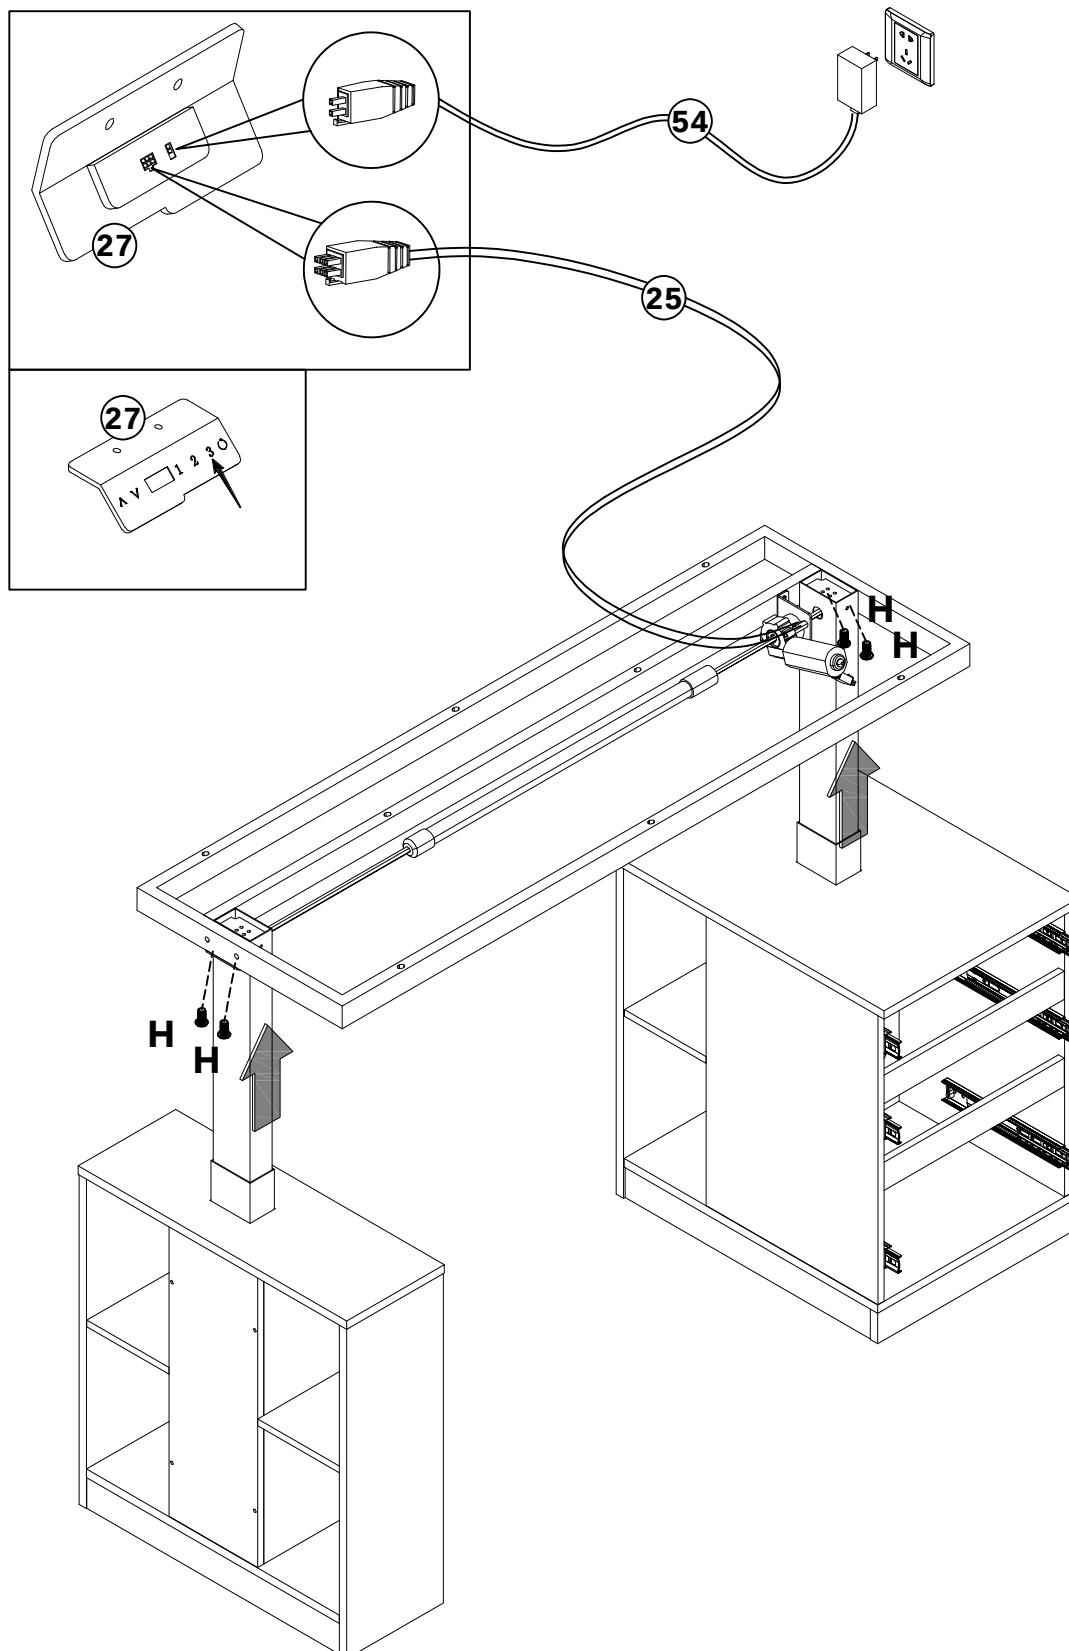


22

D x 4



   M3.5x12 mm

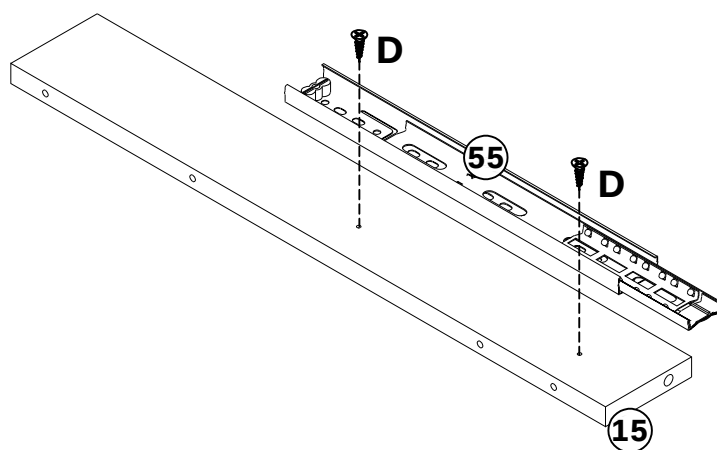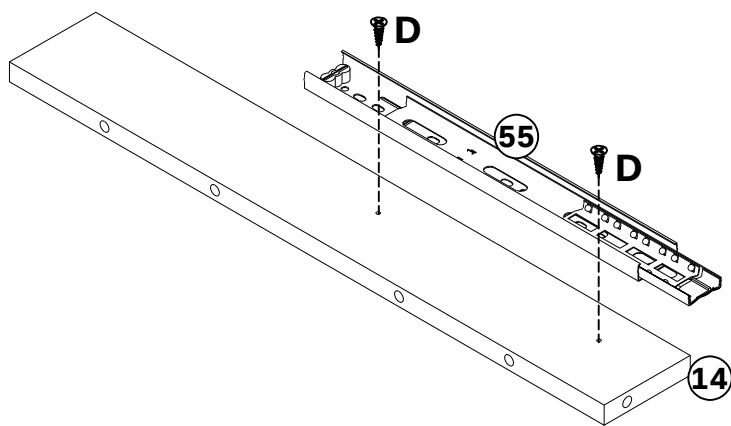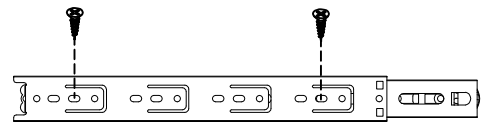

23

C x 4

 
 
 
 


M5x40 mm

F x 2



Ø8x40 mm

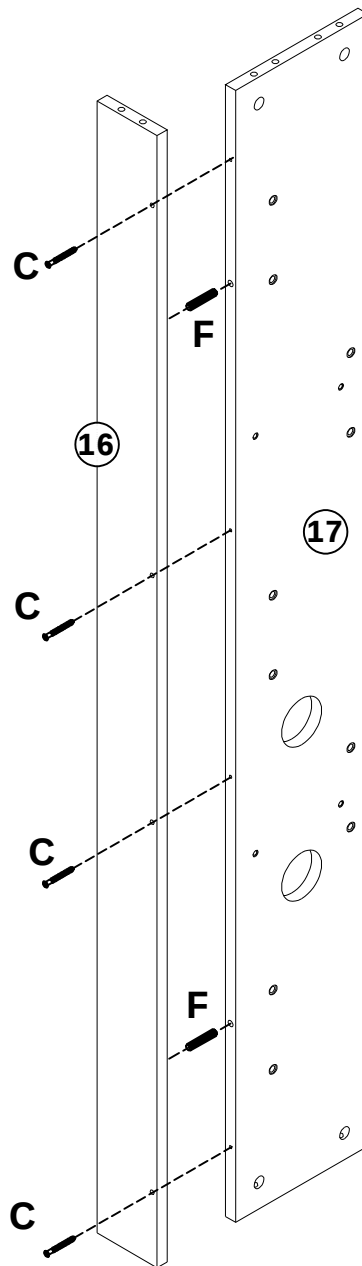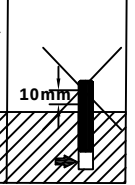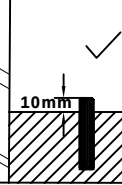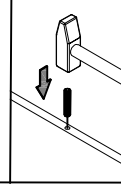


24

C x 4







 M5x40 mm

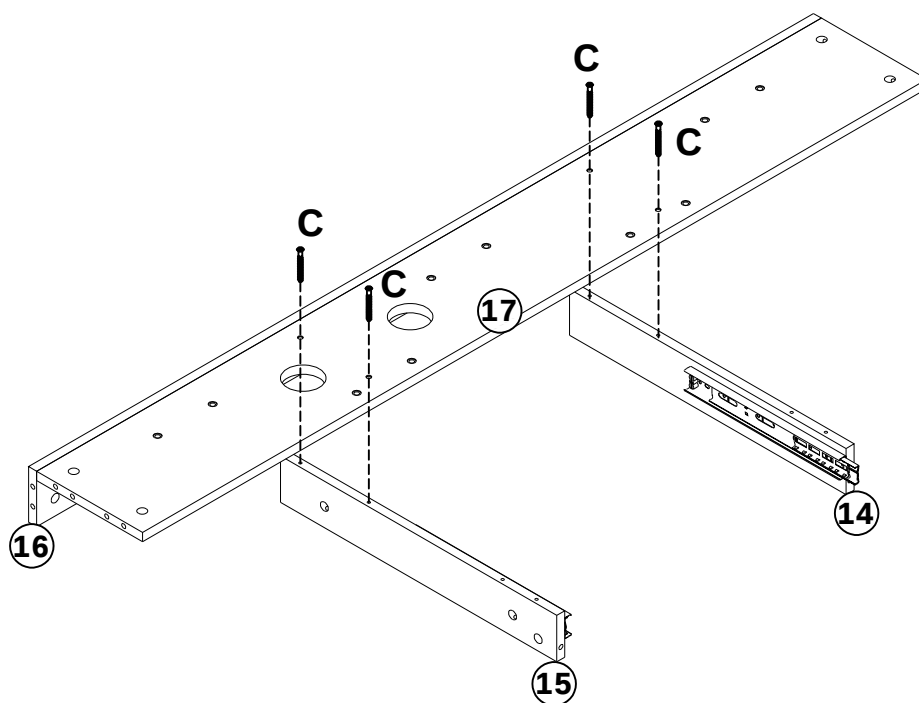

25

A x 2  M5x42 mm	B x 2  Ø15x10 mm	
--	---	--

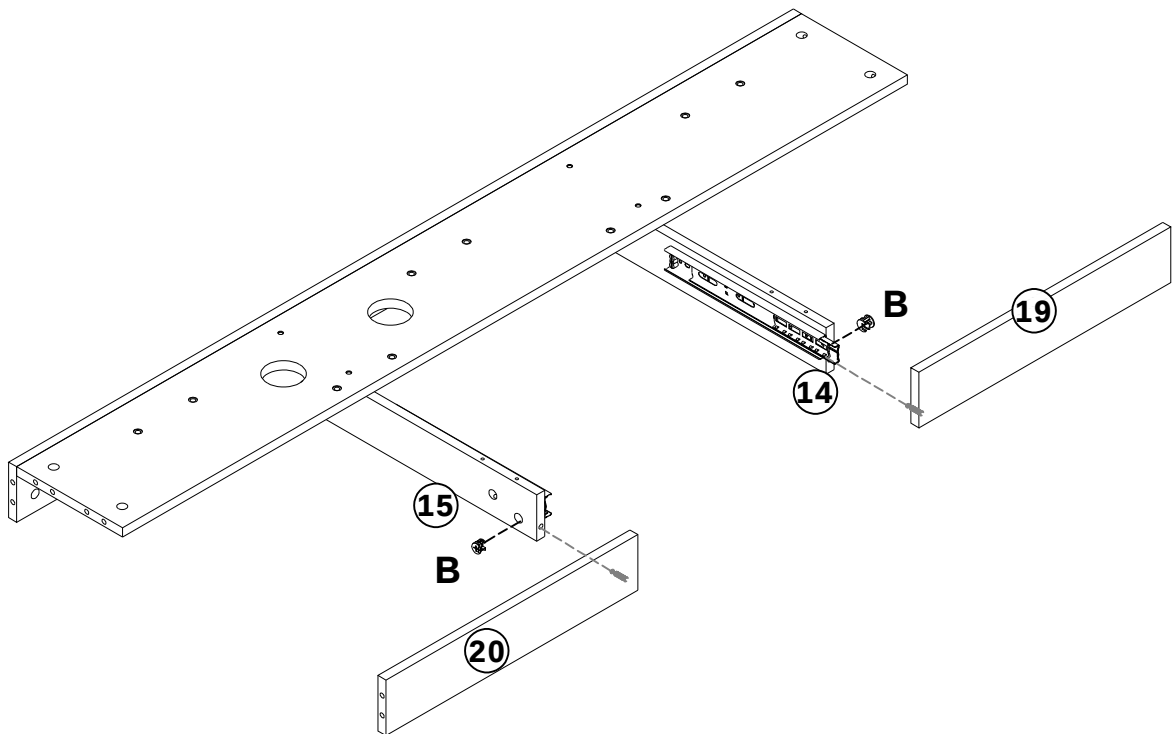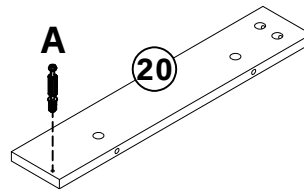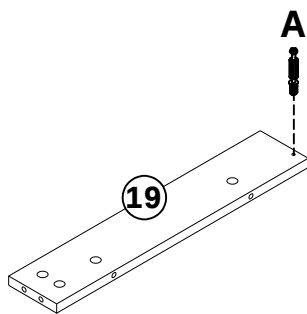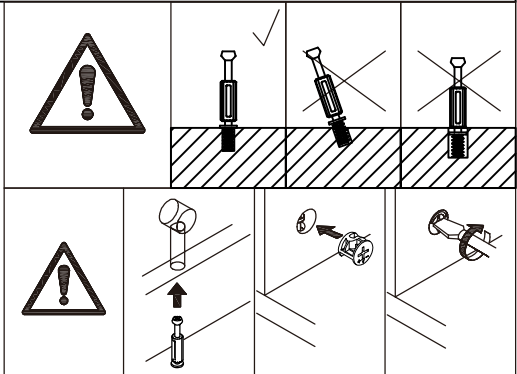    


26

C x 4







 M5x40 mm

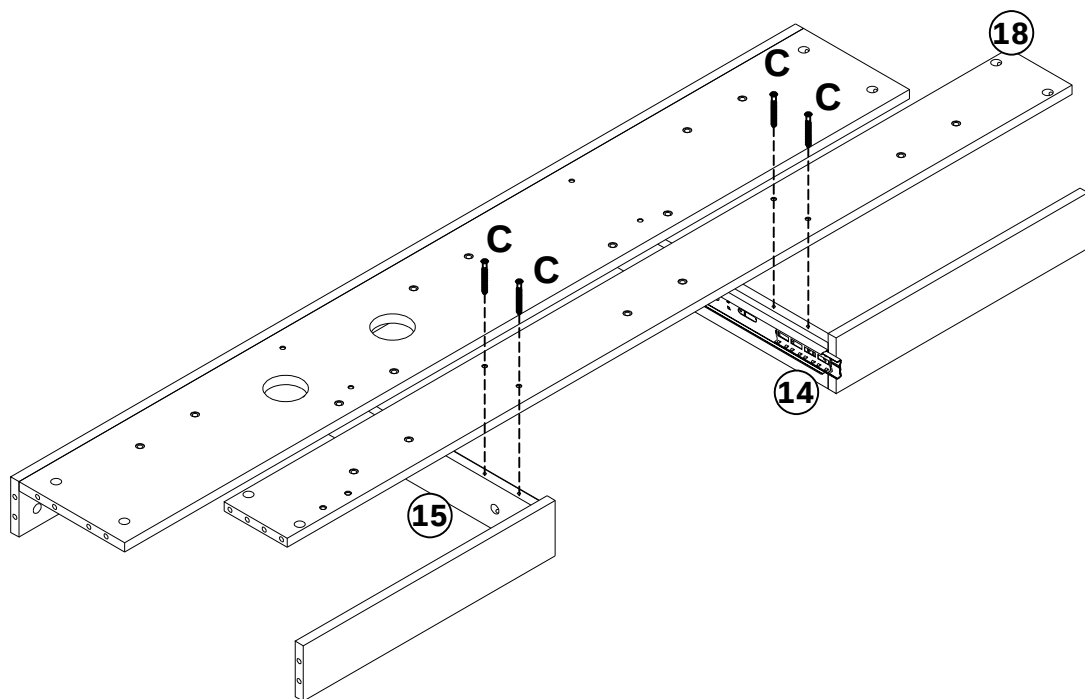

27

A x 16  M5x42 mm	B x 8  Ø15x10 mm	F x 8  Ø8x40 mm	
---	---	--	--

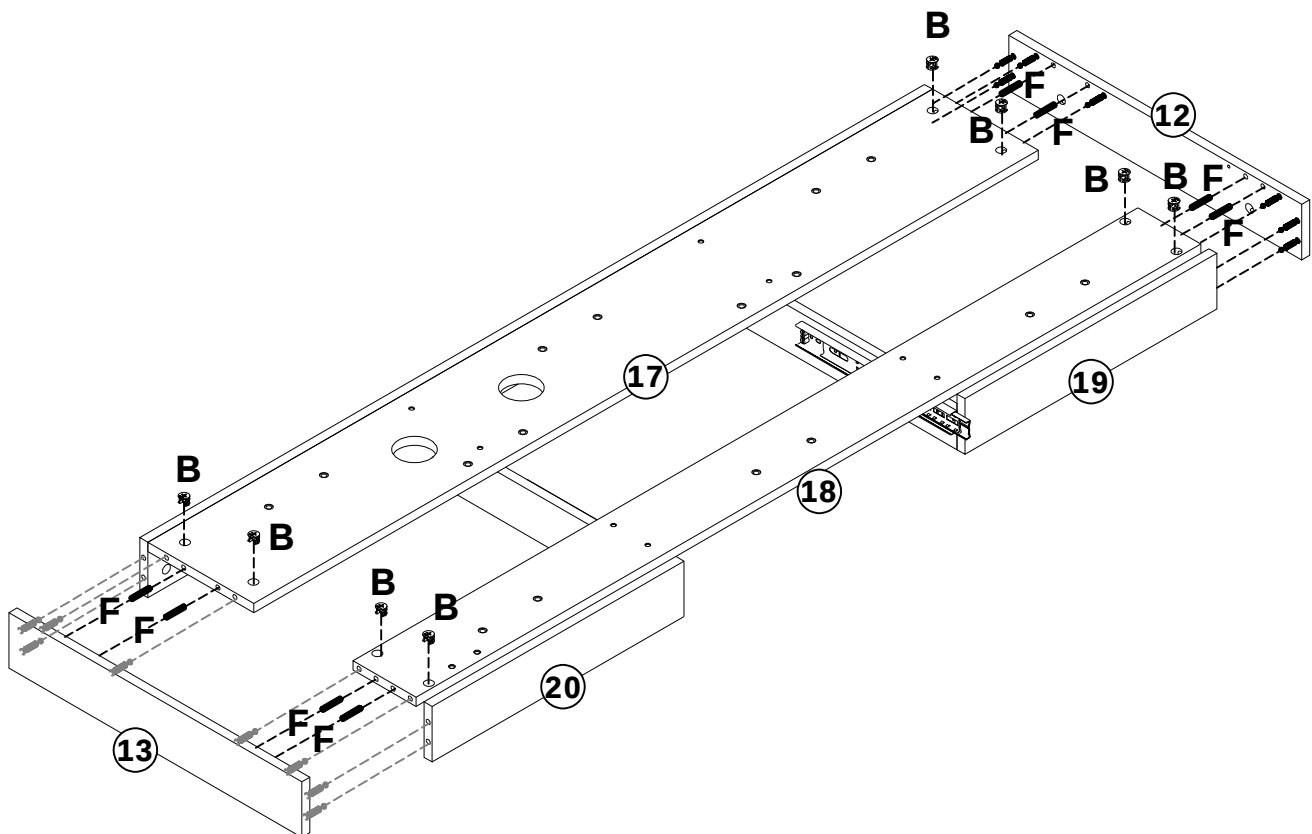 
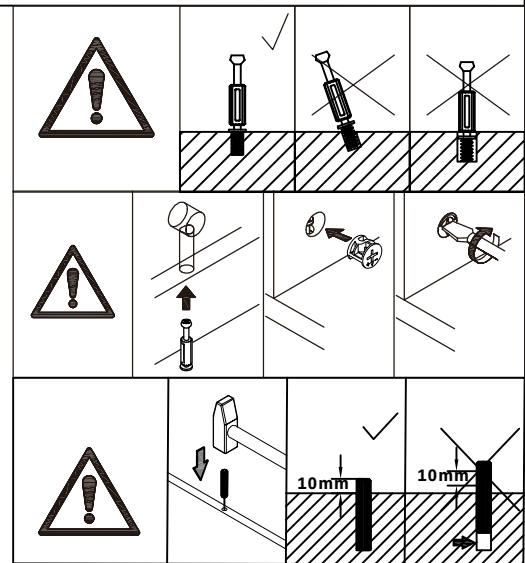 
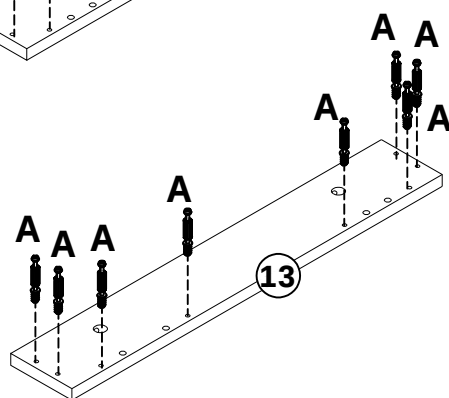 
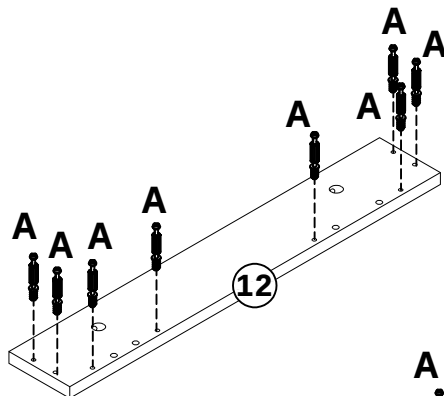 


28

B x 8



    Ø15x10 mm

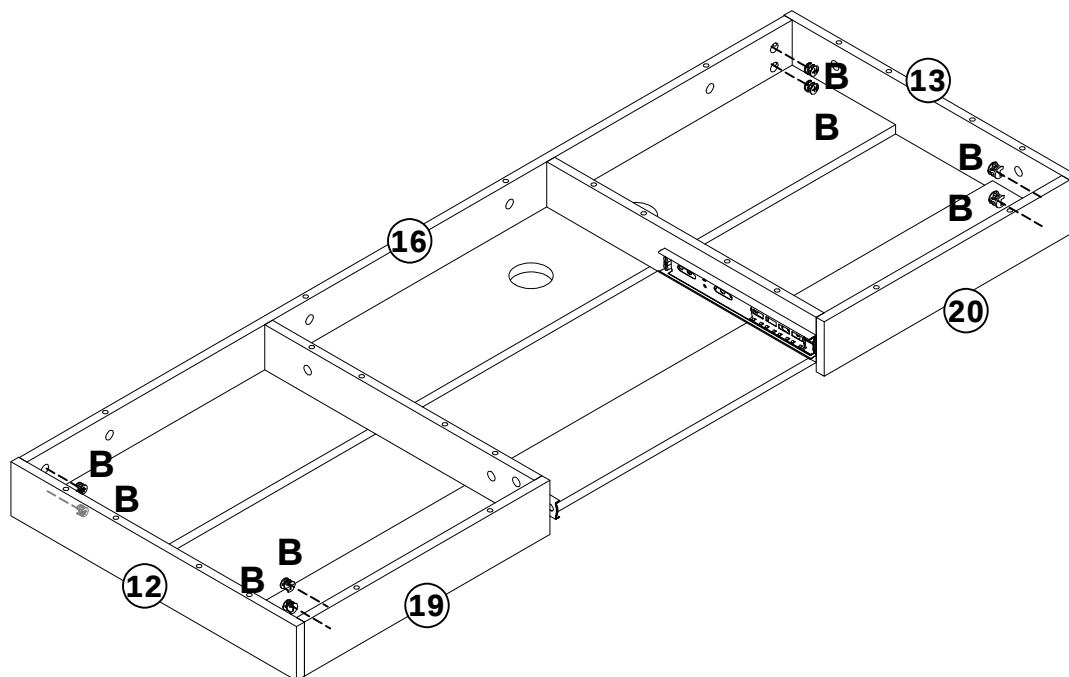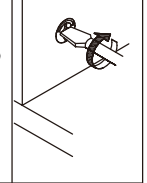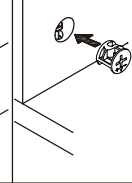



29







A x 16




  M5x42 mm

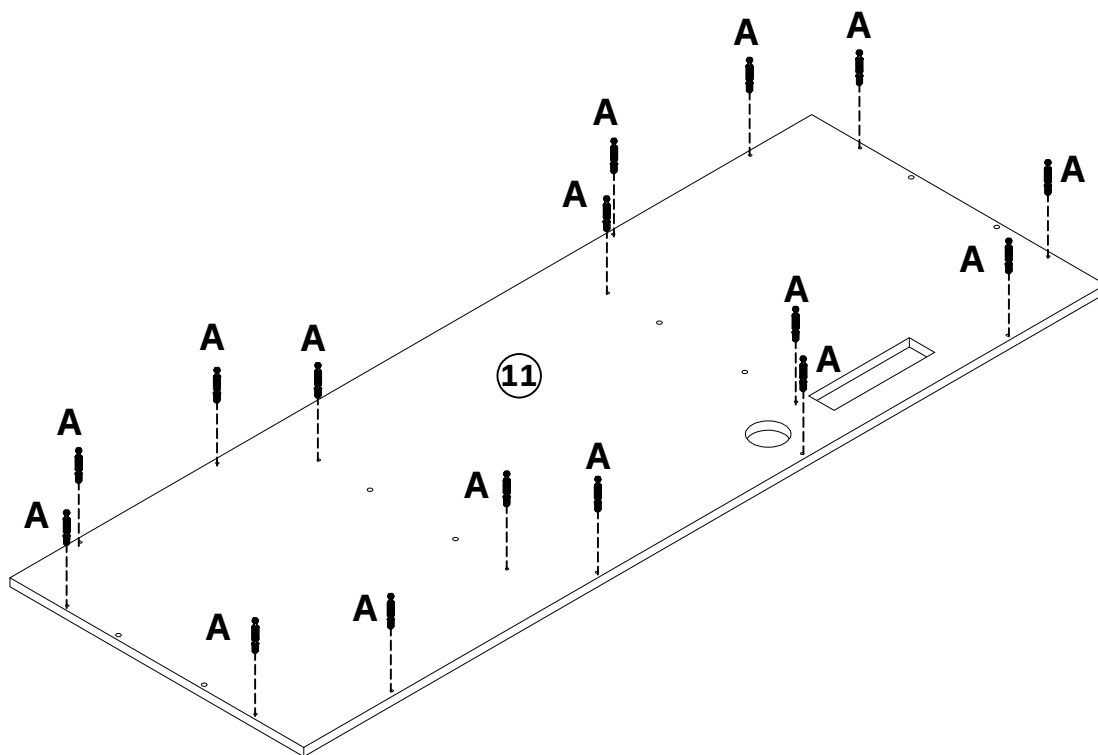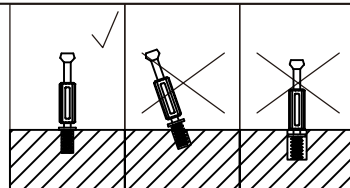

30

      B x 16  Ø15x10 mm	F x 8  Ø8x40 mm	       						
---	---	---	--	--	--	--	--	--

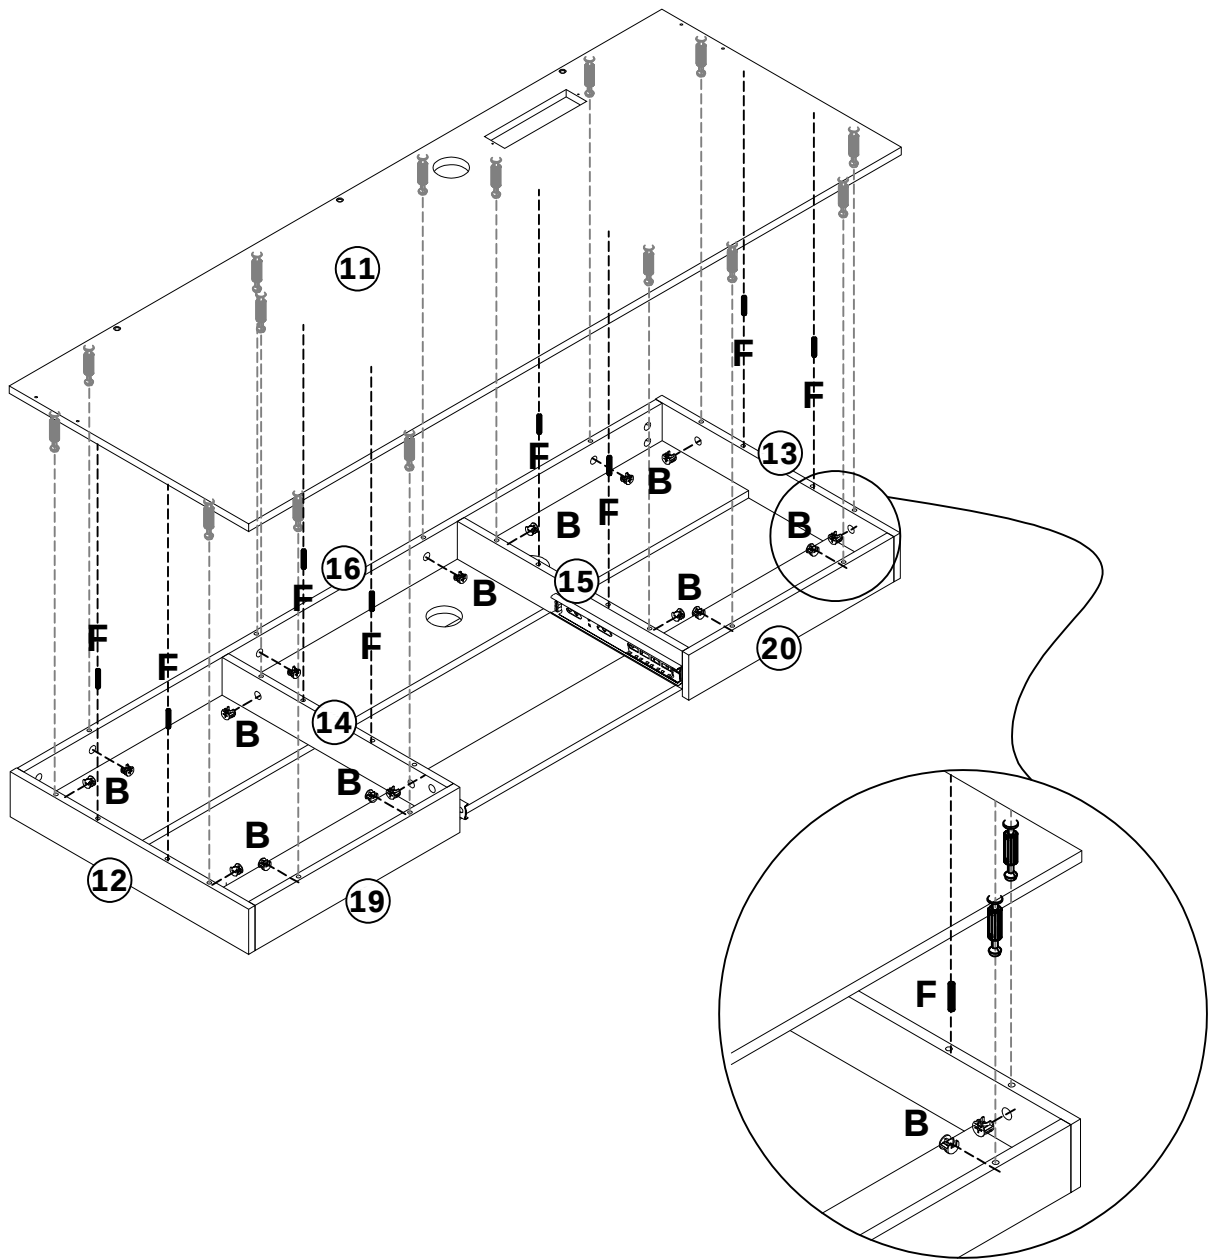 


31


K x 8



 M6x50 mm

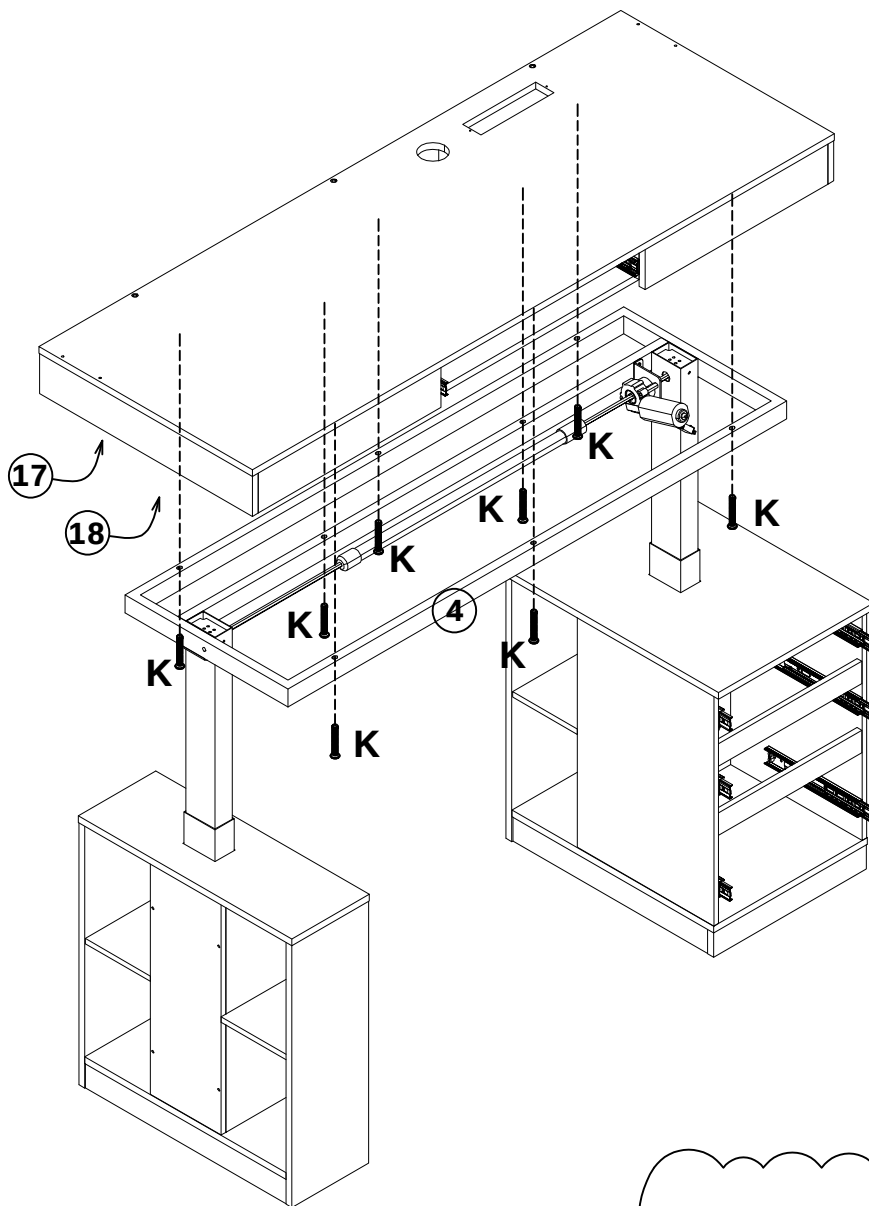

 Select appropriate holes on panels
No. 17 and No. 18 for installation.

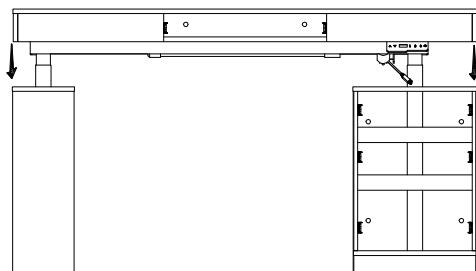


32

G x 2



 M5x12 mm

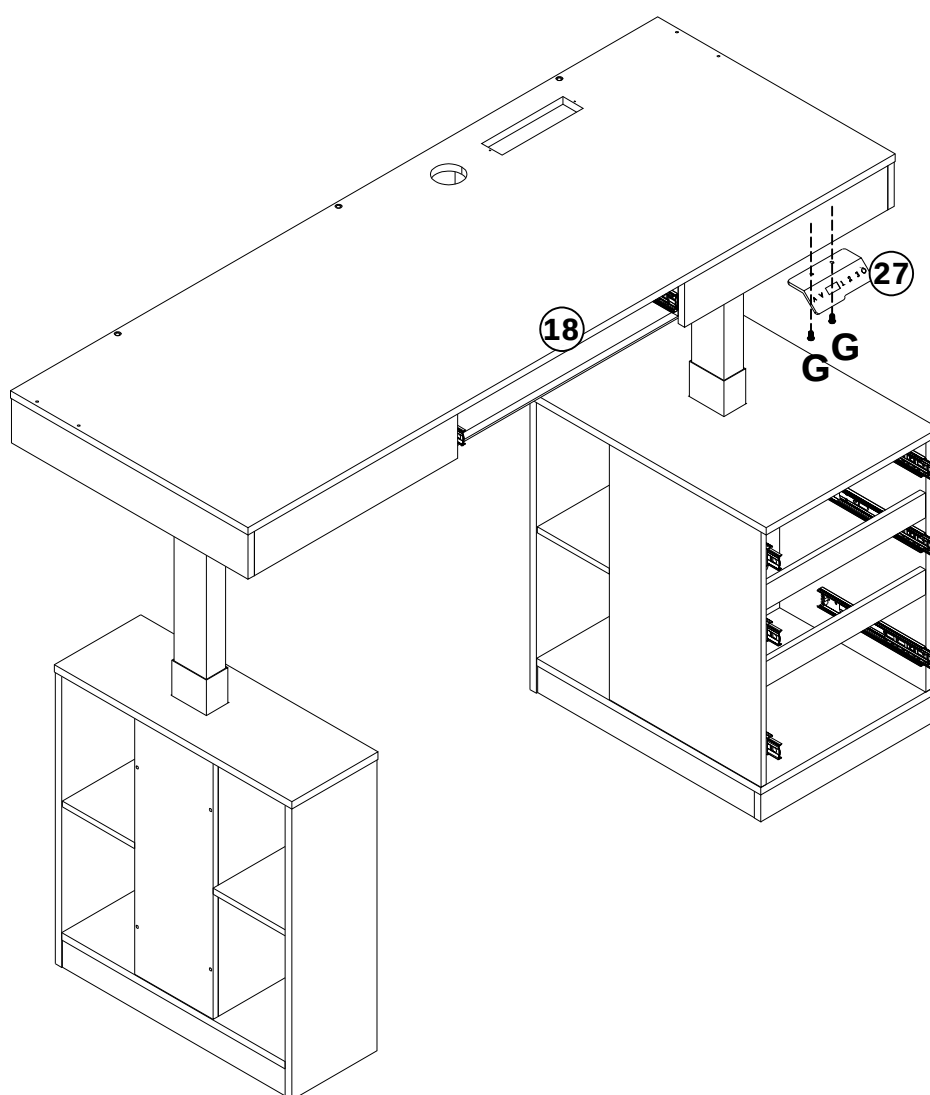


33

C x 4



 M5x40 mm

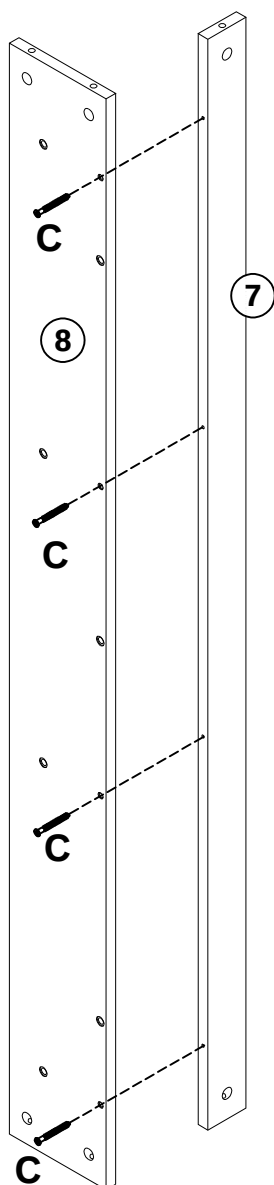


34

1 x 4







 M6x25 mm

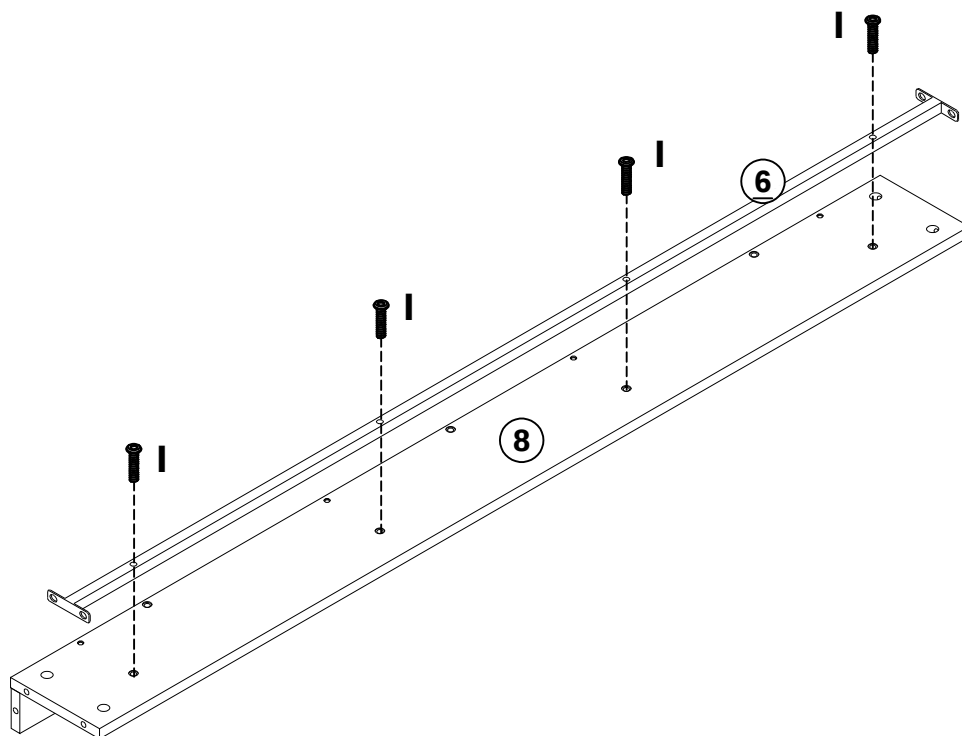

35

A x 6  M5x42 mm	B x 6  Ø15x10 mm	
--	---	--

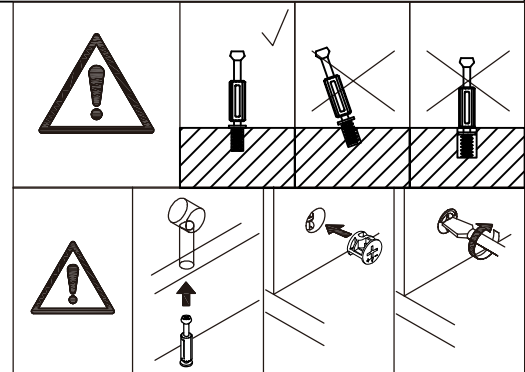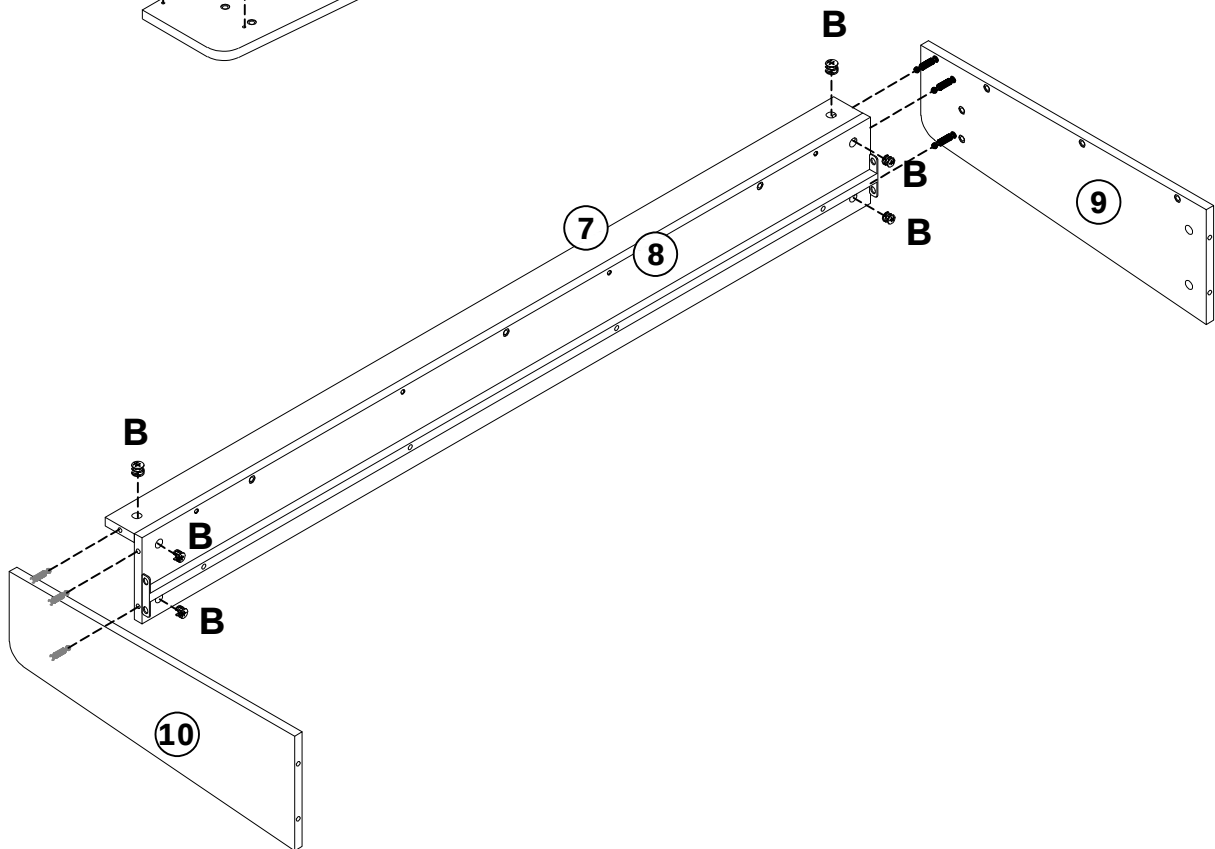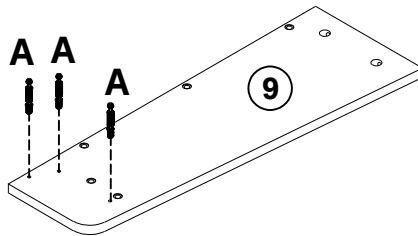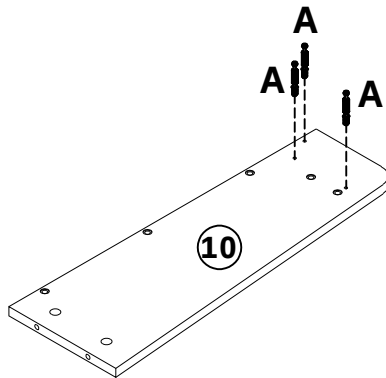    


36

H x 4



 M6x10 mm


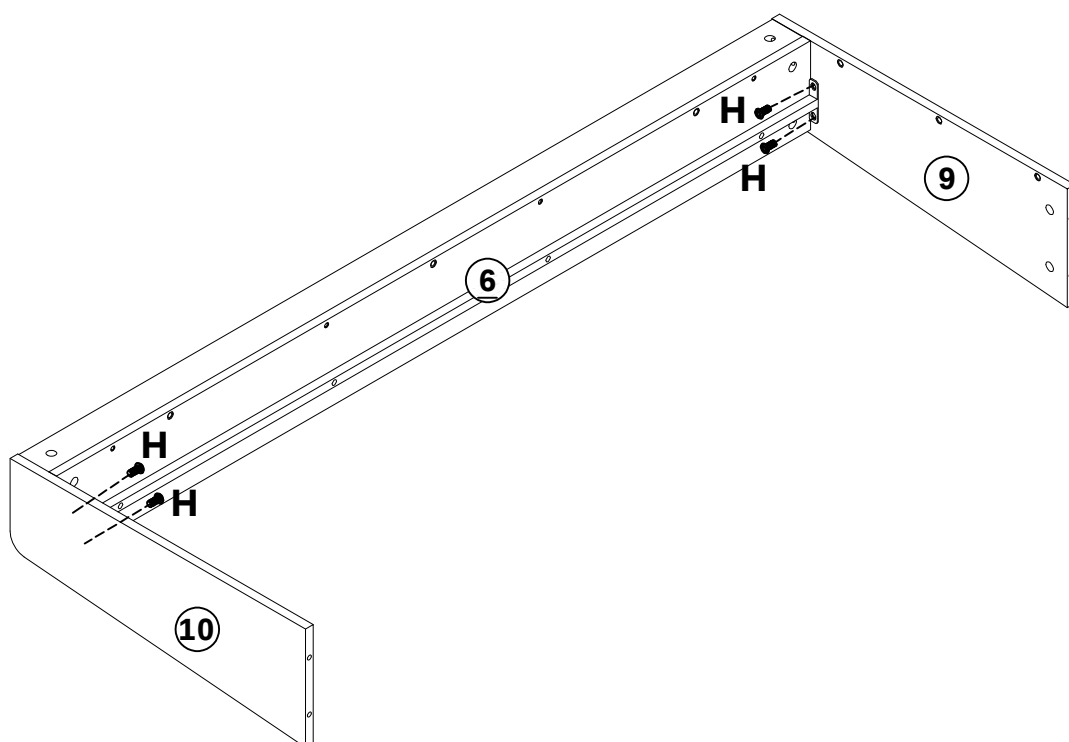


37

A x 4



  M5x42 mm



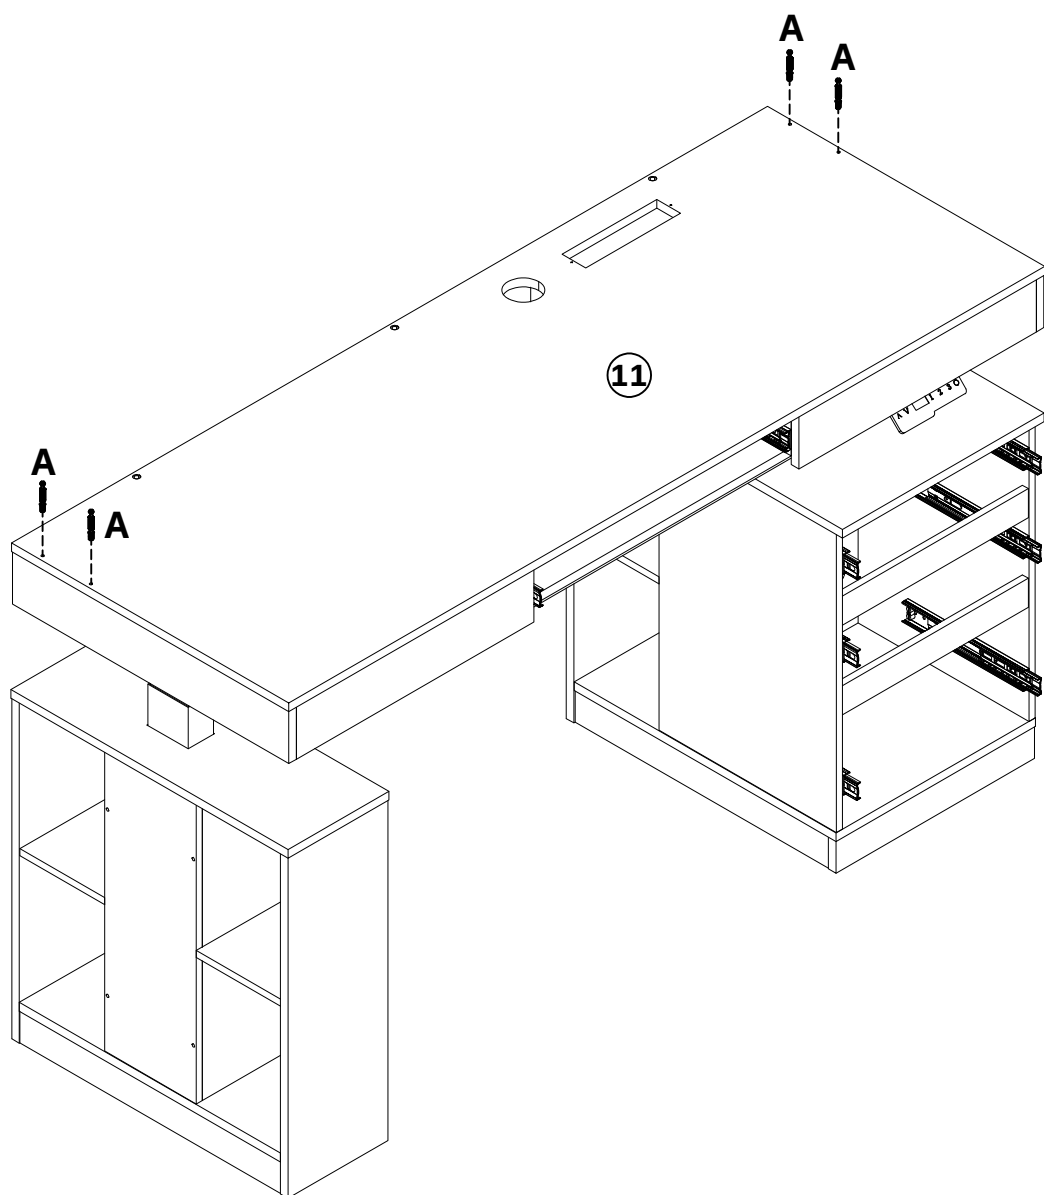
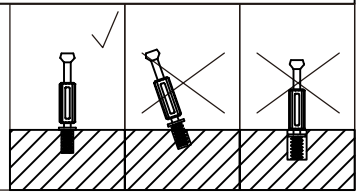


38

B x 4






    Ø15x10 mm

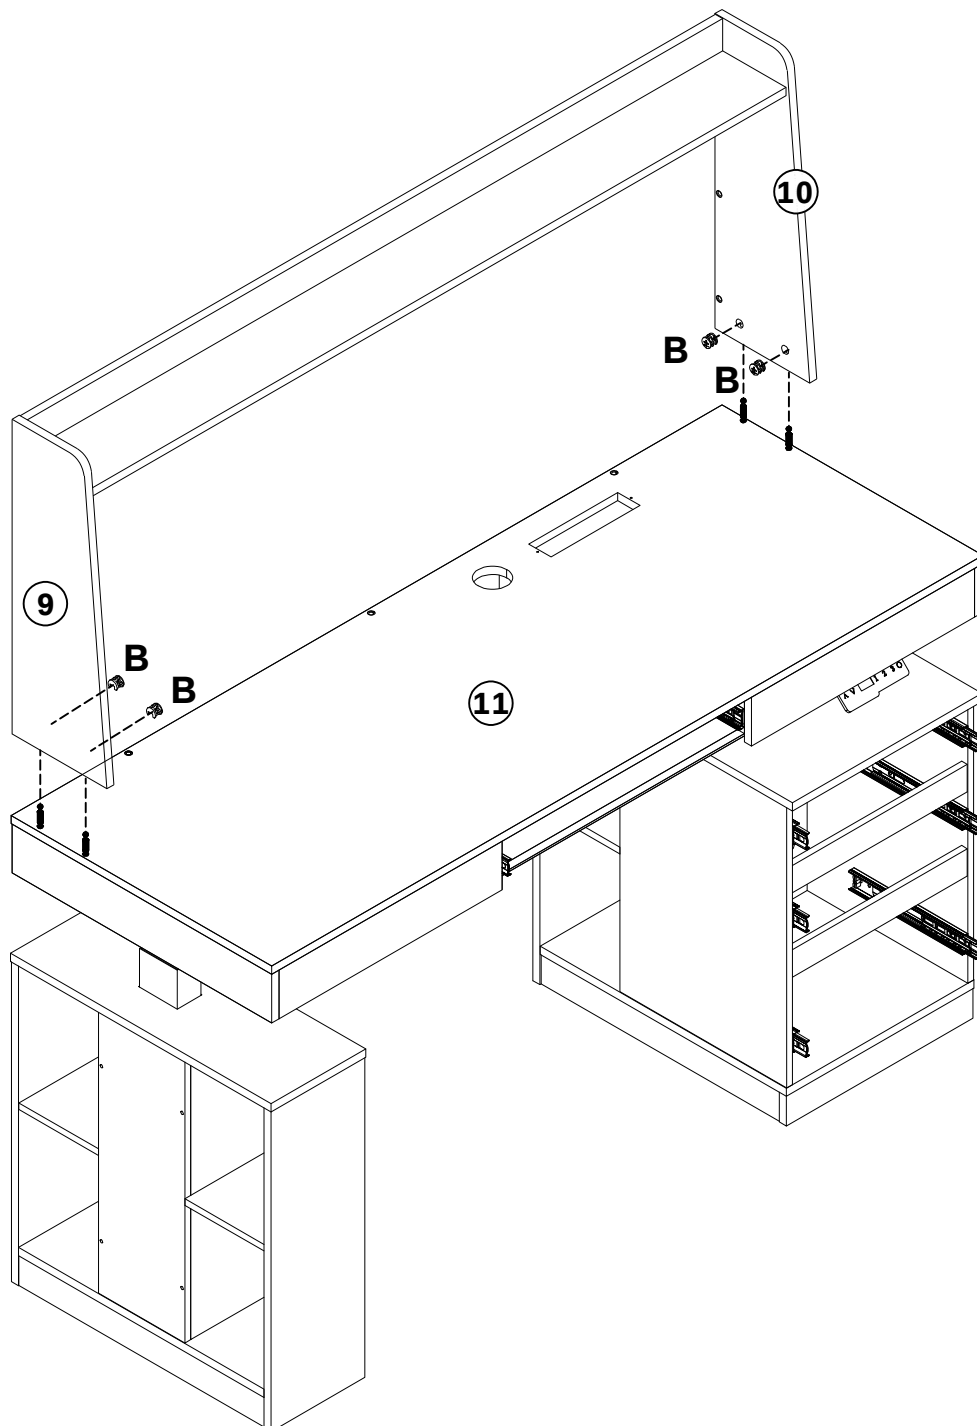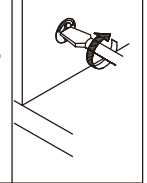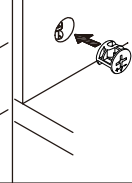




39

I x 6  M6x25 mm	H x 6  M6x10 mm	
--	--	--

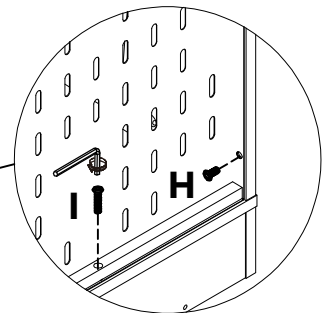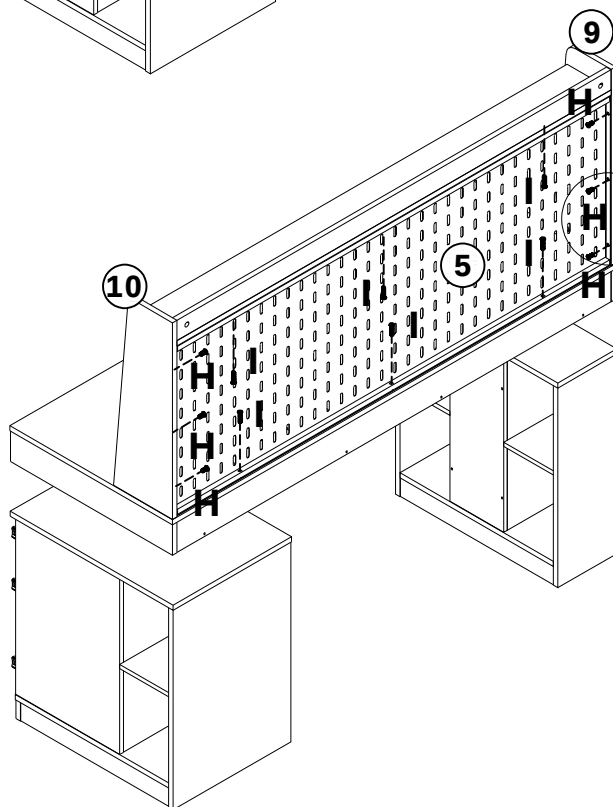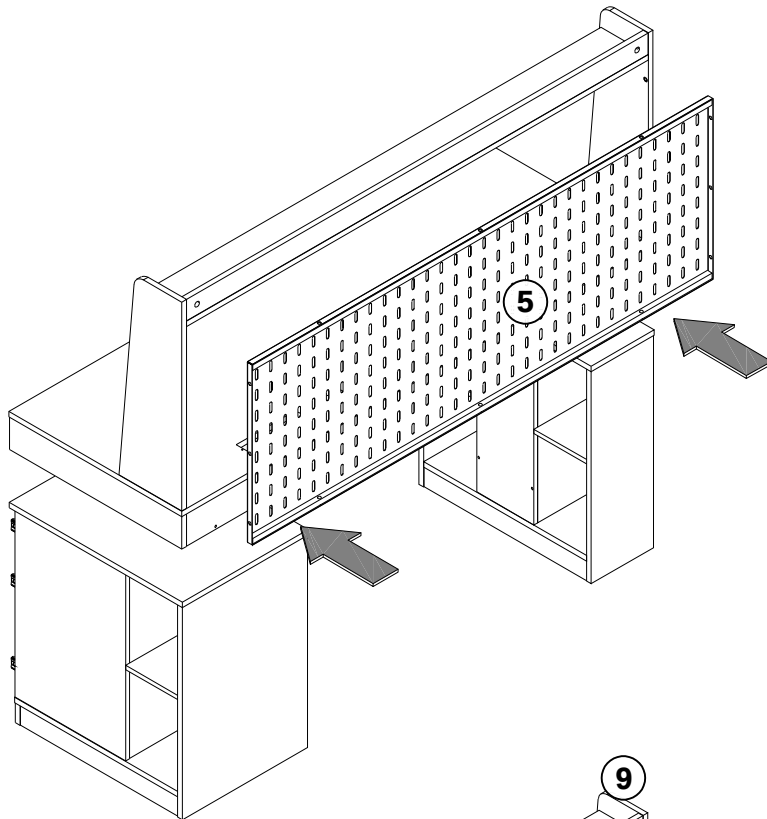   

40

A x 2  M5x42 mm	B x 2  Ø15x10 mm	E x 2  Ø6x40 mm	
--	---	--	--

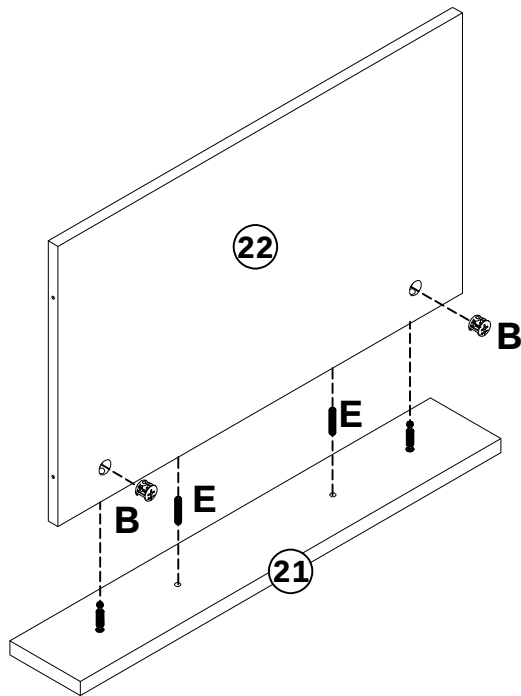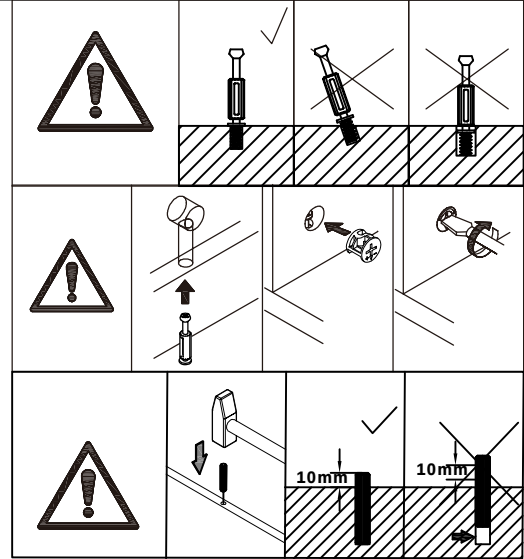  
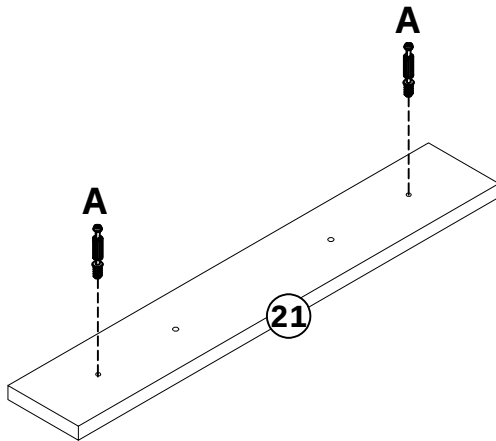 


41

D x 4



  M3.5x12 mm

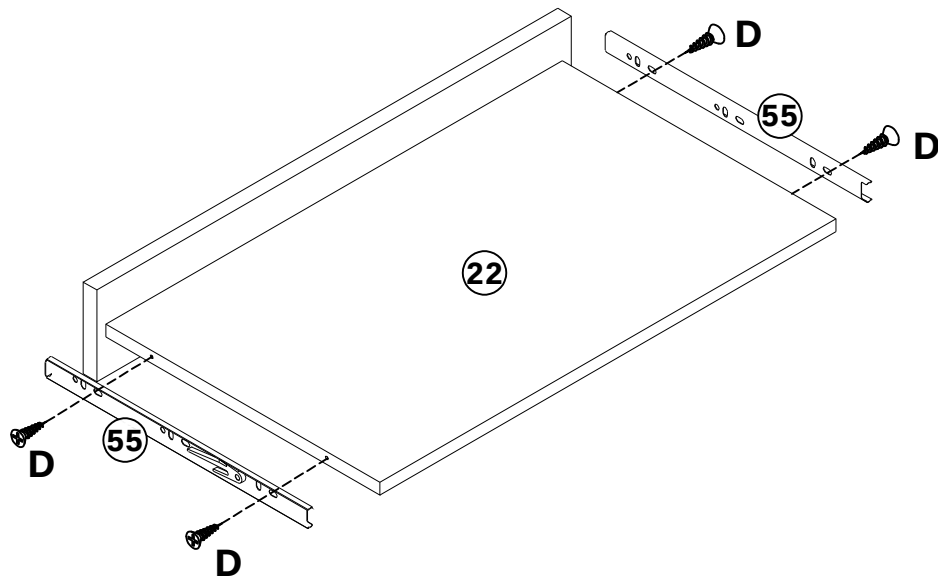



42


C x 12



  
M5x40 mm

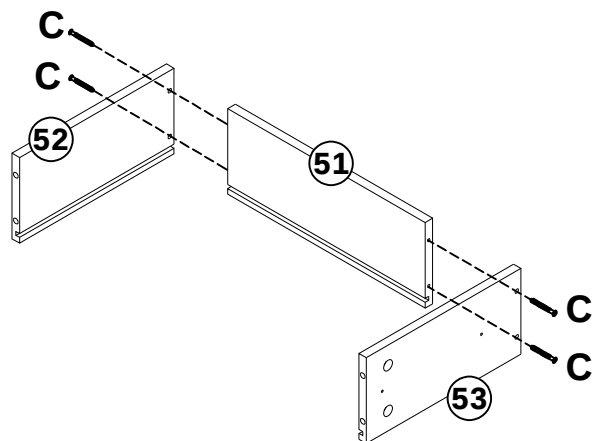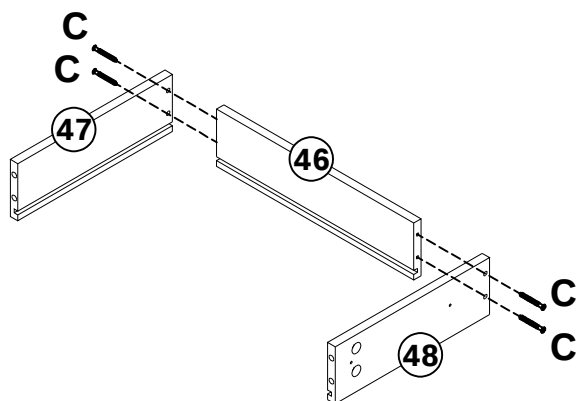

x 2


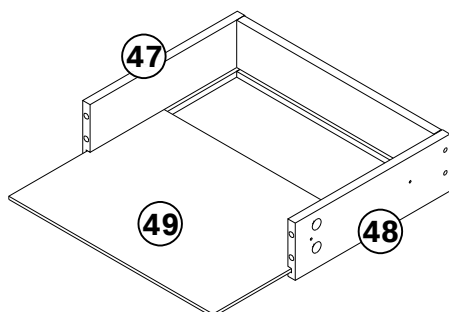 


x 2


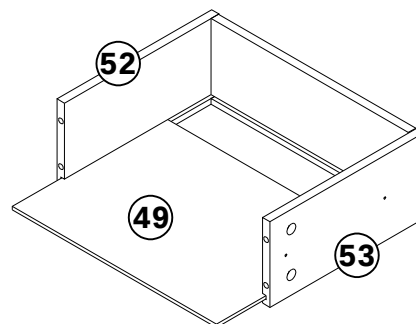 


43


A x 12  M5x42 mm	B x 12  Ø15x10 mm	
---	--	--

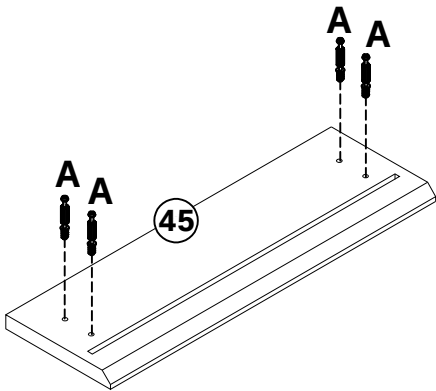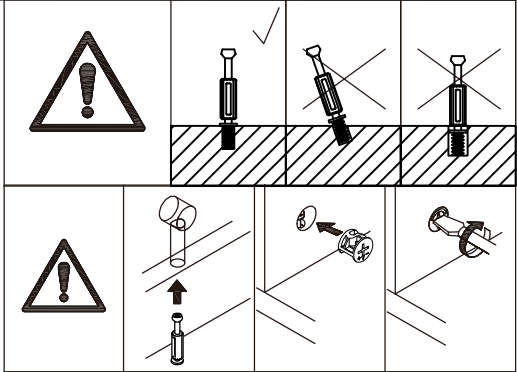  

x 2

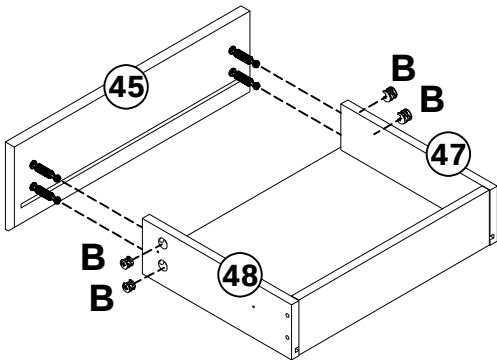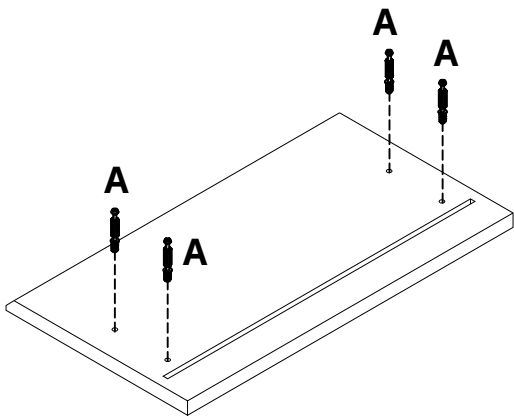  

x 2



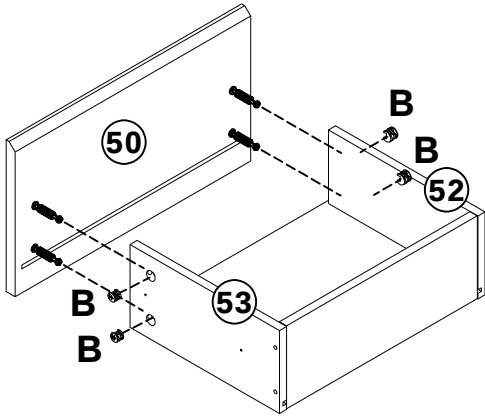 



44

D x 12



    
M3.5x12 mm

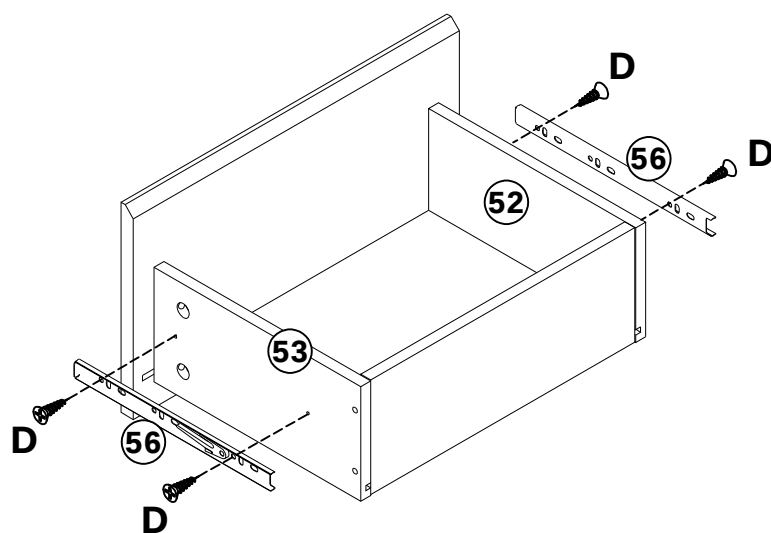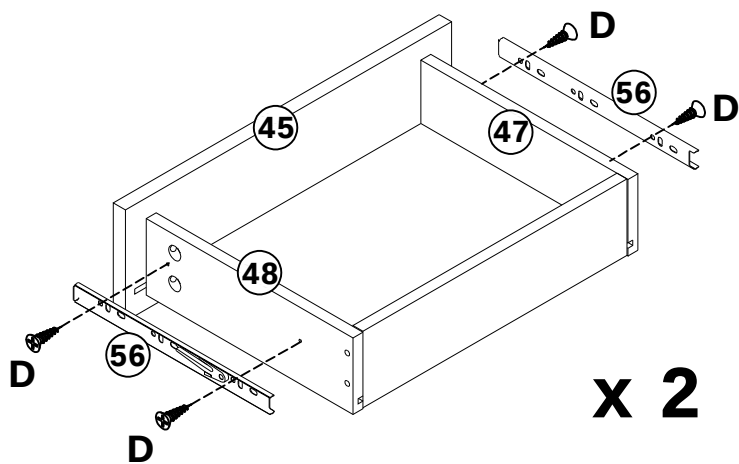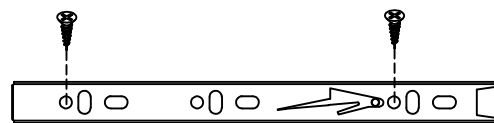

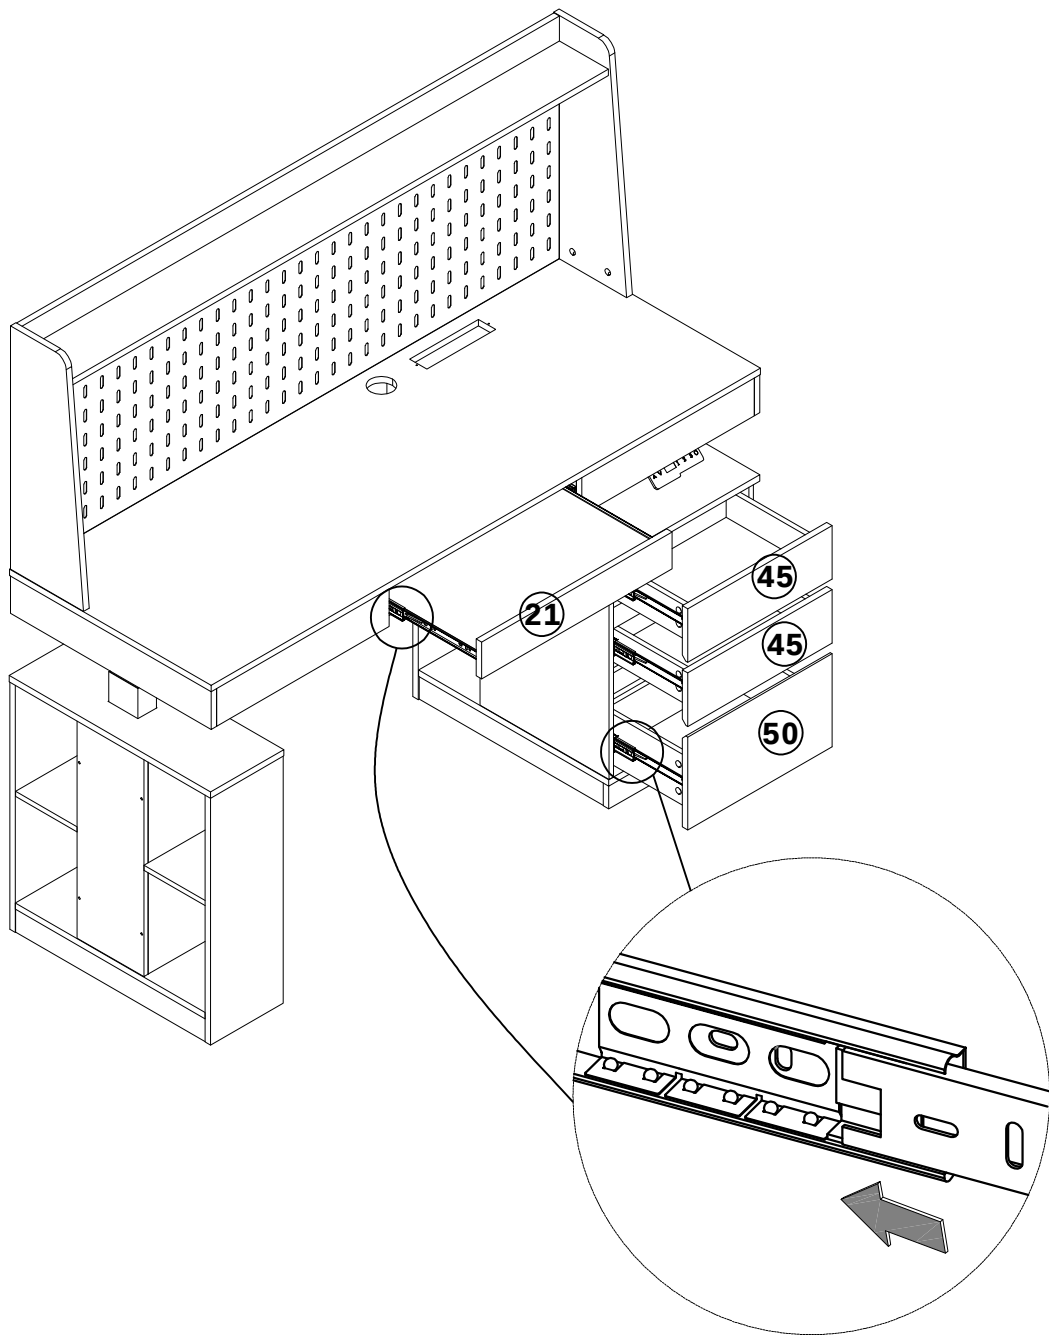




46

D x 2  M3.5x12 mm	Q x 1  Ø60	R x 1 	
--	---	---	--

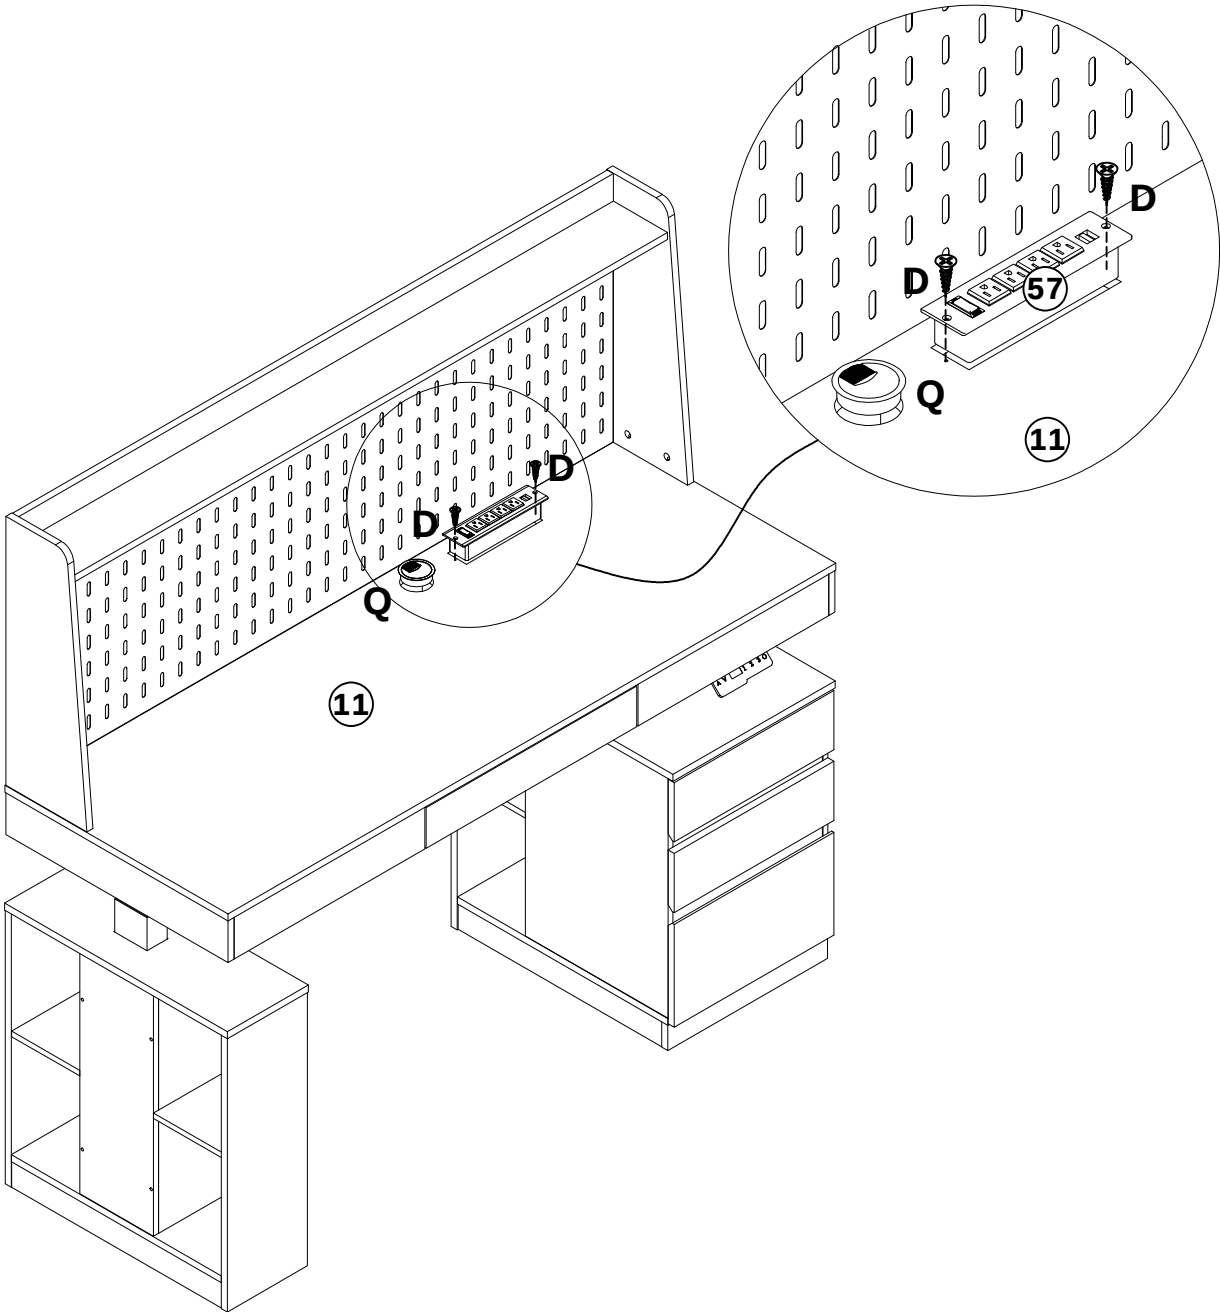 

47

   58

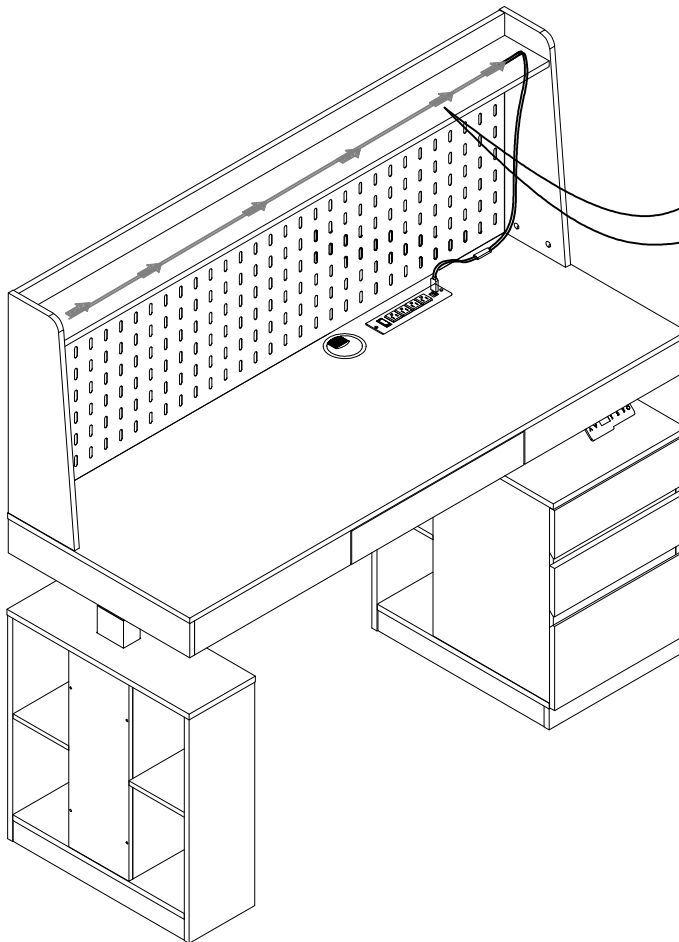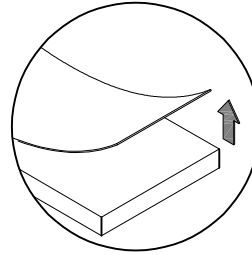

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068