


ASSEMBLY GUIDE

PACKAGE CONTENTS




1 Insert the wheels into the base.

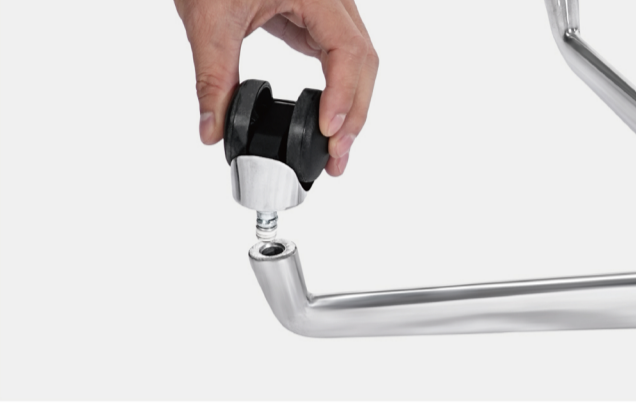

2 Buckle the bottom of the gas rod into the base.



3 Align the installed seat into the air pressure bar.

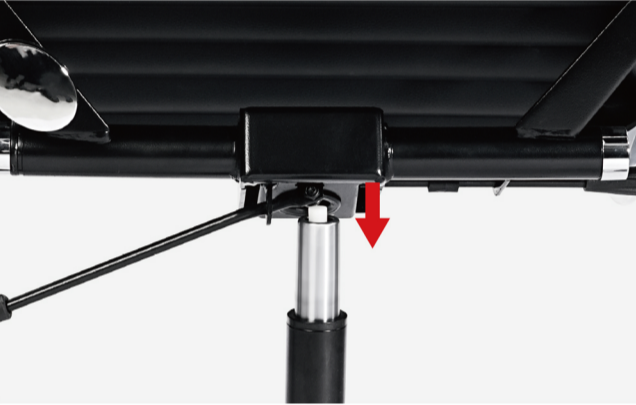

4 A. Seat height adjuster.
B. Seat tilting tension adjuster. Loose/Locking



FINISH

