 
 


ASSEMBLY INSTRUCTIONS

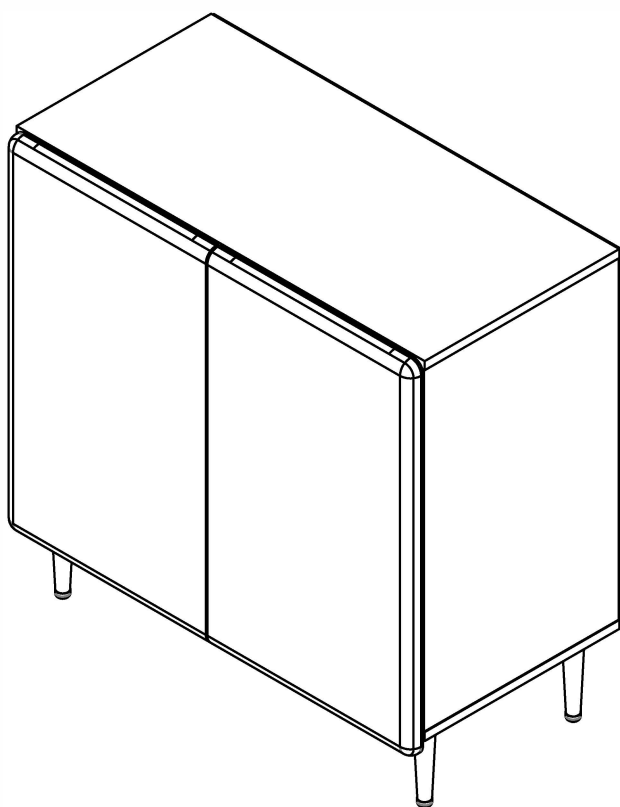







PACKAGE INCLUDE

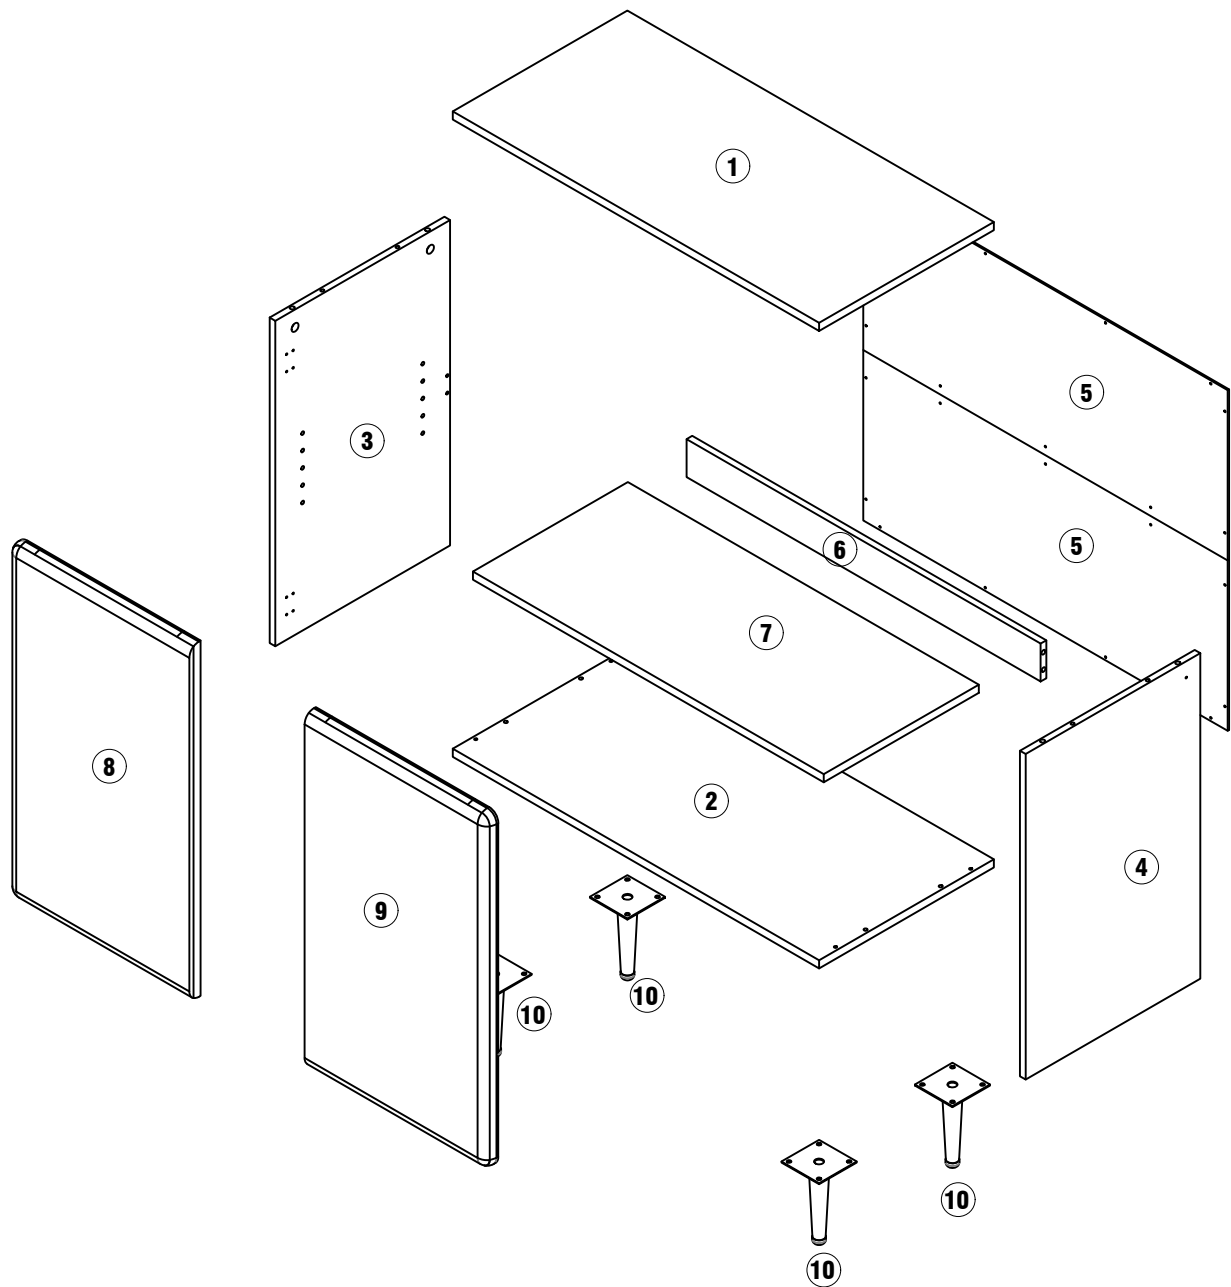


PACKAGE INCLUDE

CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Back Panel	2
6	Wood Strip	1
7	Adjustable Shelf Panel	1
8	Left Door Panel	1
9	Right Door Panel	1
10	Iron Pipe Foot	4

      
PACKAGE CONTENT

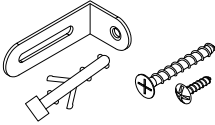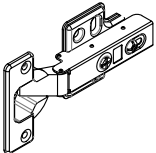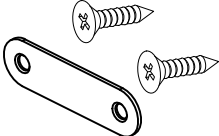Ø8X30MM  A 8X+1	Ø3.5X14MM  B 24X+1	 C 4X	Ø15X10MM  D 8X+1
Ø3.5X12MM  F 22X+1	 G 8X+1	 H 2X	 K 4X
Ø4X50MM  L 4X	Ø1/4X12MM  M 16X+1	 N 1X	 P 2X

 
How to use the cam lock system

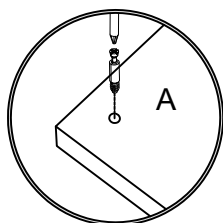

 
1. Screw cam bolt into panel

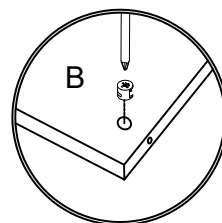

 
2. Push cam into panel - arrow feature on cam top points to panel edge

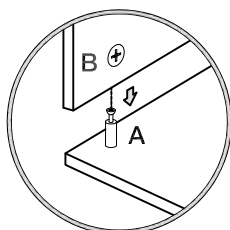

 3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

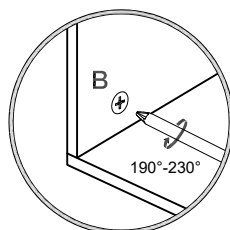


 4. Rotate cam(s) clockwise 190°-230° to lock panels together

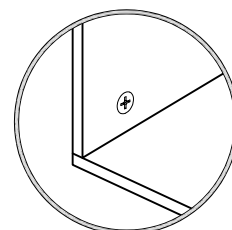

5. Panels should be tight against each other and connection should be rigid

 Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

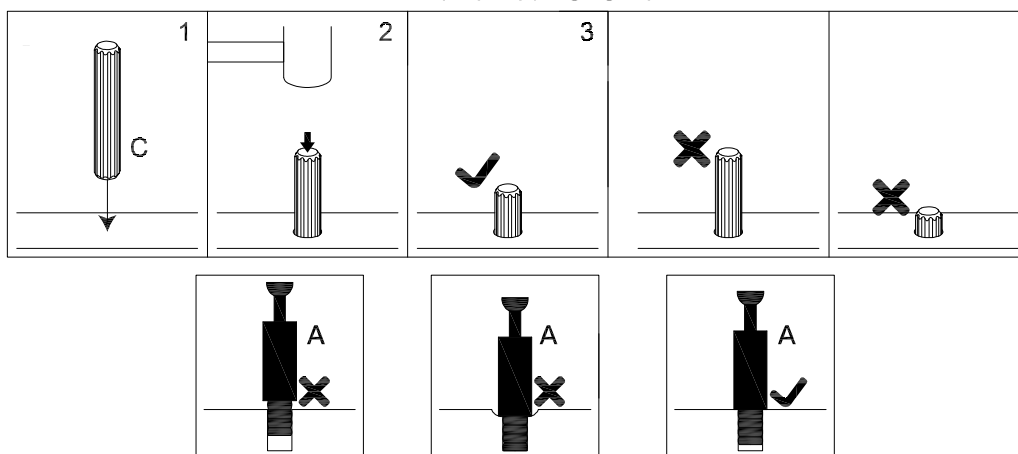

⚠ WARNING

 
- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

Adjusting the doors / Réglage des portes / Ajuste de las puertas


IMPORTANT — The furniture **MUST** be level on a flat, solid floor surface for the doors to work properly. Remove all items from furniture, then turn the leveling feet under the cabinet to make sure the furniture is level. Once the furniture is level, align the doors as shown for proper operation.

IMPORTANT — Le meuble **DOIT** être de niveau sur une surface de sol plane et solide pour que les portes fonctionnent correctement. Retirez tous les éléments des meubles, puis tournez les pieds de nivellement sous l'armoire pour vous assurer que le meuble est de niveau. Une fois le meuble de niveau, alignez les portes comme indiqué pour un bon fonctionnement.

IMPORTANTE — El mueble **DEBE** estar nivelado sobre una superficie plana y sólida para que las puertas funcionen correctamente. Retire todos los artículos de los muebles, luego gire las patas niveladoras debajo del gabinete para asegurarse de que esté nivelado. Una vez que el gabinete esté nivelado, alinee las puertas como se muestra para una operación adecuada.

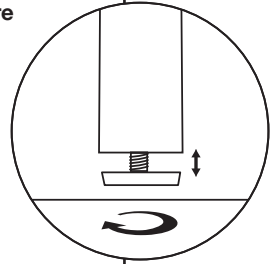

FRONT VIEW | VUE DE FACE | VISTA FRONTAL

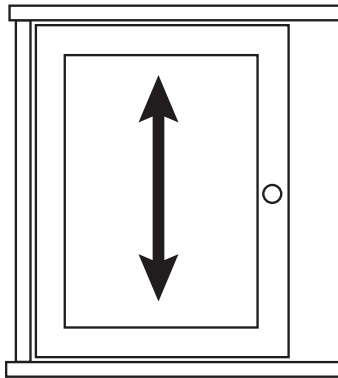 

UP AND DOWN

 
Use screws to adjust the gaps at the top and bottom of door.

HAUT ET BAS


Utilisez des vis pour ajuster les espaces en haut et en bas de la porte.

ARRIBA Y ABAJO

Use tornillos para ajustar los espacios en la parte superior e inferior de la puerta.

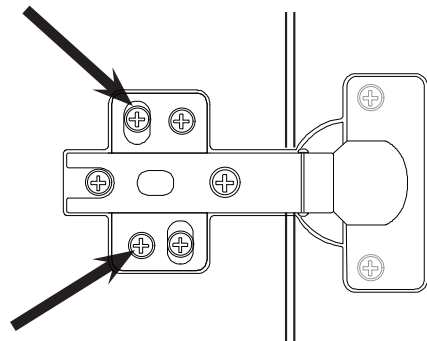

FRONT VIEW | VUE DE FACE | VISTA FRONTAL

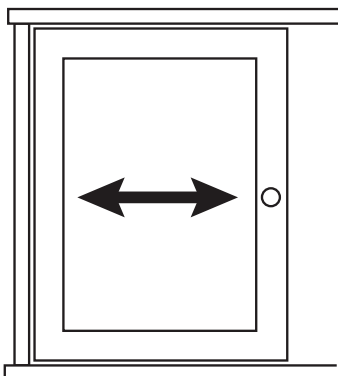 

LEFT AND RIGHT

 
Use screw to adjust the gaps at left and right of the door.

GAUCHE ET DROITE


Utilisez la vis pour ajuster les écarts à gauche et à droite de la porte.

IZQUIERDA Y DERECHA

Use un tornillo para ajustar los espacios a la izquierda y a la derecha de la puerta.

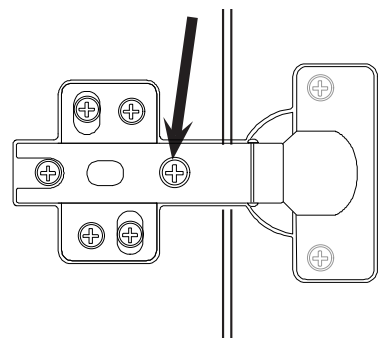

TOP VIEW | VUE DE HAUT | VISTA SUPERIOR

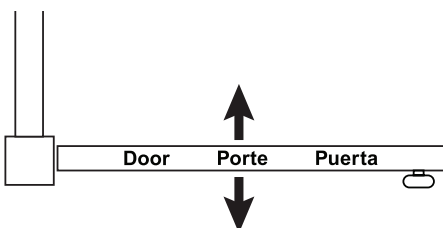 

IN AND OUT

 
Use screw to move the door in or out.

DEDANS ET DEHORS


Utilisez la vis pour déplacer la porte vers l'intérieur ou vers l'extérieur.

DENTRO Y FUERA


Use un tornillo para mover la puerta hacia adentro o hacia afuera.

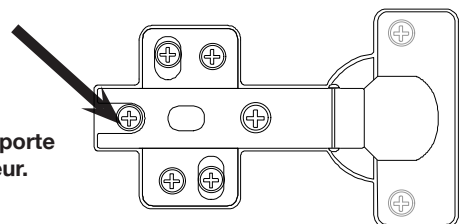

 
STEP 1

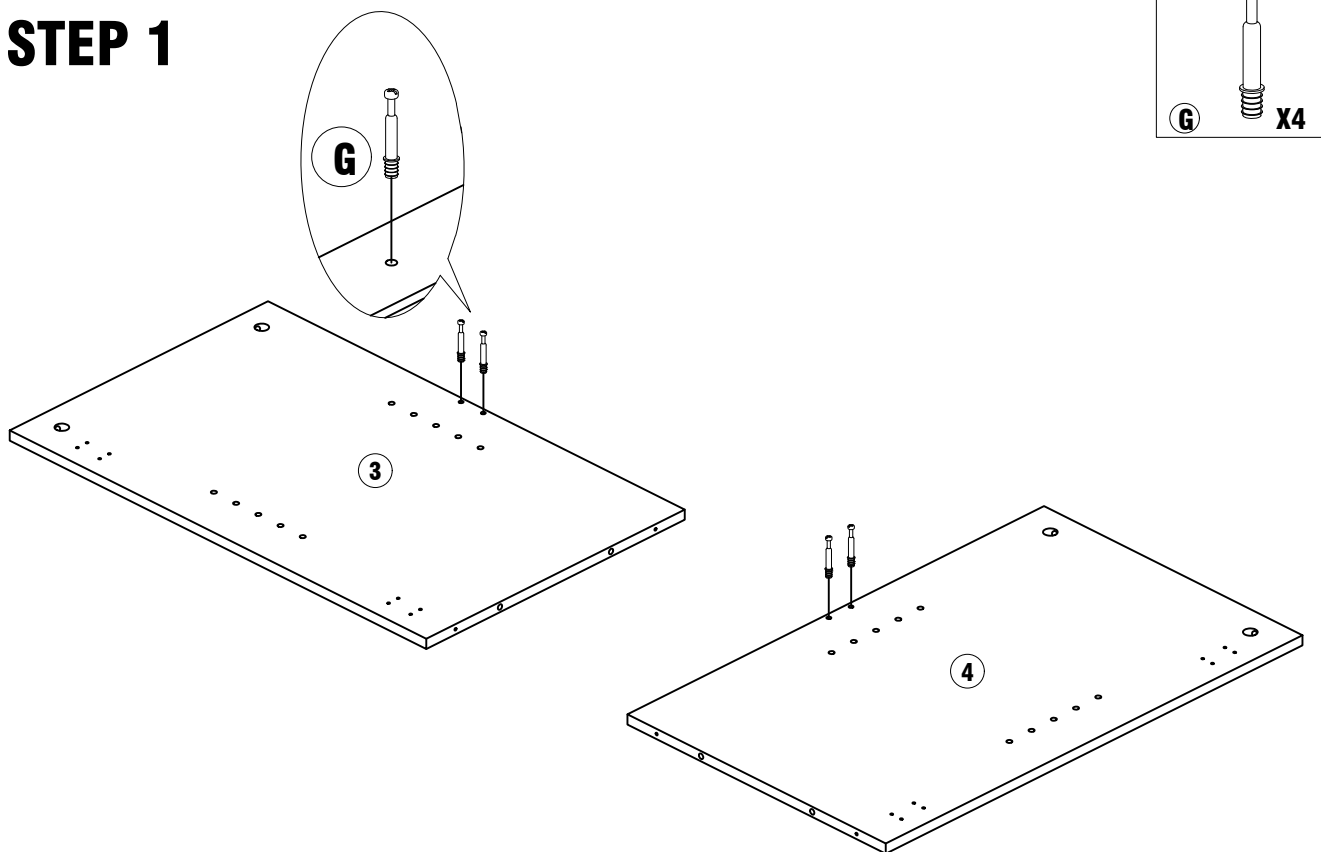

 
STEP 2

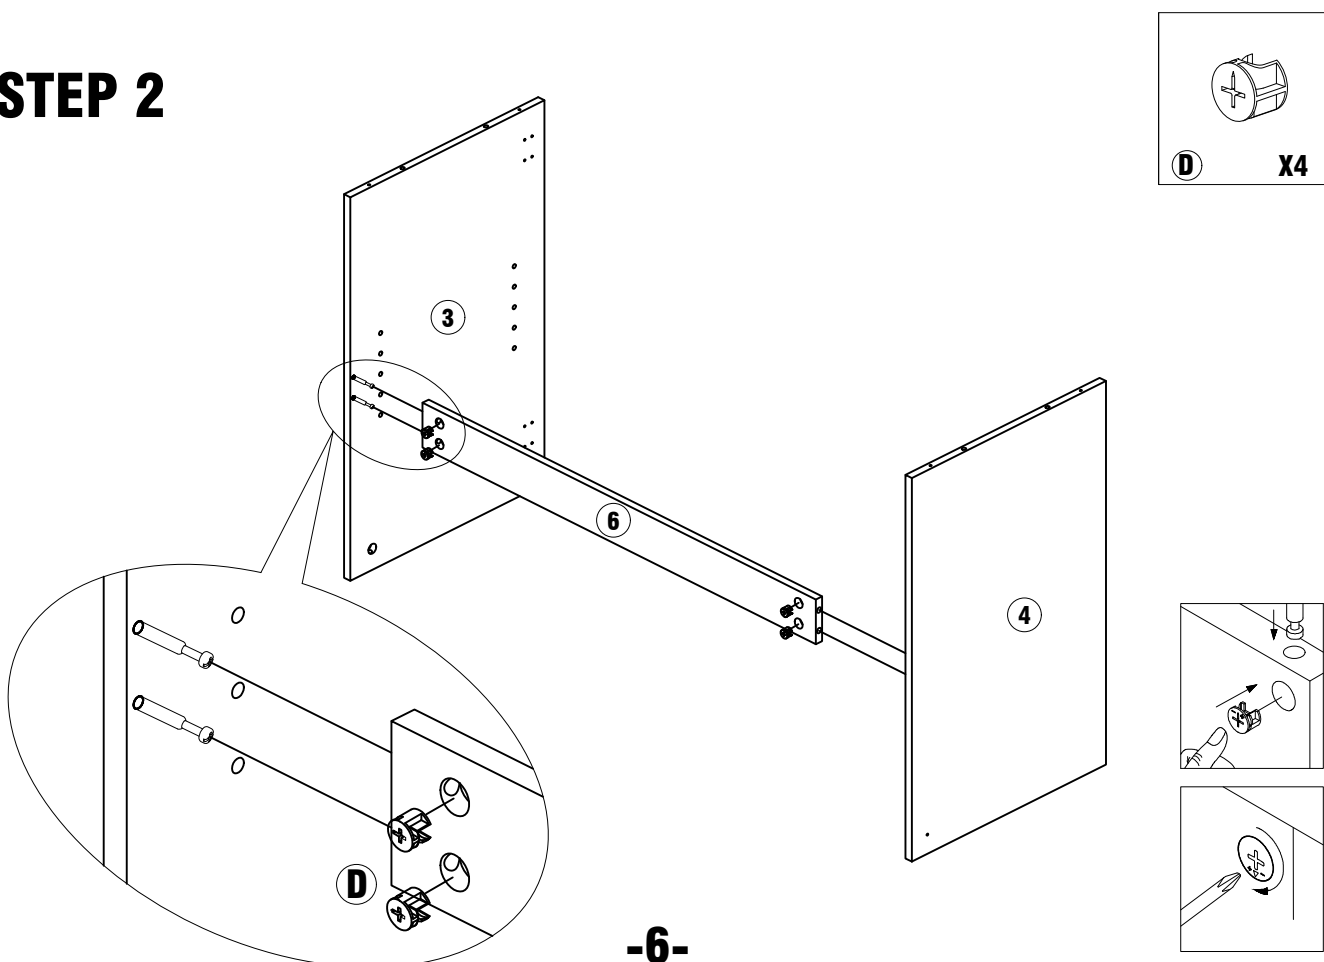


 
STEP 3

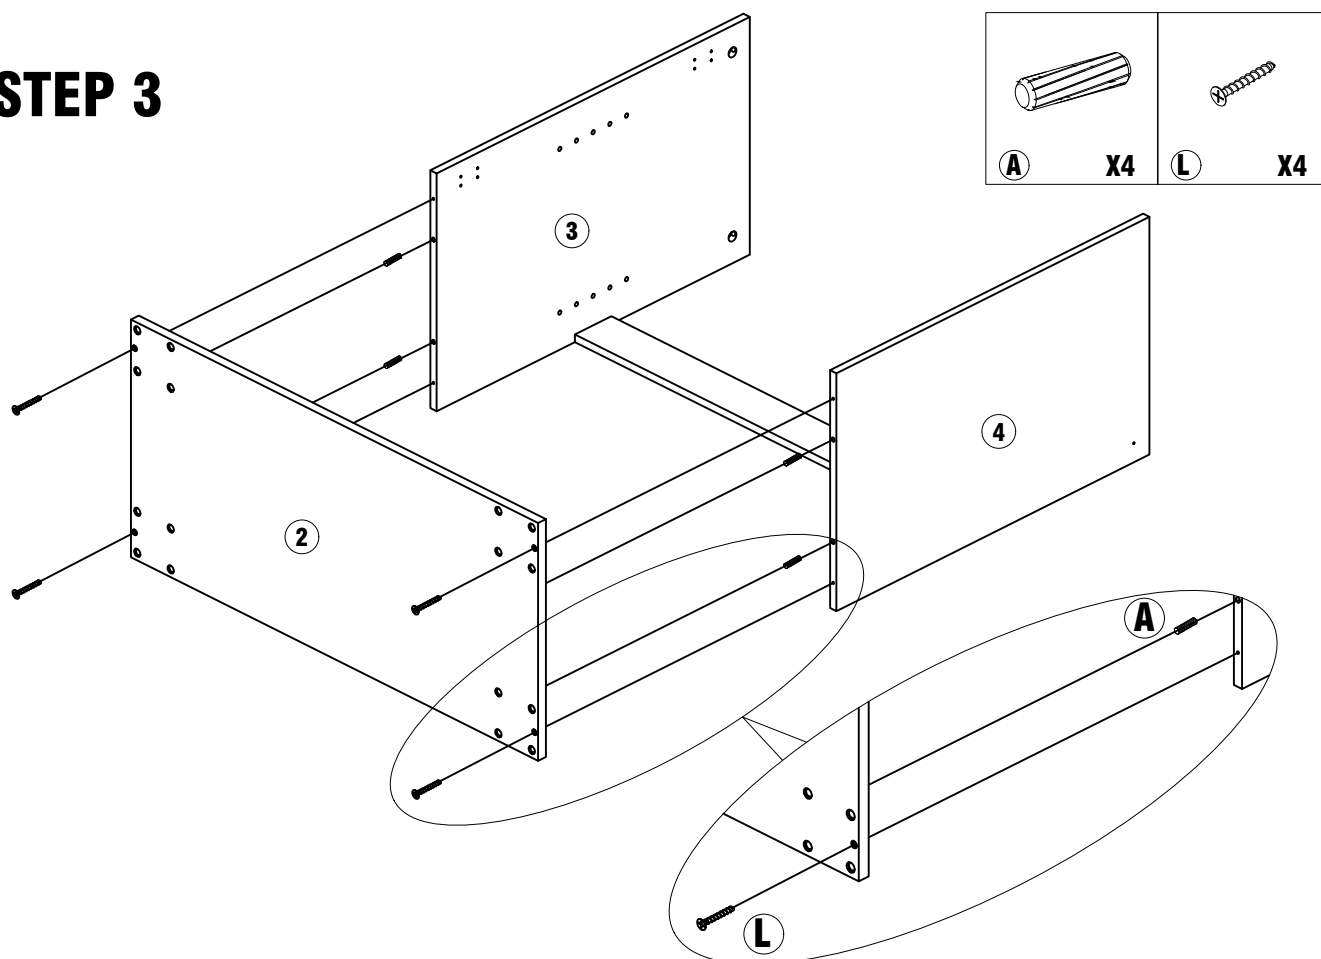




 
STEP 4

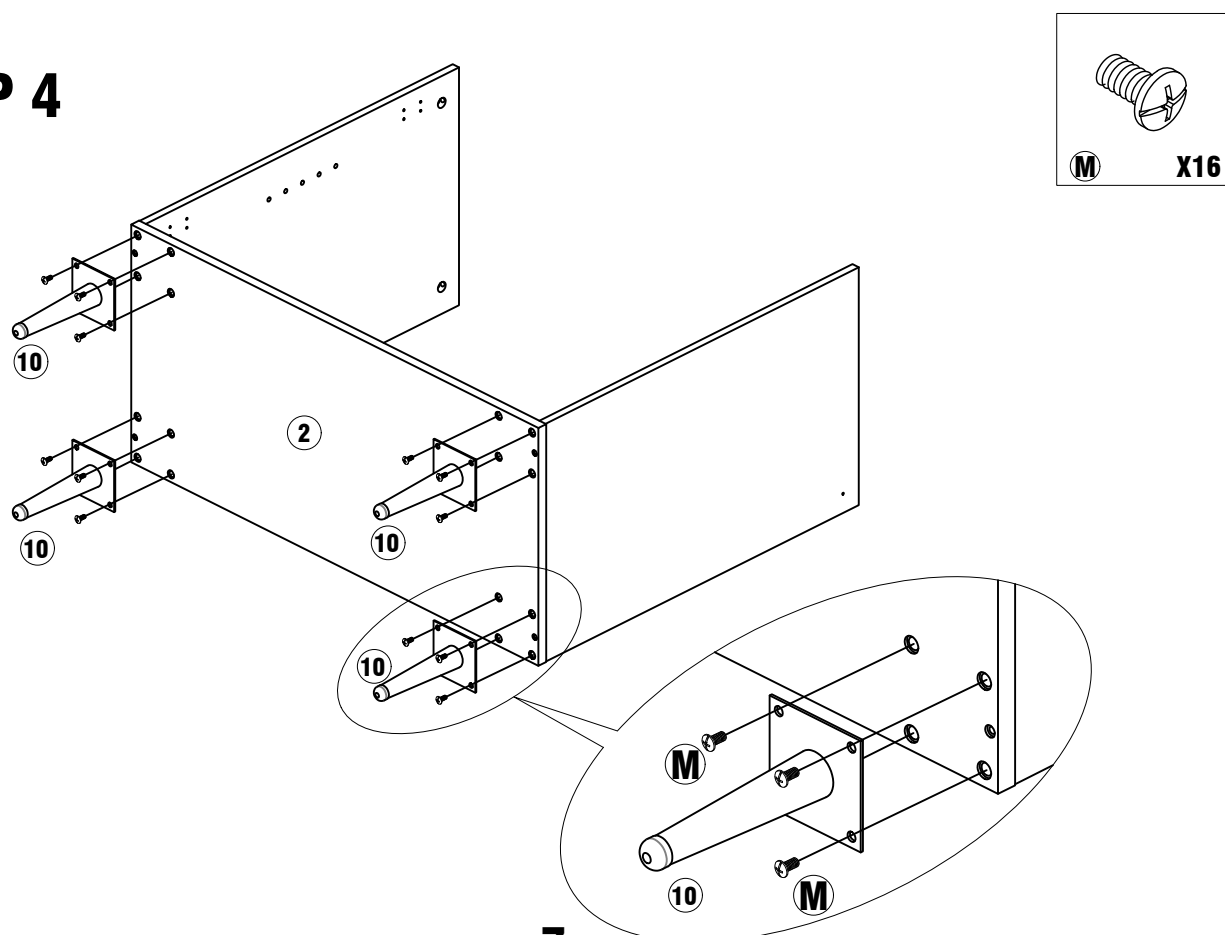


 
 
STEP 5

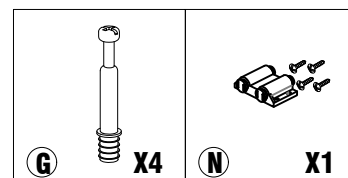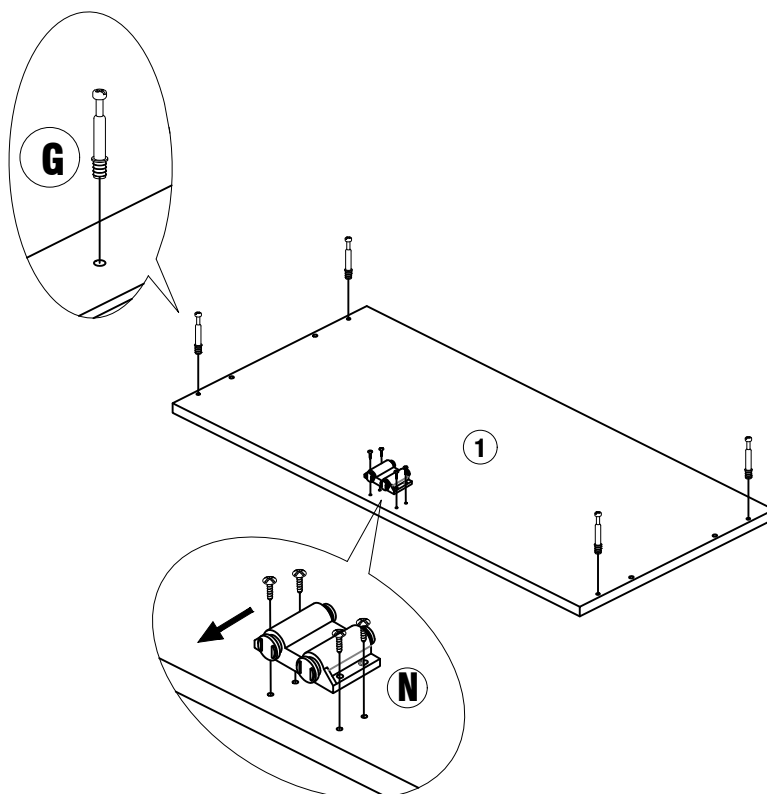

  
 
 
STEP 6

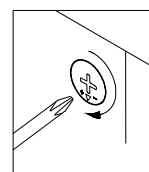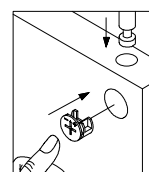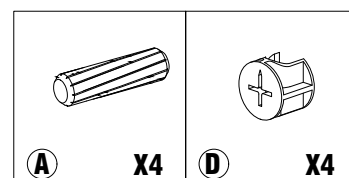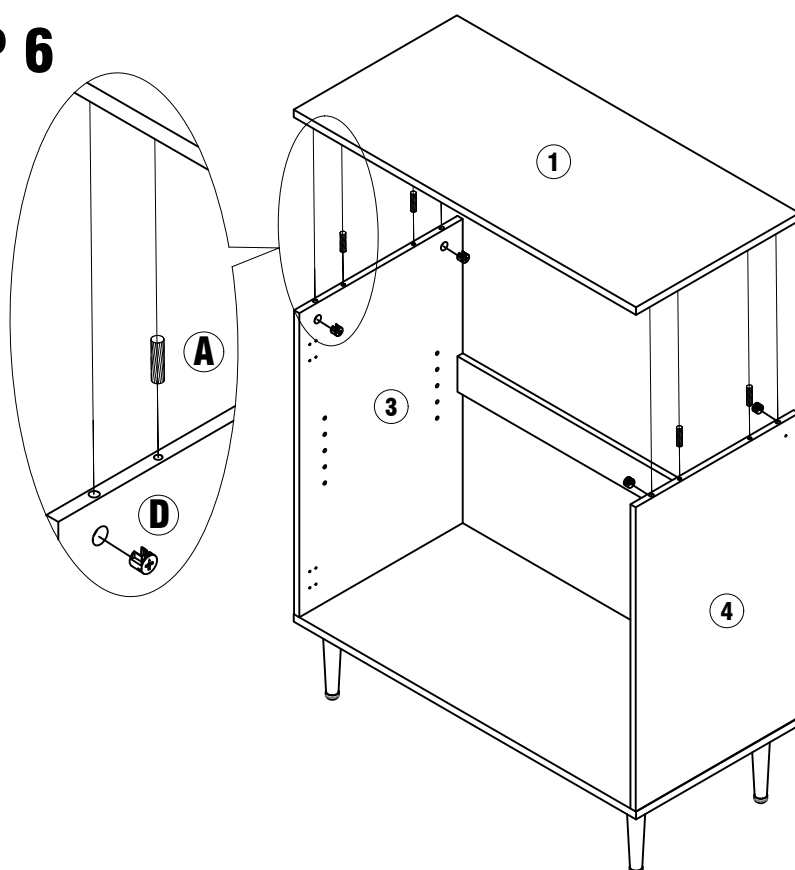

  
 
STEP 7

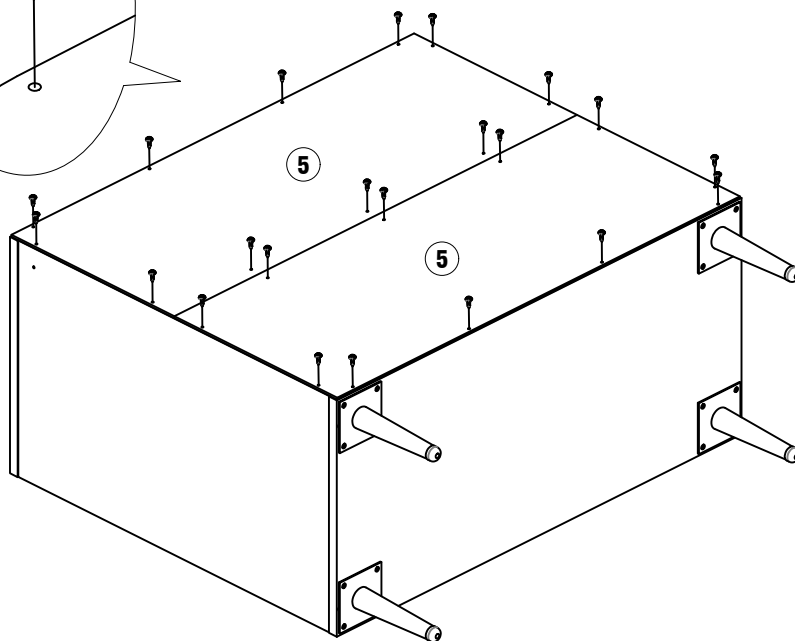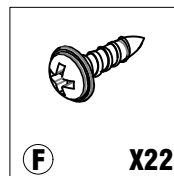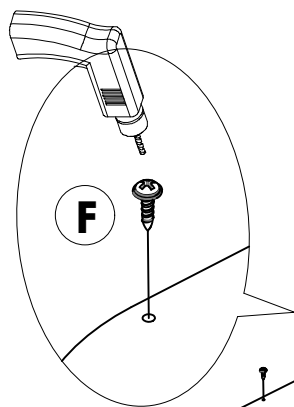

  
 
STEP 8

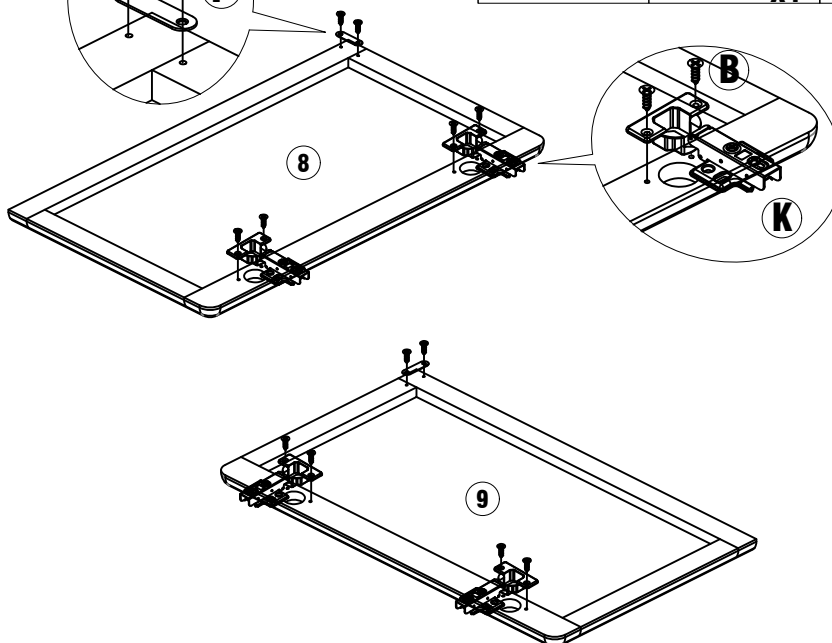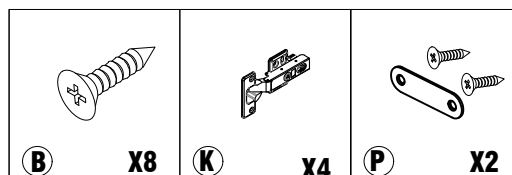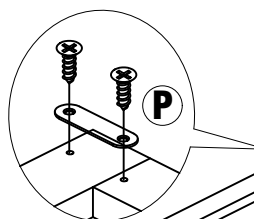

 
 
STEP 9

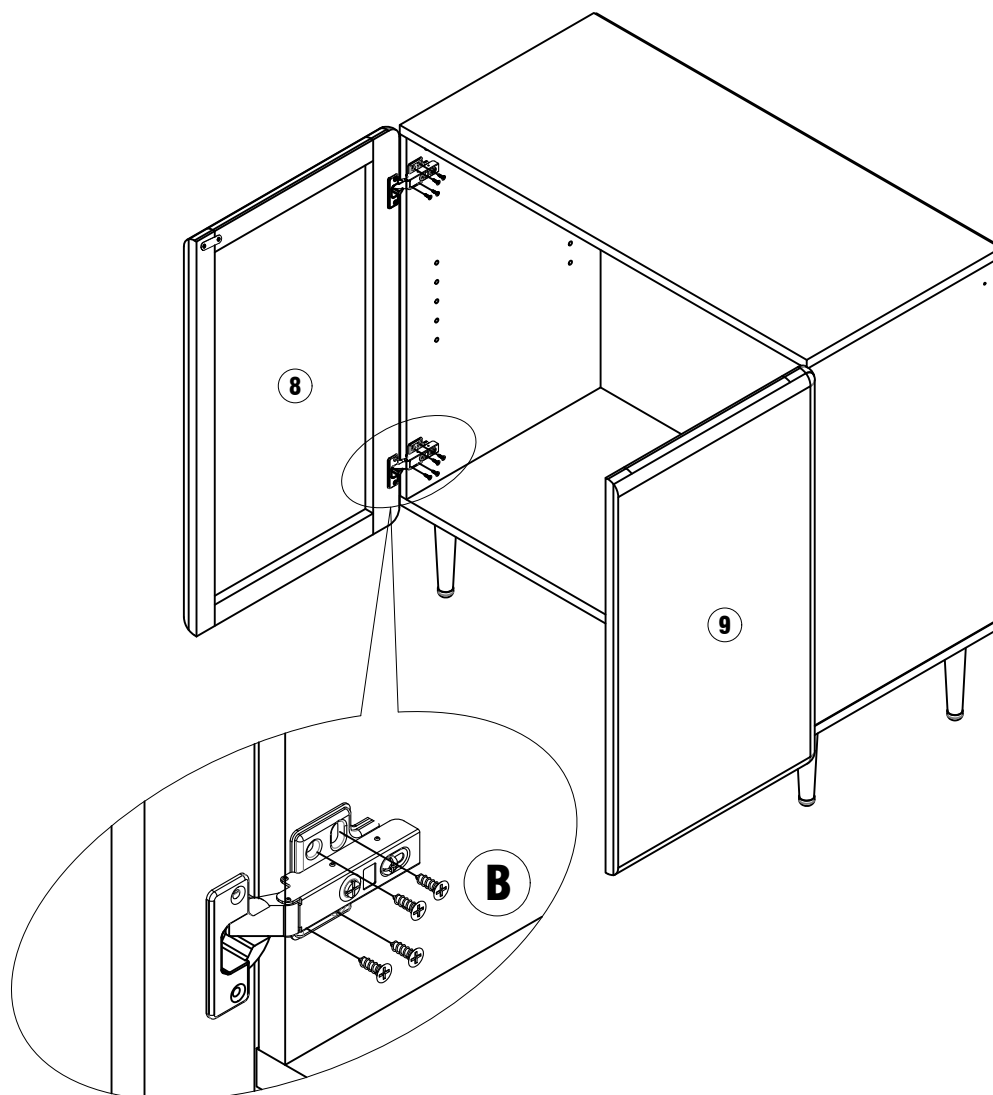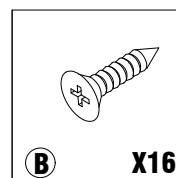

  STEP 10

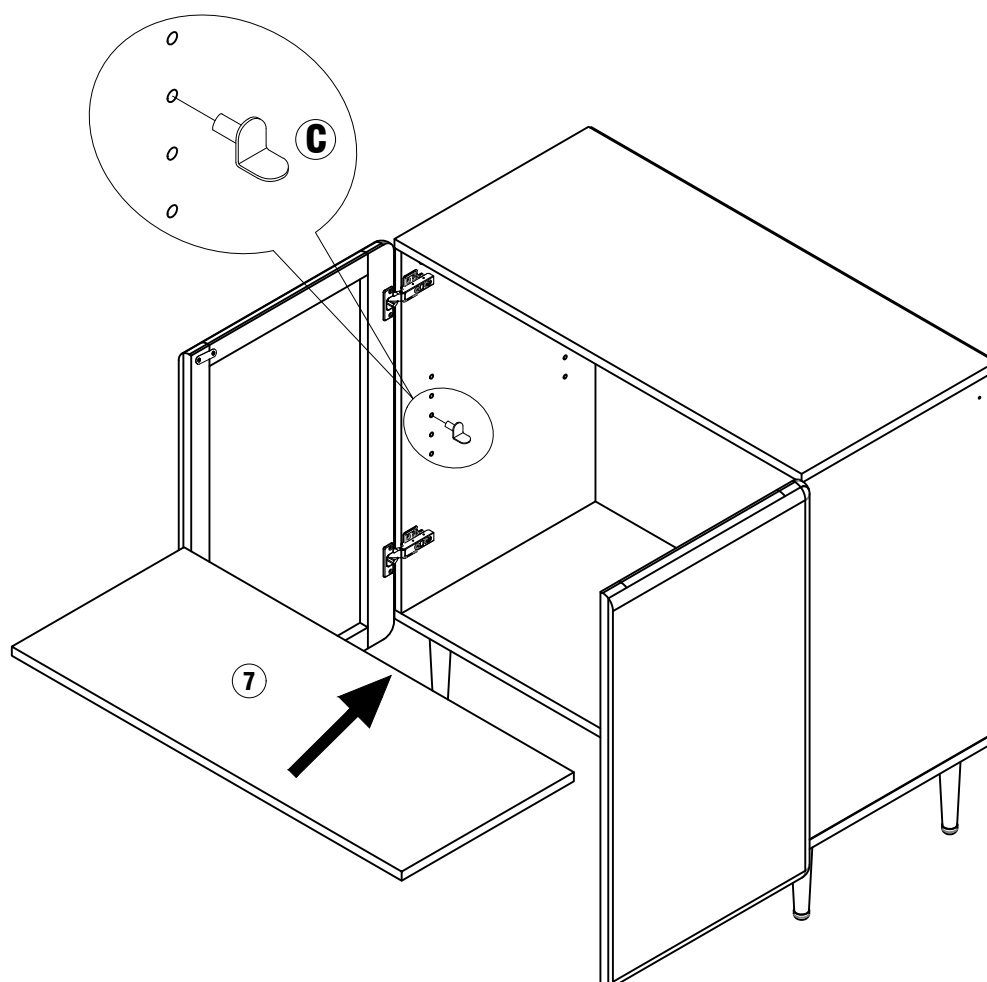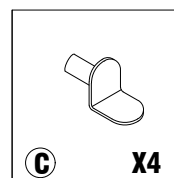

  STEP 11

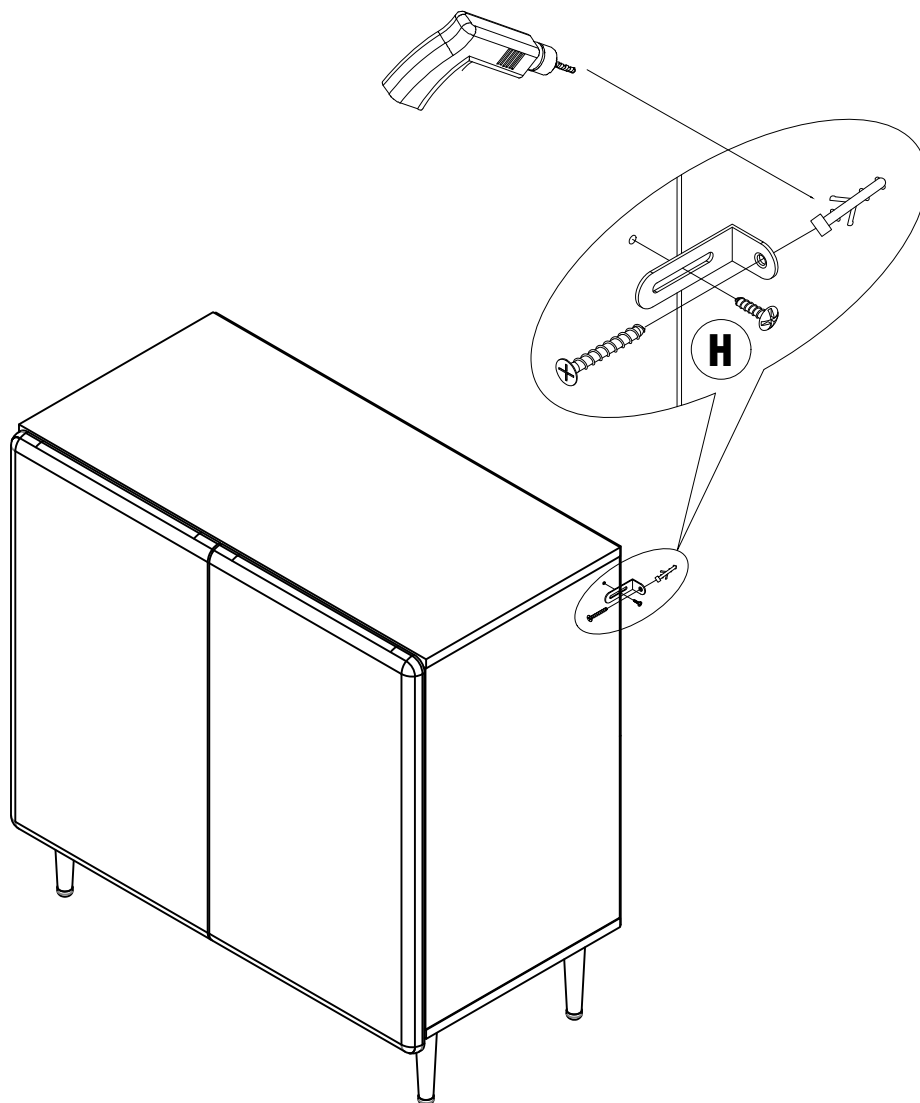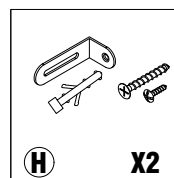

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*this is a permanent label.
Do not remove!*