

Hydroponic Grow Tower


ACCESSORIES FOR HYDROPONIC PLANTING SYSTEM



- ① Water Tank ② Hydroponic column ③ Flooding Funnel**
④ Water Level Gauge ⑤ Water hose Sprayer ⑥ Water Pump
⑦ Power Adapter ⑧ Planting Sponge

Tips:

1. When using this water pump, it must be placed inside the water.
2. If you choose our hydroponic tower with separate timer, please set the timer to be every 15 minutes ON and every 15 minutes OFF till the whole day 24 hours. Please keep our hydroponic tower powered on 24 hours a day.
3. When you assemble the grow pipes and the water sprayer, please align the protrusions and grooves, it is easier to assemble.
4. Our colonization cups don't need planting basket, Please use our 30*30*25mm sponges and put inside the cups. when you start planting, please use our sponges to make germination till the plants' root is about 5-7 CM, then transplant to the cups of our hydroponic tower. When you transplant the plants, please make sure the plant root must be soaked in the nutrient solution but the sponge must be hung in the cups, not soaked into the nutrient solution, please keep the sponge dry.

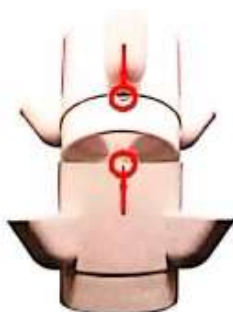

INSTALLATION PROCESS DIAGRAM



STEP 1
The protruding part of the upper layer is aligned with the groove part of the lower layer and spliced up and down.




STEP 2
Install connecting water separator and hose.




STEP 3
Put the water separator tube into the hydroponic column.



STEP 4
Connect the other end of the hose with the water pump, Put the water pump into the water tank.

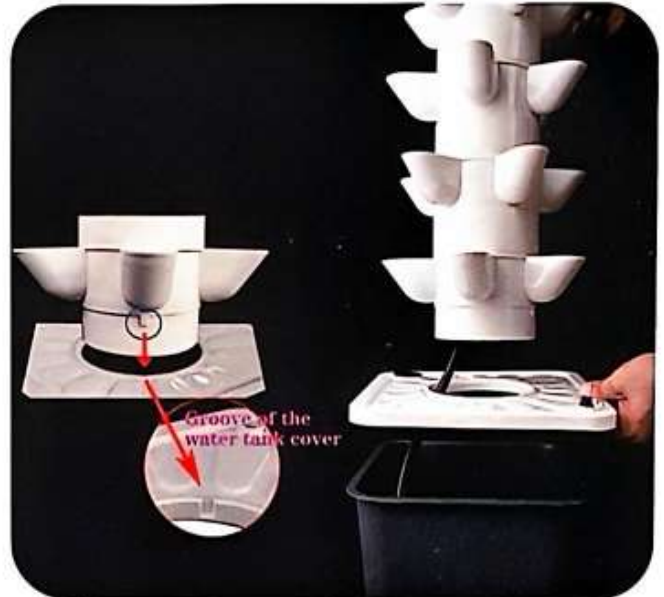

STEP 5
The protruding part of the upright column should be aligned with the groove of the water tank cover and installed downwards.

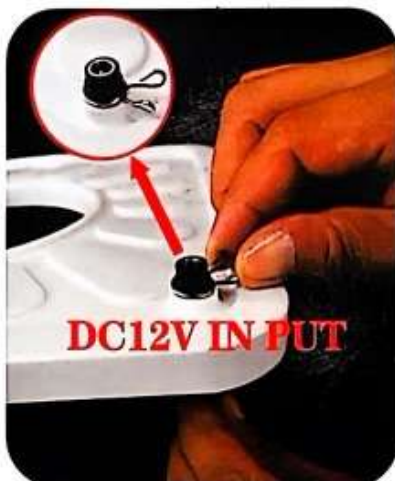

STEP 6
The DC plug should be threaded out from the bottom of the cover plate and then covered with a snap ring.



STEP 7
The water level gauge is placed into this hole of the water tank lid directly .



STEP 8
Installation is complete.