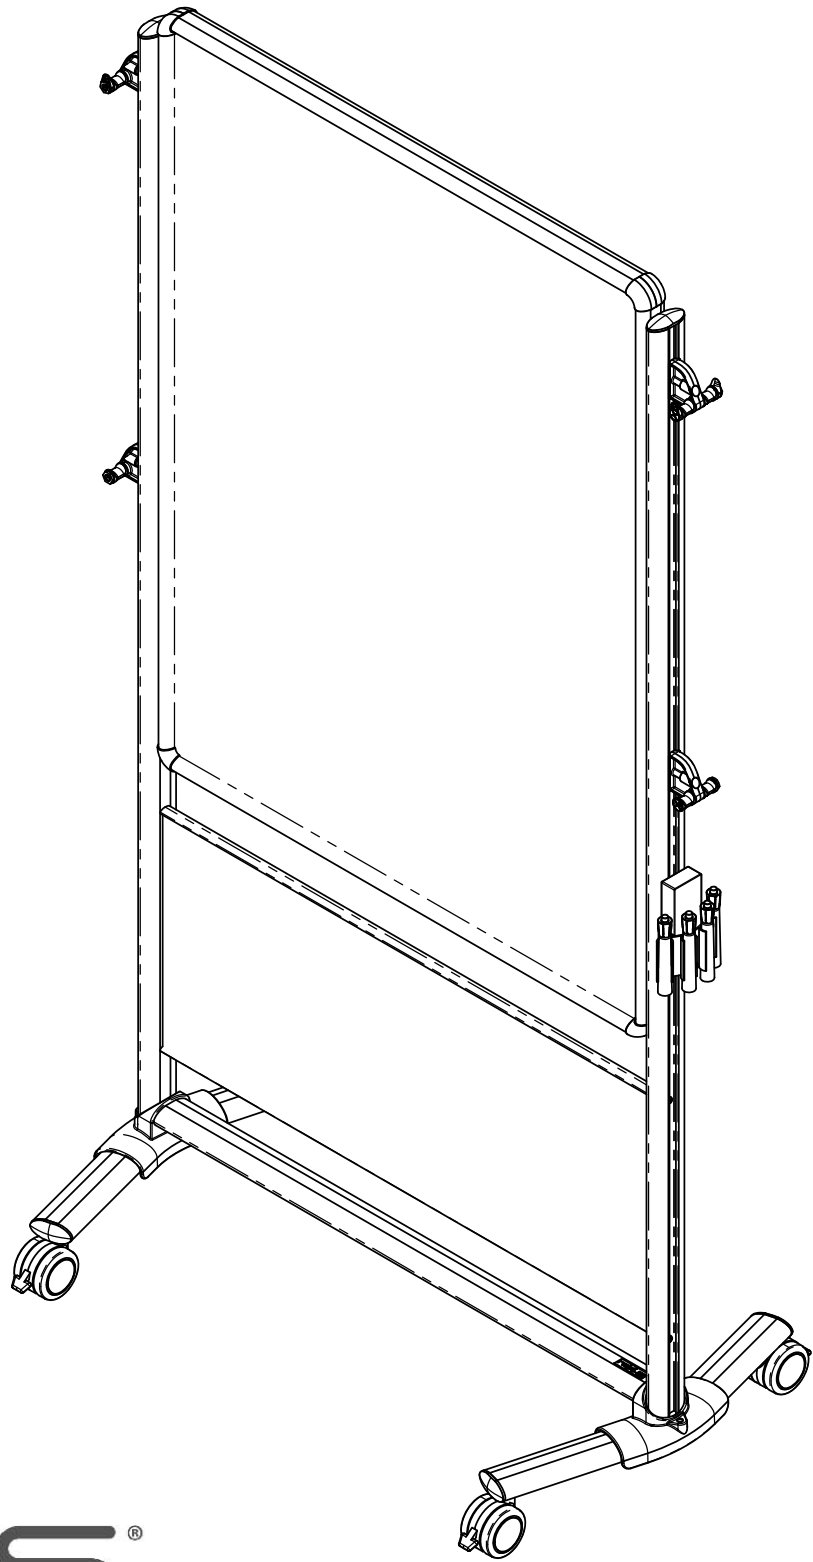 



EASEL AND IDEAWALL ASSEMBLY INSTRUCTIONS

Models

NEX203ME-CM, NEX203ME-EM,
NEX203ME-PM, NEX203ME-SM,
NEX206MW-CM, NEX206MW-EM,
NEX206MW-PM, NEX206MW-SM


 **Before discarding the packaging, inventory the components and fasteners. (Some may be taped to the foam packaging.)**

 FASTENERS AND HARDWARE

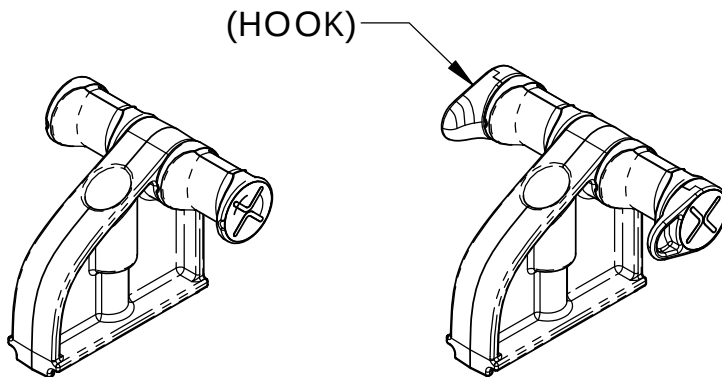


TABLET HANGER
2 EA.

 
**TABLET HANGER
(WITH HOOKS)**
2 EA.

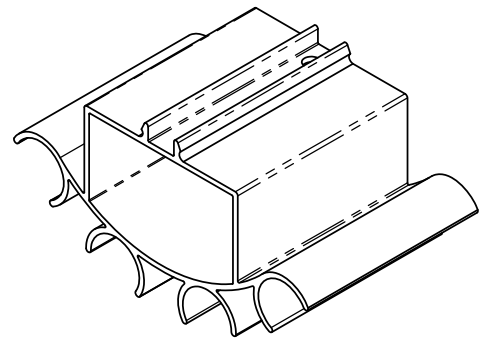


**MARKER/ERASER
HOLDER**
1 EA.

 

 **#10 X 2 1/2" PAN HEAD
MACHINE SCREW**
5 EA.



 **#10 X 1 1/2" PAN HEAD
TAPPING SCREW**
4 EA.



**#12 X 1" PAN HEAD
MACHINE SCREW**
8 EA.


RECOMMENDED TOOLS:

CORDLESS DRILL - 12 VOLT OR BETTER


#2 AND #3 PHILLIPS SCREWDRIVER BITS

 SCREWDRIVER BIT EXTENDER


EASEL AND IDEAWALL COMPONENTS

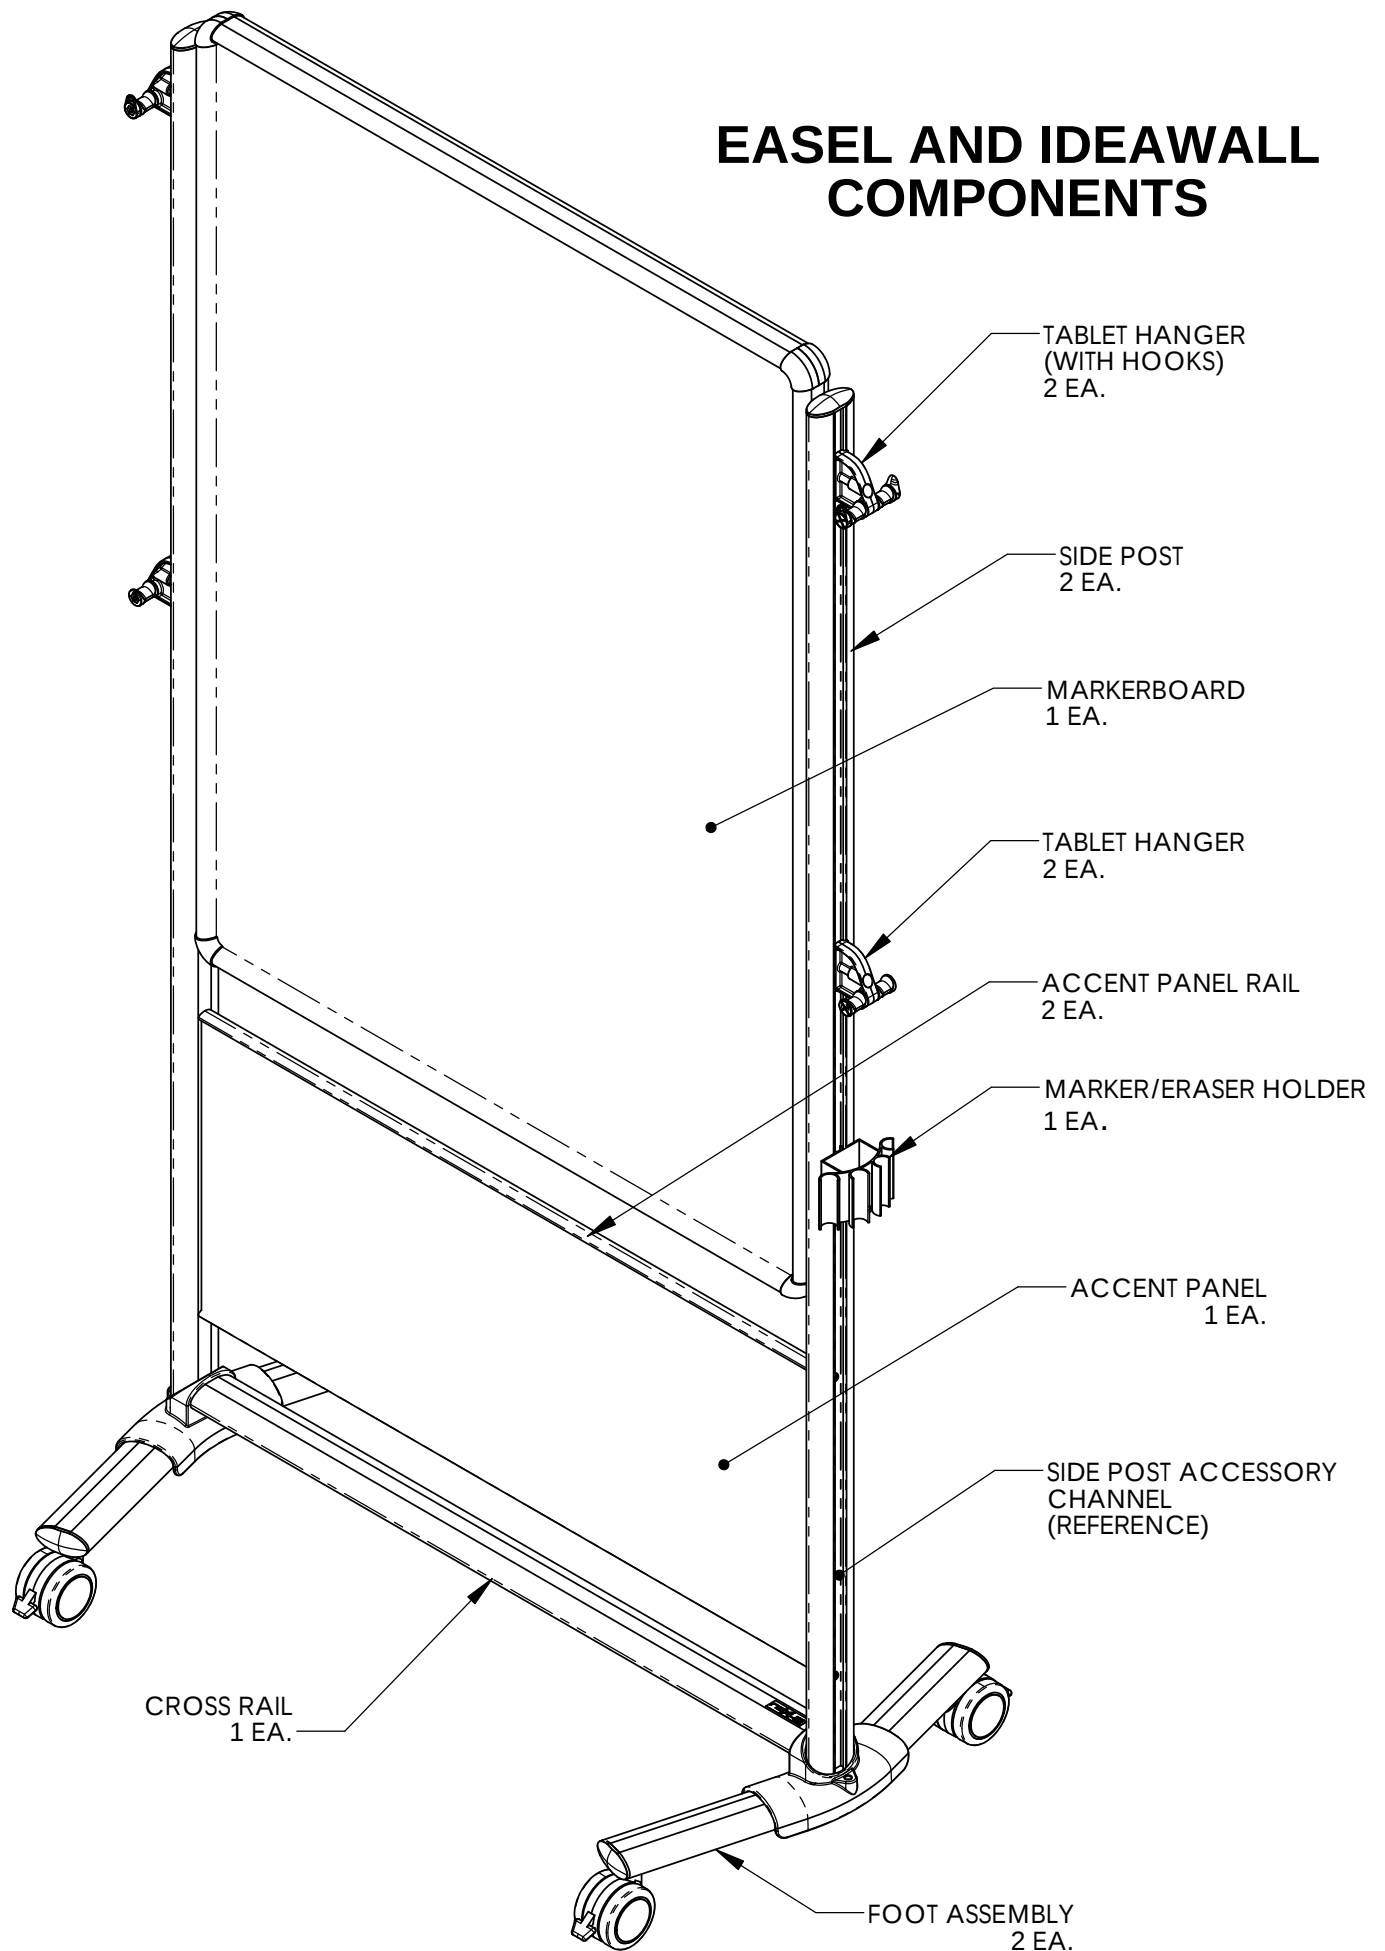

 
1. Insert the accent panel into the accent panel rails.

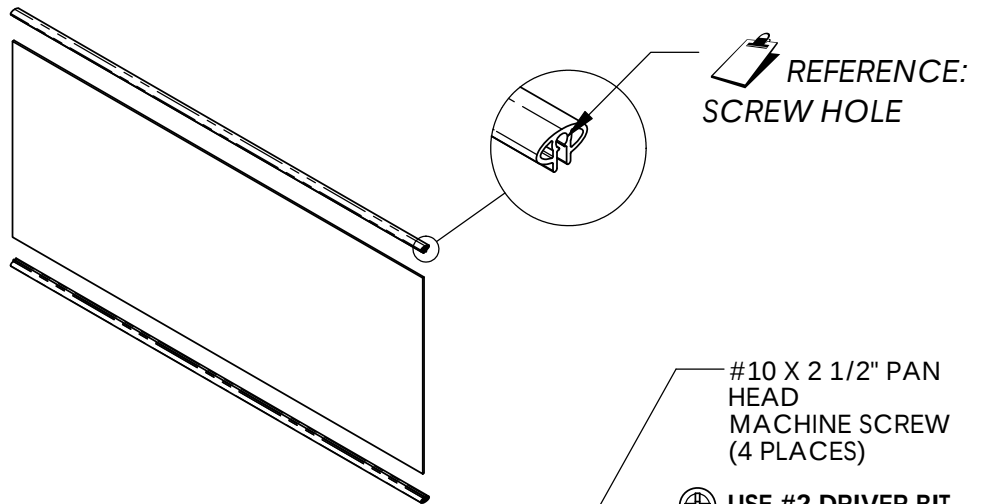

 2. Loosely attach the markerboard and the accent panel, with rails, to the side posts as shown.

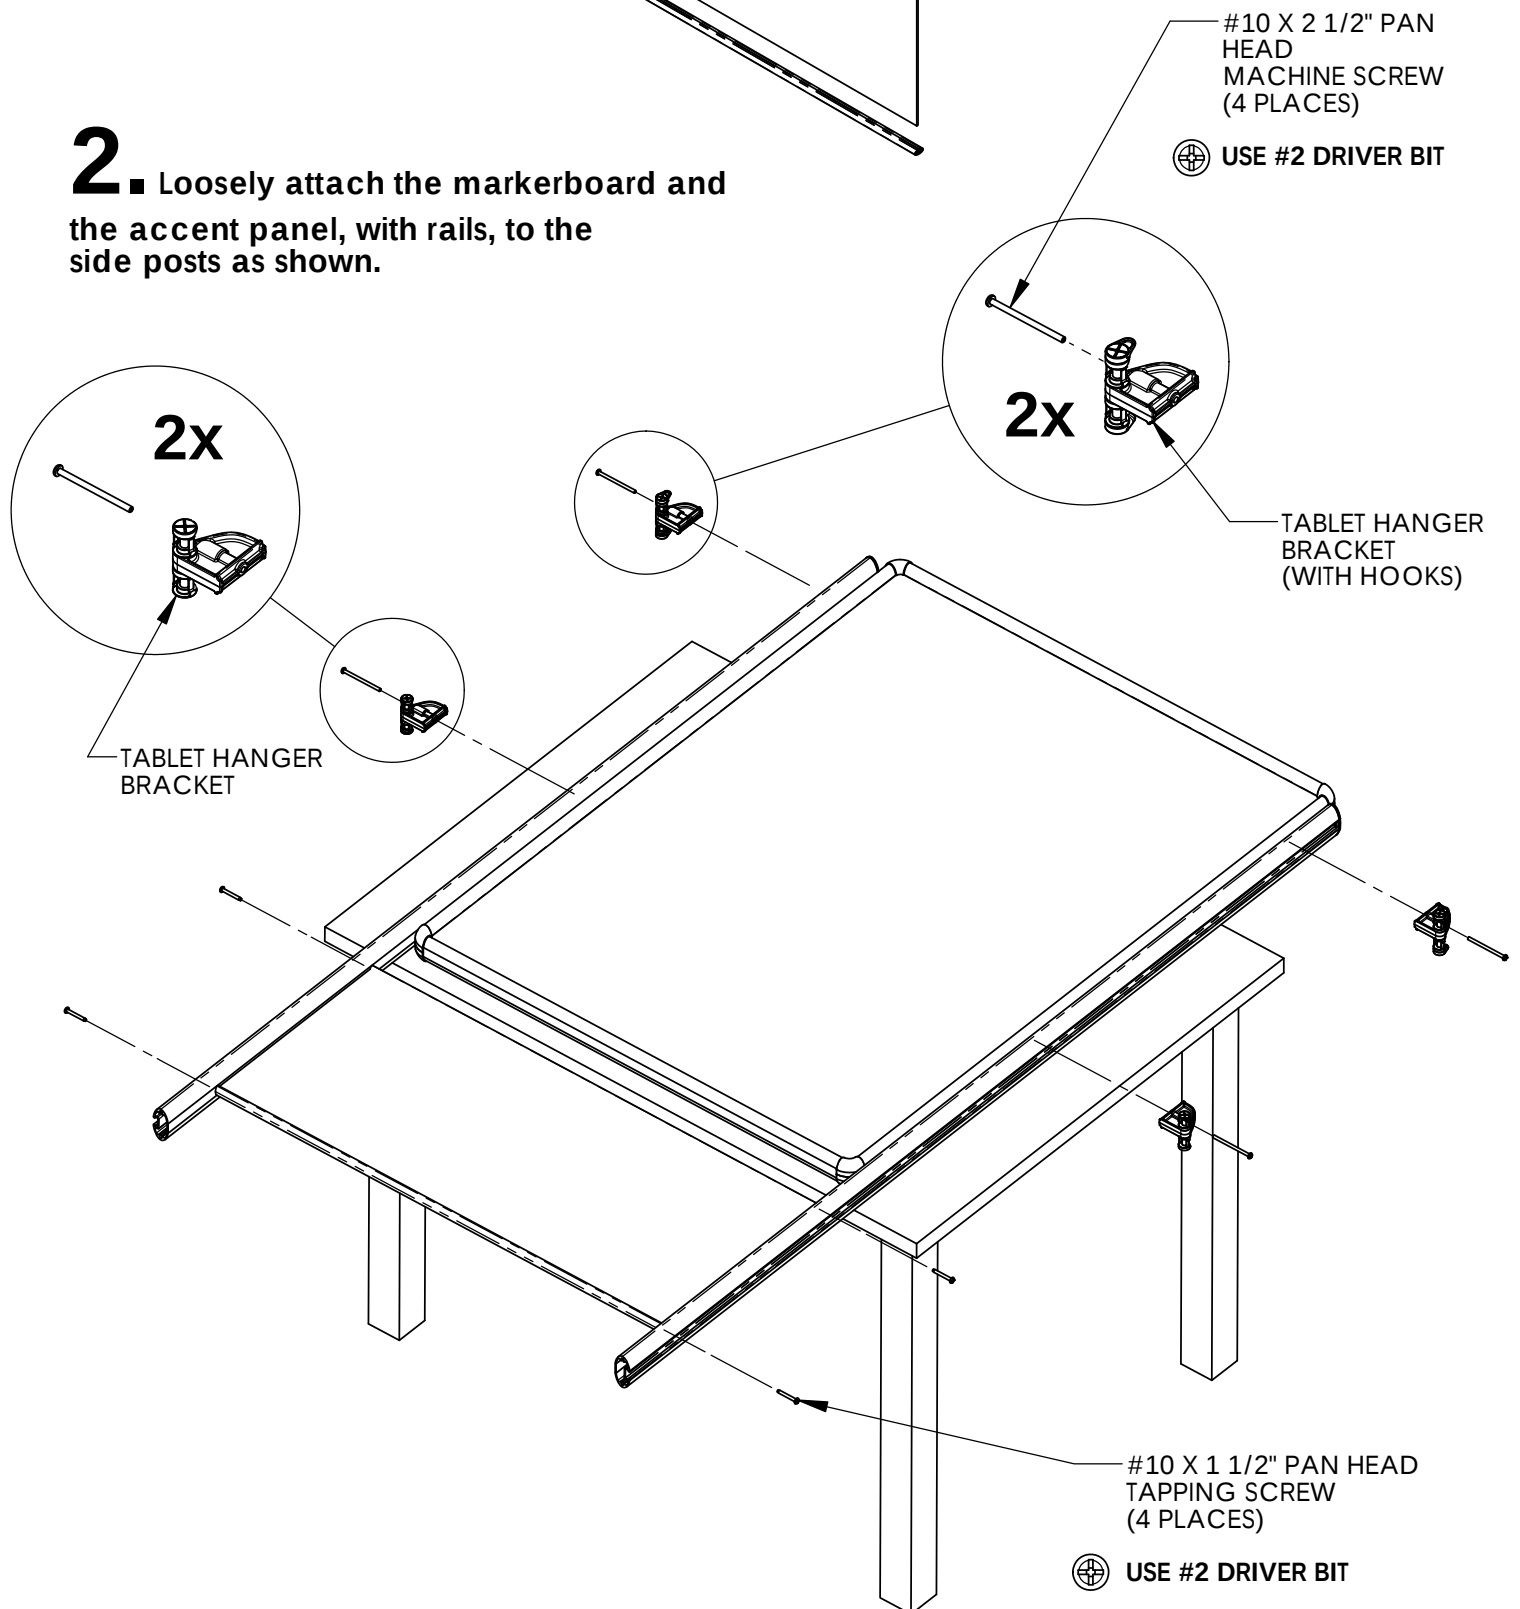


3. Attach the foot assemblies to the cross rail, as shown.

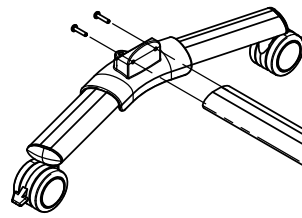 

INSTALL WITH
CHANNEL SIDE FACING
DOWN

 
ASSEMBLE THE FEET ASSEMBLY ON A
FLAT SURFACE, SO THAT THE CASTERS STAY LEVEL.

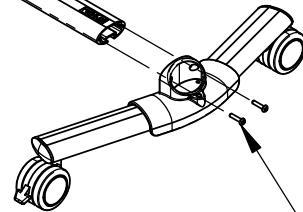

#12 X 1" PAN HEAD
MACHINE SCREW
(4 PLACES)

USE #3 DRIVER BIT
WITH A BIT EXTENSION

 4. Attach the feet assembly to the side posts, as shown.

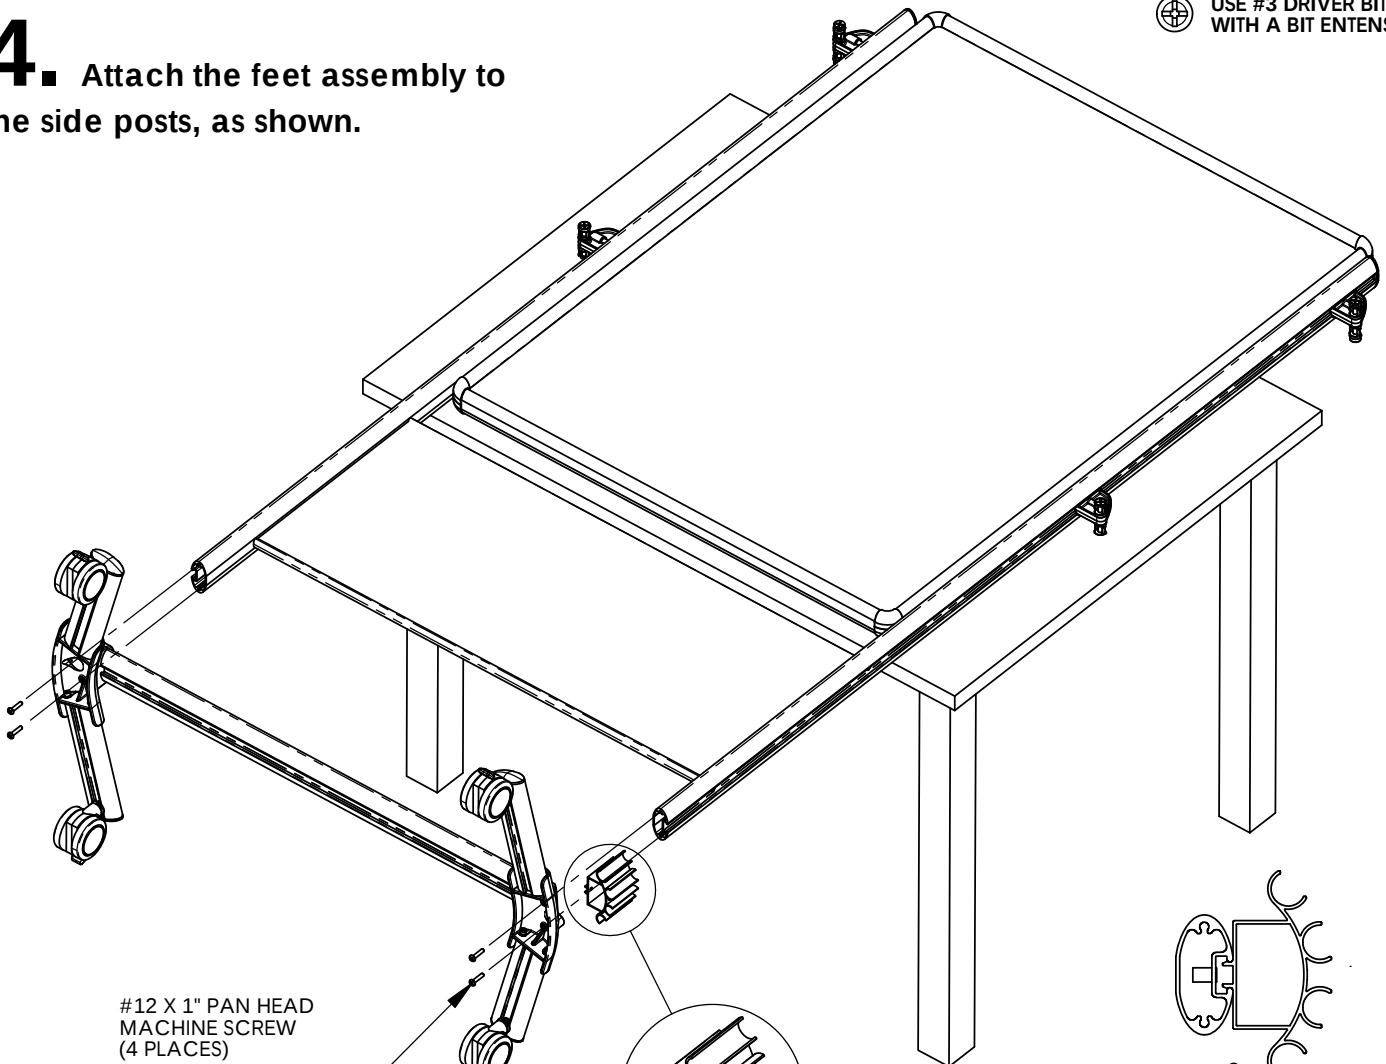


#12 X 1" PAN HEAD
MACHINE SCREW
(4 PLACES)

USE #3 DRIVER BIT

HOLE
ORIENTATION

 
SLIDE THE MARKER/ERASER
HOLDER INTO THE SIDE POST
ACCESSORY CHANNEL BEFORE
ATTACHING THE FEET ASSEMBLY.

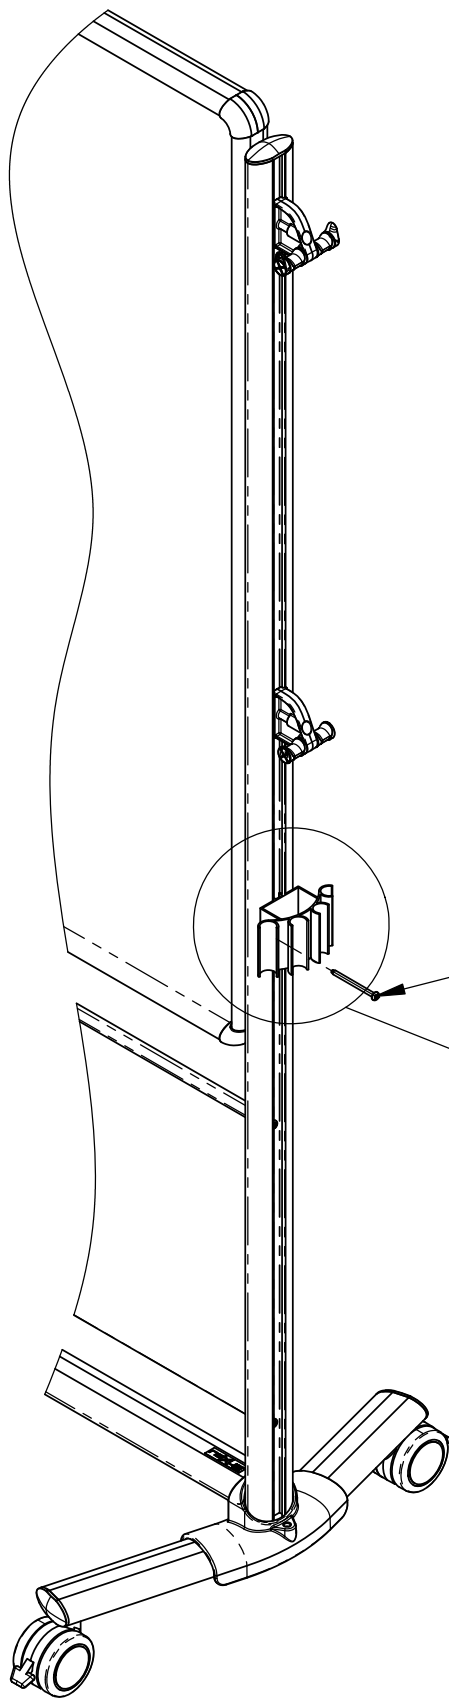

5. Slide the marker/eraser holder up into position above the accent panel and attach with the screw as shown.

#10 X 2 1/2" PAN HEAD MACHINE SCREW

 ⊕ USE #2 DRIVER BIT

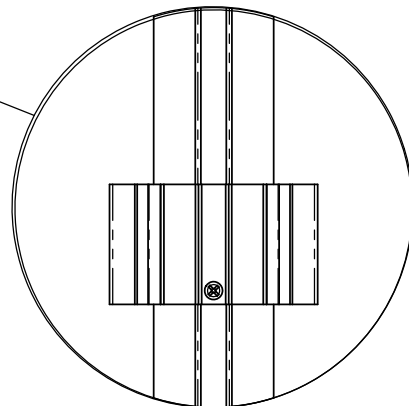

6. Tighten all screws to complete the assembly.