


PACKAGE CONTENTS

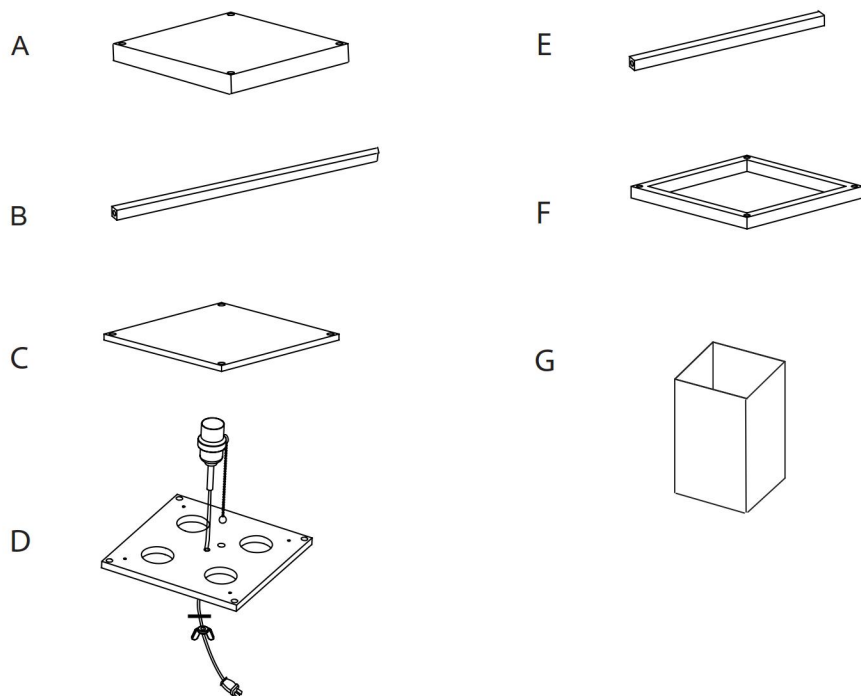

IMPORTANT SAFETY INSTRUCTIONS

Read and Save:

1. To reduce the risk of electric shock, this lamp has a polarized plug (one blade is wider than the other). The plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet reverse the plug. If plug still does not fit, contact a qualified electrician. Never use an extension cord unless the plug can be fully inserted. Do not alter the plug.
2. Do not install non-factory wiring or any other electrical components. Altering or modifying the lamp in any way will render the product unsafe.
3. Avoid laying objects directly over the power supply cord to prevent damaging or cutting the wire.
4. Keep curtains, shades, wall hangings and all other fabrics and objects away from the lamp shade, light switch and the light bulb.
5. Place the lamp on a stable, level surface in a location where the lamp will not be tipped over or bumped. Do not hang objects from the lamp shade, light switch or light bulb.
6. This lamp is approved for indoor use only.
7. Items displayed on the lamp shelves should be non-flammable.

H HARDWARE PACKAGE CONTENTS:

- I Round cushions x 4
- J Plastic caps x 4
- K Screws x 8
- L Double-sided screws x 12
- M Small plastic anchors x 4
- N Plastic zip ties x 2

Part	Description	Quantity
A	Bottom Board	1
B	Long Poles	12
C	Shelf Boards	2
D	Lamp Socket Board	1
E	Short Poles	4
F	Top Frame	1
G	Fabric Shade	1
H	Hardware Package	1

BULB REPLACEMENT (not included)

Use one 100 Watt maximum Type A bulb or CFL bulb equivalent.

DO NOT EXCEED RECOMMENDED BULB WATTAGE.

Do not use a halogen bulb.

Halogen bulbs operate at a higher temperature and pose a fire hazard.

1. Turn off and unplug the lamp before replacing the bulb.
2. Light bulb should never touch the shade.

CLEANING AND MAINTENANCE:

1. Clean using a mild cleaning solution and soft cloth.
2. Never use a rough cloth or chemical cleaners containing acids, abrasives or solvents.