

6.5 Ft Boho Tassel Umbrella

Brand Concept

Funsite, a top manufacturer and good designer, has decades of experience in manufacturing patio products. Each piece is sleekly designed, rigorously tested for durability, and assembly instructions have been standardized for simplicity from start to finish.

Funsite always looks forward to creating a freedom lifestyle for more people, and more opportunities to explore the unknown and explore the value of life!

Funsite hopes your leisure time delightful and comfortable by providing more patio products with reliable craftsmanship and durable material and 24 Hours service.

Our Service

30-day money back guarantee.

90-day warranty for quality-related issue with free replacement.

24 Hours Online Customer Service FOR YOU!

Reminder: Be sure to use your product as directed.

WhatsApp: 0086-13905747420

EMAIL: servicefunsite@gmail.com



Order Status



Installation Help




Gift Cards




New Product Discount

Part & Accessories

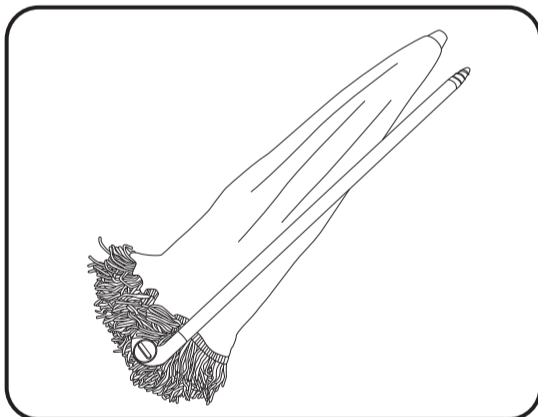

1 × Bottom Pole

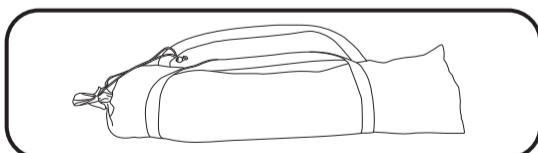

1 × Carry Bag

People Required: 1



Tools Required: None


Estimated Time: 2 minutes

Care & Maintenance


1. Once it's sufficiently buried into the sand, open the umbrella and tilt into the wind so the wind pushes the umbrella into the sand, instead of lifting it out. Keep in mind that the direction of the wind will change throughout the day, so make sure to change the tilt of your umbrella as well.
2. When adjusting the umbrella, make sure that no person or item are close to the umbrella. This is important to prevent injury or material damage.
3. Keep the umbrella away from fire; do not use it during extreme cold and heat, and severe weather like rainy, windy, snowy days, and hailstorms, etc.
4. Fabric might be color faded by a period of use, especially under strong sunlight.
5. Do not leave open umbrella unattended. If damage occurs, this is not covered by the warranty.

6.5 Ft Boho Tassel Umbrella


SET UP

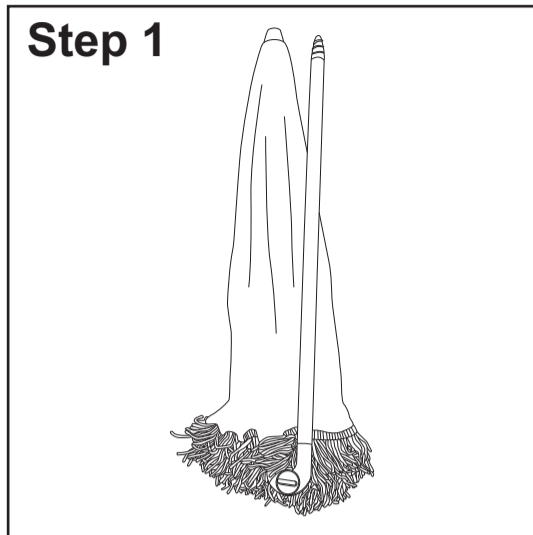


Step 1
Remove the tassel umbrella from the backpack. Please note that the **upper tube and lower tube are connected together**, please do not try to separate them.

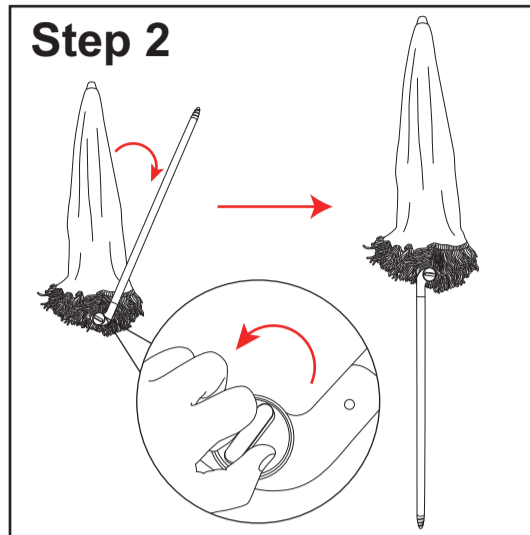


Step 2
Slowly turn the aluminum crank counterclockwise to open the folded umbrella pole. To avoid malfunction, do not over-turn the crank.

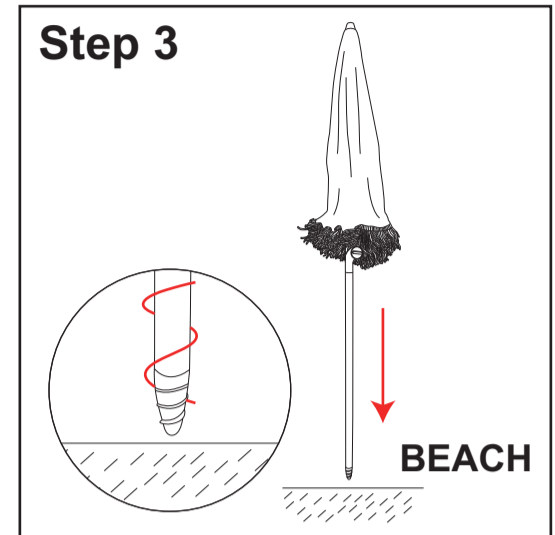

Step 3
Insert the wood bolt and twist it clockwise until the safety line reaches the sand. To avoid the umbrella broken, please twist the bolt in **DRY & SOFT** sand to the recommended safety lines.

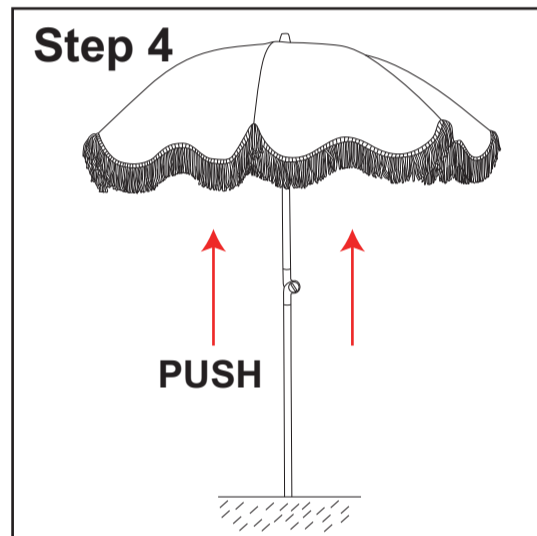


Step 4
Open the umbrella by pushing the runner upward until the runner reaches the top and locks into place.

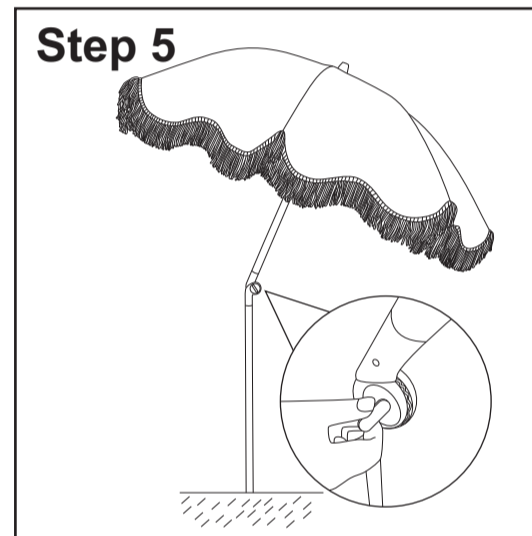


Step 5
The aluminum handle can be rotated to adjust the tilt at different angles. Notice: Need to align the teeth pattern of the aluminum handle, or the umbrella will be unstable.


TAKE DOWN

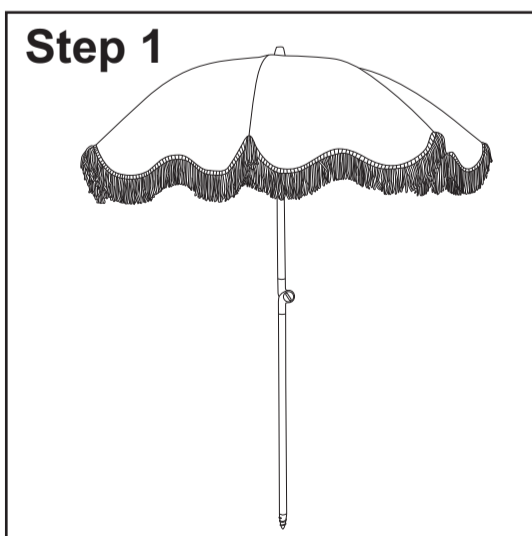


Step 1
Rotate the crank to the right. Hold it to straighten the angle.

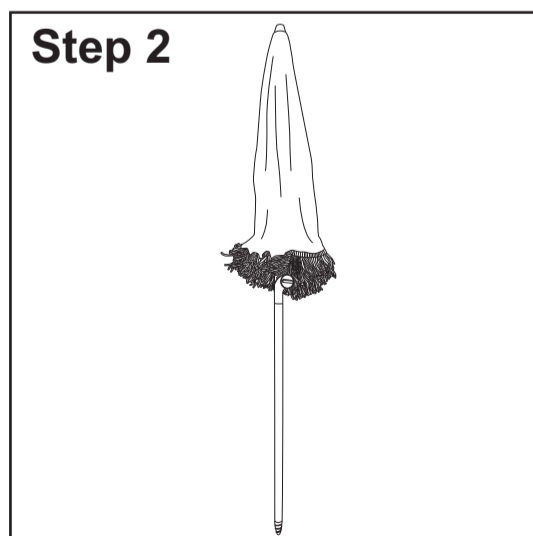

Step 2
Close the umbrella by pushing the runner downward and tie the strap on the canopy.

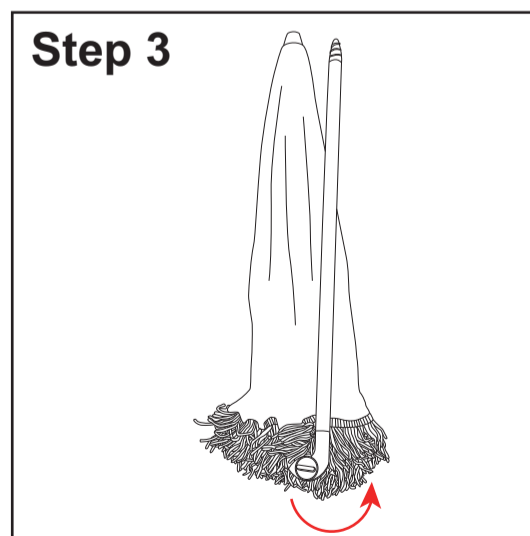

Step 3
Spin the crank counterclockwise slowly until it is fully folded.

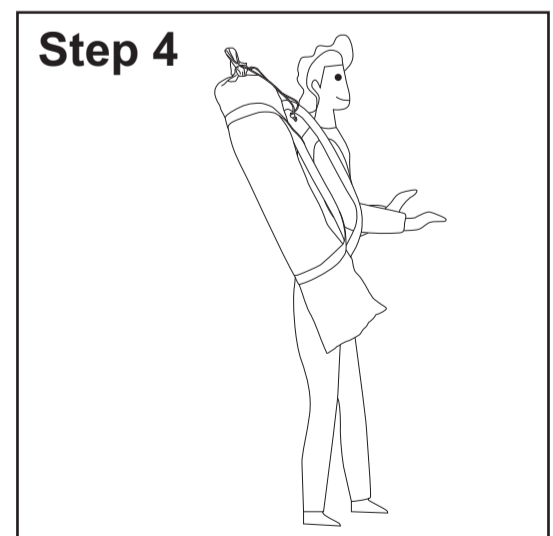

Step 4
Dust off excess sand and store away.

Warning: To avoid the potential dangers of suffocation, please keep all parts and packaging away from babies and children.