

 
 
 
 
 


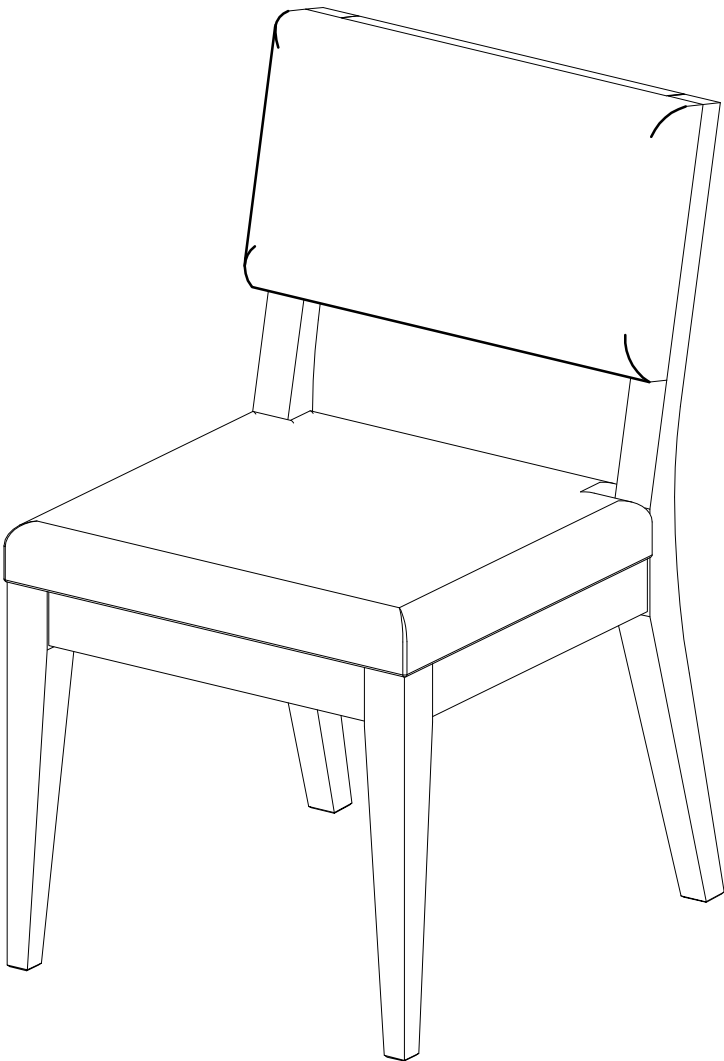



ASSEMBLY INSTRUCTIONS

PRODUCT NAME : CVFDR1239 DINNING CHAIR




PARTS LIST:			QTY
A	Back Leg		1pc
B	Seater		1pc
C	Front Leg		2pcs
HARDWARE:			QTY
D.	Ø8x 38mmL Machine Screw		3pcs
E.	Ø8 x 50mmL Machine Screw		4pcs
F.	Ø8 x 70mmL Machine Screw		4pcs
G.	Lock Washer		11pcs
H.	Flat Washer		11pcs
I.	Ø5 mm Allen Wrench		1pc

 STEP 1

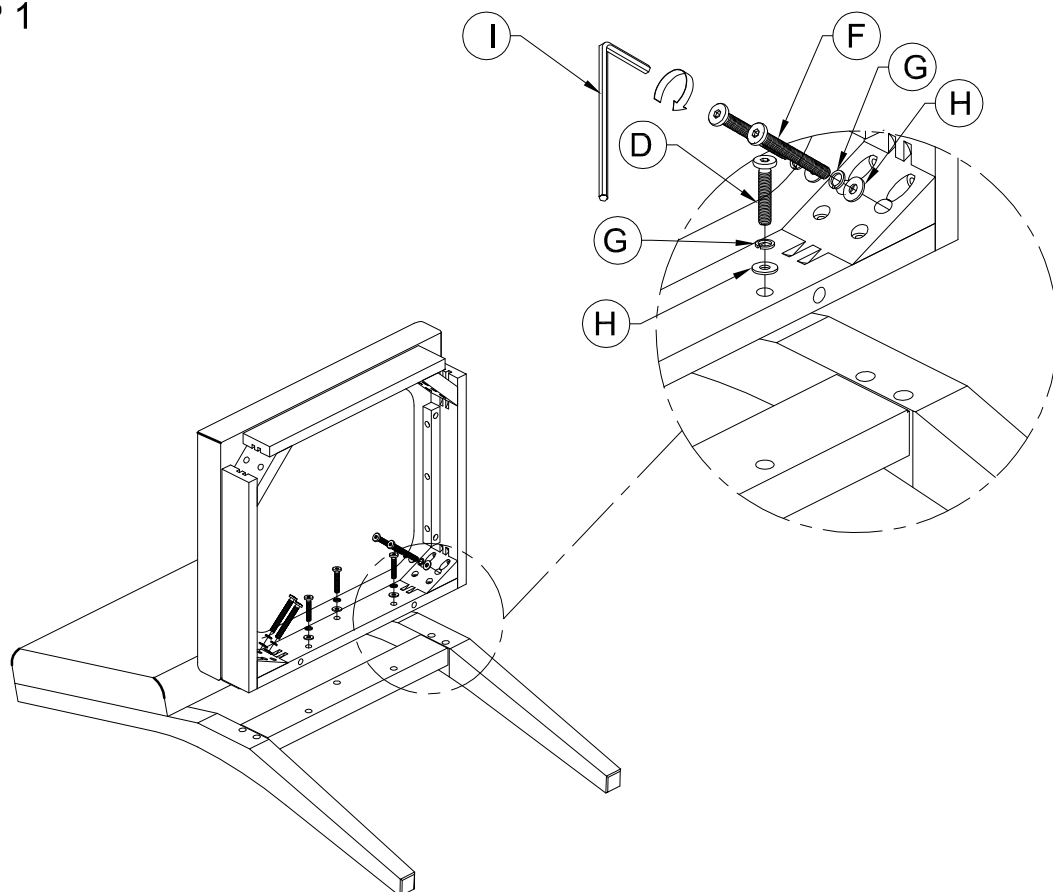


Assemble the back frame (A) and the seater frame (B) using hardware (D,G,F,H,I) as shown. Don't tighten the screws too tightly.

STEP 2

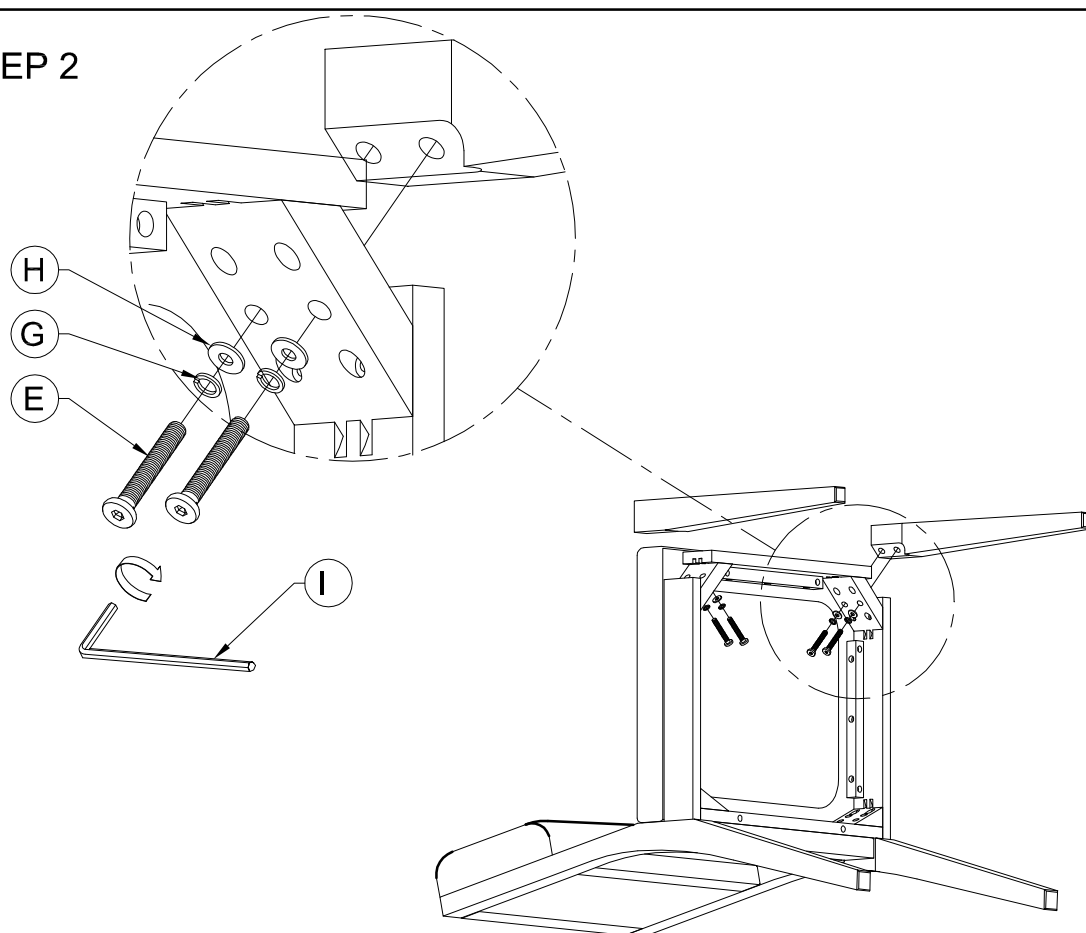

Installing set frame (B) to the leg (C) using hardware (E,G,H,I) as shown. Don't tighten the screws too tightly.

STEP 3

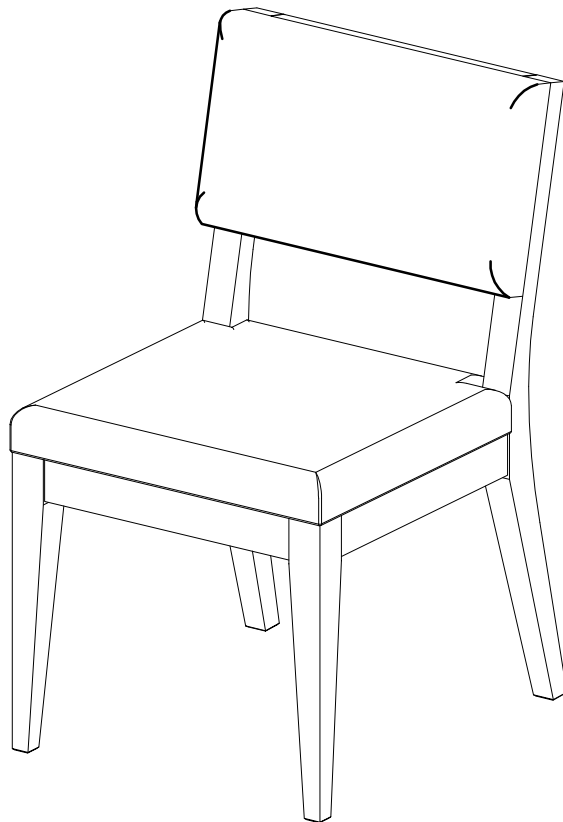

Place the dinning chair in a standing position and on a flatfom, adjust it to a stable state,finally tighten all screws tightly, assembly is complete.