

ITEM: CSL300

SKU: 88300

Instructions For Use Gas Heater

IMPORTANT:



Read these instructions carefully and familiarize yourself with the product before fitting the appliance to the gas cartridge. Review the instructions periodically to maintain awareness, Retain these instructions for future reference.

USE OUTDOORS ONLY!

NEVER cover the heater (gas cartridge) with wind shields, rocks or similar which may cause “ over heating” and damage the burner and cartridge.Overheating a gas cartridge by this means high danger.
Keep away from children.
Never leave the appliance unattended when lit.

1.SAFETYINFORMATION

- Ensure the appliance seal (O-ring in Fig.1) are in place and in good condition before connecting to the gas cartridge
- Do not use the appliance if it has damaged or worn seals.
- The appliance should be used outdoors only.
- The appliance must be used in a well ventilated location for the supply of combustion air and to avoid the dangerous building up of un-burnt gases.
- The appliance must be operated on a horizontal surface
- Make sure that no inflammable materials are near the gas appliance, see section 5 and 6.
- Always change or fit the gas cartridge in a safe place, only outside, away from any source of ignition such as naked flames, pilot lights, electric fires and away from other people.
- If you have to check the gas soundness of the appliance, do this outdoors. Do not check for leaks with a naked flame. Use soapy water only, for example.
- Never use an appliance which is leaking, damaged or which Dose not operate properly.
- Never leave the appliance unattended when lit.
- Do not hang any flammable above the working appliance.

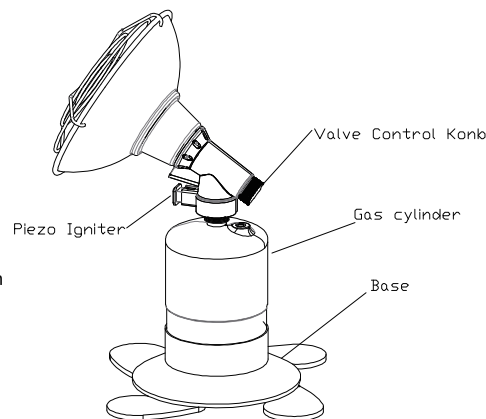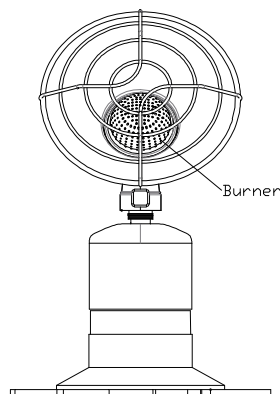

2. HANDLING THE APPLIANCE

Be careful not to touch hot parts of the appliance during, or after use. Keep young children away from the appliance.

Storage: Always uninstall the cartridge from the appliance when not in use. Store them in a safe dry place away from heat.

Do not misuse the appliance, or use it for anything for which it has not been designed

Handle the appliance with care. Do not drop it.

3. ASSEMBLING THE APPLIANCE

Shut the valve off completely by turning Valve Control Knob as far as possible (Fig.2).




Keep the cartridge upright and place the valve vertically on top of the cartridge. Gently screw the cartridge into the valve until it meets the O-ring of the valve.Be careful not to fit the cartridge cross threaded. Screw hand tight only.

Unfold the Folding Stand and fix onto the bottom rim of the cartridge (Fig.3).

If you have to check the gas soundness of the appliance, do this outdoors with warm soapy water only, applied to the joints and connections before turning on the valve. Any leakage will show up as bubbles around the leakage area. If you are in doubt or you can hear or smell gas, do not attempt to light the appliance. Uninstall the cartridge and contact your local dealer.

Ensure the heater is free of soot.

Ensure the heater is standing on the level and secured surface before the appliance is now ready for use.

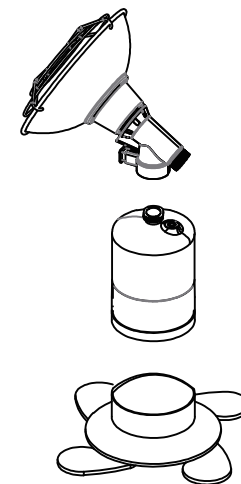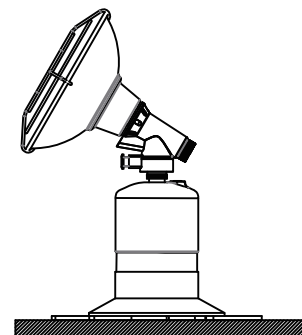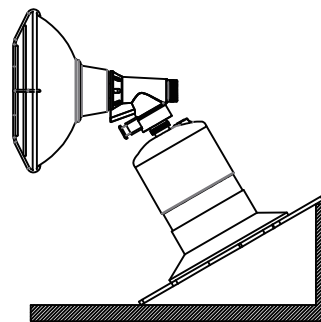

4. OPERATING THE APPLIANCE

Always operate the appliance on firm level of surface.

Stay behind of the appliance, use right hand to adjust the Valve Control Knob(Fig.4).

Open the gas by turning the Valve Control Knob anti-clockwise approximately 1/4 cycle or more.Use a long match approaching from lower front of the Burner,or press the Piezo Igniter (if applicable for one or more times, until the Burner ignited (Fig.5).

Adjust the size of the flame by turning the Valve Control Knob.
After lighting, operate the appliance upright, Flaring may occur if the appliance has not been fully warmed, or if it is moved carelessly.

After use, ensure that the valve is fully shut by turning the Valve Control Knob to the hand-tight end of clockwise.

It must be ensured that the minimum distance of the appliance at least **500mm** away from the inflammable materials, **500mm** away from the wall, to avoid a fire hazard.

Do not touch the appliance until it totally cools down.
Disassemble the valve and Folding Stand from gas cartridge by carrying out the steps shown in the reverse order.

5. CHANGING THE CARTRIDGE

Shut the valve fully and the Burner is extinguished without other flame nearby. Ensure the appliance cools down totally before uninstall the cartridge from the valve.

Check if the cartridge is empty by shaking to hear the noise made by liquid gas before changing a new one. Do not discard the cartridge not empty. Please disposal according to the relevant laws and regulations].

6. MAINTENANCE

If gas pressure drops or the gas will not light. check if there is gas left in the cartridge.

7. ROUTINE SERVICE AND MAINTENANCE

Always ensure that the O-ring sealing is place and in good condition. Always check this each time prior to fitting the appliance. Never use the appliance if it has the damaged or worn O-rings.

8. SERVICE AND REPAIR

Never attempt any other maintenance or repair
Never modify the appliance. This may cause the appliance to become unsafe.


9. SPARES AND ACCESSORIES

Be careful when fitting spare and accessories. Avoid touching hot parts.

10. BASIC PARAMETER

Product Name	Gas Heater
Model	CSL300
Gas Type	propane
injector size(mm)	0.2
input (btu/Hr)	6500BTU

Gas Heater

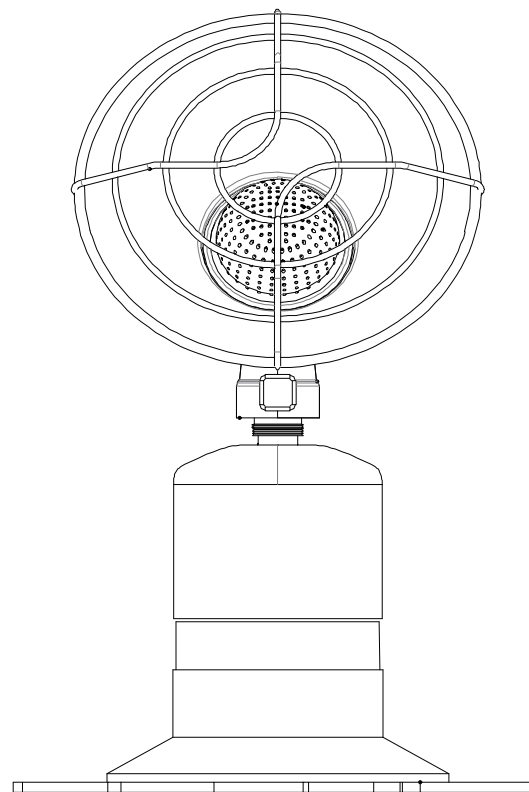

USE OUTDOORS ONLY

Toll Free Number: 1-800-719-8199

Email: service@nuukusa.com