


- 1: Put the bulb (MAX 100W) into bulb holder
- 2: Put the Harp **A** to the base, and add **B** to harp
- 3: Put the lampshade **C** into the harp **A**, add **D** on the top of harp.
- 4: Put the top **F** on the harp.
- 5: If your bulb not working, please try new bulbs, and if it still doesn't work, please try changing the fuse in the plug..
- 6: If you meet any problem, please contact with us


E-mail : simon@werfactory.com

<http://www.china-lamp.org>

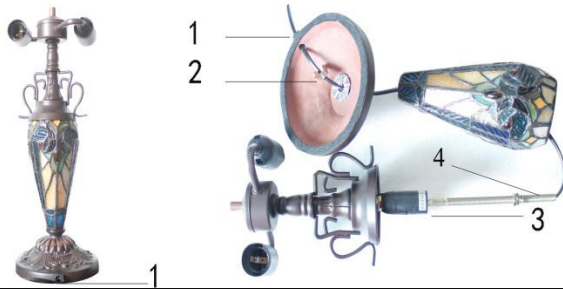

HOW TO CHANGE BULB INSIDE OF THE BASE?


- A: Use the small screwdriver loose the black plastic srew (1) so that the wire can go through the hole easily.
- B: Loose the Screw (2) in the middle of bottom from the pole (4).
- C: Take the glass from the base and you can easy find the bulb (3) , and change the bulb easy.
- D: USE SES bulb inside the base (MAX 40W)

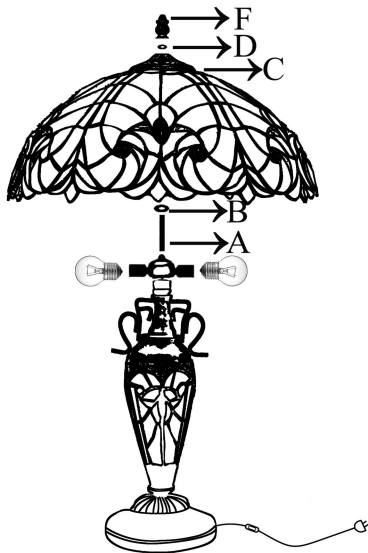

- 1: Put the bulb (MAX 100W) into bulb holder
- 2: Put the Harp **A** to the base, and add **B** to harp
- 3: Put the lampshade **C** into the harp **A**, add **D** on the top of harp.
- 4: Put the top **F** on the harp.
- 5: If your bulb not working, please try new bulbs, and if it still doesn't work, please try changing the fuse in the plug..
- 6: If you meet any problem, please contact with us

E-mail : simon@werfactory.com

<http://www.china-lamp.org>

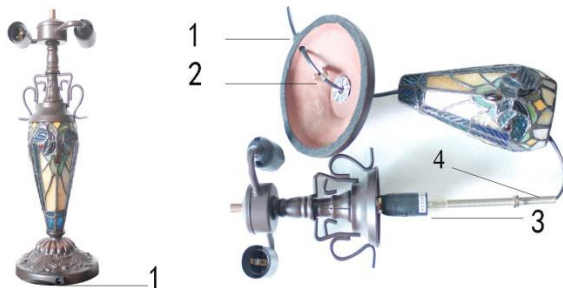

HOW TO CHANGE BULB INSIDE OF THE BASE?

- A: Use the small screwdriver loose the black plastic srew (1) so that the wire can go through the hole easily.
- B: Loose the Screw (2) in the middle of bottom from the pole (4).
- C: Take the glass from the base and you can easy find the bulb (3) , and change the bulb easy.
- D: USE SES bulb inside the base (MAX 40W)