 


260520

Assembly Instruction

BED144A-135S/BED144A-150S

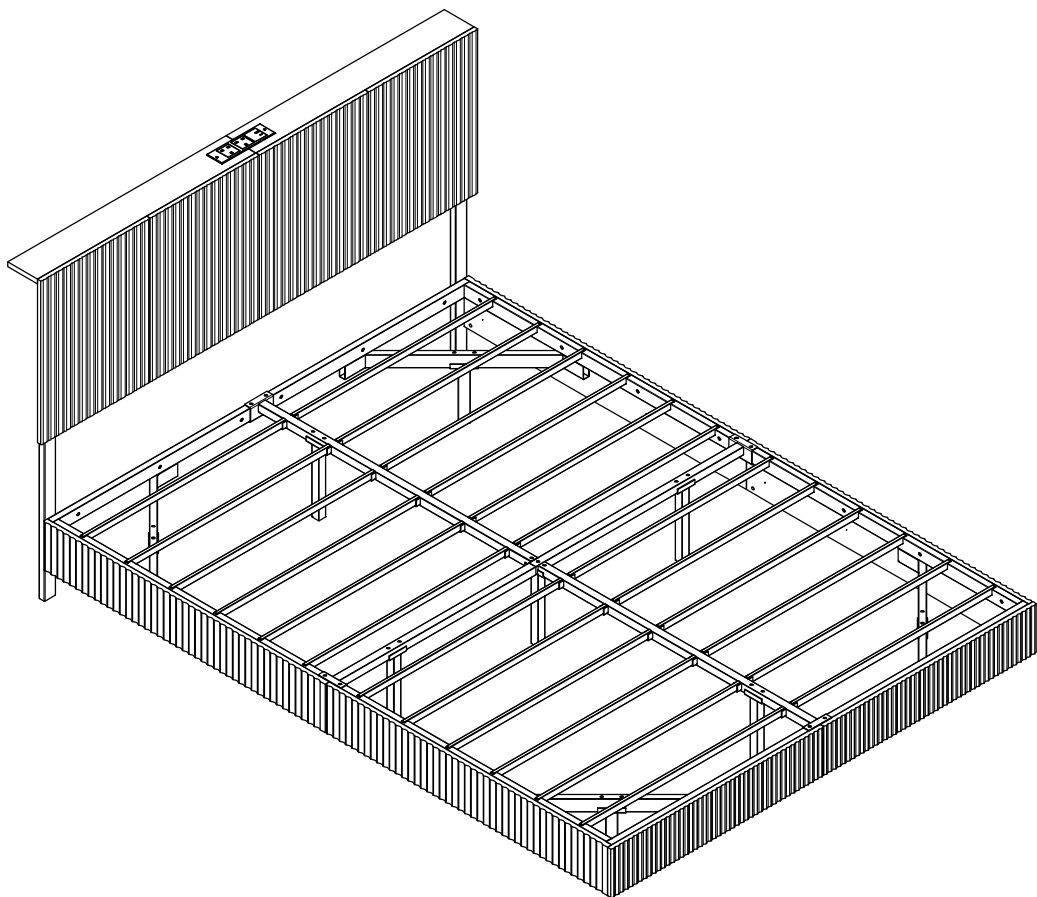

General Guidelines

- Please read the following instructions carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us if further information or assistance is needed.

 
Notes

- The product is intended for indoor use only. It must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to the product may occur if the product is used outside of its intended purpose and/or if it has been changed/modified from its original design. The seller does not assume any responsibility or liability for injury or damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Assemble the item on a spacious surface and avoid placing the unwrapped product directly on the ground to prevent damage.
- Do not stand or sit on the wooden boards.
- Wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Match each part and fitting based on the part number in the manual.
- If a part does not match the fitting, please check the manual for clarification.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes, then tighten them one by one.
- Periodically inspect the screw tightness while the product is in use. Retighten if necessary to ensure structural integrity.
- If you accidentally spill water or any other liquid on the surface, immediately wipe it clean with a dry towel.
- Keep the product away from sharp, pointed objects and corrosive substances to prevent damage.
- Place the item on level, solid ground during use.


Warnings

- During assembly, keep all small parts out of the reach of children, as they may be fatal if swallowed or inhaled.
- Children should not climb or play on the product to avoid tipping over and causing serious injury.
- To avoid the potential danger of suffocation, keep all packaging materials (film, plastic bags, foam, etc.) away from babies and children.
- Do not shake or move the product violently during use to avoid tipping over.


Part list

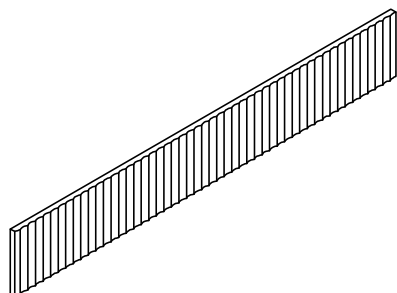


①X4

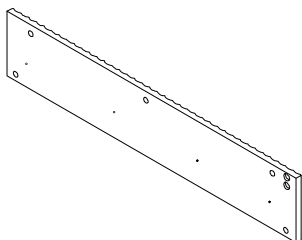 


②X1 L

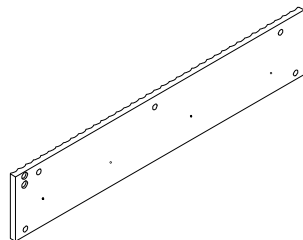 


③X1 R

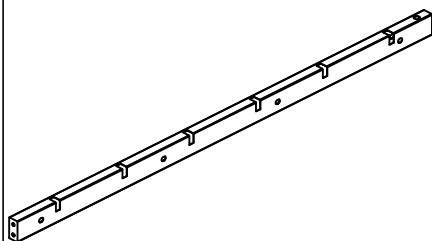 


④X2

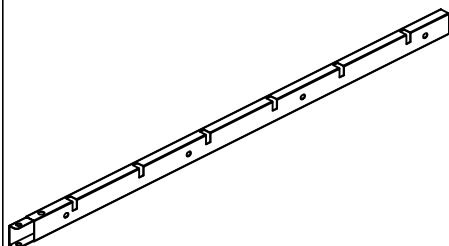 


⑤X2

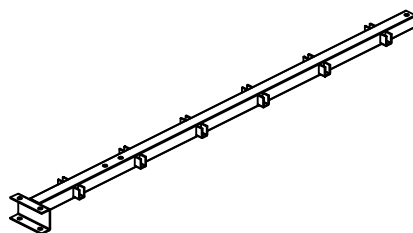 


⑥X2

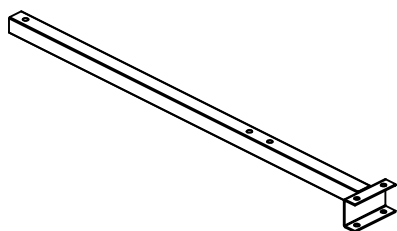 


⑦X1

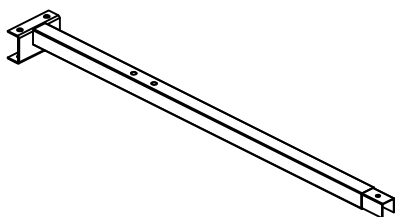 


⑧X1

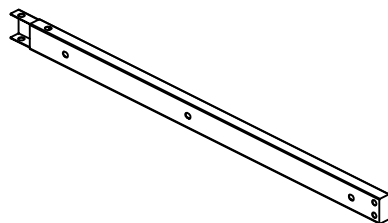 


⑨X2

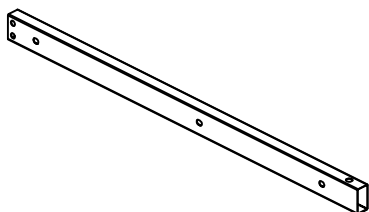 

⑩X2

 


⑪X4

 


⑫X4

 Part list




⑬ X4

 


⑭ X1



 
⑮ X2

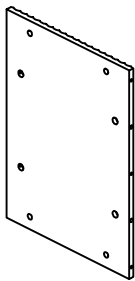


⑯ X2

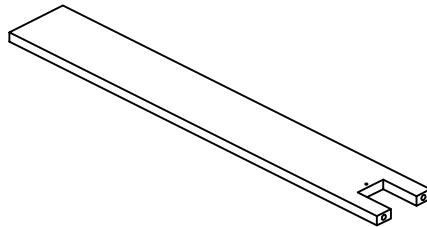 

⑰ X2

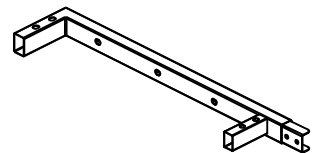 


⑱ X1

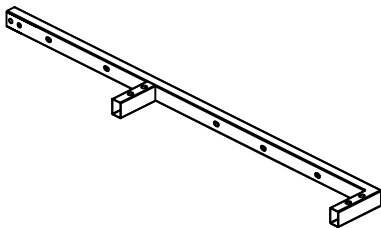 


⑲ X1



 
⑳ X2

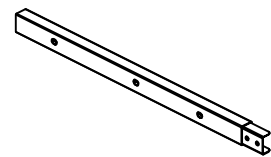

㉑ X1

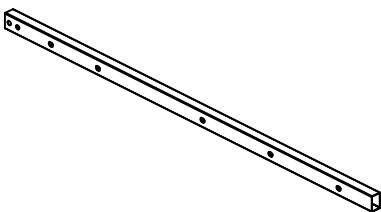 


㉒ X1

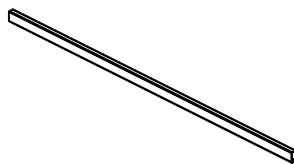 


㉓ X24

 Hardware list

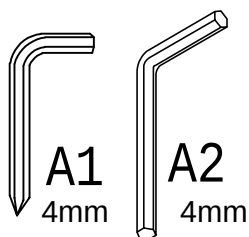

 (A) X1




(B) X8+1

Not for wood



 
(C) X23+2

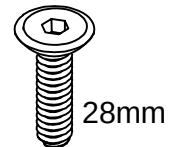


(D) X42+5



 (E) X18+2

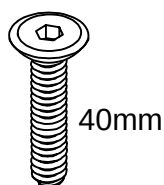

 
(F) X8+1

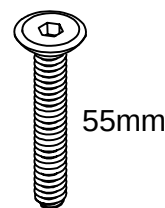

(G) X28+2



 
(H) X4



(I) X3



 (J) X11+1

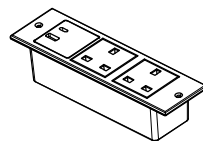



(K) X1




(L) X2



  Remote control X1



 
Please remove the plastic film here before using the remote control.



(N) X24+6




 (O) X12+2

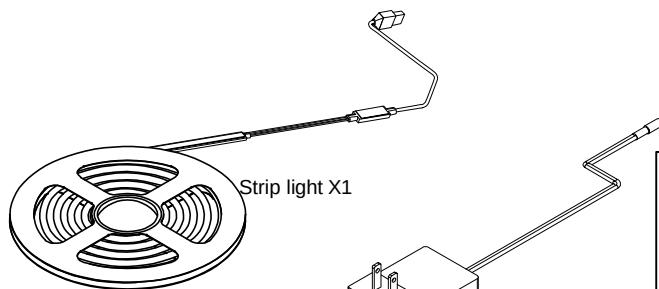

(M) X1

 
Plug X1

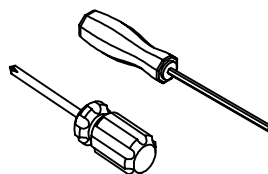

(Q) X1



 
(P) X6+1

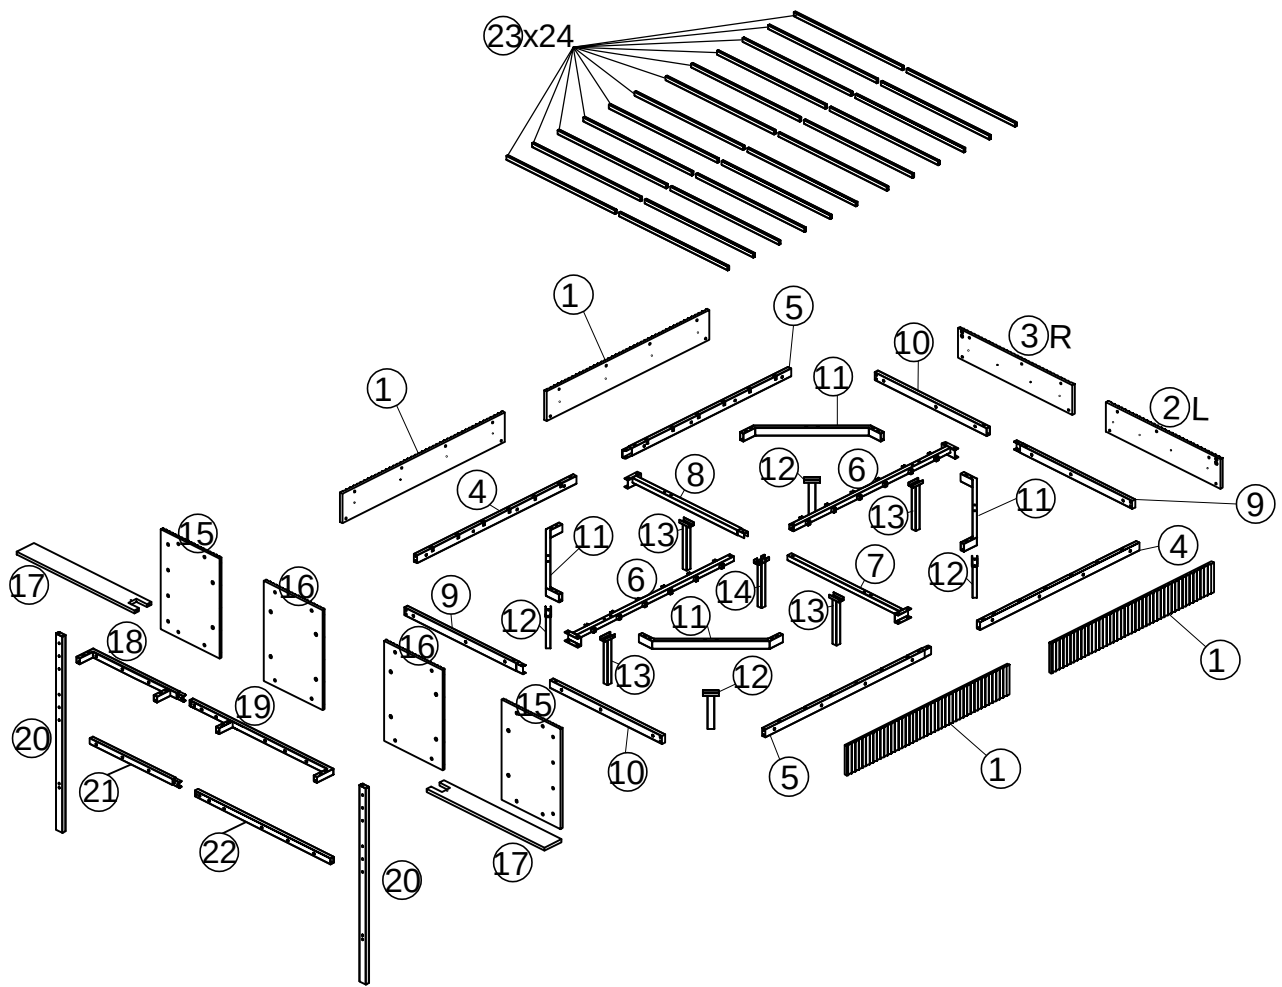

1



 Note: For Part 9 and Part 10, ensure the flat side faces upward and the side with holes faces downward.


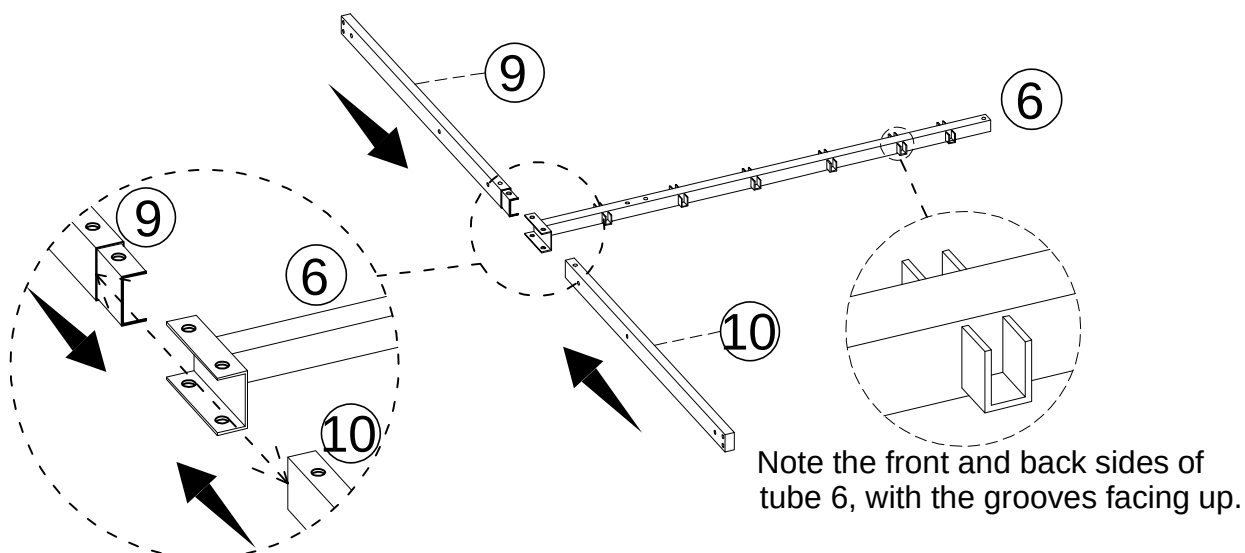


STEP X2

2




  Note: For Part 9 and Part 10, ensure the flat side faces upward and the side with holes faces downward.

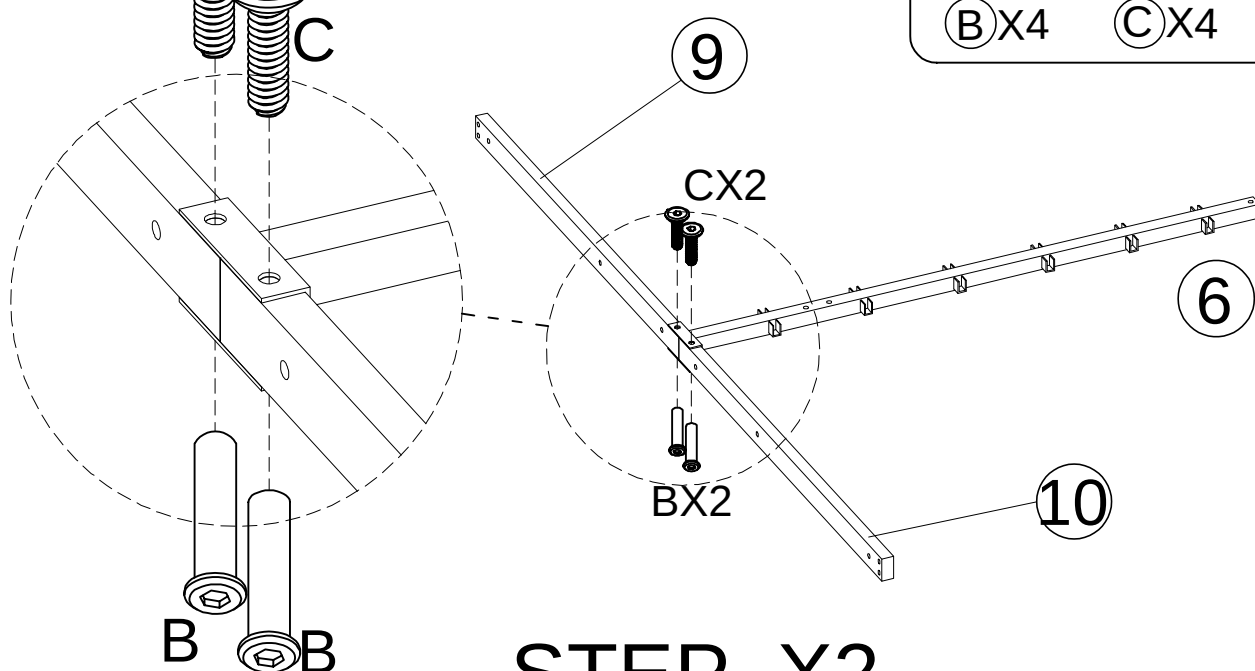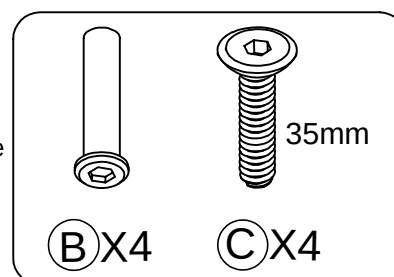


STEP X2

 3

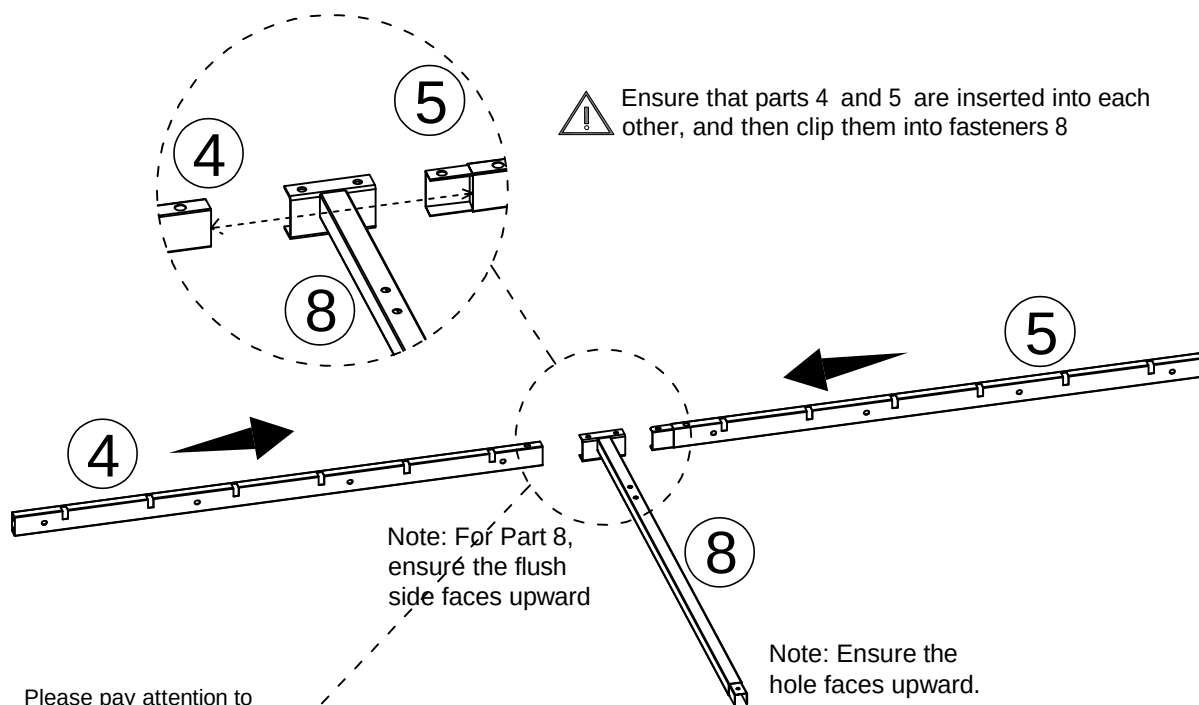


Please pay attention to this direction.

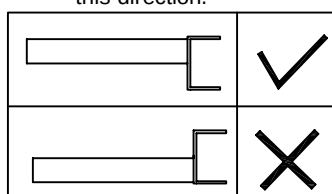 


Make sure the top surfaces of tubes 8 are aligned with tubes 4, 5

 4

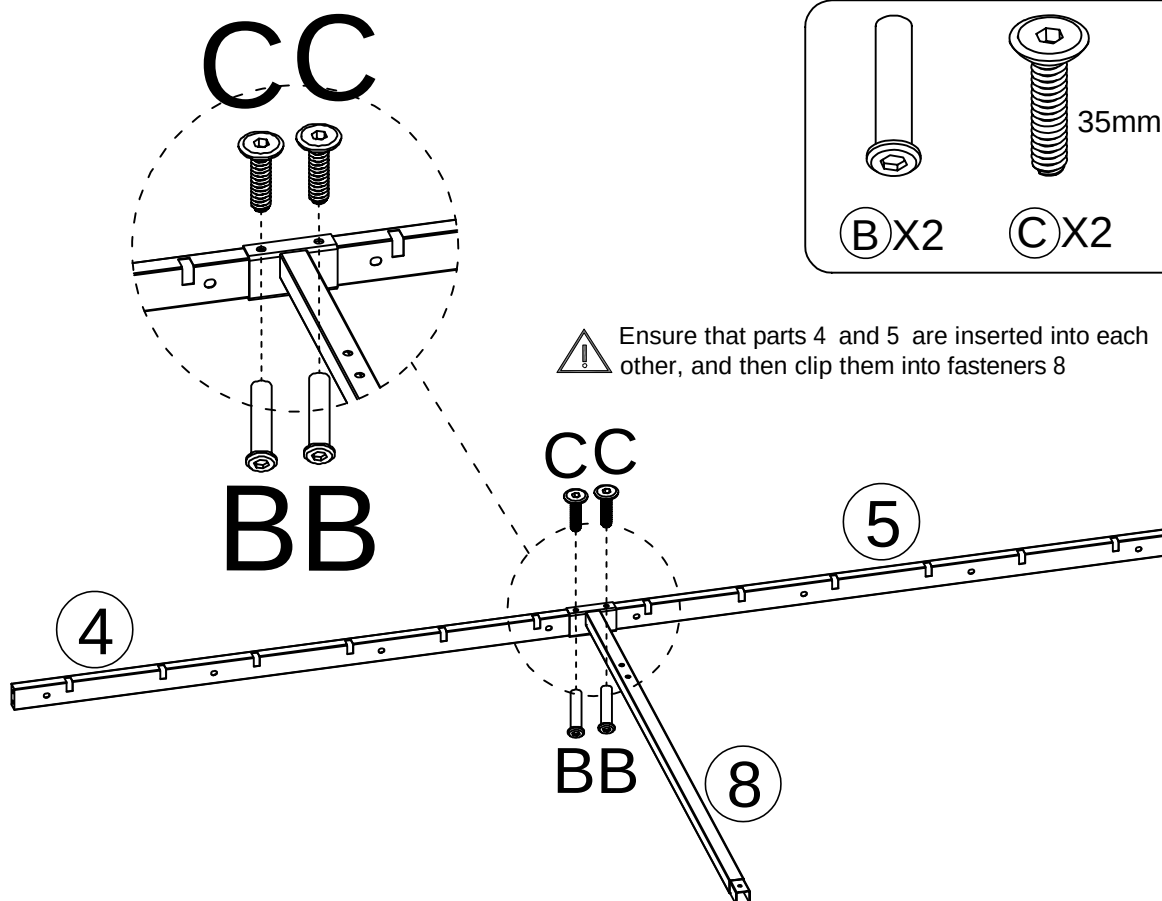


5

 Make sure the top surfaces of tubes 7 are aligned with tubes 4, 5

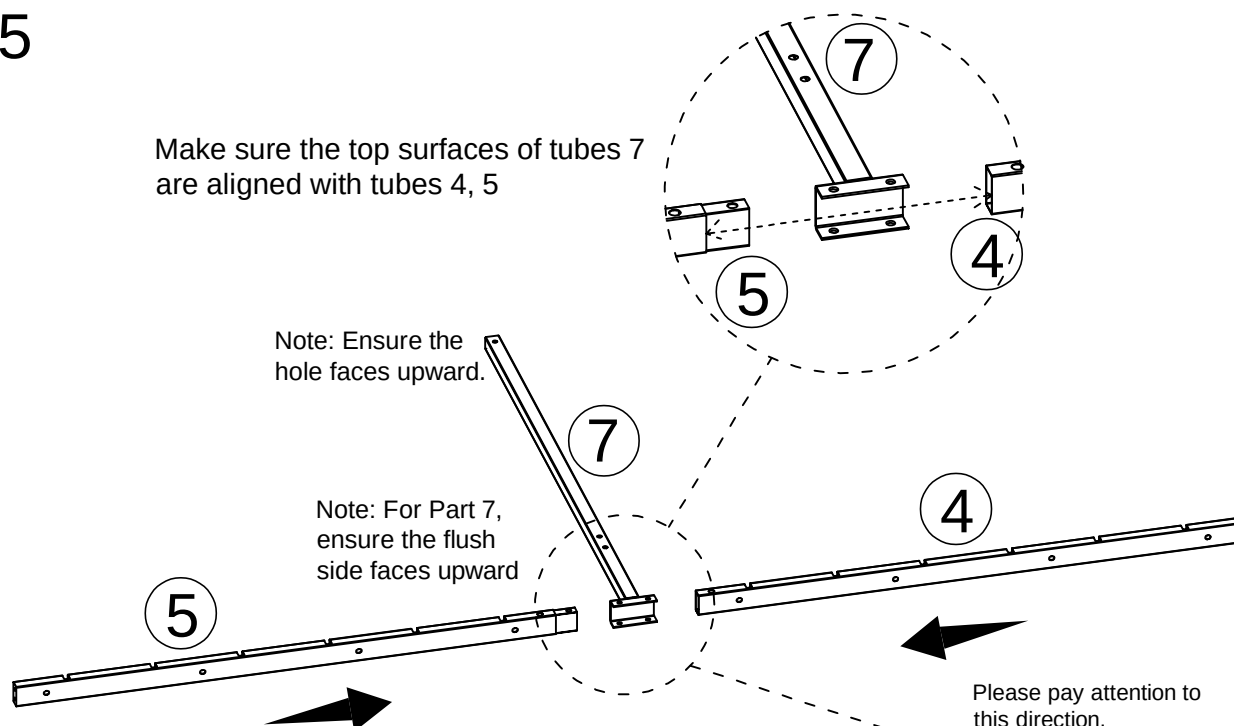

 
⚠ Ensure that parts 4 and 5 are inserted into each other, and then clip them into fasteners 7

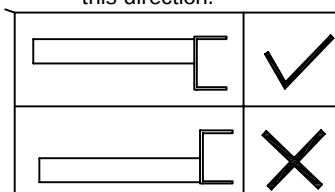



6

CC

 
⚠ Ensure that parts 4 and 5 are inserted into each other, and then clip them into fasteners 7

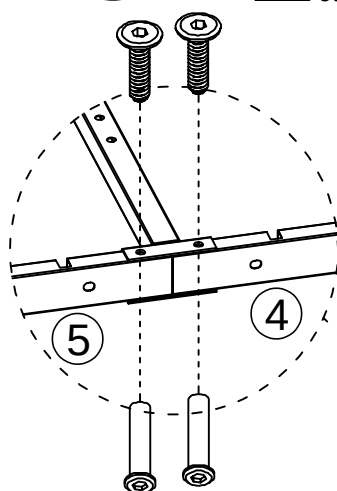

BB

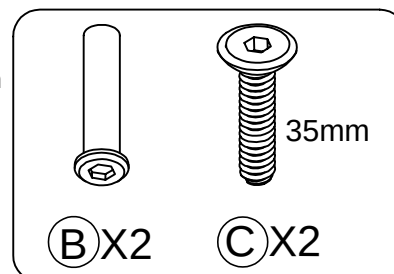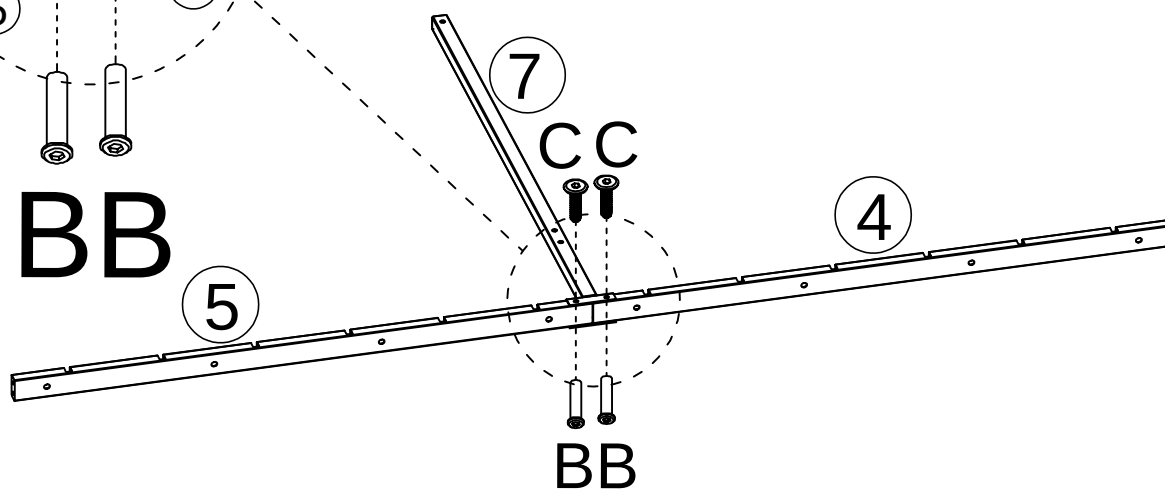  


7

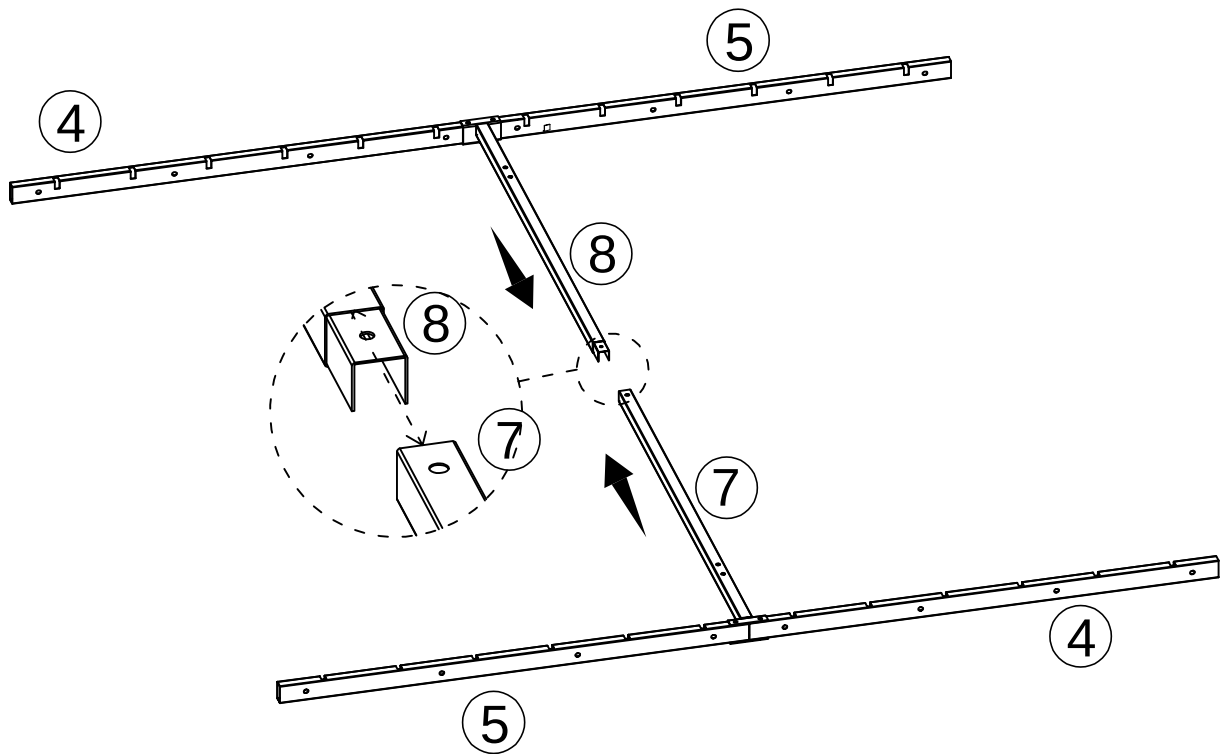 


Make sure the top surfaces of tubes 7 and 8 are aligned with tubes 4 and 5.


 
8

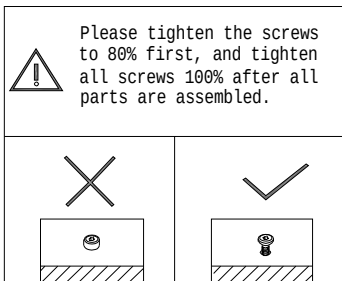

 Please note that the No.9 and No.10 pipes at this end are not to be fixed with screws. In the next step, flip them 180° and install the No.11 accessory accordingly.

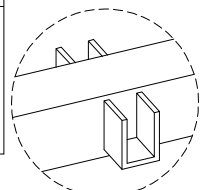


  Note the front and back sides of tube ⑥, with the grooves facing up.

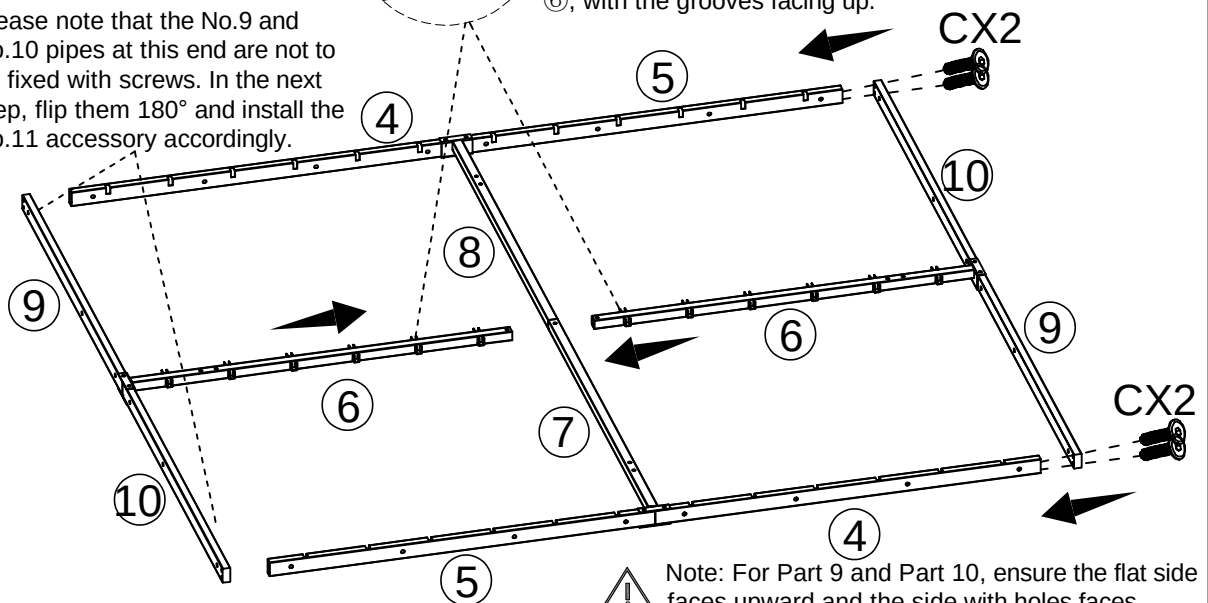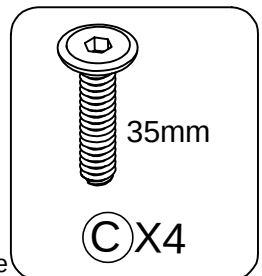


Note: For Part 9 and Part 10, ensure the flat side faces upward and the side with holes faces downward.


 
9

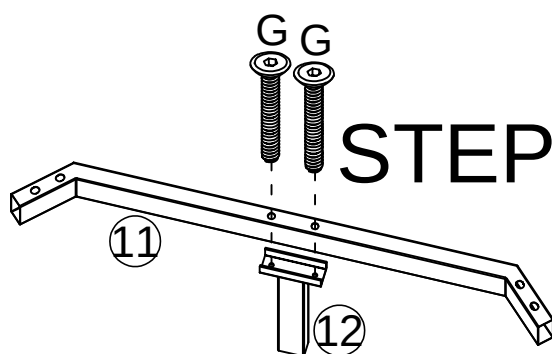


STEP X4

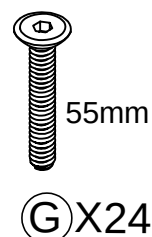 

  After installing Part 11 and Part 12, rotate them 180° and mount them onto the bed frame.

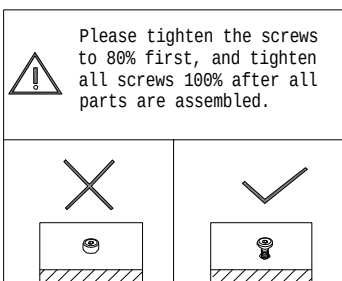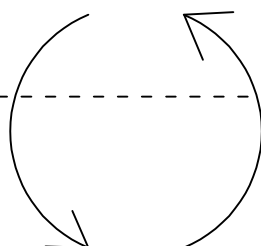

 Rotate the bed frame 180° to position the small holes on the bottom facing upward, then install the diagonal bracing components.

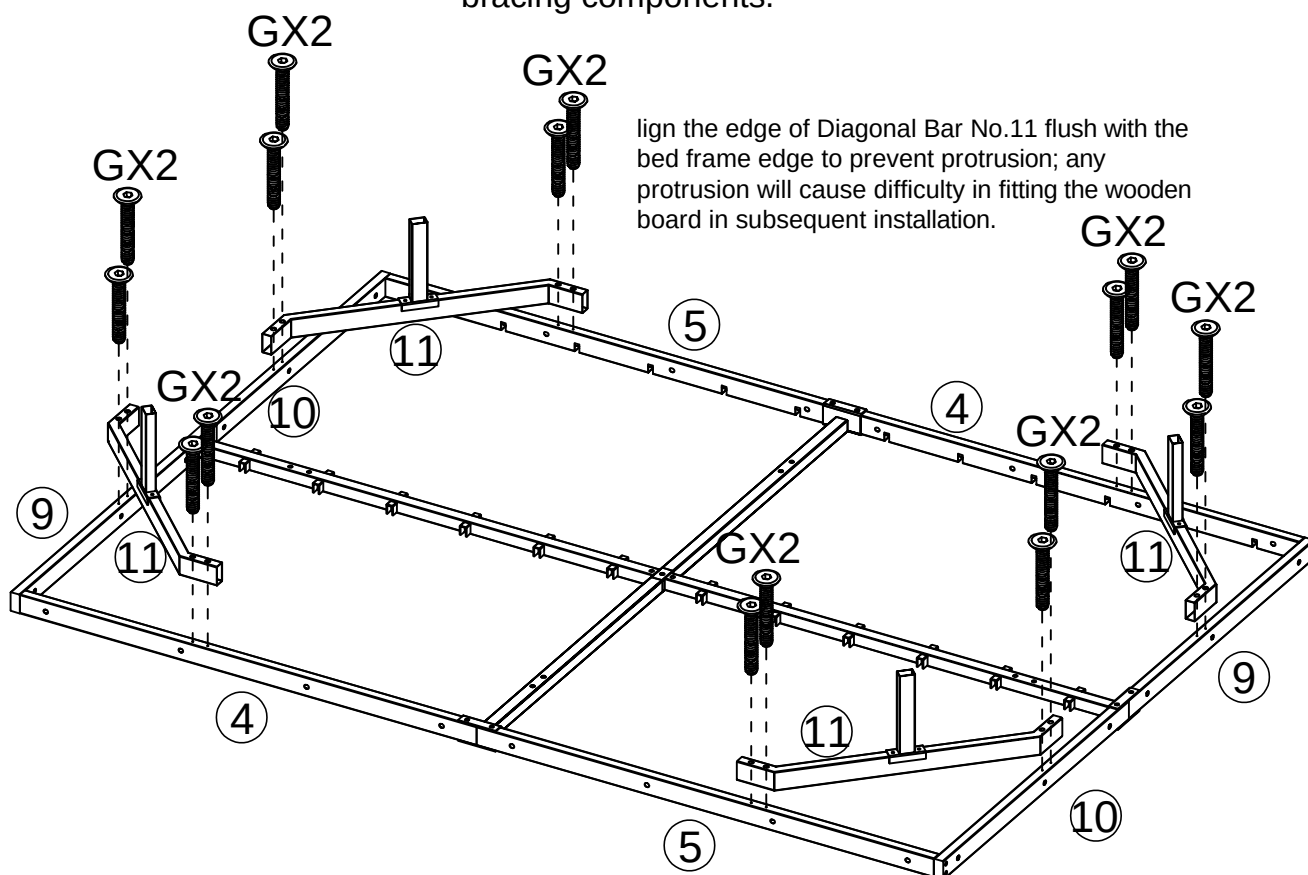


After installation, rotate it back to the front to proceed with the next installation step.

10

ALL screws are tightened 100%



 CX11

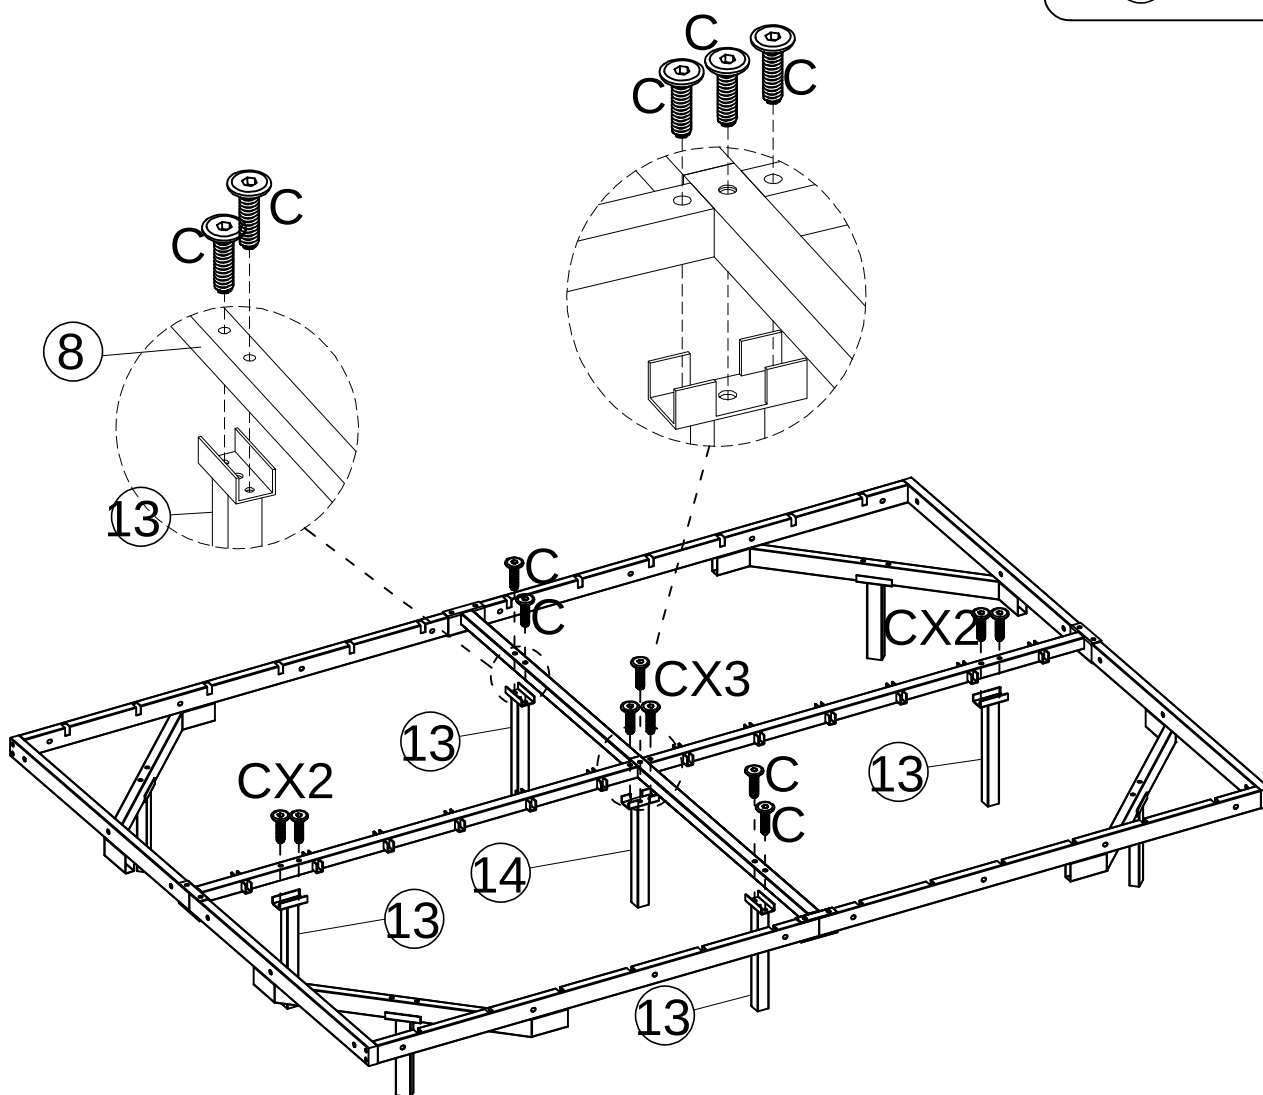


11

1. Take out foam from the package and lay it flat on the ground.
2. Take out the six wooden boards one by one (numbered 1, 2, 3).
3. For better installation, please use this Q accessory screwdriver to lock the N accessory, locking it 50%.
4. After completing the above steps, continue with step 12 of the instruction manual until step 16 locks the N part to 100%.






Reminder: Pay attention to safety during installation and do not get your hands injured by screws.

 Please lay it flat on the foam to avoid damage to the wavy shape of the board

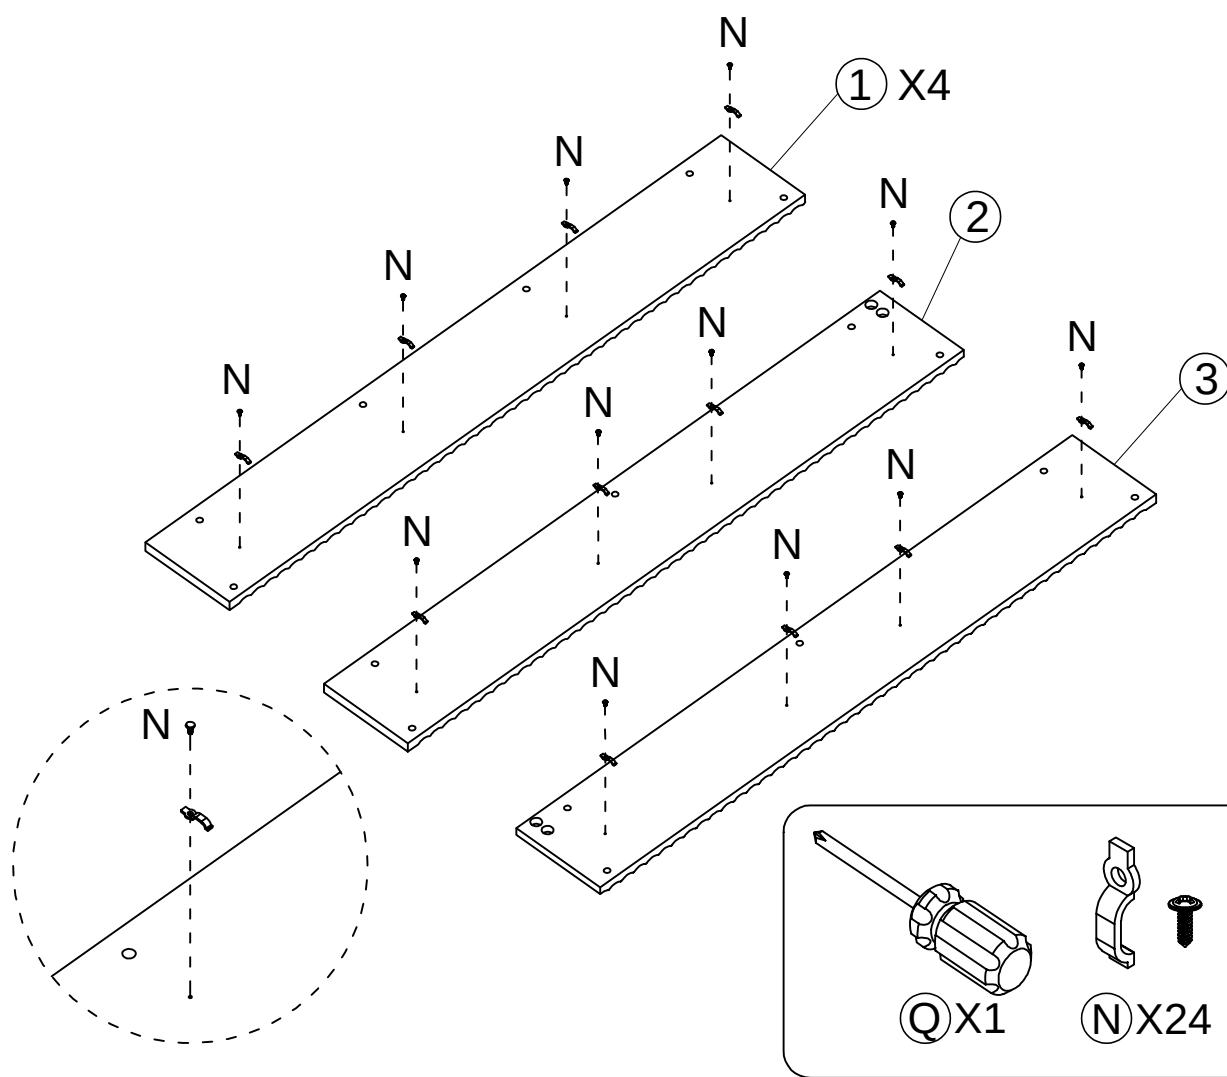





12

   Pay attention to the hole position of the enlarged position to determine the left and right direction of the plate.

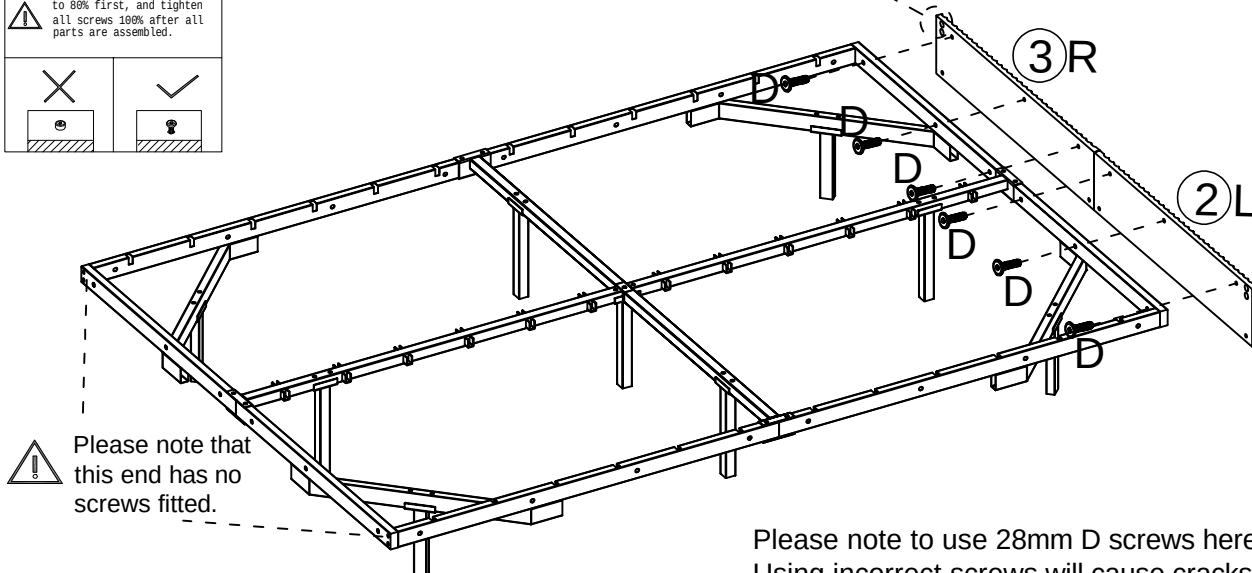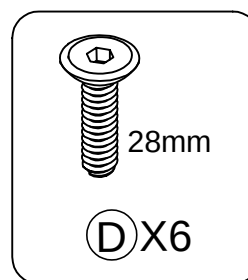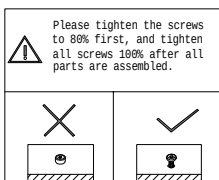

Please note to use 28mm D screws here. Using incorrect screws will cause cracks on the front of the wooden board.

    13

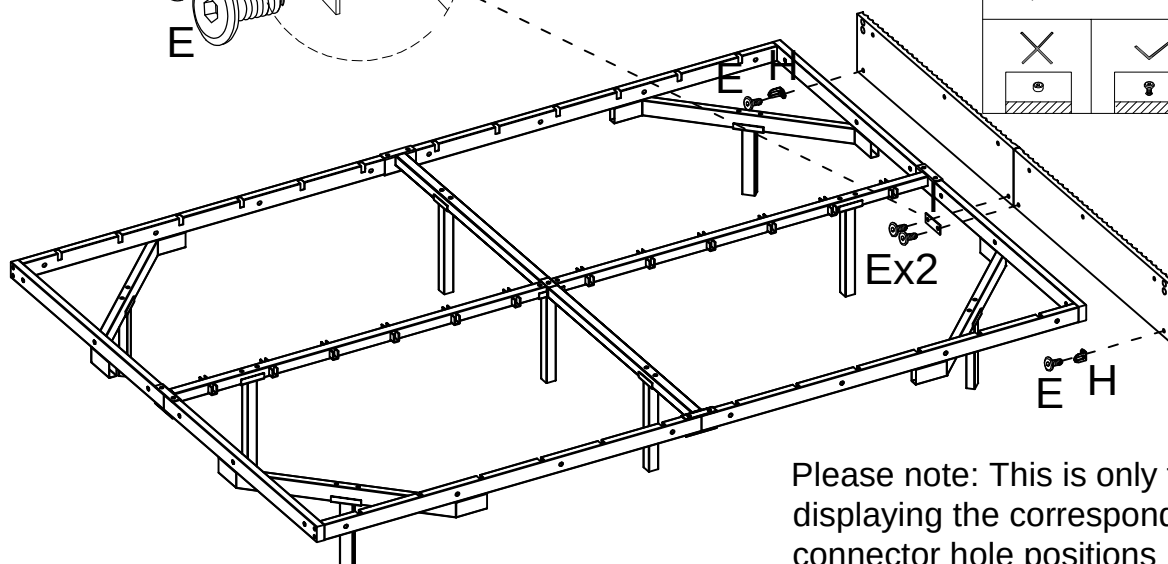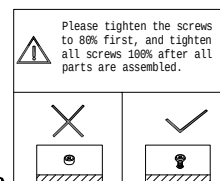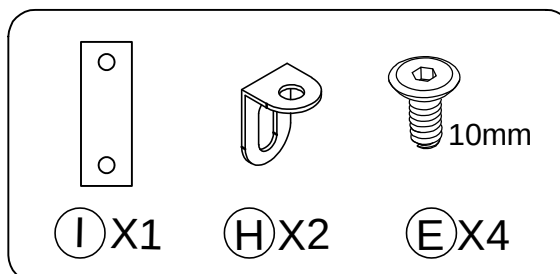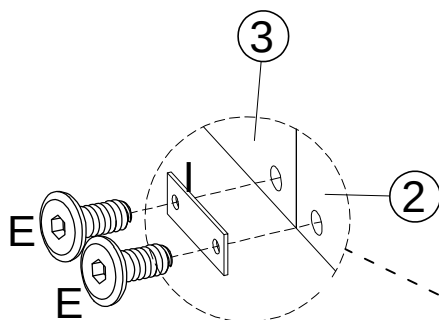


Please note: This is only for displaying the corresponding connector hole positions

14


If the wooden board is difficult to install, fasten the screws in Step 2 and Step 4 to 80% tightness first.

Please note to use 28mm D screws here. Using incorrect screws will cause cracks on the front of the wooden board.


 
Lock this board first

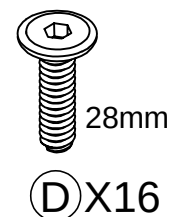

Rear lock this board

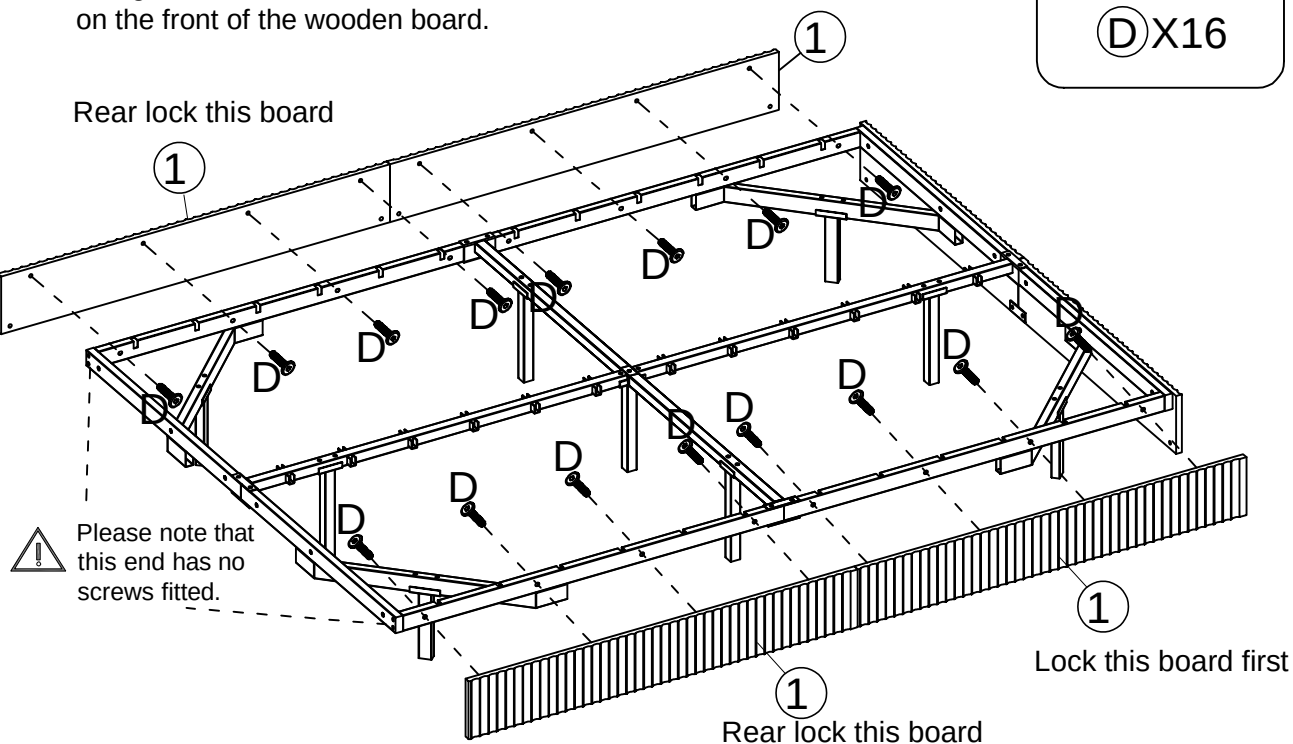 


15

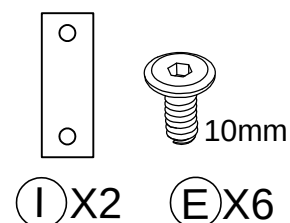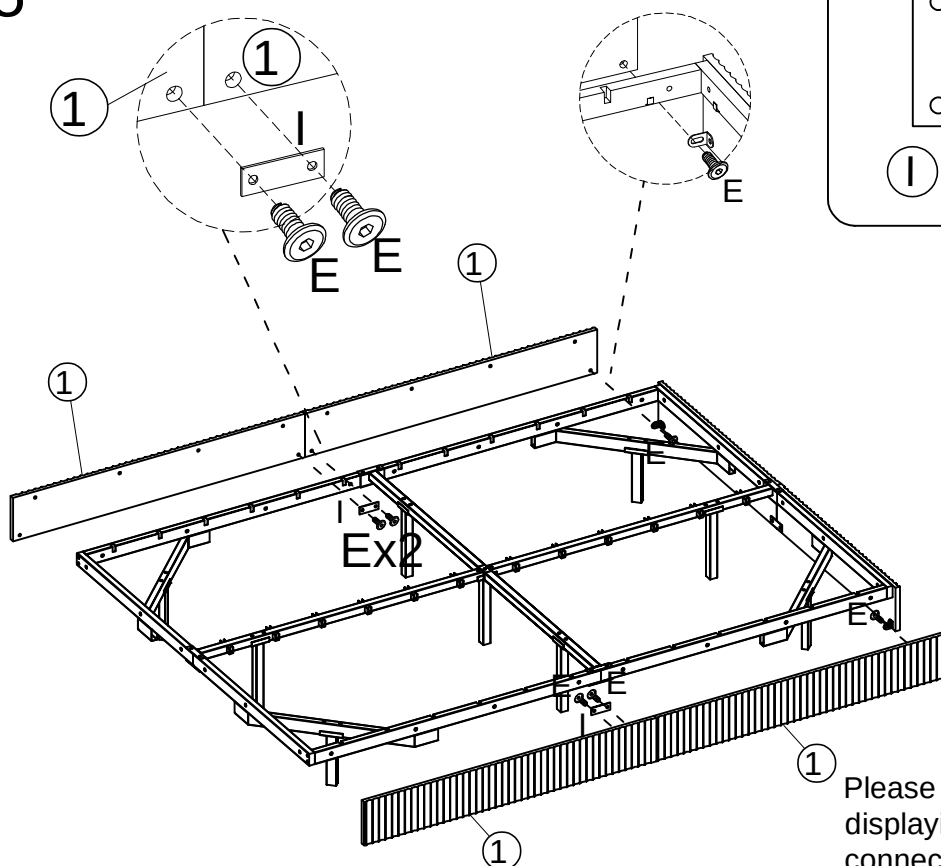  


Please note: This is only for displaying the corresponding connector hole positions

16

 
Tighten all screws100%

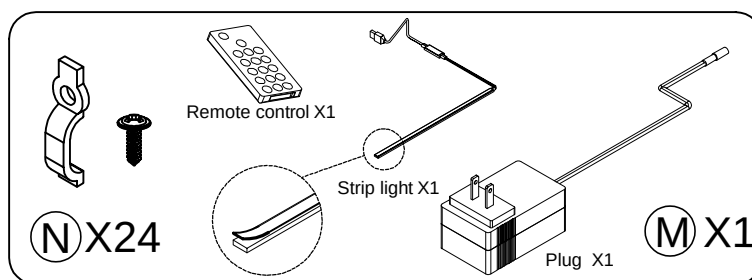

Connect the external power supply

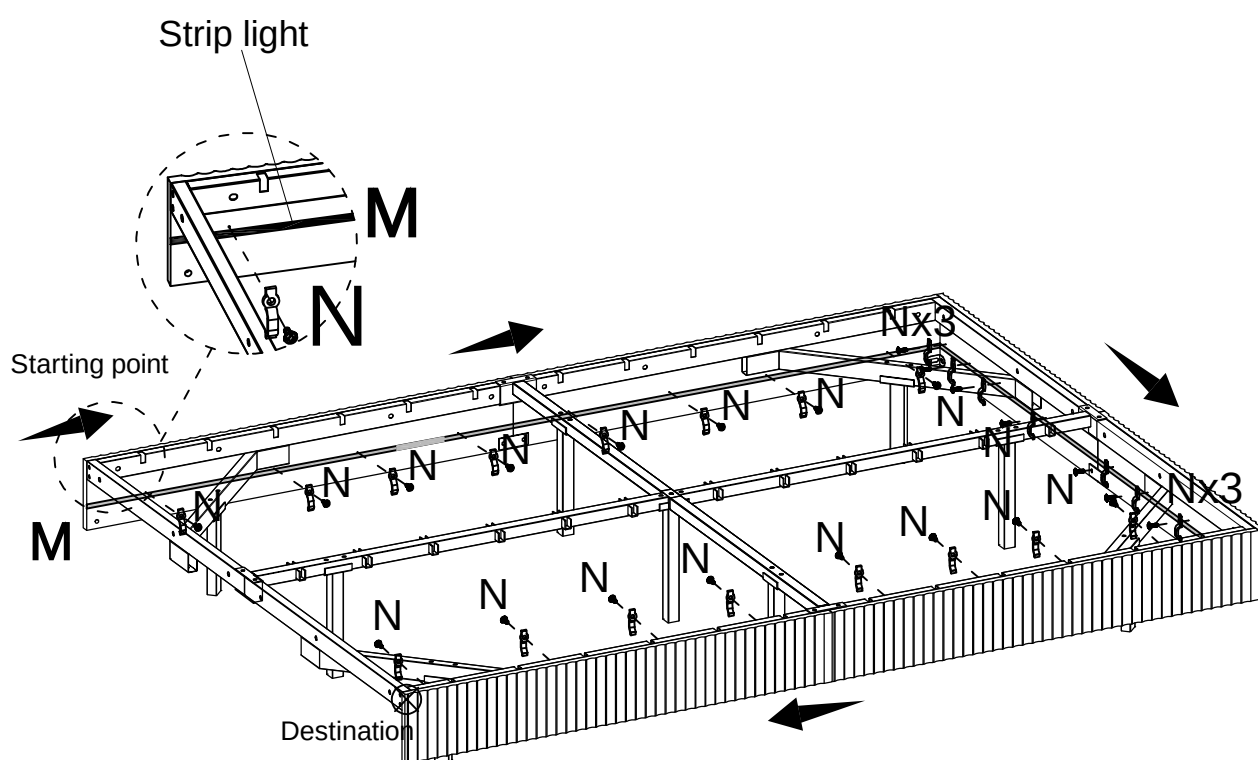 

17

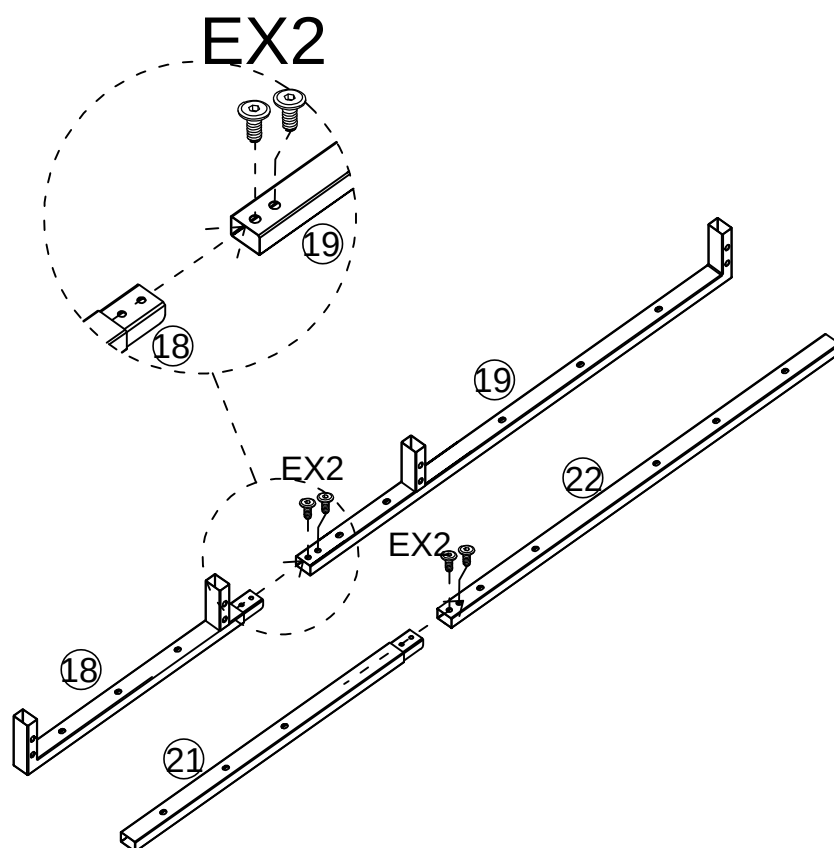 


10mm

EX4


18



 Please place the backboard flat on the ground and keep it level up and down, then tighten the screws

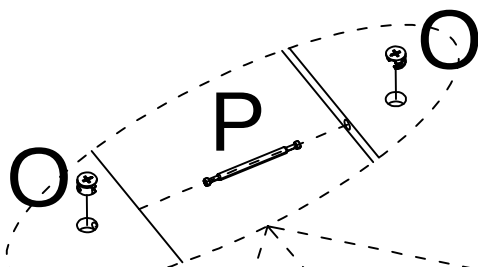

 WARNING!!! After locking Component O in place, Component P may shift sideways. If such shifting occurs and the component cannot be locked, make adjustments accordingly.

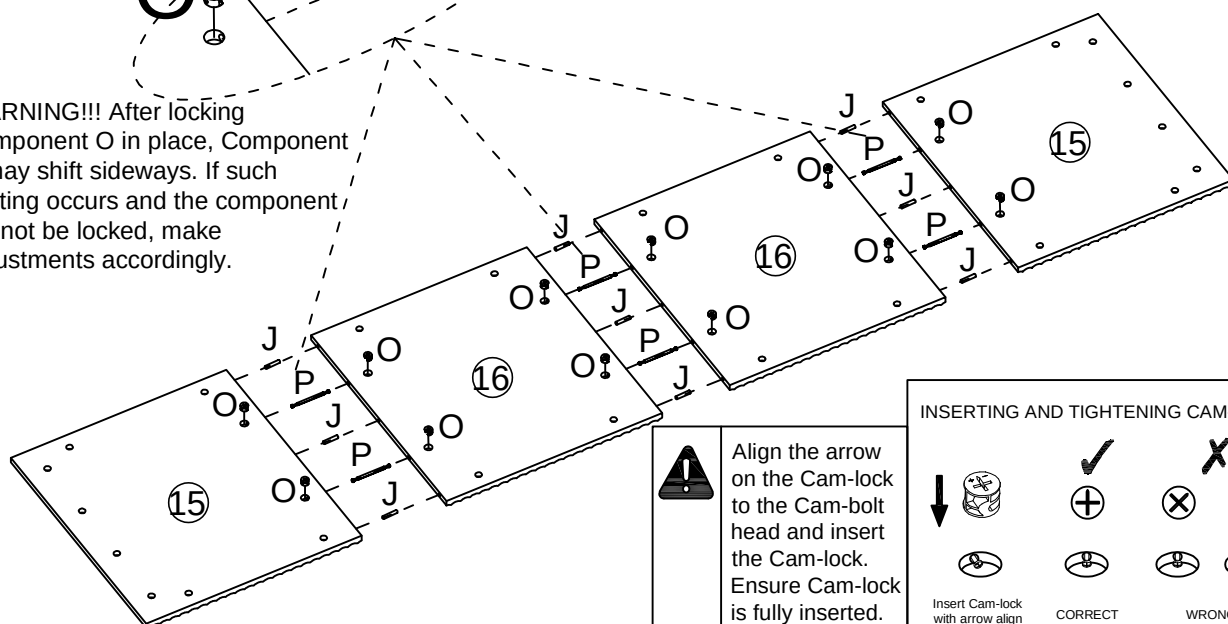

O X12



P X6



J X9

8*40mm



Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

INSERTING AND TIGHTENING CAM-BOLT



Insert Cam-lock with arrow align to Cam-bolt head

 
 


CORRECT



WRONG

19

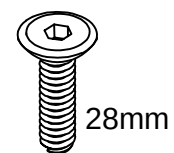
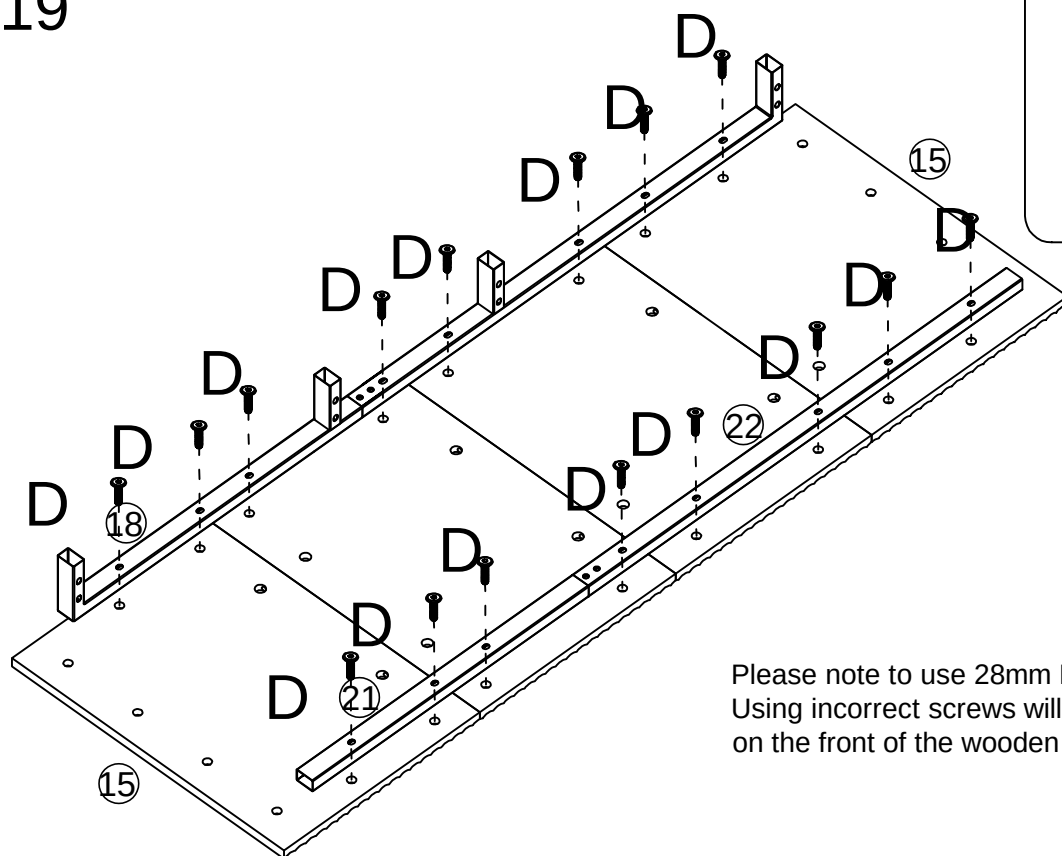


D X16

Please note to use 28mm D screws here.
Using incorrect screws will cause cracks
on the front of the wooden board.

20

  Pay attention to aligning the hole positions

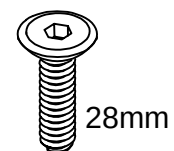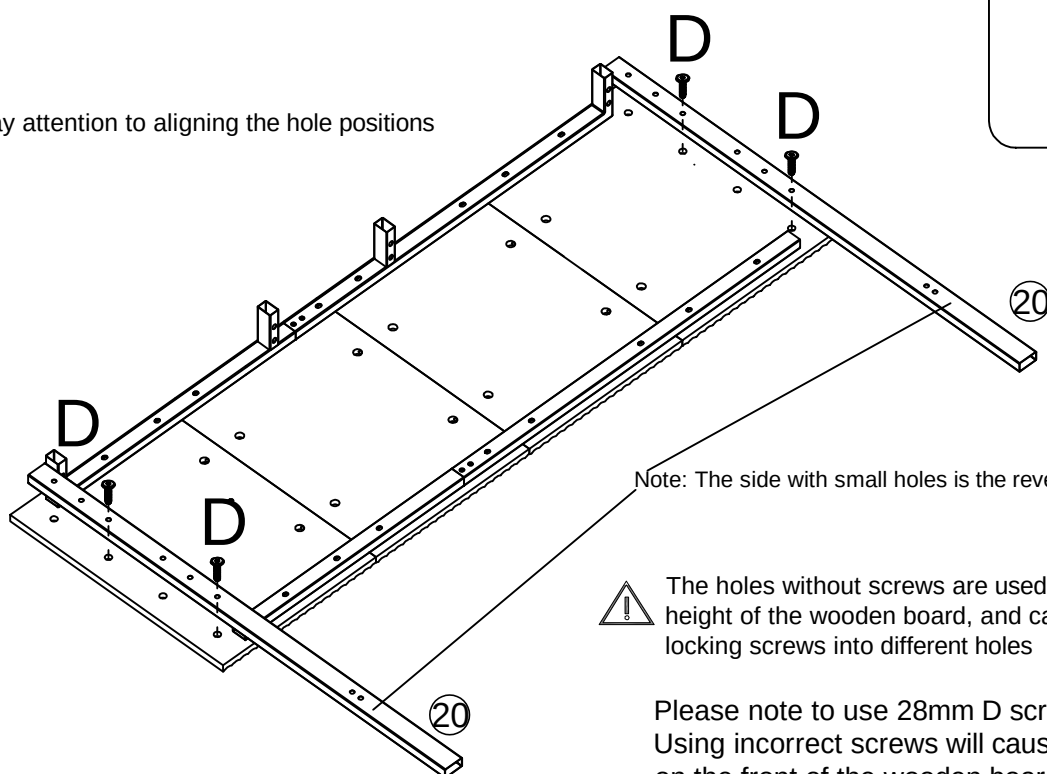

D X4

 
Note: The side with small holes is the reverse side.




The holes without screws are used to adjust the
height of the wooden board, and can be adjusted by
locking screws into different holes

Please note to use 28mm D screws here.
Using incorrect screws will cause cracks
on the front of the wooden board.

21

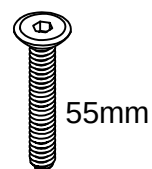

G X4

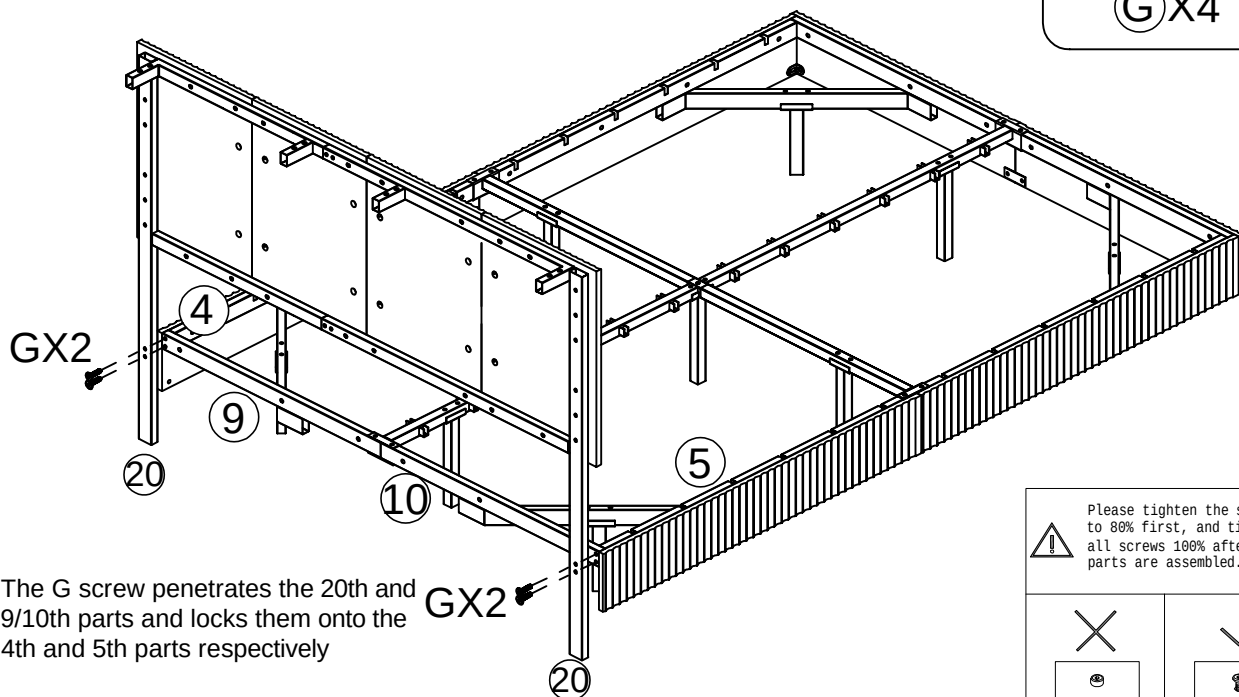 


The G screw penetrates the 20th and 9/10th parts and locks them onto the 4th and 5th parts respectively

Please tighten the screws to 80% first, and tighten all screws 100% after all parts are assembled.




 22



H X2

 
E X4

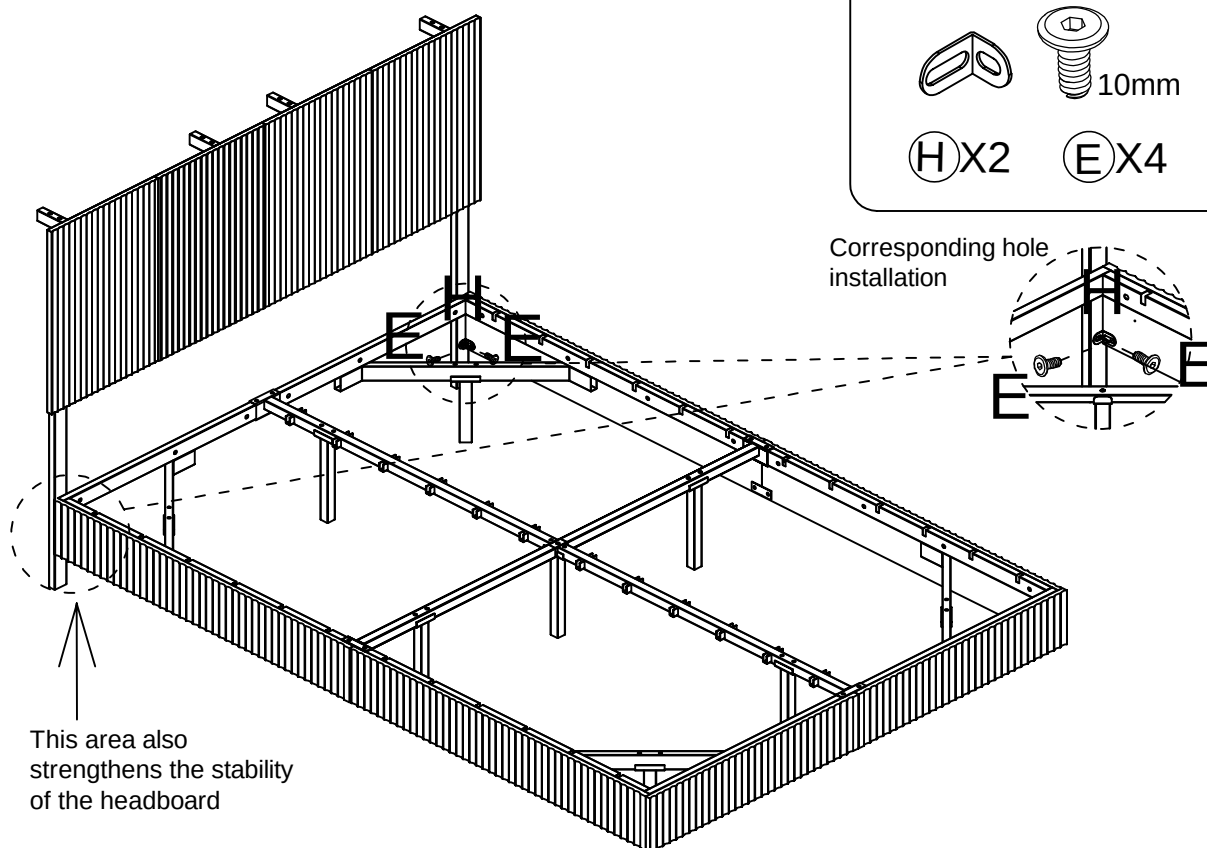

Corresponding hole installation

This area also strengthens the stability of the headboard

 23

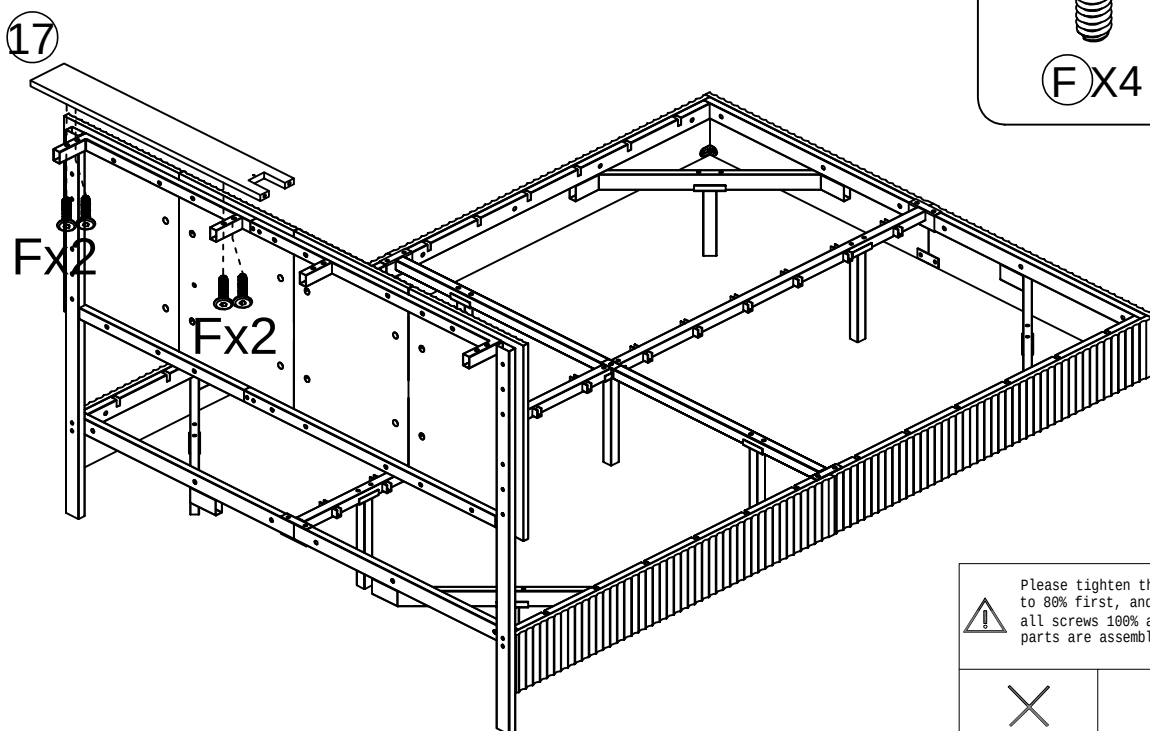



(F)X4



Please tighten the screws to 80% first, and tighten all screws 100% after all parts are assembled.



 
 
24

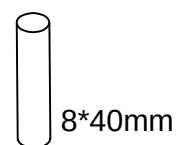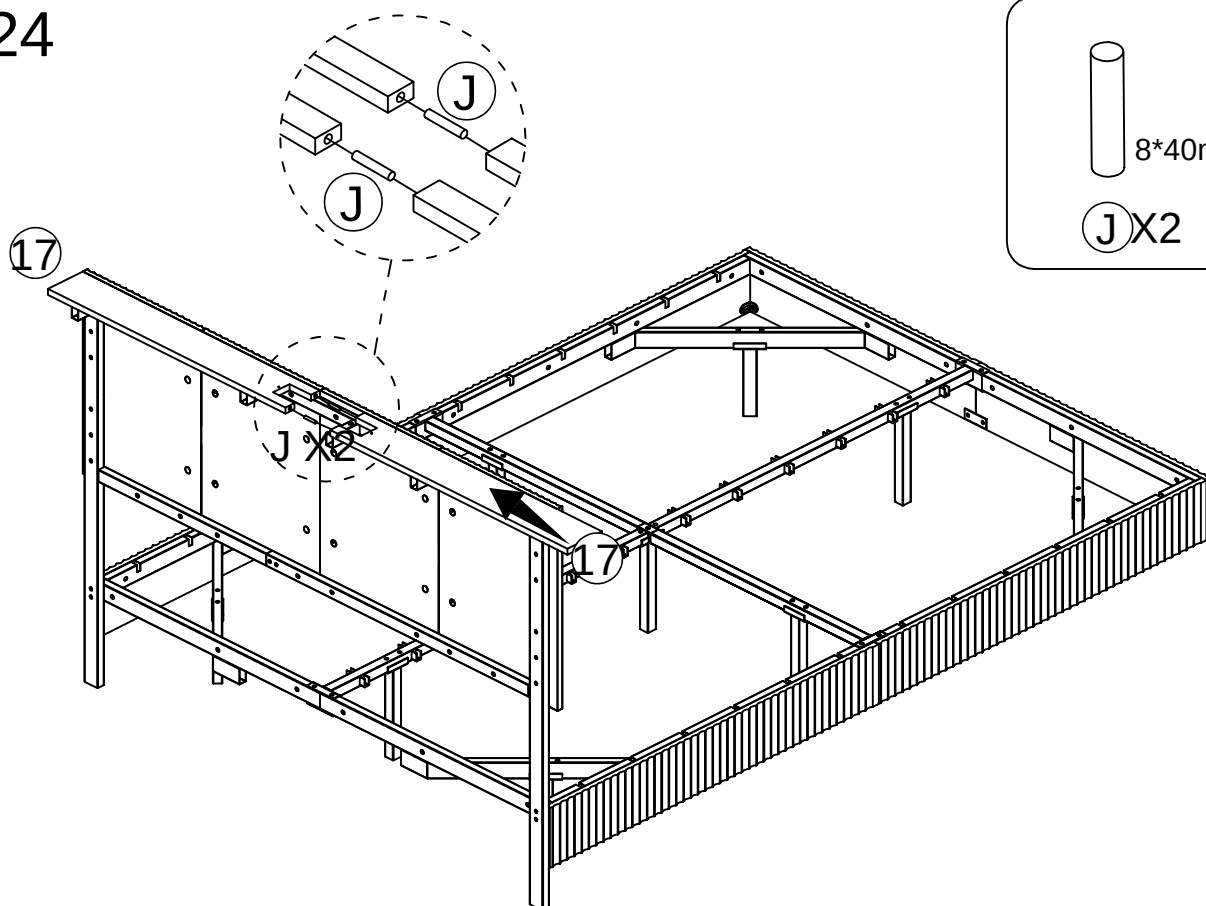




(J)X2

25

  
Tighten all screws 100%

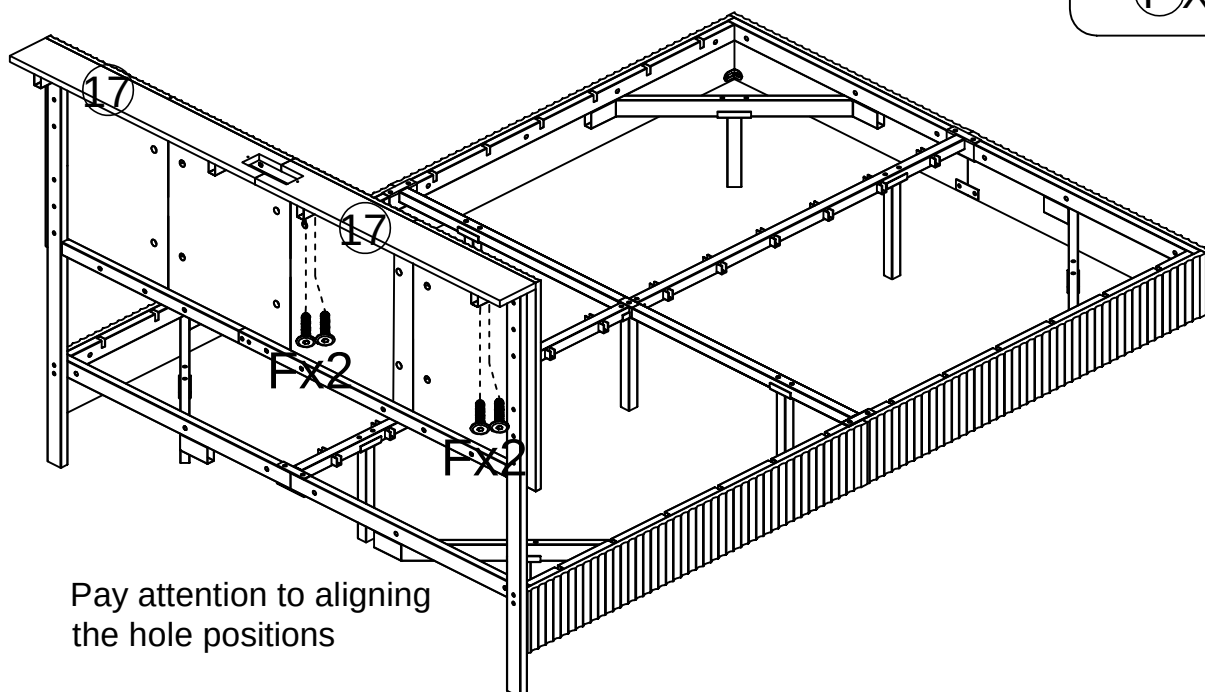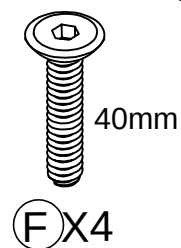

26

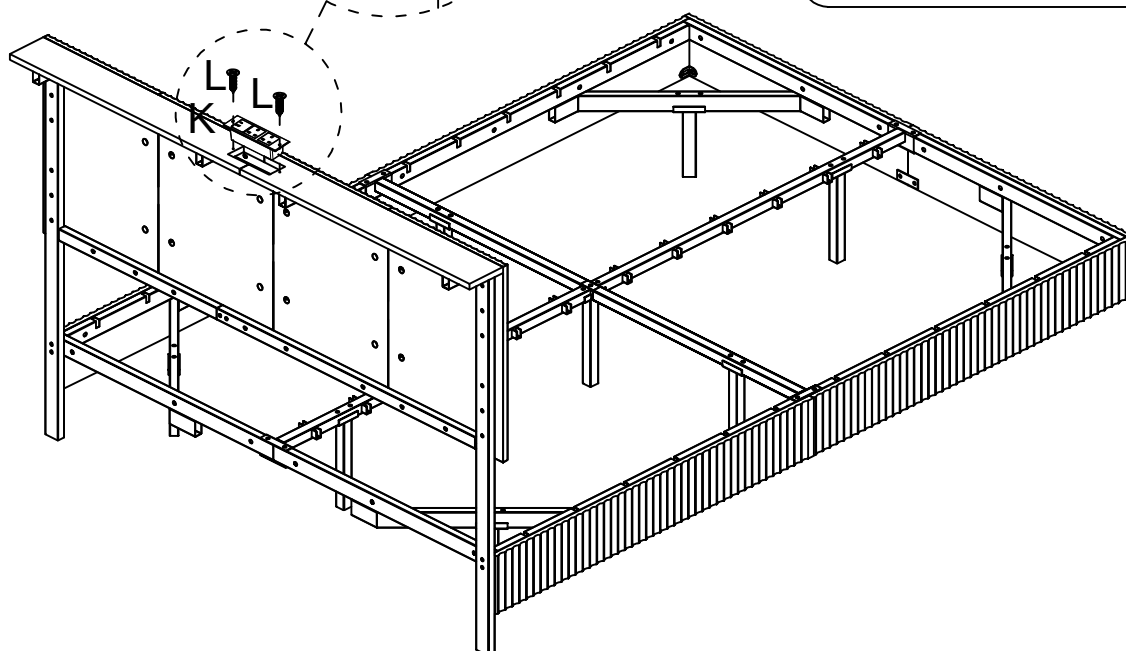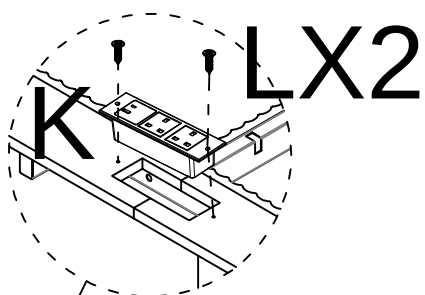   

27

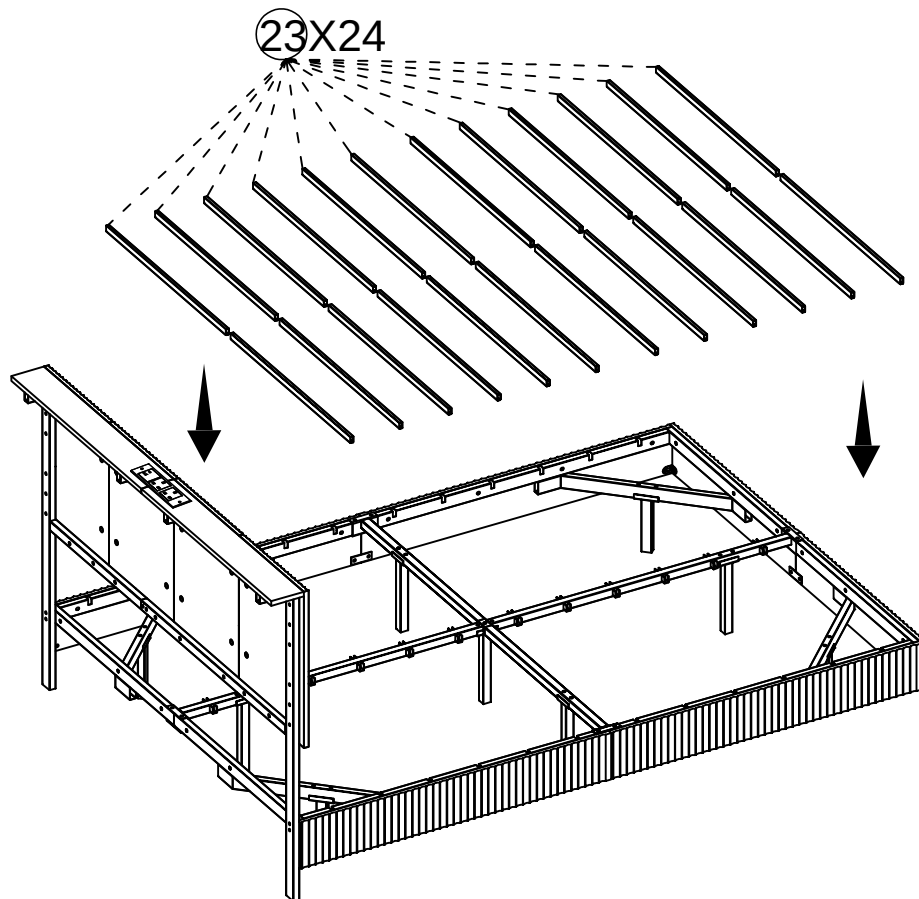 

28

Complete Assembly

