 


INSTRUCTION MANUAL V1

SLIM42

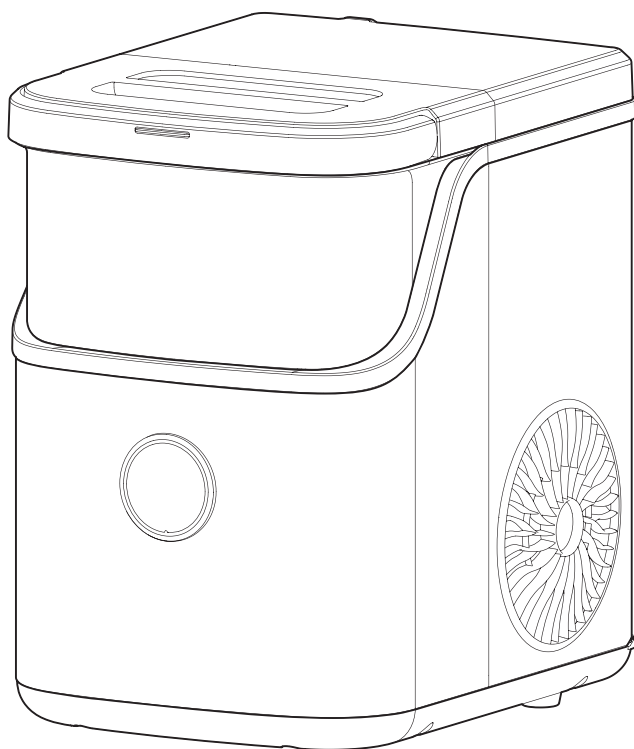

Ice Maker

PAGE CONTENTS

IMPORTANT SAFETY INFORMATION	01
PRODUCT INTRODUCTION	03
CONTROL PANEL INTRODUCTION	04
USING YOUR ICE MAKER	05
CLEANING AND MAINTENANCE	08
PRODUCT SPECIFICATIONS	10
TROUBLESHOOTING	11
WARRANTY INFORMATION	13

IMPORTANT SAFETY INFORMATION

To reduce the risk of injury or property damage, please follow these safety precautions.

WARNING



- Voltage power from outlet must match specifications on appliance nameplate.



- This appliance **must be** grounded.



- Using an extension cord may cause overheating and increase the risk of fire.

If an extension cord MUST be used:

- 1) **Only use an** extension cord with grounding plug.
 - 2) The marked rating of an extension cord **must be** equal to or greater than the rating of this appliance.
- **Do not** operate if any component, including the cord or plug, is damaged.
 - Unplug the unit before cleaning by hand.



- Only responsible and capable adults should operate the ice maker.
- **Do not** place the power cord where it could be pulled by children or pose a tripping hazard.
- Children should not be left unattended near the ice maker during operation.



- **Do not** use water that is micro-biologically unsafe or of unknown quality.



- **Do not** remove any safety, warning, or product information labels from the unit.



- **Do not** touch the evaporator with your hands while the ice maker is operating.
- **Do not** plug in or unplug the unit with wet hands.



- The unit **must be** placed and set up according to installation instructions before use. The unit is for indoor household use only.



- **Do not** store or use flammable vapors or liquids near the unit.
- **Do not** immerse any part of the unit in water.



- **Do not** attempt to disassemble, repair, modify or replace any part of the ice maker unless permitted by the manufacturer.



WARNING

FIRE OR EXPLOSION HAZARD Flammable Refrigerant

This unit contains an isobutane refrigerant, also known as R600a, a natural gas with high environmental compatibility. However, it is also combustible. Adhere to the warnings below to reduce the risk of injury or property damage.



1. When handling, installing, and operating the unit, care should be taken to avoid damage to the refrigerant tubing.



2. Only dispose of the unit according to Federal and Local Regulations. Contact your local authorities for the environmentally-safe disposal of the unit.



3. Keep ventilation openings around the unit's enclosure clear of obstruction.



4. **Do not** place the unit near heat sources such as an oven.

 


5. Ensure a minimum of six inches of clearance around the side and back walls of the unit for proper air circulation.



6. **Do not** place the unit in direct sunlight.

PRODUCT INTRODUCTION

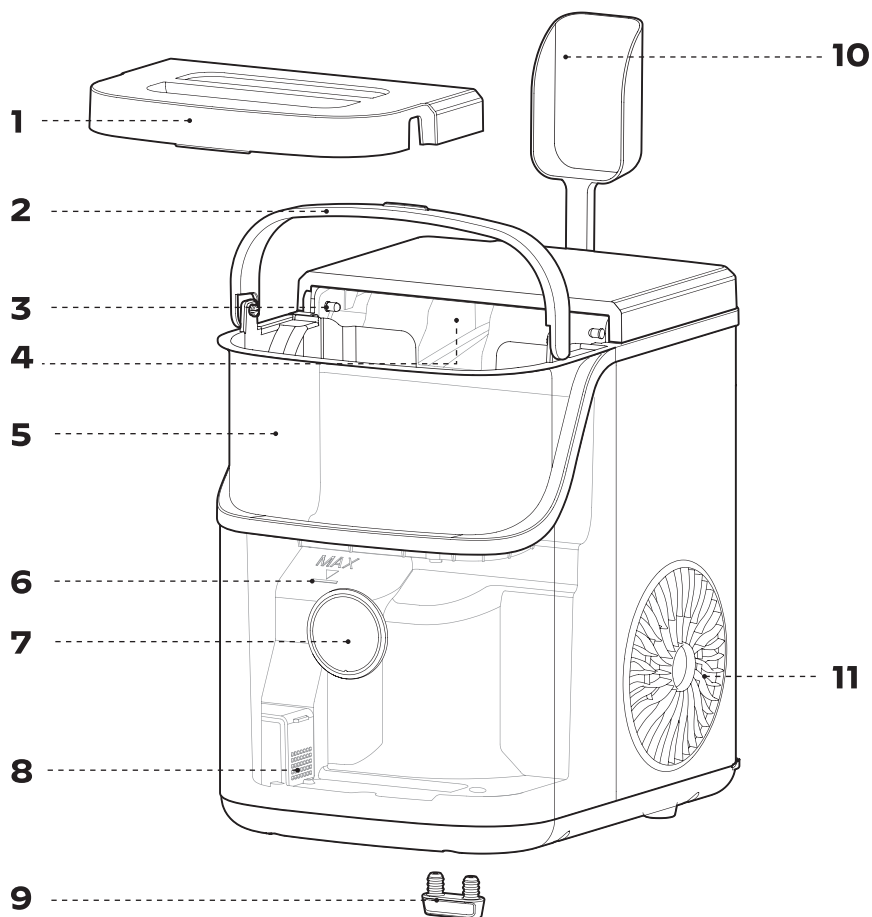

- 1.** Removable Top Cover
- 2.** Ice Basket Handle
- 3.** Ice Full Sensor
- 4.** Ice Outlet
- 5.** Ice Basket
- 6.** Maximum Water Fill Line

- 7.** Control Panel
- 8.** Water Filter
- 9.** Drain Plug
- 10.** Ice Scoop
- 11.** Air Exhaust Fan

CONTROL PANEL INTRODUCTION



Function	Operation
STAND-BY MODE	After plugging into power, the machine enters standby mode. The ring indicator light flashes white 3 times.
MAKING ICE	Press the  ICE button to start making ice. The ring indicator light will turn white. Press again to stop making ice.
SELF-CLEANING	After the ring indicator light flashes white 3 times, the ice maker enters standby mode. In standby mode, press the  CLEAN button and the ice maker will switch to self-cleaning mode. The ring indicator light will turn blue. Press again to stop self-cleaning.
ICE FULL	The ring indicator light turns green when the ice basket is full.
ADD WATER	The ring indicator light turns red when the water tank is low.

USING YOUR ICE MAKER

BEFORE FIRST USE

 
1.

Verify all parts and ice maker accessories were received.

Missing parts? Contact Customer Service.



Stand upright for 24hrs.

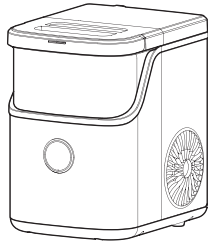


Use in locations
50°F ~ 90°F
(10°C ~ 32°C).




2.

Carefully **remove the protective film** and clean the ice maker thoroughly before first use.

 Note: Make sure the drain plug is installed in place.

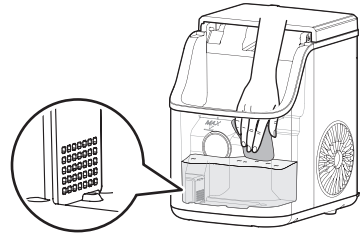

 
Due to temperature variations and other factors, ice quality should become stable after 5 minutes of continuous ice cube release.

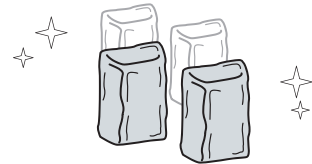

More Cycles = Perfect Shape

3. What Not To Do!

 
Unstable base.

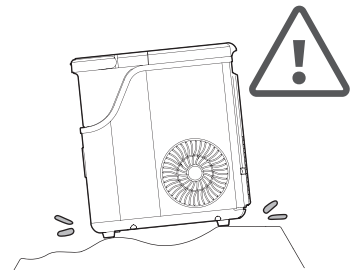


No other liquids
(Drinking water only).



 Do not use in high or low temps,
especially **lower than 41°F/5°C**.

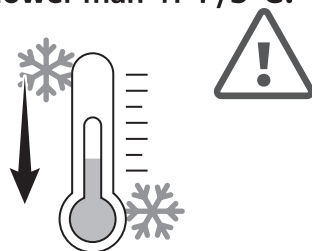

 
Do not place your fingers in
the ice outlet. The ice maker
will detect ice is full and
stop working. Wait 3 mins
before further operation.

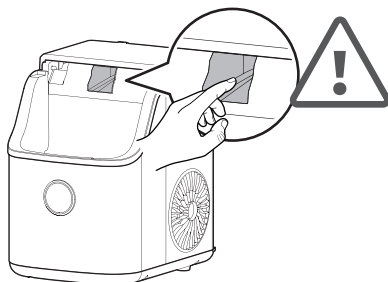

HOW TO USE YOUR ICE MAKER


1.

 Remove the top cover
and the basket.

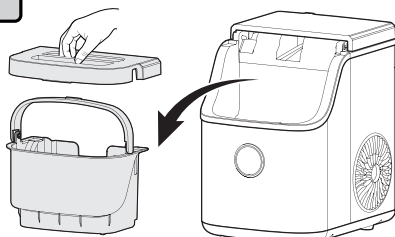


2.

 Add water. Do not exceed the
"MAX" water line. Then put the
ice basket back into the machine.

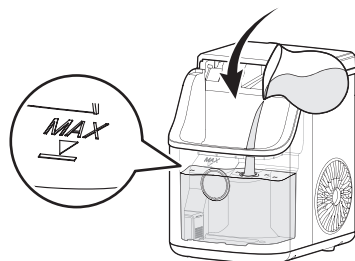


3.

 Press the ❄️ **ICE** button.

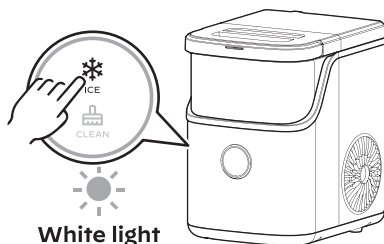

4.

 Wait **8min-10min**. The ice-making time depends on room temp and water temp.

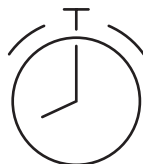


DONE:

The ring indicator light turns green when the ice basket is full.





 Green light

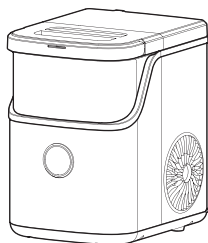


REFILL:

  When the ring indicator light turns red, add water and press the ❄️ **ICE** button to restart.

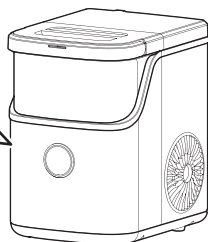
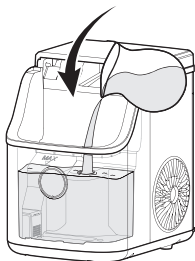


 For easier ice collection, ice may accumulate in the center of the ice basket, which may cause the ice maker to stop even if the basket is not full. Please remove the ice promptly or spread it evenly in the basket to allow normal ice production.

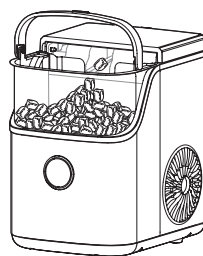

Remove ice cubes before they start to melt.

  Some water may drip out when removing the ice basket. Use a dry towel to keep water from dripping on surfaces.

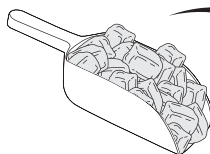

Note: After accidental power-off, it takes a little more time to restart the ice maker.

CLEANING AND MAINTENANCE

 
To keep your ice tasting fresh and the unit looking great, we recommend cleaning the unit once per week.

SELF-CLEANING (15-MIN PROCESS)

1.

Add water or water/vinegar mixture in a ratio of 5:1 to the water tank, then put the ice basket back into the machine.


Note: In areas with hard water, professional ice maker detergent can be used to clean the ice maker. Leave the detergent in the machine for 12 hours.

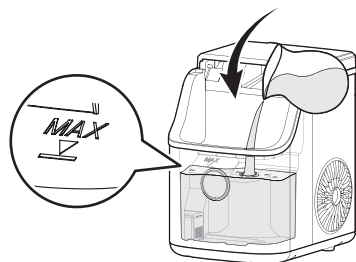

2.


IN STANDBY MODE:

 Press the  **CLEAN** button to start self-cleaning.

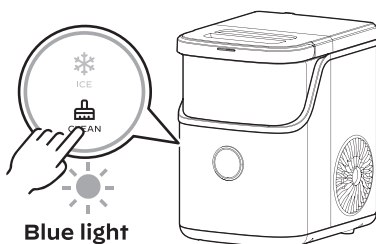

3.

 Drain excess water over sink.

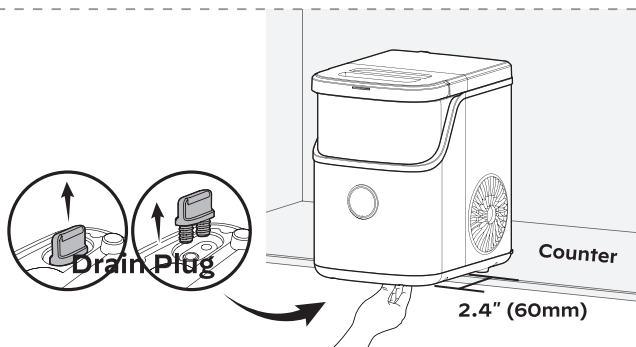

4.

Clean exterior with cloth using mild dishwashing soap.

 


MANUAL CLEANING

Turn off the unit and disconnect from power before cleaning.


1.

Remove the top cover and basket.

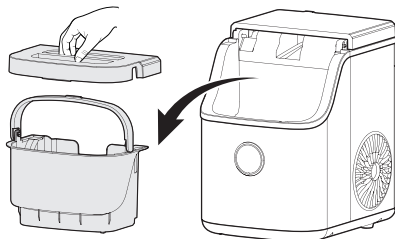


2.

 Add water/vinegar mixture in a ratio of 5:1, then leave in the machine for a period of time. Clean the water filter, the ice outlet, the water tank, and other small corners to prevent dirt buildup.

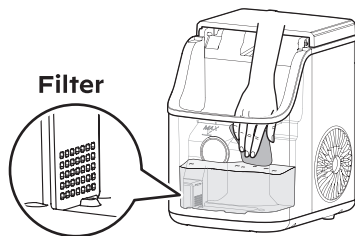

3.

 
Drain excess water over sink.

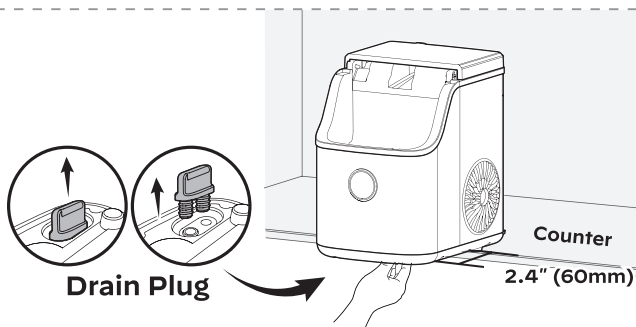

4.

Clean the ice basket with warm water, then put it back into the machine.

 Wipe the exterior with a cloth using mild dishwashing soap.

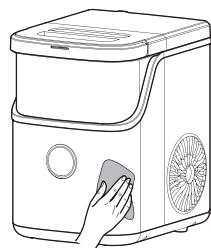

⚠ DO's & DON'Ts while cleaning and maintaining

- **Do not** use organic solvent, boiled water, strong acid and strong alkali etc. for cleaning.
- Considering the wide range of water quality across different regions, it is recommended to perform regular manual cleaning.
- Limescale can easily form if the ice basket is submerged in water for a long period of time. Drain water if the machine is not in use.
- It is recommended to **drain the water tank** at least once every three days.
- When the unit is not to be used for a long duration, **drain** the water completely & dry the interior.
- **Store** in a well-ventilated area.

PRODUCT SPECIFICATIONS

Voltage/Frequency	120V/60Hz
Ice-Making Current	2.7A
Water Tank	0.3 gal (1.1L)
Ice Basket Capacity	1.8 lbs (0.8kg)
Ice-Making Rate	33 lbs (15kg) per Day
Ice Shape	Nugget
Material	ABS, PP, Stainless Steel
Net Weight	20.5 lbs (9.3kg)
Product Size	11.5 x 8.7 x 12.8" (292 x 222 x 325 mm)

TROUBLESHOOTING

Problem	Possible Causes	Solution
The ring indicator turns red.	Low water level or not enough water.	Refill water, press the  ICE button, then restart and try again.
	If the ice maker has not been cleaned for a long time, a residue may form around the inlet of the water pump.	Run the self-cleaning cycle using professional ice maker detergent and leave the detergent in the machine for 12 hours to remove scale.
The ring indicator flashes red or the machine is not making ice.	The ambient temperature or the water temperature in the inner tank is too high.	Please run the ice maker in a location below 90°F and add colder water.
	Refrigerant liquid leakage.	Press the  ICE button twice to restart the ice-making program. If this problem occurs again, please contact customer service.
	The cover motor is broken.	
	The pipe in the cooling system is blocked.	
The ring indicator turns green.	There is too much ice.	Remove some ice.
	If there are no ice cubes, there may be something blocking the inner wall.	Remove the obstruction inside or clean the inner wall of the ice storage bin.
Making ice too slowly.	The hot air outlet has been blocked.	Maintain 6" (15cm) distance between the hot air outlet and the wall.
	The water temperature in the inner tank is too high.	The water temperature should be 45°F - 90°F.
	The refrigeration system is not functioning properly.	Please contact customer service.

Problem	Possible Causes	Solution
Water leakage.	The drain plug is not in place.	Reinstall the drain plug in place.
	Pipe joints in the appliance may be loose.	Please contact customer service.
	The seal has completed its service life and needs to be replaced.	
Ice maker creating loud noise.	If the ice maker has not been cleaned for a long time, a residue may form around the inlet of the water pump.	Run the self-cleaning cycle using professional ice maker detergent and leave the detergent in the machine for 12 hours to remove scale.
		Clean every 1 week using mild cleaning agents.
	Lack of water to pump will create noise when pumping water.	Add more water.
	The cooling system is overloaded.	The water temperature should be 45°F - 90°F.
		Remove ice cubes promptly. Leave the machine stand for 30 minutes, then run the self-cleaning cycle. Make ice again the next day.
		Maintain 6" (15cm) of distance between the hot air outlet and the wall.
	Fan or ice maker is damaged.	Please contact customer service.
	Water pump is damaged.	

Problem	Possible Causes	Solution
Unshaped ice appears.	The added water temperature is higher than the existing water, leading to machine overload.	Remove the ice cubes from the ice basket. Pause the ice maker for 15-30 minutes, then restart it.
	The hot air outlet has been blocked.	Maintain 6" (15cm) of distance between the hot air outlet and the wall.
	Refrigerant leak.	Please contact customer service.

WARRANTY INFORMATION

30-DAY LIMITED WARRANTY

To provide customers with a quality shopping and user experience, the unit can be replaced or returned for a full refund within the 30-day period from the date of purchase.

30-DAY TO 1-YEAR LIMITED WARRANTY

After the 30-day warranty has expired, a 1-year warranty from the date of purchase that covers product replacement is automatically activated. Please note that proof of purchase from an authorized reseller is required for all warranty claims.

30-DAY TO 1-YEAR WARRANTY LIMITATIONS

This warranty does not cover:

- Any condition resulting from incorrect or inadequate maintenance or care.
- Damage resulting from misuse, abuse, negligence, accidents, or shipping damage.
- Dissatisfaction due to buyer's remorse.
- Normal wear and tear.
- Damages incurred after initial transportation.